

Cleaning & Maintenance

Warning: Before cleaning, please ensure that the power is switched off by detaching the plug from the wall socket.

10.1 Clean the surface of hood every week with mild soap or detergent . Avoid solvents, acid, alkali, scouring pads or powders that could irreparably damage the stainless steel surface.


10.2 The grease filters may be washed using mild soap, detergent or degreasing agent.

10.3 Charcoal filters cannot be cleaned and must be generally replaced after 6 months of use.

10.4 There is a fire risk if cleaning is not carried out in accordance with the instructions




SA950CXA RANGE HOOD INSTRUCTION

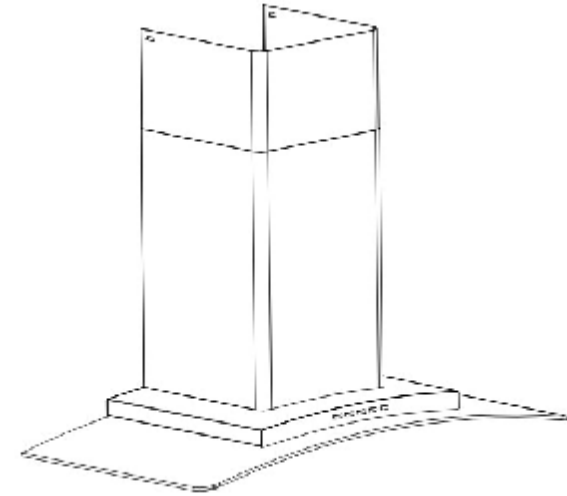


Thank you for your purchase of this product. Please read the manual carefully before operating the appliance.

Installation Diagram

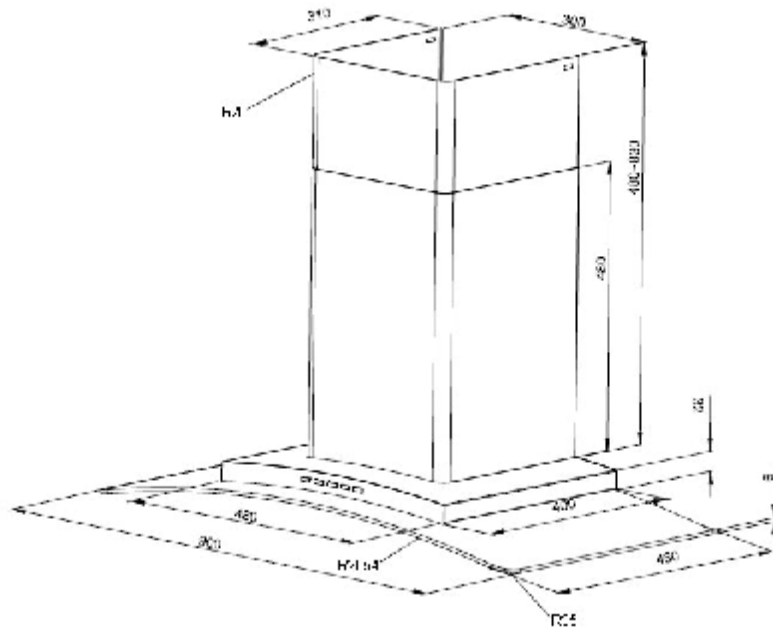

Electrical Diagram

SA950CXA

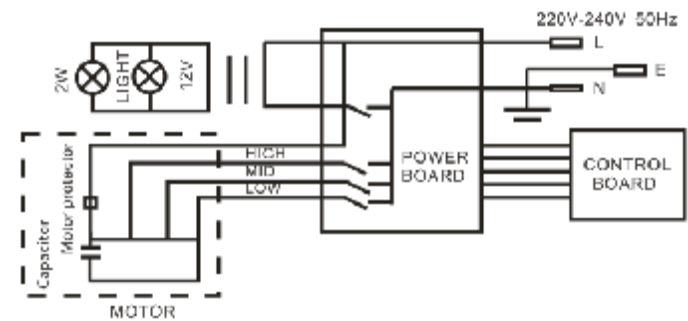

Specifications

SA950CXA

Power Supply	AC 220-240V, 50Hz
Rated Input Power	142W
Lighting Power	2W×2
Motor Power	138W
Outlet Diameter	150mm

Troubleshooting

If any problem occurs, please detach the plug from the socket and contact the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Problem	Cause	Solution
Light on, but motor does not work	The outlet valve is blocked	Detach flue and duct then turn on the hood to check if the valve opens
	The capacitor has failed	Call for technical service
	The control switch has failed	Call for technical service
Light does not work, motor does not work	No power supply	Plug another appliance into the socket to confirm there is power supply
	Fuse has blown	Check the fuse or reset the circuit breaker
Vibration	The propeller is damaged or unbalanced	Call for technical service
	The hood is not installed correctly	Review the installation instructions & check the installation again for loose screws, brackets or connections
Insufficient suction effect	The distance between the hood and the cooker is too far	Check that the distance is between 650mm to 750mm for a gas appliance and 600mm for electric hobs
	The filters are saturated	Clean the filters from grease residue and replace after drying.

Contents

Introduction.....	1
Features.....	2
Installation.....	2
Charcoal filter (optional).....	4
How To Use.....	5
Safety Information.....	6
Troubleshooting.....	7
Electrical Diagram.....	8
Specifications.....	8
Cleaning & Maintenance.....	9

Introduction

1.1 This appliance has been manufactured with materials and processes that respect the environment. We hope that you will continue this important consideration in the operation of this appliance & the disposal of the packaging materials, thank you.

1.2 The installation work must be undertaken by a qualified technician experienced in cooker hood installation. Please connect the correct power rating.

1.3 The manufacturer disclaims all liability for any damage or injury caused as a result of not following the instructions for installation contained in the following text.

1.4 The appliance is not intended for use by persons (including children) with reduced physical, sensory mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

1.5 Children should be supervised to ensure that they do not play with the appliance.

1.6 The maximum number of hobs covered by range hood should not exceed 4.

1.7 Any modifications to the appliance, electric wire and plug is dangerous & voids the warranty.

1.8 If the supply cord is damaged, it must be replaced by the manufacture, its service agent or similarly qualified persons in order to avoid a hazard.


Safety Information

- ◆ There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels .
- ◆ Do not check the status of the filters when the range hood is operating, wait at least 30 minutes after switching off to avoid scalding.
- ◆ Do not touch the light within 30 minutes after appliance use.
- ◆ Avoid operating a gas cooker when there is no pan on the stove. It is a fire hazard and may cause damage to the hood filters.
- ◆ Disconnect the electrical plug prior to any maintenance.
- ◆ CAUTION: Accessible parts may become hot when used with cooking appliances.
- ◆ Do not flambé under the range hood.
- ◆ The range hood is for home use only and is not suitable for outdoor, barbecue, and other commercial applications.
- ◆ The range hood and its filter should be cleaned regularly for best performance. Excessive grease will impede airflow and may cause the motor to overheat.
- ◆ Before cleaning, please confirm that the power is switched off.
- ◆ Building regulations concerning the discharge of exhaust air have to be fulfilled.
- ◆ Don't cook with an open flame under the range hood.
- ◆ For any technical issues ensure that a suitably qualified person effects any repairs or inspection.

How To Use

3 Speed adjustment (see pic 6).

- ◆ Push the Low button, and the motor runs at low speed.
- ◆ Push the Mid button, and the motor runs at mid speed.
- ◆ Push the High button, and the motor runs at high speed.
- ◆ Push the Light button, and the two lighting lamps illuminate. Push it again and the lamp will turn off.
- ◆ On any speed, push “T” & the delay timer will switch off the hood after 5 minutes. Push it again and the motor will turn off.

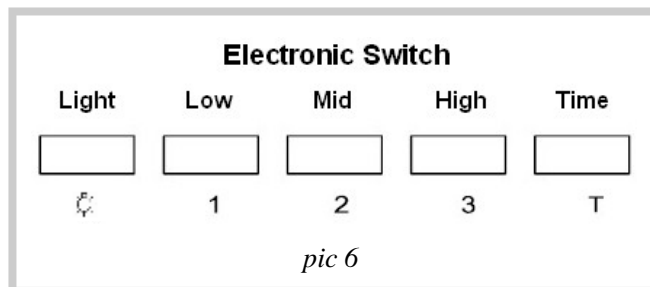

Features

2.1 This appliance is manufactured from top quality materials, and offers superb streamlined effects.

2.2 With high suction power and low noise, it is designed to remove cooking fumes from your kitchen quietly & effectively.

Installation

3.1 The range hood should be mounted at a distance of 650mm above the highest part of the highest burner of a gas cooking appliance or 750mm from a COMBUSTIBLE surface directly above the gas appliance. The range hood can be mounted 600mm above an electric cooking surface. (see pic 1a and 1b). The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).

3.2 To install, drill 3 holes of Ø8mm on a sturdy wall and in line with the hood.

3.3 Insert expanding screws into the holes. *Then fasten the hood by the outside of the 2 screws. Finally, fix the middle of the hole of the hood (see pic 2).*

3.4 Fix drilling template on the wall.

3.5 Attach the 150mm duct (not supplied) to the one way valve, and connect it to the kitchen outlet vent (see pic 3). *Do not screw the duct to the flange, as this may prevent the one way valve from opening. Use a suitable clamp*

3.6 Mount the bracket (alternative part) to make sure it's firmed (see pic4)

3.7 Ensure that the wall to be installed on is sufficiently sturdy to carry the weight of the hood. It should be mounted level for best performance (*see illustration*).

3.8 Do not connect to a common vent with other appliance such as gas heater, water heater, laundry dryer etc.

3.9 The duct should not be bent more than $\geq 120^\circ$ from the one way valve outlet to the kitchen vent.


3.10 Check to make sure that the electric cord is not in contact with sharp edges of the appliance.

3.11 Be sure that the plug is accessible after installation.




pic 1a (gas product)

pic 1b (electric product)

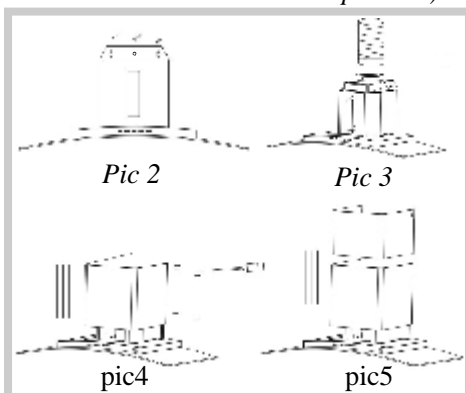

Warning: Failure to install the screws or fixing device in accordance with these instruction may result in electrical hazards.

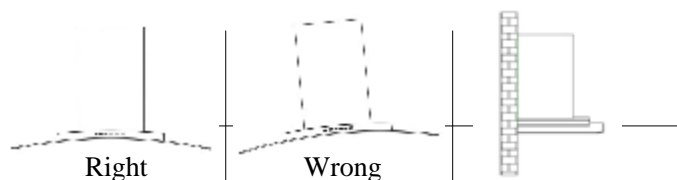

Charcoal filter (optional)

The hood can install the charcoal filter which can make your kitchen cleaner.



Step1. Remove this label if installing charcoal filter.



Step2. Buckle the filter on the air cabinet and push it up.



Step3. Press the catch and push it into the hole.



Step4. Put on the aluminium filter.