 


Agile

 
Installation Guide - Winder 2 Column

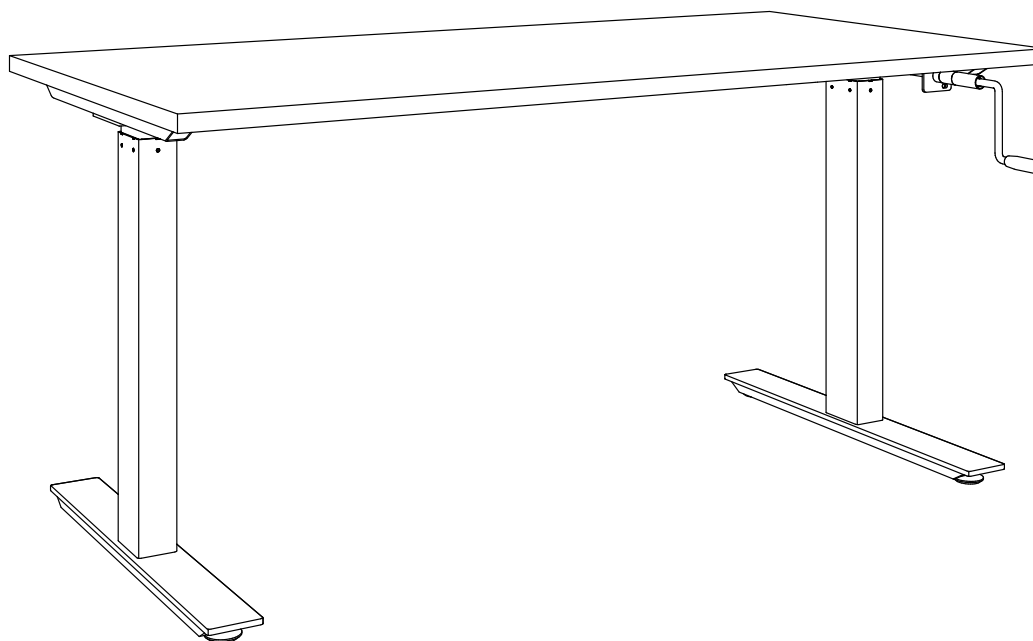


freeway




Parts:

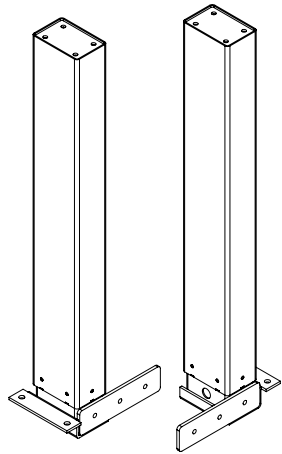


1 x Left & Right Leg Pair

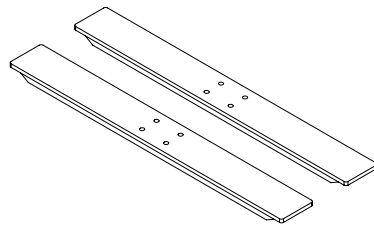 


2 x Foot

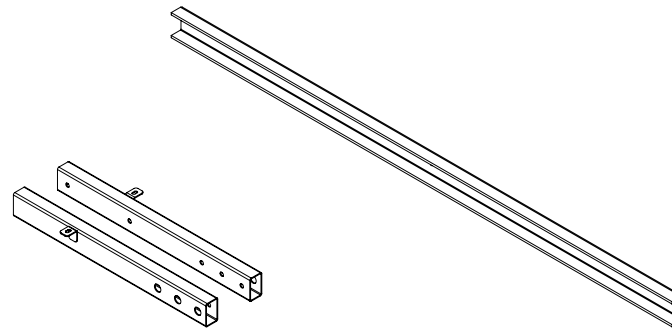 


2 x Leg Rail

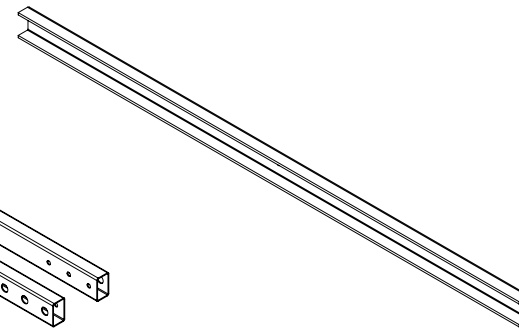 


1 x Cross Rail

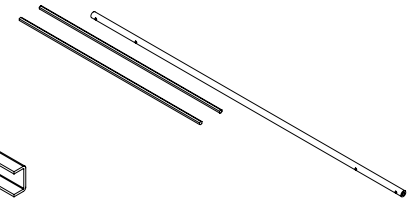 


1 x Drive Shaft

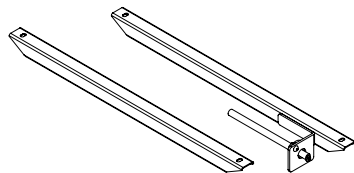 


1 x L&R Support Bar Pair

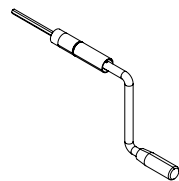 

1 x Winder

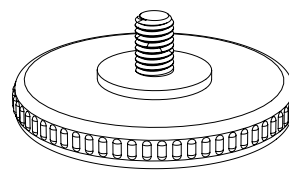 


4 x Levelling Foot

 

8 x M8x25



 8 x M8x10





6 x ST5.0x23

Step 1



 
 
4 x M8x10

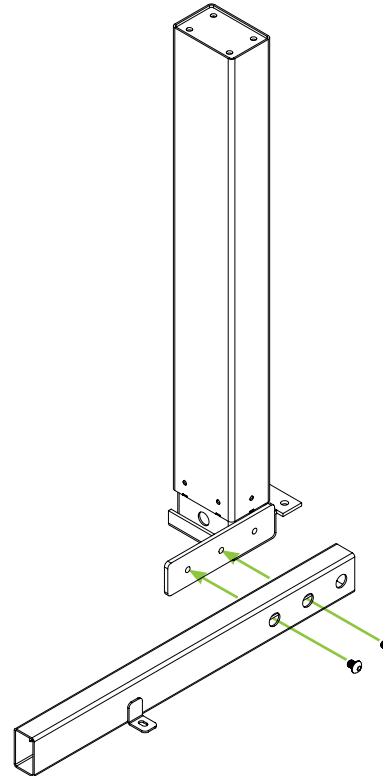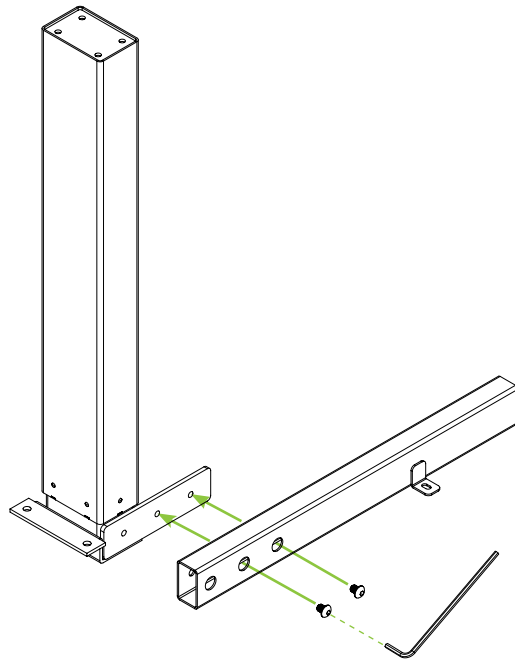


Step 2



 
 
4 x M8x10

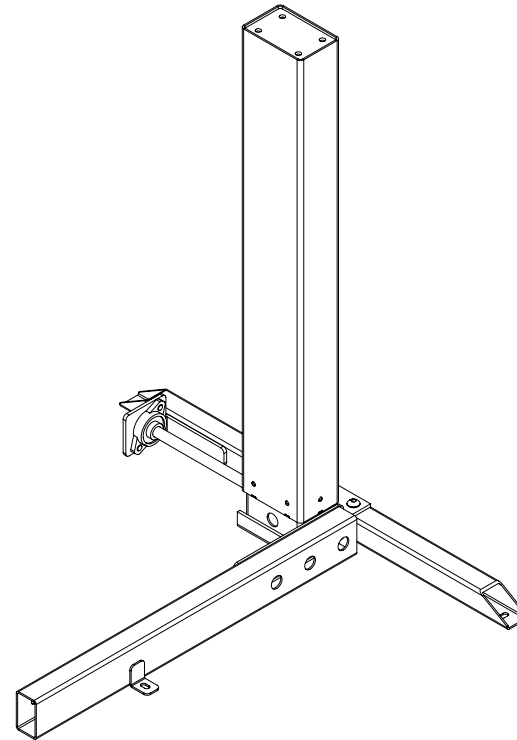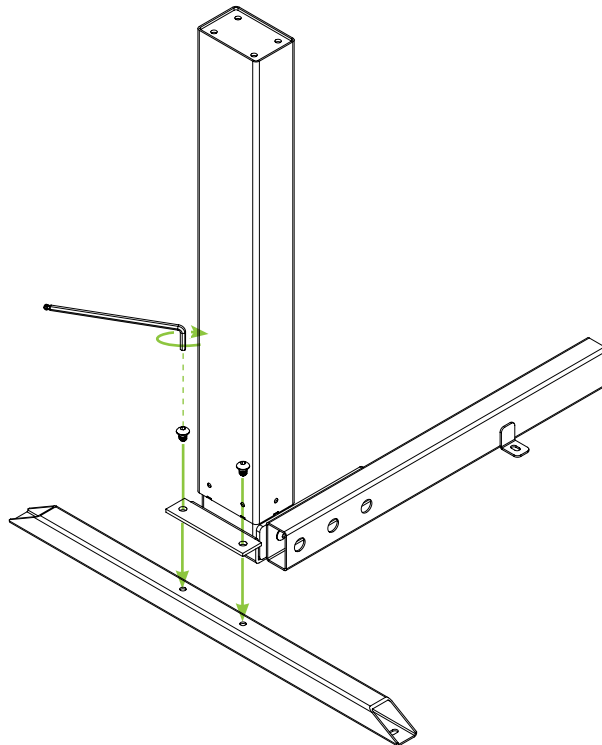


 
Step 3

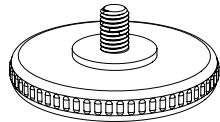


4 x Levelling Foot

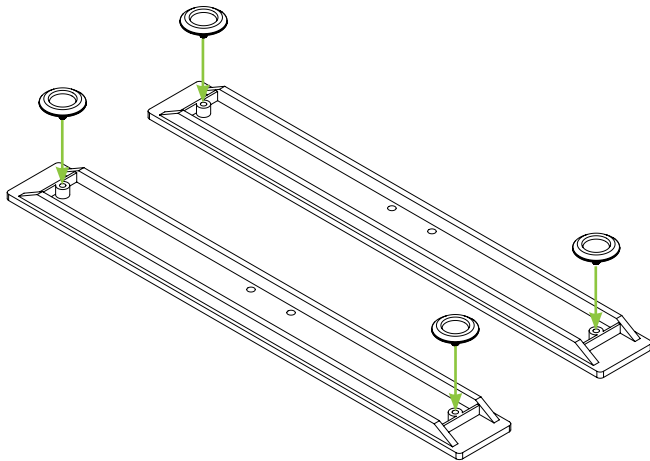  

8 x M8x25

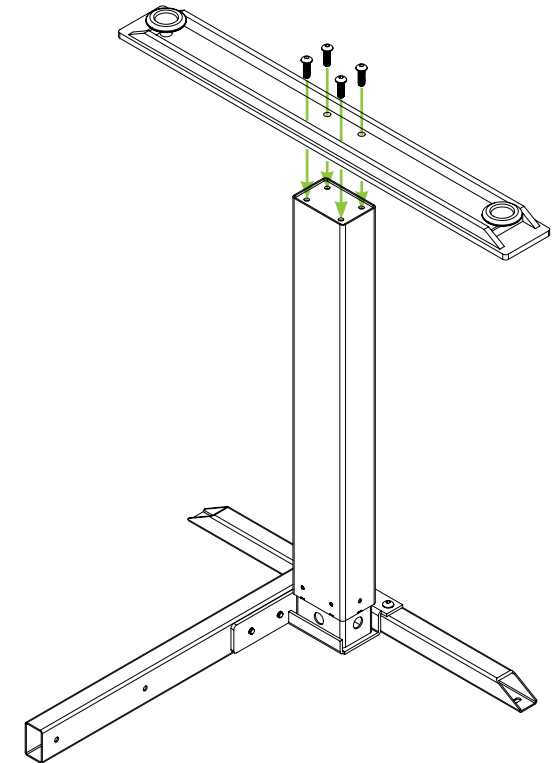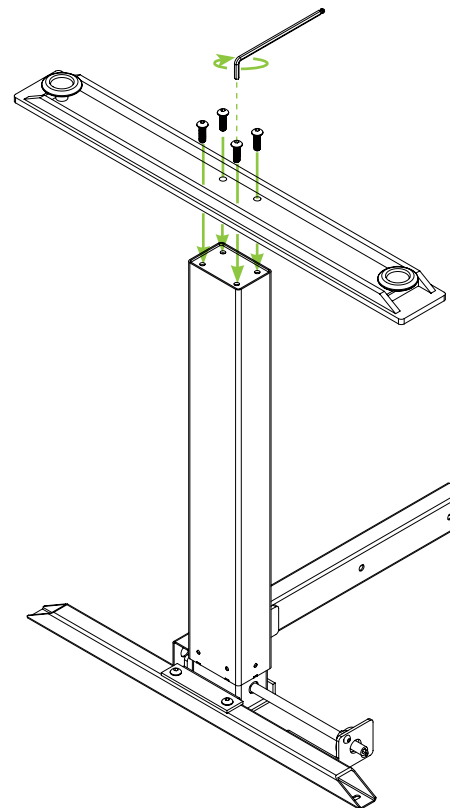  


 Step 4

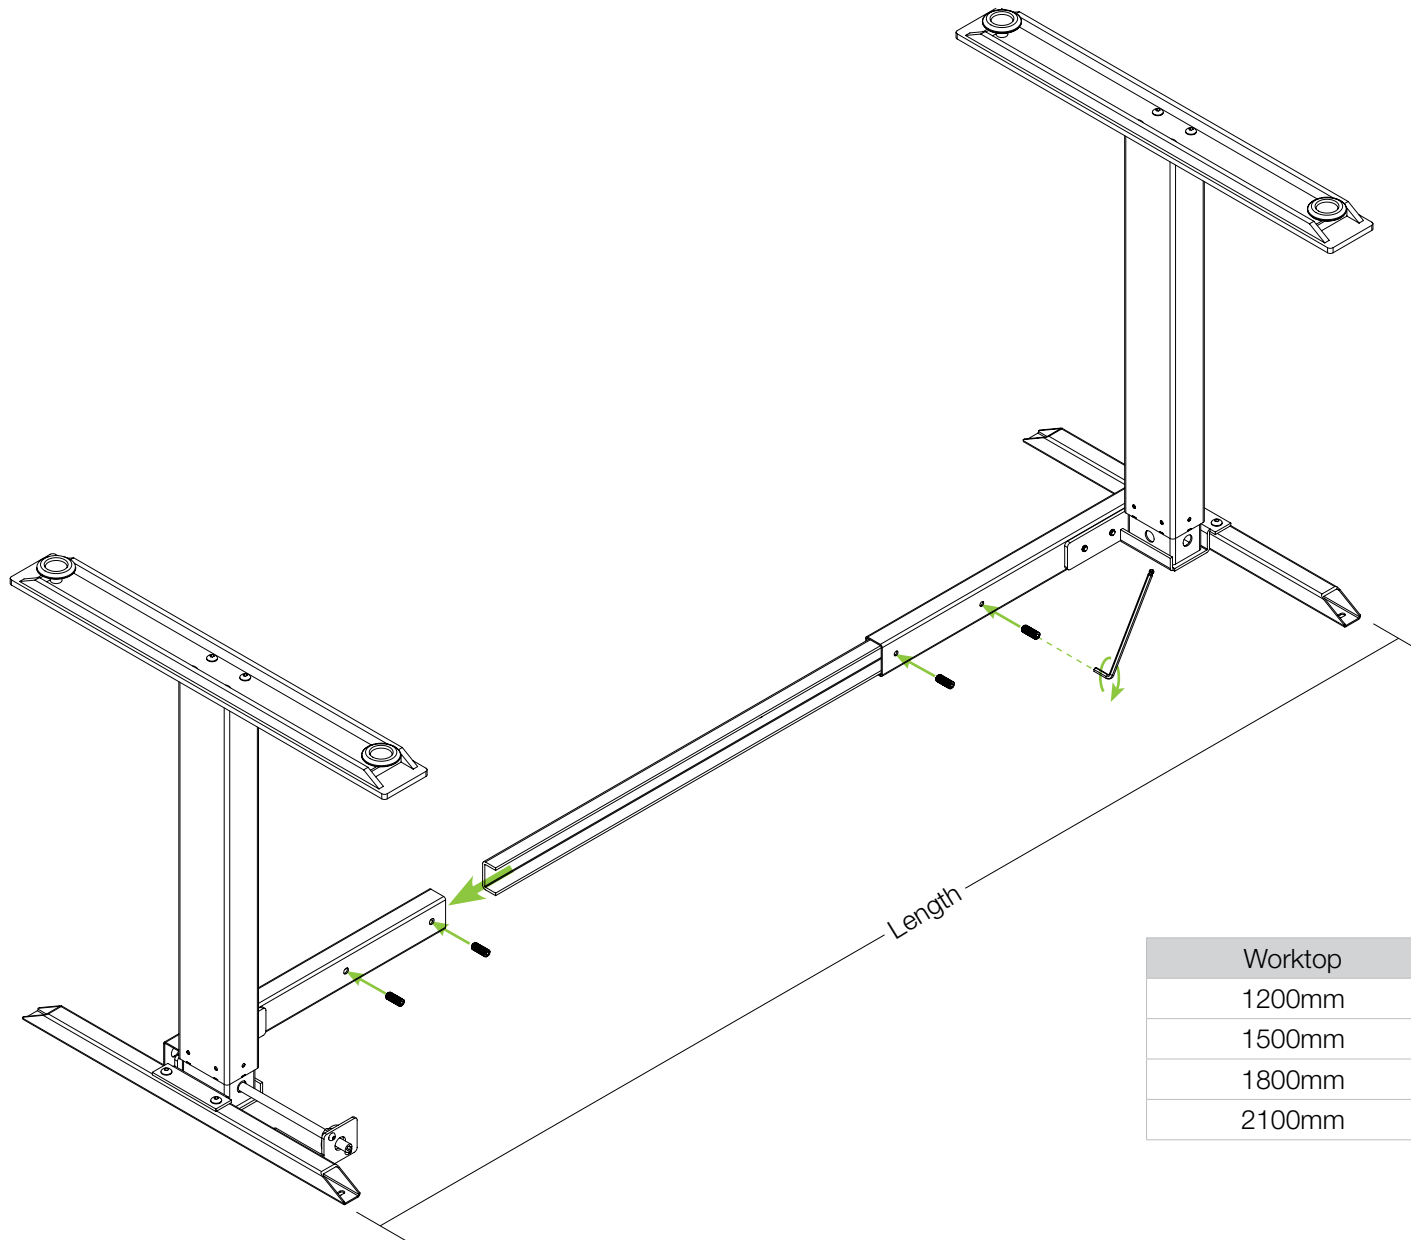


Worktop	Length
1200mm	1125mm
1500mm	1425mm
1800mm	1725mm
2100mm	2025mm

 
Step 5

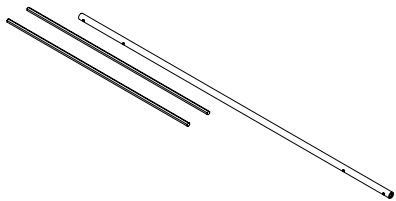


1 x Drive Shaft

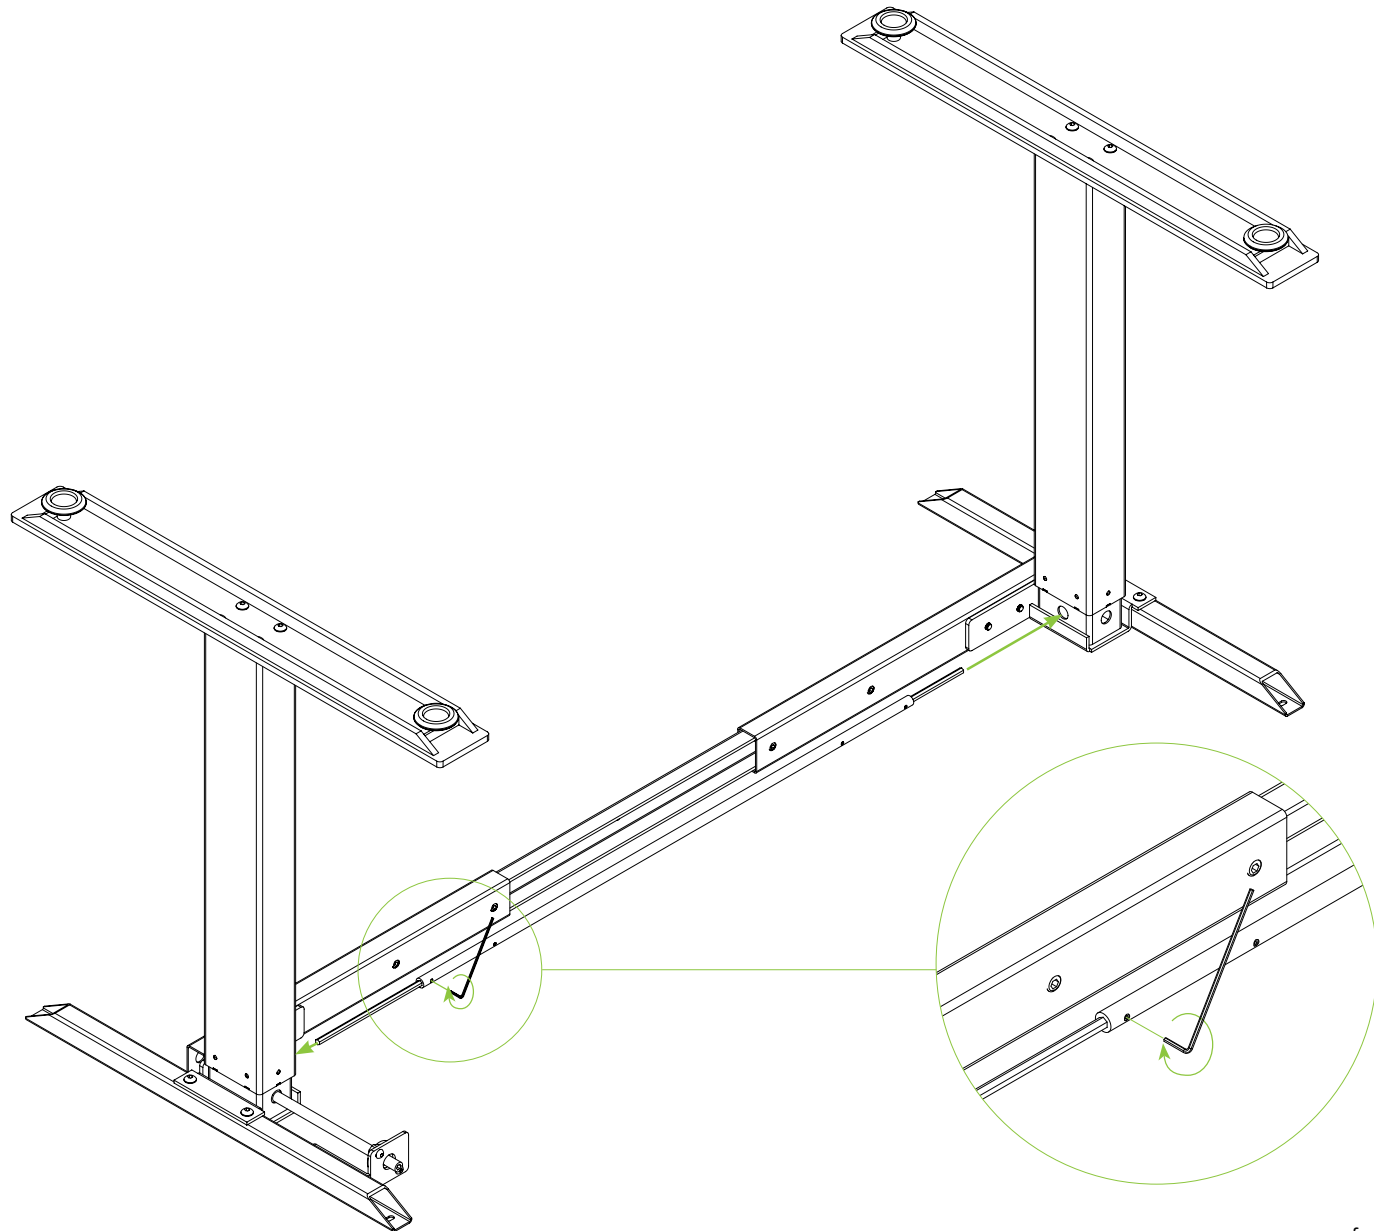 

 
Step 6

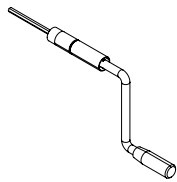


1 x Winder

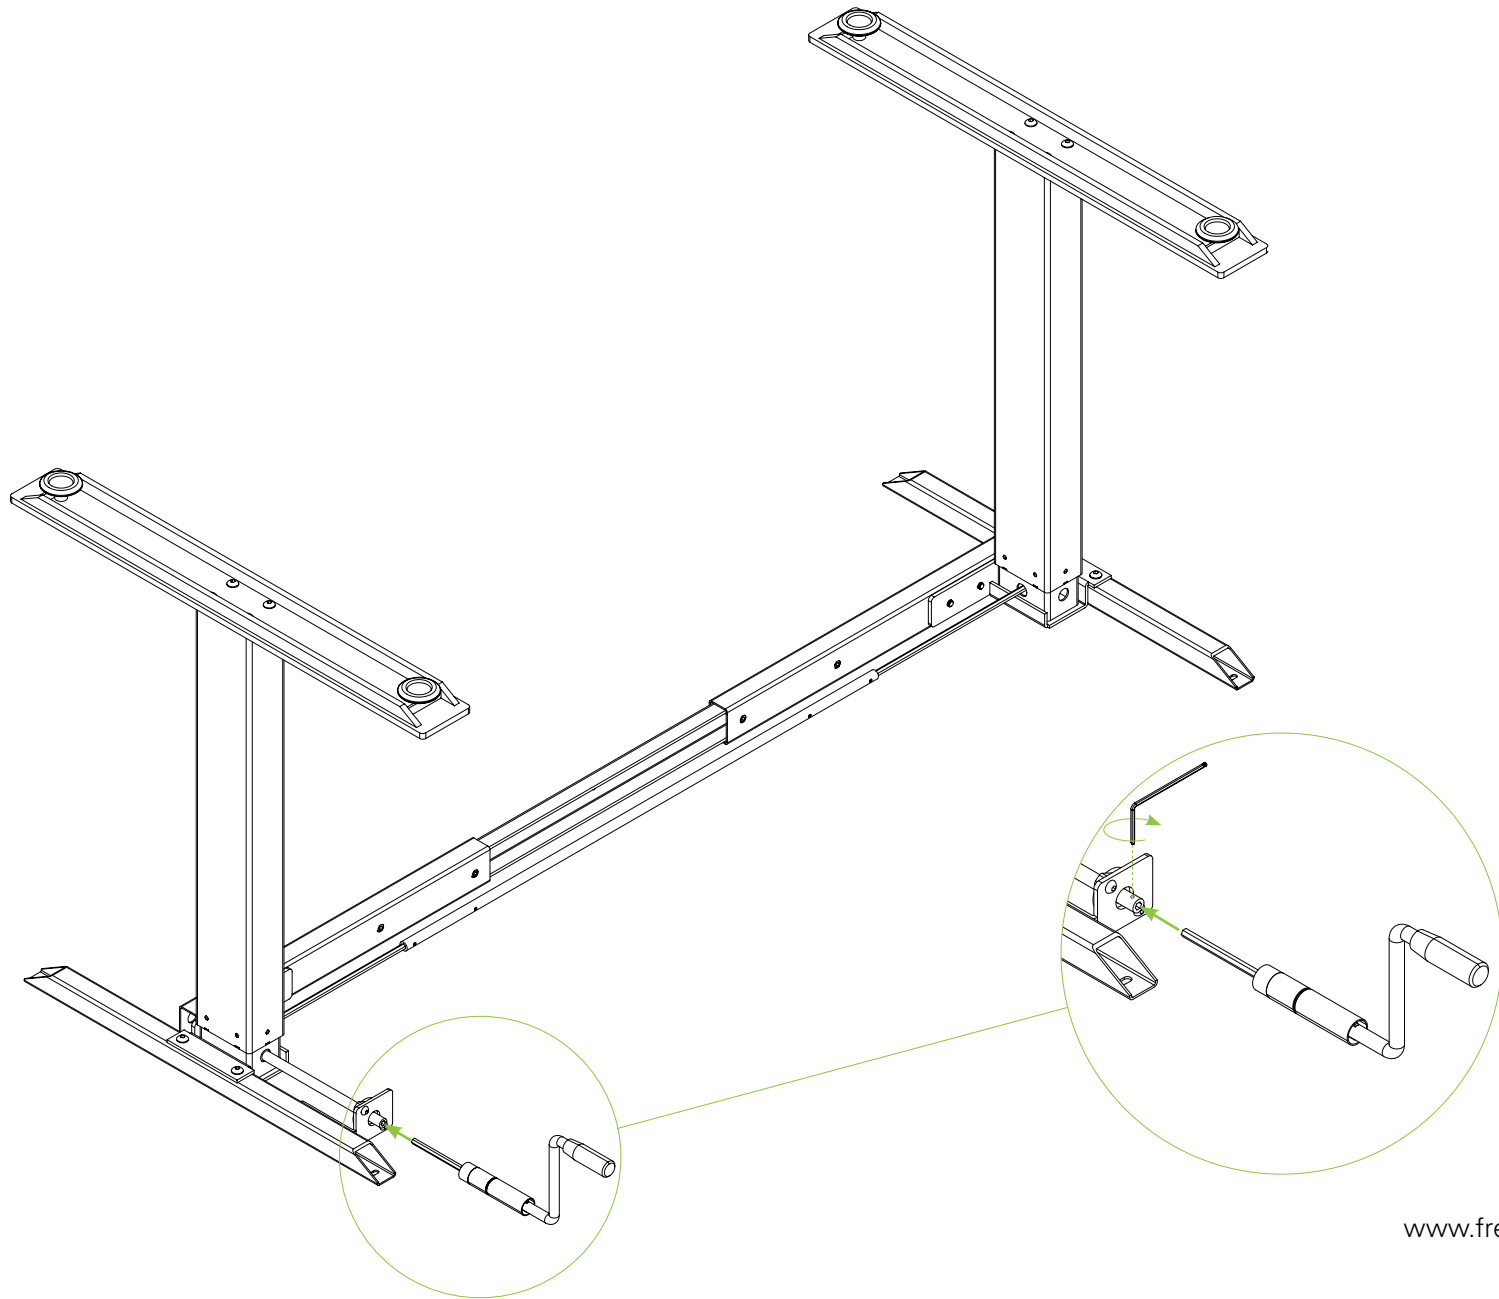 

 
Step 7



6 x ST5.0x23

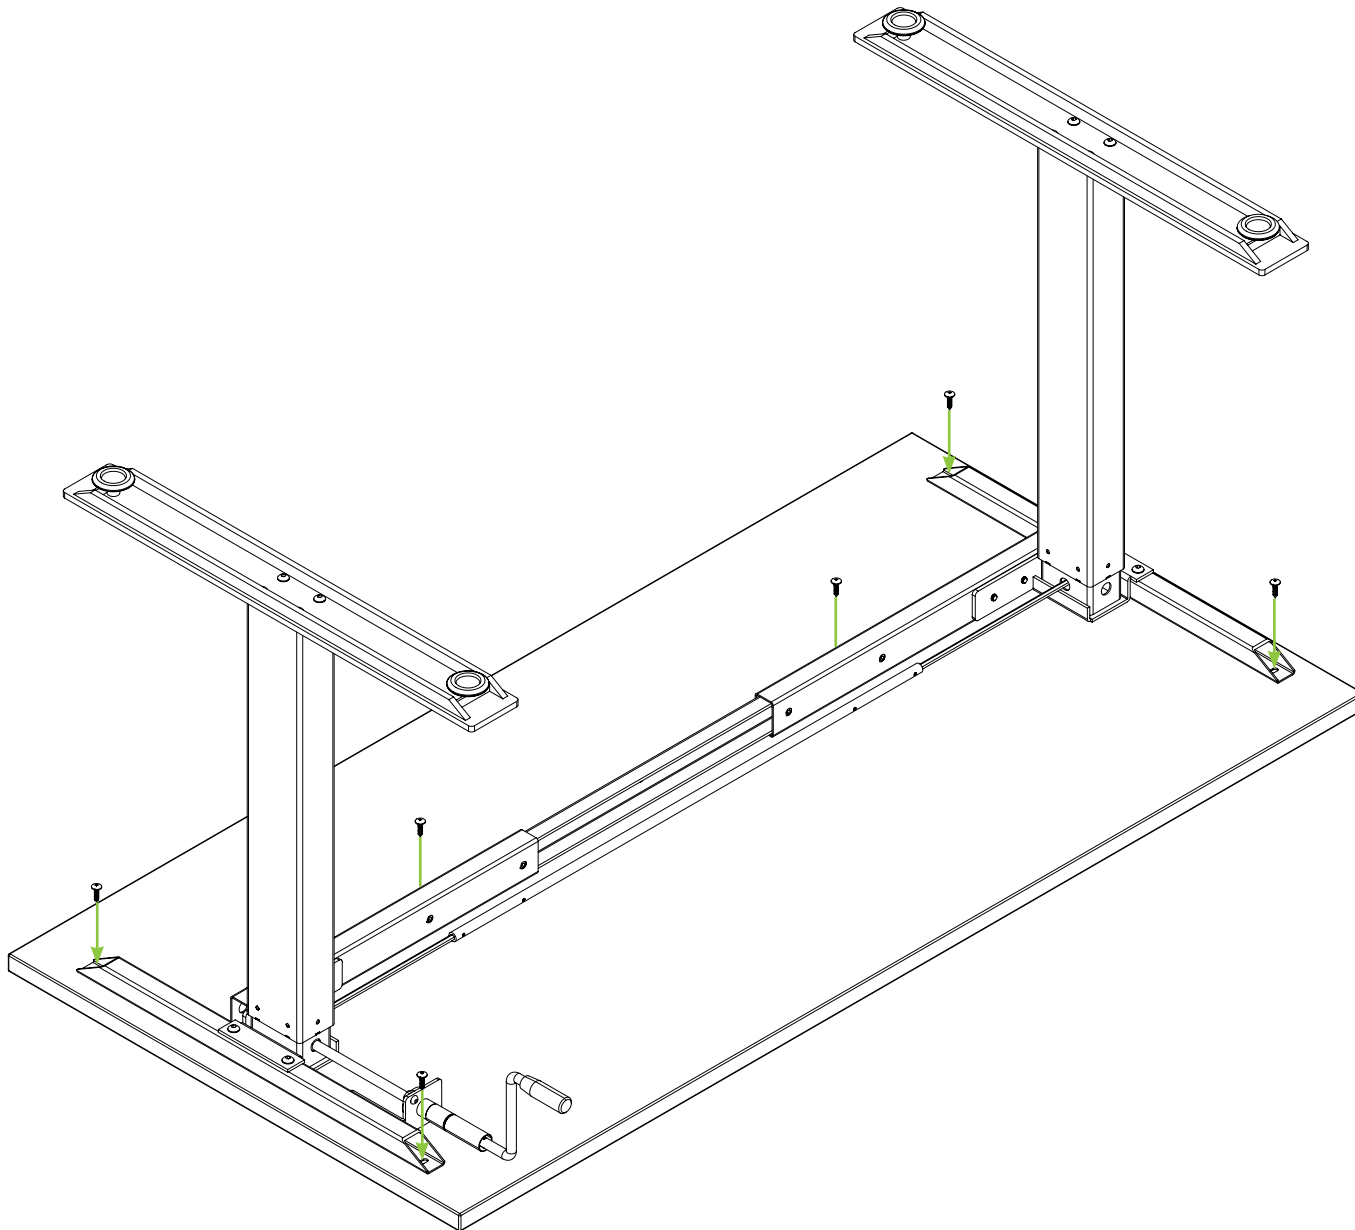 

Completed

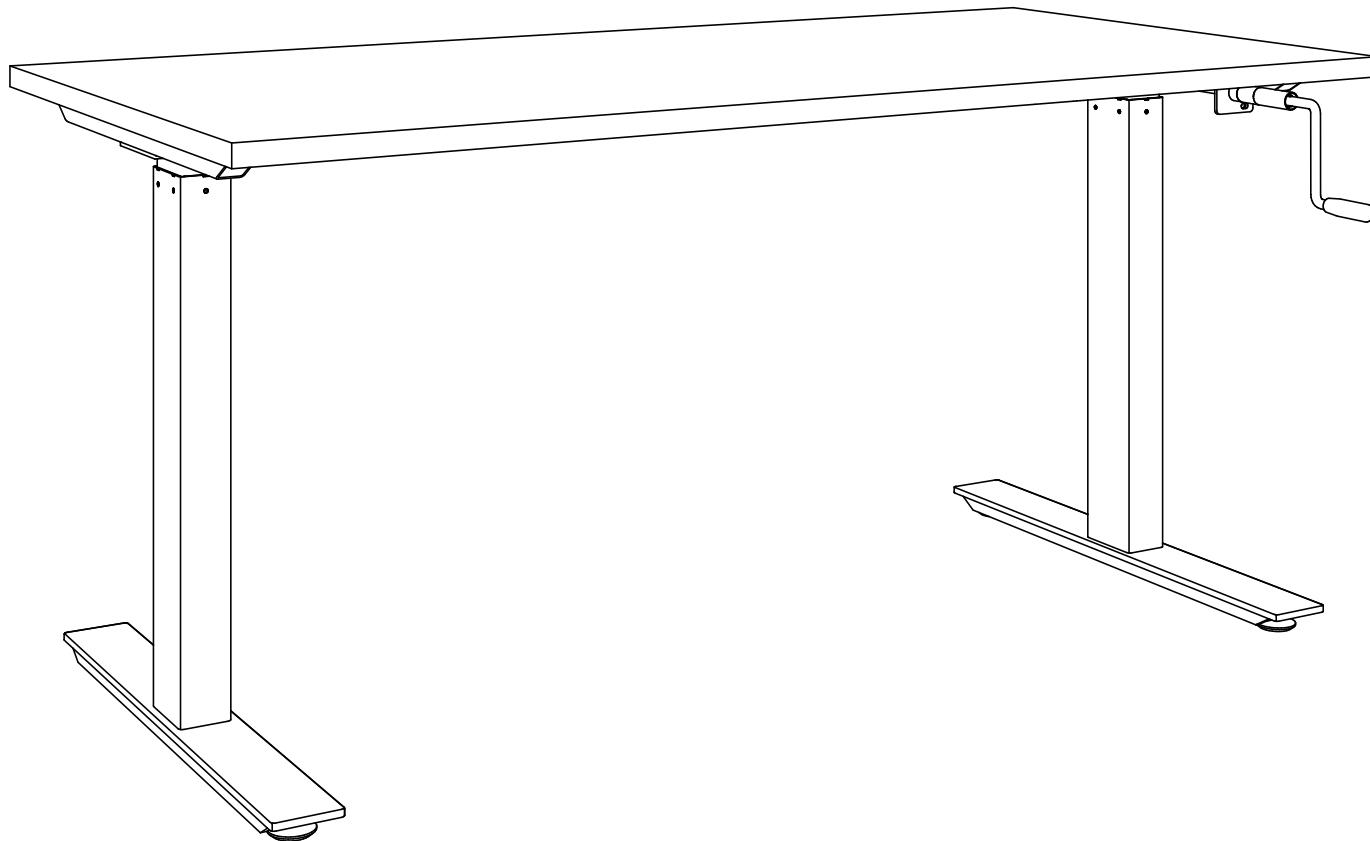 


Changing crank handle from right to left operation

Installation Guide - Winder 2 Column

Page 11

 Step 1

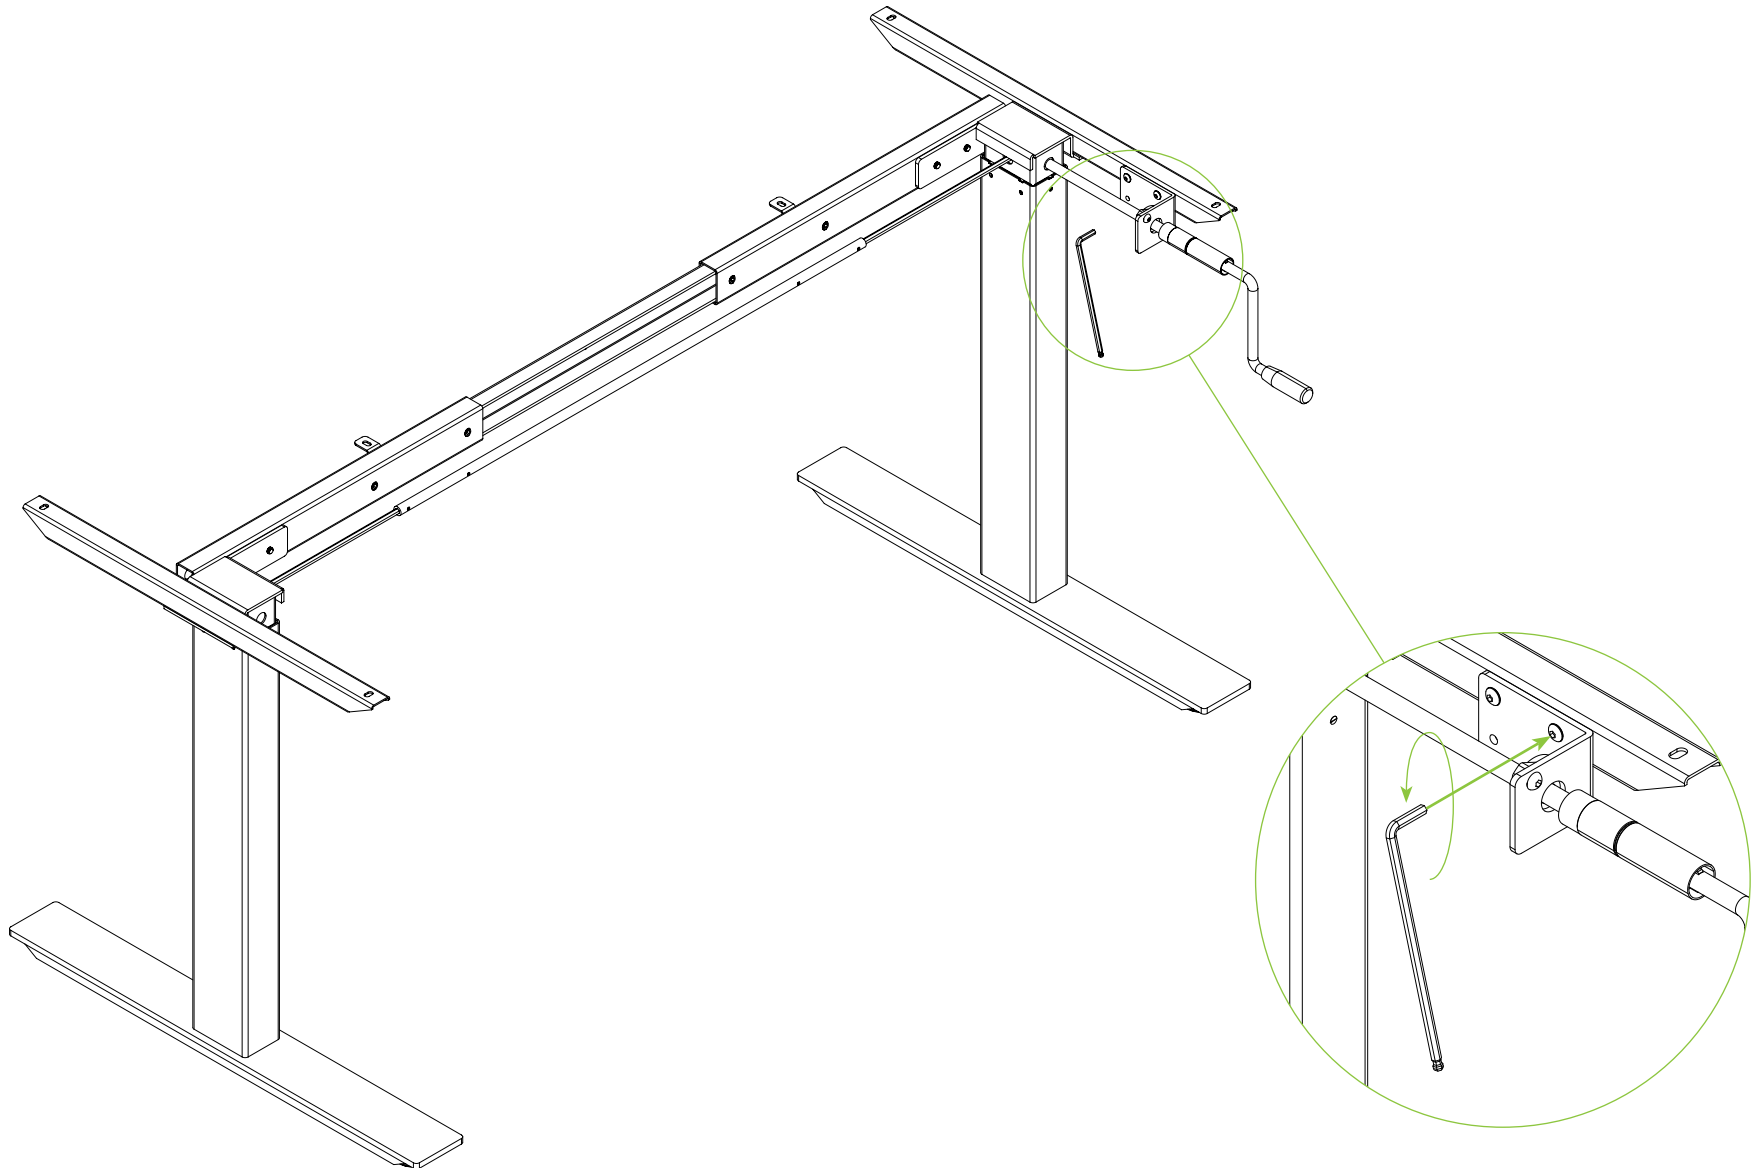

Changing crank handle from right to left operation

Installation Guide - Winder 2 Column

Page 12

Step 2

