

morphy richards®



Rice Cooker

Please read and keep these instructions

Cuiseur à riz

Merci de bien vouloir lire et conserver ces instructions

Reiskocher

Lesen Sie diese Bedienungsanleitung, und heben Sie sie gut auf

Olla arrocera

Lea y guarde estas instrucciones.

Rijstkoker

Lees deze gebruiksaanwijzing en bewaar hem goed

Panela Eléctrica

Leia e guarde estas instruções

Cuoci riso

Leggere e conservare le presenti istruzioni

Riskoger

Læs og gem denne vejledning

Riskokare

Läs och spara denna bruksanvisning

Garnek do gotowania ryżu

Zapoznaj się z niniejszą instrukcją obsługi i zachowaj ją do użytku w przyszłości

Пароварка для риса

Внимательно изучите и сохраните данное руководство

GB

F

D

E

NL

P

I

DK

S

PL

RU



app

Aust

www.morphyrichards.com



Getting the best from your new rice cooker...

- Do not keep food warm for longer than two hours
- Do not lift the lid during the keep warm period
- Rice must be thoroughly washed before using
- During cooking, certain varieties of rice may cause a build up of steam within the cooker, resulting in some spitting from the vent and under the lid
- On removing the rice from the inner bowl, a small amount of golden coloured rice may be noted on the base of the bowl. This is normal, allow the bowl to cool, fill with warm soapy water and allow to soak which will loosen the rice and make cleaning easier

IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition, we offer the following safety advice.

Personal Safety

- Do not touch hot surfaces. Use oven gloves or a cloth when removing lid or handling hot containers as hot steam will escape.
- To protect against fire, electric shock and personal injury, do not immerse cord, plugs, or appliance in water or other liquid.
- Unplug from the socket when not in use, before putting on or taking off attachments, and before cleaning.
- Do not operate any appliance with a damaged lead or plug, or after an appliance has malfunctioned, or has been dropped or damaged in any way. Contact Morphy Richards for advice on examination, repair, or electrical or mechanical adjustment.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Always use heat resistant gloves to remove the inner bowl and lid from the cooker.

Location

- Ensure that this appliance is situated out of the reach of children.
- Do not place directly under kitchen wall cupboards when in use as it produces large amounts of steam. Avoid reaching over the steamer when in use.
- Do not use outdoors.

Mains Lead

- The mains lead should reach from the socket to the base unit without straining the connections.
- Do not let the cord hang over the edge of the table or the counter and keep it away from any hot surfaces.
- Do not let the lead run across an open space e.g. between a low socket and table.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.

Children

- Never allow a child to operate this appliance.



- Children are vulnerable in the kitchen, particularly when unsupervised and if appliances are being used or cooking is being carried out.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.
- Children should be supervised to ensure that they do not play with the appliance.

Other safety considerations

- Do not reheat cooked rice in the cooker.
- The use of attachments or tools not recommended by Morphy Richards may cause fire, electric shock or injury.
- Extreme caution must be used when moving the cooker when it contains hot food, water, or other hot liquids.
- To open, lift the lid off towards yourself but tilted away from you.
- Do not use any parts of this product in a microwave or on any cooking/heated surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not wash rice in the pot as it may deform and will affect the cooking process.
- Never use the cooker to boil acid or alkaline foodstuff. Do not leave it in a damp or corrosive environment.
- The use of sharp implements inside the bowl may damage the non-stick coating.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).


WARNING: This appliance must be earthed.

UK only

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

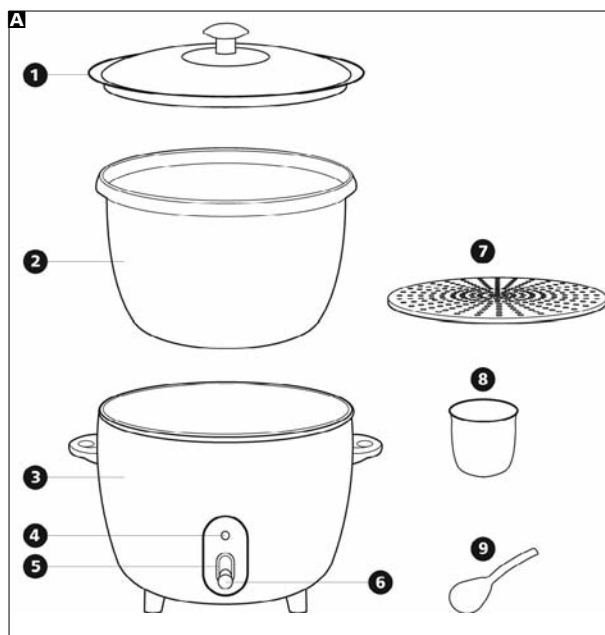

Features

- 1 Glass lid
- 2 Bowl
- 3 Main unit
- 4 Pilot / keep warm light
- 5 Cook light
- 6 Cook ON/OFF switch
- 7 Pasta pad
- 8 Measuring beaker
- 9 Spatula

OPERATION

Before first use

Before using your cooker for the first time, wash and dry the bowl and lid.

Assembly

Assemble as shown .

- Be sure to keep the space between the pot and the heating plate clean and free of water drops, dust, rice grains or any other foreign matter. If not, the cooker's performance will be affected and the element could possibly burn out.
- Do not slant the pot, otherwise it's bottom will not be in full contact with the heating plate and the element may burn out.
- Do not switch the power on until ready to cook.

Cooking rice

- 1 Use the measuring beaker provided to measure the rice, filling level to the top. As a guide, one cup of rice is sufficient for one person, but this will vary according to individual taste.
- 2 Thoroughly wash the rice in several changes of water and drain. Failure to do so may cause poor results and/or a build-up of steam within the cooker. Do not wash the rice in the inner bowl as it may be damaged.
- 3 Transfer the rice to the inner bowl and level the surface. The markings on the inside of the bowl are for measuring the amount of water and are given in litres and cups. Add cold water to the corresponding level marked on the inside of the bowl. For example, to cook 6 cups of rice, place the washed rice into the inner bowl and then fill with water up to the six cup level.
- Minimum capacity is 4 cups, maximum is 10 cups.
- Never fill with water straight from the tap, use the measuring beaker.

IMPORTANT: Do not fill above the top level indicated.


- 4 Place the inner bowl in the cooker, ensuring that there is no rice or any moisture on the outside of the bowl.
- 5 Cover with the lid, ensuring that the vent hole in the lid is situated away from you.
- 6 Plug the cooker into the power supply. The amber pilot will light up.
- 7 Press down the switch and the cooker will start. The blue light will come on and the amber light will go off.

Note: During cooking, it is normal for the lid to rise up slightly and water to bubble around the edge.

- 8 The cooker knows when the food is done by measuring temperature and weight. When the food is done, the main heater will turn off automatically and the cooker will switch into  'keep warm'. The blue light will go out and the amber light will go on to indicate keep warm.
- 9 Food left to keep warm should not be allowed to dry out and should be stirred occasionally, otherwise it may burn and stick to the bowl. Never leave the cooker on keep warm for more than two hours.
- 10 Carefully lift the lid and allow any condensation to drip into the cooker. Use the spatula to fluff up the rice. Replace the lid as quickly as possible. Consume the stirred rice within 1 hour. Small quantities (3 to 4 cups) should be consumed immediately.
- 11 Switch off at the mains and unplug the mains cable. Remove the bowl to serve the food.
- Never take the bowl out of the cooker when it is filled with water.
- We do not recommend cooking packet type savoury rice.

Cooking pasta

- 1 Use the measuring beaker provided to measure the pasta, filling level to the top. As a guide, 2 or 3 cups of pasta is sufficient for one person, but this will vary according to individual taste.
- 2 For best results when cooking pasta, fit the special pasta pad **B**.

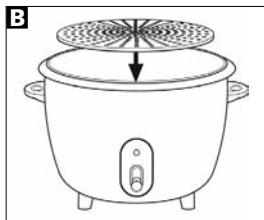

- 3 Transfer the pasta to the inner bowl and level the surface. The markings on the inside of the bowl are for measuring the amount of water and are given in litres and cups. Add water to the corresponding level marked on the inside of the bowl. For example, to cook 6 cups of pasta, place the pasta into the inner bowl and then fill with water up to the six cup level.
- Minimum capacity is 4 cups, maximum is 10 cups.
- Never fill with water straight from the tap, use the measuring beaker.

IMPORTANT: Do not fill above the top level indicated.

- 4 Place the inner bowl in the cooker, ensuring that there is no pasta or any moisture on the outside of the bowl.
- 5 Cover with the lid, ensuring that the vent hole in the lid is situated away from you.
- 6 Plug the cooker into the power supply. The amber pilot light will light up.
- 7 Press down the switch and the cooker will start. The blue light will come on and the amber light will go off.

Note: During cooking, it is normal for the lid to rise up slightly and water to bubble around the edge.

- 8 For all types of pasta, we recommend that you follow the cooking time on the packet plus a further 10 minutes. At the end of the cooking time, you can switch the cooker to  'keep warm' if required. The blue light will go out and the amber light will go on to indicate keep warm.
- 9 Carefully lift the lid and allow any condensation to drip into the cooker. Use the spatula to stir the pasta which is then ready to eat. Replace the lid as quickly as possible if leaving on keep warm. Consume the pasta within 1 hour.
- 10 Switch off at the mains and unplug the mains cable. Remove the bowl to serve the food.

Tips for best cooking results

- Make sure that the rice and pasta is spread over the whole surface of the bowl to ensure even cooking.
- You may find that for your own personal taste, you need to slightly adjust the amount of water added. For a softer rice or pasta, add a little more water, and for a firmer rice or pasta, a little less water.
- The cooking times may vary according to the quantity and type of rice or pasta cooked.
- A thin crust of rice may form on the base, particularly when cooking Italian or easy-cook type rice, or when cooking smaller quantities. Wiping half a teaspoon of oil over the base may help reduce this forming, but this occurrence is not always preventable.

For recipes, please see
www.morphyrichards.com

CLEANING AND MAINTENANCE

Before cleaning and maintenance, switch the appliance off and unplug it.

- Wash the bowl and lid in warm soapy water and dry well.
- Wipe the main unit with a damp cloth. Do not use any abrasive or solvent-

GB

based cleaner.

- If food has stuck to the bottom of the bowl, allow to soak for a while before washing it.
- Do not immerse the main unit in water, nor pour water into it, only the inner bowl may be immersed in water.
- Ensure the area between the main unit and inner bowl is always clean and free from any rice or pasta particles etc. This is important to ensure proper contact between the two.

IMPORTANT: The brown marks and scratches that may appear after many hours of use are not a problem. We guarantee that the non-stick coating complies with the standards and regulations on materials suitable for contact with food.

Taking care of the bowl

Use a plastic or wooden spoon and not a metal one so as to avoid damaging the bowl surface.

SAFETY CUT-OUT

The cooker is fitted with a thermal fuse, which will cut the current off automatically in an incident. If this happens, the cooker must be returned to Morphy Richards or an authorised service agent for repair.

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product.
- Model number as shown on the underside of the appliance.
- Serial number as shown on the underside of the appliance.

UK Helpline 0844 871 0956

Replacement Parts 0844 873 0722

Ireland Helpline 1800 409 119

YOUR TWO YEAR GUARANTEE

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no. Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If you suspect a fault, follow the simple checks detailed below before retrying the appliance or calling the helpline.

- Check the plug is firmly in the socket is working by trying another appliance.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee



the appliance must have been used according to the instructions supplied.

the place of purchase accompanied by the original receipt or invoice.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
 - 2 The appliance has been used on a voltage supply other than that stamped on the products.
 - 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
 - 4 Where the appliance has been used for hire purposes or non domestic use.
 - 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
 - 6 The guarantee excludes consumables such as some filters.
- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

AUSTRALIAN WARRANTY

This appliance is guaranteed for 2 years against faulty material, components and workmanship.

This warranty is in addition and does not affect your statutory rights.

Proof of purchase must be produced for any warranty benefit.

In the unlikely event of any appliance proving to be faulty, securely pack and return the item to

NOT COVERED BY THIS WARRANTY *(Australian only)*

- If the appliance has not been used in accordance with the manufacturers' recommendations or Instructions.
- If the fault is deemed to be caused by abuse, misuse, neglect, modifications or in proper use and or care
Eg: Kettles: Excessive build up of scale.
Toasters: Excessive build up of crumbs or foreign matter etc.
- Connection to incorrect voltage to that stamped on the product
- Unauthorised repairs
- Appliance used other than for domestic purposes.
- Excluding bags, filters, glass, carafes, and cutting blades.
- Freight and insurance costs.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original receipt or invoice to indicate the date of original purchase.

Morphy Richards's policy is to continually improve quality design and product quality. The company therefore reserves the right to change any specifications or to carry out modifications as deemed worthy at any time.

The Australian supplier ASKO Appliances reserves the right to repair, modify, exchange or replace the faulty appliance with the same or similar model or product of equivalent value.

GB

- GB** Morphy Richards products are intended for household use only. Morphy Richards has a policy of continuous improvement in product quality and design. The Company, therefore, reserves the right to change the specification of its models at any time.

The After Sales Division,
Morphy Richards Ltd, Mexborough, South Yorkshire, England, S64 8AJ
Helpline (office hours) UK 0844 871 0951 Republic of Ireland 1800 409119

AUS Australia - Service centre locations

Asko Appliances (Australia) Pty Ltd.
Victoria
35 Sunmore Close, Moorabbin. 3189 T: 03 8551 2200

New South Wales
F3/ 3-9 Birnie Ave., Lidcombe. 2141 T: 02 8748 2900

Queensland
2/112 Fison Ave., Eagle Farm. 4009 T: 07 3623 2700

South Australia
45 Hampton Road, Keswick. 5035 T: 08 8293 1833

Western Australia
15 Walters Drive, Osborne Park. 6017 T: 08 9244 4366

- F** Les produits Morphy Richards sont conçus pour un usage exclusivement domestique. Morphy Richards s'engage à mener une politique d'amélioration continue en termes de qualité et de conception. Le fabricant se réserve donc le droit de modifier sans préavis la spécification de ses modèles.

Glen Dimplex France
Z.I de l'Eglantier
20, rue des Cerisiers
91028 Evry cedex 2851
T: + 33 (0)1 69 11 11 91 F: + 33 (0)1 60 86 15 24

- D** Morphy Richards Produkte sind nur für den Einsatz im Haushalt vorgesehen. Ständige Verbesserungen an der Produktqualität und dem Design gehören zur Philosophie von Morphy Richards. Aus diesem Grunde behält sich die Firma das Recht vor, die Angaben zu ihren Modellen jederzeit zu ändern.

Glen Dimplex Deutschland GmbH
Service-Hotline:
+49(0) 1805/395-346 (14 Cent/Min)
Service-Fax: +49(0) 3675/879-235
email: service@glendimplex.de

Österreich
Kundendienst
Merangasse 17
A-8010 Graz
Telefon : +42(0) 316/323-041 Telefax: +49(0)316/382-963

- E** Los productos Morphy Richards están concebidos solamente para uso doméstico. Morphy Richards tiene una política de mejora en la calidad y diseño de sus artículos. La compañía, por lo tanto, se reserva el derecho de cambiar en cualquier momento las especificaciones de sus modelos.

Glen Dimplex España
C/ Bailén, 20. 4º 2ª
08010 Barcelona
España
Tel. 93 238 61 59 Fax. 93 238 43 75
www.glendimplex.es

Glen Dimplex España
Servicio de Asistencia Técnica en toda España
PRESAT S.A.
Calle Ribes 49-53
08013 Barcelona, España
Línea de ayuda (horas de oficina) 93 247 85 70
presat@presat.net

- NL** De producten van Morphy Richards zijn alleen bedoeld voor huishoudelijk gebruik. Morphy Richards streeft ernaar de kwaliteit en het design van zijn producten voortdurend te verbeteren. Het bedrijf behoudt zich daarom het recht voor om de specificaties van de producten op ieder ogenblik te wijzigen.

Glen Dimplex Benelux BV
Antennestraat 84
1322 AS Almere
Nederland
T: +31-(0)-36 538 70 40 F: +31-(0)-36-538 70 41
Service: +31-(0)-36-538 70 55
E: info@glendimplex.nl www.morphyrichards.nl

- B** Les produits Morphy Richards sont conçus pour un usage exclusivement domestique. Morphy Richards s'engage à mener une politique d'amélioration continue en termes de qualité et de conception. Le fabricant se réserve donc le droit de modifier sans préavis la spécification de ses modèles.

De producten van Morphy Richards zijn alleen bedoeld voor huishoudelijk gebruik. Morphy Richards streeft ernaar de kwaliteit en het design van zijn producten voortdurend te verbeteren. Het bedrijf behoudt zich daarom het recht voor om de specificaties van de producten op ieder ogenblik te wijzigen.

Glen Dimplex Benelux BV
Gentsestraat 60
B- 9300 Aalst
België
T: +32-(0)-53 82 88 62 F: +32-(0)-53 82 88 63
E: info@glendimplex.be www.morphyrichards.be

- P** Os produtos Morphy Richards foram concebidos apenas para utilização doméstica. A Morphy Richards respeita uma política de aperfeiçoamento contínuo da qualidade e design do produto. Desta forma, a companhia reserva-se o direito de alterar as especificações destes modelos a qualquer momento.

Imporaudio Lda
Rua D. Marcos Da Cruz 1281
4455-482 Perafita
Portugal
T: +351 22 996 67 40 Fax: +351 22 996 67 41

- I** I prodotti Morphy Richards sono concepiti esclusivamente per uso domestico. Morphy Richards è costantemente impegnata a migliorare la qualità e il design dei propri prodotti, pertanto si riserva il diritto di modificare le specifiche dei diversi modelli in qualunque momento.

Glen Dimplex Italia Srl
Via delle Rose 7, 24040 Lallio (BG)
Assistenza telefonica (Lun-Ven)
08:30 - 12:30 / 14:00 - 18:00
T: 035-201042 F: 035-200492

- DK** Morphy Richards produkter er kun beregnet til husholdningsbrug. Det er praksis hos Morphy Richards at fortsætte udviklingen af produktets kvalitet og design. Firmaet forbeholder sig derfor retten til at ændre modellerens specifikationer når som helst.

- S** Produkter från Morphy Richards är endast avsedda för hushållsbruk. Morphy Richards har en policy för kontinuerlig förbättring i produktkvalitet och utformning. Företaget förbehåller sig därför rätten att när som helst ändra specifikationen för sina modeller.

- PL** Produkty Morphy Richards są przeznaczone wyłącznie do użytku domowego. Morphy Richards prowadzi politykę ciągłej poprawy jakości i wzoru produktów. Firma zastrzega sobie prawo zmiany specyfikacji modeli w dowolnej chwili.

Glen Dimplex Polska Sp. z o.o.
Ul. Strzeszyńska 33
60-479 Poznań
NIP 781-16-70-985
T: + 48 (0)61 8425 805 F: + 48 (0)61 8425 806

- RU** Изделия Morphy Richards предназначены только для бытового использования. Morphy Richards постоянно совершенствует качество и дизайн своей продукции. Таким образом, компания оставляет за собой право в любое время вносить изменения в технические характеристики своих изделий.



GB For electrical products sold within the European Community.
At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

F Pour les appareils électriques vendus dans la Communauté européenne.
Lorsque les appareils électriques arrivent à la fin de leur vie utile, il ne faut pas les jeter à la poubelle. Il faut les recycler dans des centres spécialisés, s'ils existent.
Consultez la municipalité ou le magasin où vous avez acheté l'appareil pour obtenir des conseils sur le recyclage dans votre pays.

D Für elektrische Artikel, die in der europäischen Gemeinschaft verkauft werden.
Am Ende der Nutzungsdauer sollte das Gerät nicht im regulären Hausmüll entsorgt werden. Bitte einer Recycling-Sammelstelle zuführen. Informationen über geeignete Recycling-Annahmestellen erhalten Sie bei Ihrer Stadt- bzw. Ortsverwaltung.

E Para productos eléctricos vendidos en la Comunidad Europea.
Al final de su vida útil los productos eléctricos no deberán desecharse con el resto de residuos domésticos.
Reciclelos en las instalaciones destinadas para ello. Infórmese sobre consejos de reciclaje en su tienda habitual o consulte a las autoridades locales de su país.

NL Voor elektrische producten verkocht in de Europese Gemeenschap.
Op het einde van zijn levensduur mag een elektrisch product niet worden meegegeven met het gewone huisvuil.
Laat het product recycleren als deze mogelijkheid voorzien is.
Vraag bij uw lokale overheid of in uw winkel waar u daarvoor terecht kunt.

P Para produtos eléctricos vendidos na Comunidade Europeia.
Quando os produtos eléctricos atingirem o final da sua vida útil, não devem ser eliminados juntamente com o lixo doméstico.
Faça a reciclagem nos locais apropriados. Contacte as autoridades locais ou o revendedor para saber como efectuar a reciclagem no seu país.

I Per gli elettrodomestici venduti all'interno della Comunità europea.
Al termine della vita utile, non smaltire l'elettrodomestico nei rifiuti domestici. Riciclarlo laddove esistono le strutture. Verificare con la Locale Autorità o con il dettagliante in merito alle possibilità di riciclaggio nel proprio paese.

DK Angående elektriske produkter, der sælges inden for EU.
Når det elektriske produkt har nået enden af sin levetid, må det ikke bortkastes sammen med husholdningsaffaldet.
Det bedes genbrugt, hvor der er faciliteter hertil. Bed de lokale myndigheder eller forhandleren om råd om genbrug i dit land.

S Gäller elektriska produkter som säljs inom Europeiska Unionen.
När elektriska produkter inte längre kan användas ska de inte kastas med vanliga hushållssopor. Lämna dem till återvinning där det finns möjlighet. Kontakta lokala myndigheter eller försäljningsstället och kontrollera vad som gäller för återvinning i ditt land.

PL Dotyczy urządzeń elektrycznych sprzedawanych na terytorium Unii Europejskiej: urządzenia nie powinny być wyrzucane jako zwykłe śmiecie. W miejscach, gdzie istnieje możliwość recyklingu urządzeń elektrycznych, prosimy o skorzystanie z tej możliwości. Informacji o możliwości recyklingu wyeksploatowanych urządzeń elektrycznych udzielają odpowiednie organy administracji lokalnej i sprzedawcy urządzeń.

GB

F

D

E

NL

P

I

DK

S

PL

RU

morphyrichards®

RC48746MEE Rev 2 01/09

www.morphyrichards.com



appl
Aust