 


60cm Integrated Dishwasher

ODWIF6015

omega

 
 
Designed to Enhance
EST. 1981

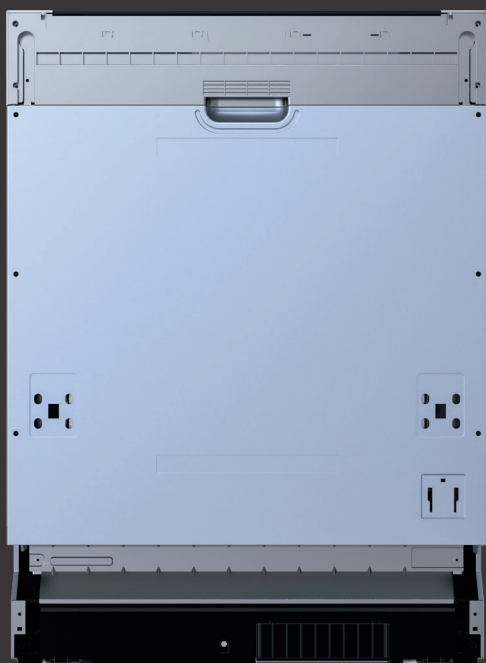

Introducing your new 60cm Integrated Dishwasher

Adjusting the Upper Basket Height

1. To raise the upper basket, just lift the upper basket at the center of each side until the basket locks into place in the upper position.
2. To lower the upper basket lift the adjust handles on each side to release the basket and lower it to the lower position.

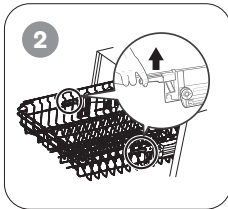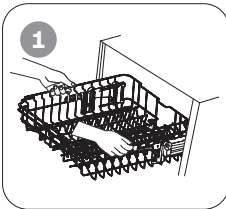

Wash Programs

	Auto Wash: This auto sensing program adjust the cycle based on water clarity.
	Intensive: For heaviest soiled crockery, such as pots, pans, casserole dishes and dishes.
	Heavy: For heavily soiled loads, such as pots, plates, glasses and lightly soiled pans.
ECO	ECO: This program is for normally soiled loads at rated capacity.
	Glass: Suitable for lightly soiled glassware.
	90 min: A fast 90 minute daily program for lightly soiled dishes.
	Rapid: A quick 30 minute wash suitable for lightly soiled dishes with no drying stage.

Additional Functions

	Half Zone: When only at half capacity, you can choose this function to wash items that are only in the Upper Basket or Lower Basket
	Delay Start: Increase the Delay Start time in 1 hour increments up to 24 hours.
	Extra Dry: The rinse cycle will perform at a higher temp. for a better drying result.

	Auto Door Opening: When set, the door will open automatically at the end of the program wash cycle.
	Extra Clean: This cycle will increase the main wash, rinse and drying times.
	Express Wash: Less wash and rinse cycles whilst increasing the dishwasher's power.

Details

Product Dimensions (W, D, H mm): 598 × 550 × 815
Warranty Period: 3 Years

Support

Telephone: 1300 11 HELP (4357)
Email: support@residentiagroup.com.au

