



# **46cm HV PEDESTAL FAN**

**Model: GDC-PF46HVC / GDC-PF46HVG**



## **INSTRUCTION MANUAL**

**PLEASE READ THE INSTRUCTION MANUAL CAREFULLY BEFORE USING THE UNIT**

# TABLE OF CONTENTS

WARNINGS & PRE-CAUTIONS..... 1

STRUCTURE..... 3

ASSEMBLY & OPERATION..... 4

CLEANING & MAINTENANCE..... 5

TECHNICAL SPECIFICATIONS..... 7

WARRANTY..... 7



# WARNINGS AND PRE-CAUTIONS

## Warnings


- Never place the unit near any gas appliances, fire or flammable liquids.
- Never hit or shake the unit to prevent damage.
- Never cover or obstruct the air inlet or outlet to prevent overheating.
- Never spray water or place the unit near water to prevent electric shock.
- Make sure to have a professional technician, manufacturer or a service agent to replace a damaged power cord.
- Never share the power outlet with other appliances.
- Never connect or disconnect the power plug with wet hands to avoid electric shocks.
- Never put rods or objects into the opening of the unit.
- Never use an extension cord.

## Cautions

- Be sure the fan is placed on a stable surface when operating to avoid overturning.
- The fan must not be used if the guards are not fastened according to instructions.
- The appliance is for indoor use only.
- Do not plug into the power socket before installation is complete.
- Never insert fingers, pencils, or any other object through the guard when fan is running.
- Power plug must be removed from power socket before cleaning, servicing, maintenance and move from one location to another.

- The fan should not be placed in a damp place or where humidity is high (such as a bathroom).
- Electrical connections shall be in accordance with National or Local Codes.
- Keep the unit at least 1 metre away from electric appliances such as TV's and radios, to avoid electromagnetic interference.
- Do not expose the unit under direct sunlight to avoid surface colour fading.
- Do not tilt the unit for more than 35 degrees or upside down while transporting.
- Place the unit on a flat surface with less than 5 degree inclination.
- Do not use chemical solvents (i.e. Benzene, alcohol-grazer) to clean the unit surface to avoid scratching and damaging the surface.
- Do not use your appliance with an extension cord unless it has been checked and tested by a qualified electrician or electrical supplier.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

# STRUCTURE

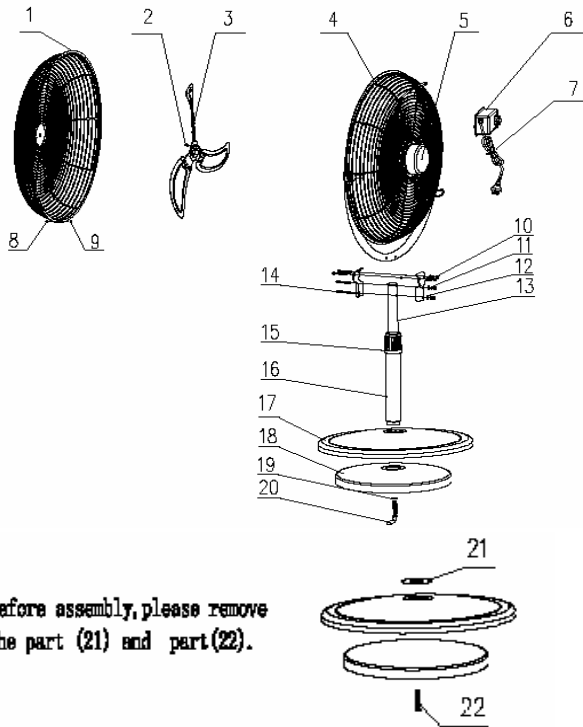

- |                      |                         |
|----------------------|-------------------------|
| 1. Front Guard       | 12. Washer              |
| 2. Screw             | 13. Inner Pillar        |
| 3. Blade             | 14. Long Screw          |
| 4. Rear Guard        | 15. Outer Connector     |
| 5. Motor             | 16. Outer Pillar        |
| 6. Switch Box        | 17. Base                |
| 7. Power Supply Cord | 18. Basic Addition Part |
| 8. Screw             | 19. Plane Washer        |
| 9. Nut               | 20. Orthogonal Screw    |
| 10. Nut              | 21. Piece               |
| 11. Spring Washer    | 22. Screw               |

# ASSEMBLY & OPERATION

## Assembly of your pedestal fan

1. Locate the pedestal base of the fan (item 17). Insert the base of the stand (item 16) into the pedestal base, then fasten the base (item 17 & 18) and the pole with the screws provided.
2. Undo the thumbscrew at the top of the stand (item 16) and align the motor unit complete with guards before fastening.
3. Put the motor head onto the pole (item 13) and fix with screws and washers.

## Operation of your pedestal fan

1. Adjust the desired speed by rotating the switch:
  - 0 – Stop
  - 1 – Low
  - 2 – Medium
  - 3 – High
2. Adjust the tilt angle by pushing the grill.

# CLEANING AND MAINTENANCE

## Cleaning

1. Unplug the fan before cleaning.
2. To clean the blade and grille assembly, first remove the safety grille, unscrew the locknut and remove the blade from the pedestal fan.
3. Clean the fan with a soft cloth moistened with a mild soap solution. Use dry cloth to wipe the fan after cleaning.
4. Never use strong or volatile chemicals to clean the fan as it will damage the plastic parts.
5. Do not immerse in water for cleaning, never allow water to drip into the motor housing.
6. In the off-season, it is important to keep your fan in a safe, dry location. Please remember to protect the fan from dust or moisture.

## Meaning of crossed-out wheeled dustbin

1. Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.
2. Contact your local government for information regarding the collection systems available.
3. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.




## **Maintenance**

If the unit working efficiency decreases, the unit is broken or other problems arise, please stop running the unit and unplug it. Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ)



# TECHNICAL REFERENCE DATA

Model		GDC-PF46HVC / GDC-PF46HVG
Rated Power		70W
Voltage/Frequency		220V-240V/50Hz
Net Weight		8.26
Dimensions	Body (mm)	1390X570X400
HxWxD	Package (mm)	575X570X240
 5336		

## Warranty:

Warranty exists 24 months from date of purchase. For service advice, please contact the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ)

**Glen Dimplex Australia Pty Ltd**  
**2/205 Abbots Road**  
**Dandenong South 3175, Victoria**  
**Australia**  
**Ph: 1300 556 816**  
**Fax: 1800 058 900**

**Glen Dimplex Australasia Ltd**  
**38 Harris Road, East Tamaki**  
**Manukau, Auckland 2013**  
**New Zealand**  
**Ph: 0800 666 2824**  
**Fax: 0800 112 020**