


 

Your new dryer

**Congratulations** - You have chosen a modern, high-quality Bosch domestic appliance. The condensation dryer with heat exchanger and automatic cleaning function is outstanding in terms of efficient energy consumption and low maintenance requirements. Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition. Should you have any questions, our after-sales service will be pleased to help.


**Disposal in an environmentally-responsible manner**  
Dispose of packaging in an environmentally-responsible manner. This appliance is labelled in accordance with the European guideline  2002/96/EC on waste electrical and electronic equipment - WEEE. The guideline provides an EU-wide framework for the return and recycling of old appliances.

Contents

 
	Page
■ Preparation	2
■ Setting the programmes	2
■ Drying	3/4
■ Notes on laundry	5
■ Maintenance and cleaning	6
■ Overview of programmes	7
■ Installation	8
■ Frost protection/transport	8
■ Technical data	9
■ Optional accessories	9
■ What to do if...	10
■ Safety instructions	11

Reduces creasing and extends the anti-creasing phase once the program has ended; two settings available.  
Reduced temperature for delicate fabrics  that require a longer drying time; e.g. for polyacrylics, polyamide, elastane or acetate.  
Programme sequence displays:   
Clean fluff filter.  
Empty the condensation container.

Intended use


- for domestic use only,
  - only to be used for drying fabrics that have been washed with water.
-  Do not leave children unsupervised near the dryer. Keep pets away from the dryer.

Preparing for installation, see Page 8

 Never start the dryer if it is damaged! Inform your after-sales service.

Inspecting the dryer 

Connecting the mains plug 

 Make sure your hands are dry. Hold the plug only.

Sorting and loading laundry






 


Selecting and adjusting the programme

Select the drying programme ...


... and adapt to individual requirements

Display of max. loading capacity for programme selected

 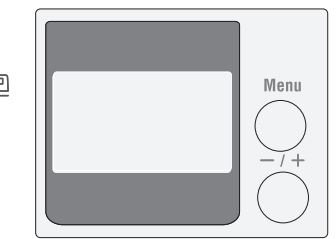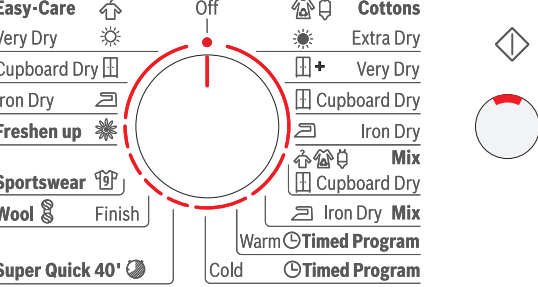
Additional functions	Display panel	Programme selector	
 			See programme overview -> Page 7
■ <b>Reduced Ironing</b>  ■ <b>Low Heat</b> 	■ <b>Menu</b> ■ <b>-/+ (Change)</b> ⌚ <b>Electronic start timer</b> 🔊 <b>Signal</b> 🔒 <b>Appliance lock</b> ☀️ <b>Degree of dryness</b> ⚙️ <b>Spin speed</b>	For selecting the settings. To change all settings in the display panel. End of the programme following... (depending on the programme selected, e.g. duration 1:54h -> 2h; the nearest whole hour is always selected). Signal volume selectable in four stages: 0 (off), 1 (quiet), 2 (normal), 3 (loud). Protection against accidental adjustment of functions that have been set (hold menu button down for 5 seconds). Fine adjustment of degree of dryness, selectable in four stages for <b>Cottons</b> , <b>Easy-Care</b> , <b>Mix</b> and <b>Super Quick 40'</b> : 0 (low) - 3 (very high). Speed at which the washing machine was spun; only used if the anticipated drying time needs to be displayed more accurately.	<b>1 -24 hrs</b> <b>0, 1, 2, 3</b> <b>On-Off</b> <b>0, 1, 2, 3</b> <b>600-1800</b>


Drying



 Do not pull out/empty the condensation container when drying is in progress!


Emptying condensation

Empty container **after** each drying operation, and not when drying is in progress!  
1. Pull out condensation container keeping it horizontal.  
2. Pour out condensation.  
3. Always push container in fully until it clicks into place.  
If  flashes in the display panel -> Page 6/10.

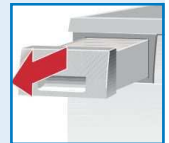


Cleaning the fluff filter

Clean the fluff filter after each drying operation.  
1. Open the door, then pull out and fold open the fluff filter.  
2. Remove the fluff (by wiping the filter with your hand). If the fluff filter is very dirty or blocked, rinse with warm water and dry thoroughly.  
3. Close and reinsert the fluff filter.  
4. Remove fluff from door/door area.

 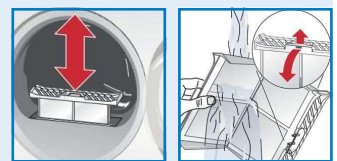


Switching off the dryer

Turn the programme selector to **Off**. Do not leave laundry in the dryer.

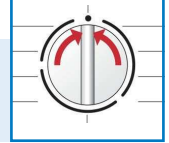



Removing the laundry


Your dryer is equipped with an automatic anti-crease function. The drum is moved at specific time intervals for 30 minutes once the programme has ended. The laundry stays loose and fluffy (60 or 120 minutes if the additional **Reduced Ironing**  function is selected).

The programme has ended

**Interrupt programme** to load/unload laundry.

 



 The drying operation can be interrupted briefly to load or unload laundry. The programme selected must then be resumed and completed.


 Never switch the dryer off before the drying process has ended.

1. Open door, the drying process is interrupted.
2. Load or remove laundry and close door.
3. If required, select a new programme and additional functions.
4. Press the  (**Start/Stop**) button.

 
Information on laundry ...

Labelling of fabrics

**Follow the manufacturer's care information.**  
 Drying at normal temperature.  
 Drying at low temperature -> also select  **Low Heat**.  
 Do not machine dry.

 Observe safety instructions without fail -> Page 11!  
Do not tumble-dry the following fabrics for example:  
- Impermeable fabrics (e.g. rubber-coated fabrics).  
- Delicate materials (silk or curtains made from synthetic material) -> they may crease  
- Laundry contaminated with oil.


Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small items (e.g. baby socks) together with large items of laundry (e.g. hand towel).
- Fold up large items of laundry (bed sheets) before drying.
- Close zips, hooks and eyelets, and button up covers. Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry -> risk of creasing! Allow laundry to finish drying in the air.
- Do not dry woolens in the dryer, only use to freshen them up -> Page 7, **Wool Finish Programme**.
- Do not iron laundry immediately after drying, fold items up and leave for a while -> the remaining moisture will then be distributed evenly.
- Machine-knitted fabrics (e.g. T-shirts or jerseys) often shrink the first time they are dried -> do not use the  **Extra Dry** programme.
- Starched laundry is not always suitable for dryers -> starch leaves behind a coating that adversely affects the drying operation.
- Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried.
- Use the timer programme for small loads -> this improves the drying result.

Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine -> the higher the spin speed the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Put in, but do not exceed, the maximum recommended quantity of laundry -> programme overview -> Page 7.
- Make sure the room is well ventilated during drying.
- Do obstruct or seal up the air inlet.

Care and cleaning

 Only when switched off!

 
Heat exchanger




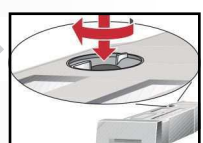
The heat exchanger of the dryer is cleaned automatically when drying is in progress, **Cin** appears in the display panel. Do not pull the condensation container out during the cleaning process.


Dryer housing, control panel, air inlet

- Wipe off with a soft, damp cloth.
- Do not use caustic cleaning agents and solvents.
- Remove detergent and cleaning agent residue immediately.
- Water may occasionally accumulate between the window and the seal. This does not impair the functions of your dryer in any way.

Filter in condensation container


The filter is cleaned automatically when the condensation container is emptied. Cleaning is only required if the symbol  flashes again in the display panel once the condensation container has been emptied.

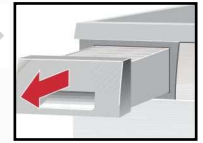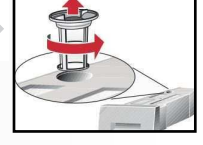1. Pull out the condensation container. 
2. Twist the filter to release it from the catch. 
3. Clean the filter under a continuously-running stream of water. 
4. Insert the filter and turn it until the limit stop is reached. 
5. Slide in the condensation container until it clicks into place.

 Only operate the dryer with the filter inserted!

Moisture sensors

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure the moisture level of the laundry. After sustained, repeated operation, a fine layer of scale may form on the moisture sensors.

1. Open the door.
  2. Clean the moisture sensors with a damp scouring sponge.
-  Do not use steel wool or abrasive materials!










 



 

 


# Your new dryer

**Congratulations** - You have chosen a modern, high-quality Bosch domestic appliance.  
The condensation dryer with heat exchanger and automatic cleaning function is outstanding in terms of efficient energy consumption and low maintenance requirements.  
Every dryer which leaves our factory is carefully checked to ensure that it functions correctly and is in perfect condition.  
Should you have any questions, our after-sales service will be pleased to help.

**Disposal in an environmentally-responsible manner**  
Dispose of packaging in an environmentally-responsible manner.  
This appliance is labelled in accordance with the European guideline  2002/96/EC on waste electrical and electronic equipment - WEEE.  
The guideline provides an EU-wide framework for the return and recycling of old appliances.


## Contents

	Page
Preparation	2
Setting the programmes	2
Drying	3/4
Notes on laundry	5
Maintenance and cleaning	6
Overview of programmes	7
Installation	8
Frost protection/transport	8
Technical data	9
Optional accessories	9
What to do if...	10
Safety instructions	11


Reduces creasing and extends the anti-creasing phase once the program has ended; two settings available.	<b>Reduced Ironing</b> 
Reduced temperature for delicate fabrics  that require a longer drying time; e.g. for polyacrylics, polyamide, elastane or acetate.	<b>Low Heat</b> 
Programme sequence displays: drying, iron dry, cupboard dry, slackening/ready.	<b>Status indicators</b>    
Clean fluff filter.	<b>Service displays</b> <b>Fluff filter</b> 
Empty the condensation container.	<b>Container</b> 


## Intended use

- for domestic use only,
- only to be used for drying fabrics that have been washed with water.

 Do not leave children unsupervised near the dryer.  
Keep pets away from the dryer.

## Preparing for installation, see Page 8

 Never start the dryer if it is damaged!  
Inform your after-sales service.

 Make sure your hands are dry.  
Hold the plug only.



**Sorting and loading**  
Remove all items from pockets.  
Check for cigarette lighters.  
The drum must be empty prior to loading.

## Selecting and adjusting the programmes

Display of max. loading capacity for programme selected



























 

... and adapt to individual requirements

See programme

Press the

Only operate the fluff filter i

All buttons are need to be tou

Additional functions	Display panel	Programme selector
  	 	<div><div>Easy-Care  Off </div><div>Very Dry  Extra Dry </div><div>Cupboard Dry  Very Dry </div><div>Iron Dry  Cupboard Dry </div><div>Freshen up  Iron Dry </div><div>Sportswear  Mix </div><div>Wool  Cupboard Dry </div><div>Finish  Iron Dry </div><div>Super Quick 40'  Warm  Timed Program </div><div>Cold  Timed Program </div></div>
<b>Reduced Ironing</b> 	<b>Menu</b>	For selecting the settings.
<b>Low Heat</b> 	<b>-/+ (Change)</b>	To change all settings in the display panel.
	<b>Electronic start timer</b>	End of the programme following... (depending on the programme selected, e.g. duration 1:54h -> 2h; the nearest whole hour is always selected).
	<b>Signal</b>	Signal volume selectable in four stages: 0 (off), 1 (quiet), 2 (normal), 3 (loud).
	<b>Appliance lock</b>	Protection against accidental adjustment of functions that have been set (hold menu button for 5 seconds).
	<b>Degree of dryness</b>	Fine adjustment of degree of dryness, selectable in four stages for <b>Cottons</b> , <b>Easy-Care</b> , <b>Super Quick 40'</b> : 0 (low) - 3 (very high).
	<b>Spin speed</b>	Speed at which the washing machine was spun; only used if the anticipated drying time needs to be displayed more accurately.

Inspecting the dryer



Connecting the mains plug



Loading laundry

the programme

Drying programme ...

Individual requirements

Overview -> Page 7

Sensitive and only  
touched lightly.

the Start/Stop button

the dryer with  
inserted!

1-24 hrs

0, 1, 2, 3

button down for On-Off

Mix and Super 0, 1, 2, 3

600-  
1800

## Drying



Do not pull out/empty the condensation container when drying is in progress!



## Emptying condensation

Empty container **after** each drying operation, and not when drying is in progress!


1. Pull out condensation container keeping it horizontal.
  2. Pour out condensation.
  3. Always push container in fully until it clicks into place.
- If flashes in the display panel -> Page 6/10.



## Cleaning the fluff filter


Clean the fluff filter after each drying operation.

1. Open the door, then pull out and fold open the fluff filter.
2. Remove the fluff (by wiping the filter with your hand).  
If the fluff filter is very dirty or blocked, rinse with warm water and dry thoroughly.
3. Close and reinsert the fluff filter.
4. Remove fluff from door/door area.

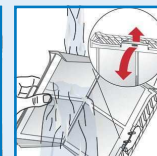


## Switching off the dryer

Turn the programme selector to **Off**.  
Do not leave laundry in the dryer.

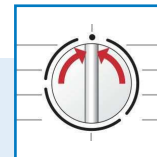

## Removing the laundry

Your dryer is equipped with an automatic anti-crease function. The drum is moved at specific time intervals for 30 minutes once the programme has ended. The laundry stays loose and fluffy (60 or 120 minutes if the additional **Reduced Ironing** function is selected).

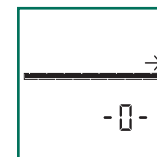

**The programme has ended** when → lights up in the display panel.

**Interrupt programme** to load/unload laundry.



The drying operation can be interrupted briefly to load or unload laundry. The programme selected must then be resumed and completed.



**Never switch the dryer off before the drying process has ended.**

1. Open door, the drying process is interrupted.
2. Load or remove laundry and close door.
3. If required, select a new programme and additional functions.
4. Press the (**Start/Stop**) button.

# Information on laundry ...



## Labelling of fabrics

Follow the manufacturer's care information.

- ☒ Drying at normal temperature.
- ☒ Drying at low temperature -> also select **Low Heat**.
- ☒ Do not machine dry.



Observe safety instructions without fail -> *Page 11!*  
Do not tumble-dry the following fabrics for example:  
– Impermeable fabrics (e.g. rubber-coated fabrics).  
– Delicate materials (silk or curtains made from synthetic material) -> they may crease  
– Laundry contaminated with oil.



## Drying tips

- To ensure a consistent result, sort the laundry by fabric type and drying programme.
- Always dry very small items (e.g. baby socks) together with large items of laundry (e.g. hand towel).
- Fold up large items of laundry (bed sheets) before drying.
- Close zips, hooks and eyelets, and button up covers.  
Tie fabric belts, apron strings, etc. together
- Do not over-dry easy-care laundry -> risk of creasing!  
Allow laundry to finish drying in the air.
- Do not dry woolens in the dryer, only use to freshen them up -> *Page 7, Wool Finish Programme*.
- Do not iron laundry immediately after drying, fold items up and leave for a while -> the remaining moisture will then be distributed evenly.
- Machine-knitted fabrics (e.g. T-shirts or jerseys) often shrink the first time they are dried -> do not use the **Extra Dry** programme.
- Starched laundry is not always suitable for dryers -> starch leaves behind a coating that adversely affects the drying operation.
- Use the correct dosage of fabric softener as per the manufacturer's instructions when washing the laundry to be dried.
- Use the timer programme for small loads -> this improves the drying result.

## Environmental protection/energy-saving tips

- Before drying, spin the laundry thoroughly in the washing machine -> the higher the spin speed the shorter the drying time will be (consumes less energy), also spin easy-care laundry.
- Put in, but do not exceed, the maximum recommended quantity of laundry -> programme overview -> *Page 7*.
- Make sure the room is well ventilated during drying.
- Do obstruct or seal up the air inlet.

# Care and cleaning



Only when switched off!



## Heat exchanger

The heat exchanger of the dryer is cleaned automatically when drying is in progress, **Cln** appears in the display panel. Do not pull the condensation container out during the cleaning process.



## Dryer housing, control panel, air inlet


- Wipe off with a soft, damp cloth.
- Do not use caustic cleaning agents and solvents.
- Remove detergent and cleaning agent residue immediately.
- Water may occasionally accumulate between the window and the seal.  
This does not impair the functions of your dryer in any way.



## Filter in condensation container

The filter is cleaned automatically when the condensation container is emptied. Cleaning is only required if the symbol flashes again in the display panel once the condensation container has been emptied.

1. Pull out the condensation container.

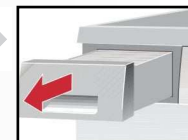


2. Twist the filter to release it from the catch.



3. Clean the filter under a continuously-running stream of water.



4. Insert the filter and turn it until the limit stop is reached.

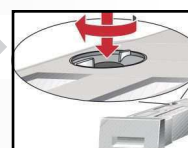

5. Slide in the condensation container until it clicks into place.



Only operate the dryer with the filter inserted!



## Moisture sensors

The dryer is equipped with stainless steel moisture sensors. Moisture sensors measure the moisture level of the laundry. After sustained, repeated operation, a fine layer of scale may form on the moisture sensors.

1. Open the door.
2. Clean the moisture sensors with a damp scouring sponge.



Do not use steel wool or abrasive materials!





After drying: laundry is to be ...		T-shirt	Shirts	Trousers	Skirts/dresses	Sportswear	Work clothing	Anoraks	Towel/dressing gowns	Underwear	Socks	Bed linen	Table linen	Terry towels	Tea towels/ Towels	
ironed	max. 6.5 kg For whites and coloureds/cotton or linen.	lightly ironed dry	not ironed	passed through a mangle												
Cottons		Iron Dry	Cupboard Dry													
Very Dry		Extra Dry														
Easy-Care		Iron Dry	Cupboard Dry													
Very Dry																
Mix	max. 3 kg	For mixed items of laundry made of cotton and easy-care fabrics.														
Cupboard Dry/ Iron Dry																
Freshen up	max. 3 kg	For cotton or linen fabrics that are still damp and easy-care fabrics. Creasing in fabrics is reduced. Fabrics are not dried completely. Hang up fabrics!														
Sportswear	max. 1.5 kg	For fabrics with membrane coating, water-repellent fabrics, functional clothing, fleece fabrics (dry jackets/trousers with removable internal lining separately).														
Wool  Finish	max. 3 kg	For woollen fabrics suitable for machine-washing. Fabrics become fluffier but not dry. Remove fabrics once the programme has ended and allow to dry.														
Super Quick 40'	max. 2 kg	For laundry made of synthetic fibres, cotton or blended fabrics (for example) that needs to be dried quickly. The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.														
Timed program Warm	max. 3 kg	For pre-dried, multi-layered, sensitive fabrics made of acrylic fibres, or separate small items of laundry,Also for subsequent drying.														
Timed program Cold	max. 3 kg	For all types of fabrics. For freshening up or airing of items of laundry that have been worn for a short period of time.														

Further information: [www.bosch-home.com](http://www.bosch-home.com)

0909 / 9000465140



Robert Bosch Hausgeräte GmbH  
Carl-Wery-Str. 34  
D-81739 Munich/Germany

WTW86560AU

## Installation

- Delivery specification: dryer, instructions for installation and use.
- Check dryer for transport damage.
- The dryer is very heavy. Do not attempt to lift it on your own.
- Be careful to avoid sharp edges.
- Do not lift the dryer by any of the protruding parts (e.g. the door) as they may break off.
- Do not set up in a room that is susceptible to frost. Freezing water may cause damage.
- If in doubt, have the appliance connected by an expert.

### 1.

#### Setting up the dryer


- The appliance plug must always be accessible.
- Ensure that the appliance is installed on a clean, level and solid surface.
- Keep the cooling grille at the front of the dryer unobstructed.
- Keep the area around the dryer clean.
- Make the dryer level using the threaded feet and a spirit level.
- Do not unscrew the threaded feet further than 20 mm. Do not remove the threaded feet under any circumstances.



Do not set up the dryer behind a door or sliding door as this may obstruct or prevent the dryer door from opening. This will prevent a potentially fatal danger to children from locking themselves in.



Take all accessory parts out of the drum. The drum must be empty.

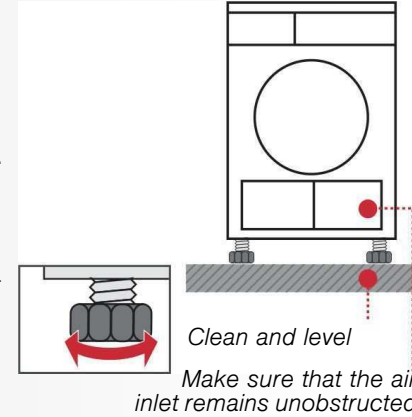

### 2.

#### Mains connection see safety instructions -> Page 11.

- Connect to an AC earthed socket. If in doubt have the socket checked by an expert.
- The mains voltage and the voltage shown on the rating plate (-> Page 9) must correspond.
- The connected load and necessary fuse protection are specified on the rating plate.

## Frost protection



Do not operate the dryer if there is a danger of frost.



#### Preparation

1. Empty the condensation container -> Page 4.
2. Turn the programme selector to any programme.
3. Press the (**Start/Stop**) button -> condensation is pumped into the container.
4. Wait 5 mins., empty the condensation container again.
5. Turn the programme selector to **Off**.

## Transport



- Preparation of dryer -> see Frost protection.
- Transport the dryer in a vertical upright position.
- Following transportation, leave the dryer to stand for one hour.



The dryer contains residual water; this can flow out if the dryer is tilted.



# Technical data

● <b>Dimensions (DxWxH)</b>	60 x 60 x 85 cm (height adjustable)
<b>Weight</b>	approximately 53 kg
<b>Max. capacity</b>	6.5 kg
<b>Condensation container</b>	4.0 l
<b>Connection voltage</b>	220-240 V
<b>Connected load</b>	max. 1500 W
<b>Fuse protection</b>	10 A
<b>Ambient temperature</b>	5 - 35 °C
<b>Product number/ Production number</b>	Inside of door

You can find the rating plate on the back of the dryer.

Consumption rates

These are guide values determined under standard conditions.

	Spin speed in rpm (residual moisture)	Drying time** in min.	Energy consumption** in kWh	
<div> <div></div> <div>Cottons 6.5 kg</div> </div>				
	<div> <div></div> <div>Cupboard Dry*</div> </div>	1400 (approx. 50 %)	94	1.49
		1000 (approx. 60 %)	111	1.76
		800 (approx. 70 %)	129	2.04
<div> <div></div> <div>Iron Dry*</div> </div>		1400 (approx. 50 %)	66	1.03
		1000 (approx. 60 %)	83	1.30
		800 (approx. 70 %)	101	1.57
<div> <div></div> <div>Easy-Care 3.5 kg</div> </div>				
	<div> <div></div> <div>Cupboard Dry*</div> </div>	800 (approx. 40 %)	46	0.64
		600 (approx. 50 %)	57	0.79

\*Test program according to DIN EN 61121

\*\*The values may differ from the those specified depending on the type of fabric, mixture of laundry to be dried, residual moisture in the fabric and loading capacity.

- **Drum interior light (bulb E14, 15 W)**  
The drum is illuminated after the door is opened or closed, and also after the programme is started. It goes out automatically. Replacing the bulb -> *Page 10*.

# Optional accessories

Order no.:

WTZ 11310

**Washer-dryer stack connection set**  
The dryer can be placed on top of a suitable washing machine with the same width and depth to save space. This connection set must always be used to secure the dryer to the washing machine.

WTZ 11300

Same as WTZ 11310, but with pull-out worktop.

WTZ 10290

**Installation underneath the worktop**  
**Risk of electric shock!**  
Instead of the appliance covering plate, you must have a metal cover fitted by an expert.







WMZ 20460

**Platform**  
Facilitates loading and unloading the appliance. The basket contained in the drawer can be used to carry the laundry.

# What to do if ...




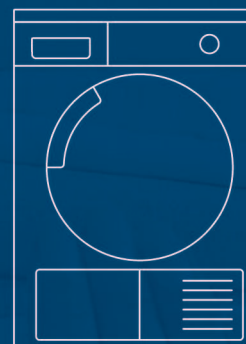
Repairs must only be carried out by the aftersales service or an authorised expert. Before you contact the after-sales service, please make sure that you are unable to resolve the problem yourself. You will be charged for advice if a technician is called out, even during the warranty period. You can find your nearest customer services in the enclosed list. When contacting the after-sales service, please specify the product number (E-Nr.) and production number (FD) of your appliance (see inside of door).

- The  (**Start/Stop**) indicator lamp does not light up. Mains plug plugged in?  
Programme selected?  
Check the socket fuse.
- The  symbol and  (Start/Stop) indicator lamp flash. Empty the condensation container.  
Clean the condensation container filter if necessary -> *Page 6*.
- The  symbol and  (Start/Stop) indicator lamp flash. Clean the fluff filter -> *Page 4*.
- Dryer does not start.  (**Start/Stop**) button selected?  
Door closed?  
Programme set?  
Ambient temperature greater than 5 °C?
- Water is leaking out. Make sure the dryer is level.
- The door opens by itself. Push the door closed until you hear it engage.
- The required degree of dryness was not achieved or the drying time was too long. Clean the fluff filter -> *Page 4*.  
Empty condensation container -> *Page 4*.  
Ambient temperature higher than 35 °C -> airing.  
Air inlet may be blocked -> keep unobstructed.  
Was an unsuitable programme selected? -> *Page 7*.  
Laundry too dry? The laundry in a dryer with a heat exchanger requires sufficient residual moisture.  
Has the dryer been installed with sufficient space on all sides? Ensure that air can circulate.  
Mains failure -> Restart the dryer.  
Fine layer of scale on the moisture sensors -> Clean the moisture sensors -> *page 6*.
- Laundry damp. Use the next drying programme up or use the timer programme as a supplement -> *Page 7*.  
Warm laundry feels damper than it really is!
- The moisture content of the room has increased significantly. Make sure the room is sufficiently ventilated.  
Air inlet blocked? -> keep unobstructed.
- **Cln** appears in the display panel. Not an error! Automatic cleaning of heat exchanger.  
Do not empty the condensation container.
- Mains failure. Remove laundry from the dryer immediately and spread out.  
This allows the heat to dissipate.
- The interior light is not working. Pull out the appliance plug, remove the cover cap in the interior above the door (use Torx 20 screw driver) and replace the bulb. Close the cover cap.  
Never operate the dryer without a cover cap.
- Other intermittent noises and vibrations. Not an error!  
Automatic cleaning of the heat exchanger.
- Loud humming noise for several seconds. Has the condensation container been properly reinserted?  
-> slide the condensation container in fully.
- If you cannot rectify a fault yourself or a repair is necessary:
  - Turn the programme selector to **Off**.
  - Remove the appliance plug from the socket.
  - Call the after-sales service -> see the after-sales service directory.

# Safety instructions



- Emergency**
- Pull the appliance plug out of the socket immediately or disconnect the fuse.
- ONLY use the dryer...**
- In rooms inside the house.
  - To dry fabrics.
- The dryer must NEVER...**
- Be used for other purposes than those described above.
  - Be modified in terms of its technology or attributes.
- Dangers**
- The dryer must not be used by children or persons who have not been instructed in its use.
  - Do not leave children unsupervised near the dryer.
  - Keep pets away from the dryer.
  - Remove all objects from pockets.  
Make especially sure that cigarette lighters are removed as they constitute an **-> explosion hazard.**
  - Do not lean or sit on the door **-> risk of tipping.**
- Installation**
- Secure loose cables **-> tripping hazard.**
  - Do not operate the dryer if there is a risk of frost.
- Mains connection**
- Connect the dryer according to specifications to an AC earthed socket, as otherwise it cannot be guaranteed that the appliance is completely safe.
  - The cable cross-section must be sufficient.
  - Only use earth-leakage circuit breakers with the following symbol: 
  - The appliance plug and socket must be compatible.
  - Do not use multiple plugs/couplings and/or extension cables.
  - Do not hold the appliance plug with wet hands **-> risk of electric shock.**
  - Never pull the appliance plug out of the socket by its cable.
  - Do not damage the mains lead **-> risk of electric shock.**
- Operation**
- Only load the drum with laundry.  
Check the contents before you switch the dryer on.
  - Do not use the dryer if the laundry has been in contact with solvents, oil, wax, grease or paint (e.g. hair setting spray, nail polish remover, stain remover, cleaning solvent, etc.) **-> fire/explosion hazard.**
  - Dust (e.g. coal dust, flour) poses a danger: do not use the dryer **-> explosion hazard.**
  - Do not put laundry containing foamed material/rubber in the dryer -> elastic material may be destroyed and the dryer may be damaged due to possible deformation of the foamed material.
  - Switch off the dryer once the programme has ended.
  - Condensation is not drinking water and may be contaminated with fluff.
- Defect**
- Do not use the dryer if it is defective or if you suspect it is.  
Repairs must only be carried out by the after-sales service.
  - Do not use the dryer if the mains cable is defective. To avoid danger, only have the defective mains cable replaced by the after-sales service.
  - Always pull the mains plug out of the socket before changing the bulb for the interior light **-> risk of electric shock.**
- Spare parts**
- Only use genuine spare parts and accessories for safety reasons.
- Disposal**
- Dryer: pull out the appliance plug, then cut off the mains cable from the appliance.  
Dispose of at municipal waste disposal facility.
  - Packaging: do not leave children alone with packing parts **-> risk of suffocation.**
  - The heat exchanger contains coolant -> Dispose of it in the proper manner.
  - All materials are environmentally sound and can be reused. Dispose of in an environmentally-responsible manner.



Tumble dryer

en

Instructions for  
installation and use



**BOSCH**



Observe the safety instructions on page 11.



Read these instructions before operating the dryer.