

DHCER20

2kW Ceramic Heater



INSTRUCTION MANUAL

PLEASE READ THE INSTRUCTION MANUAL CAREFULLY BEFORE USING THE UNIT.

WARNINGS AND PRECAUTIONS	1
STRUCTURE	3
OPERATION	4
CLEANING AND MAINTENANCE	6
TECHNICAL REFERENCE DATA	7
WARRANTY	7


Warnings

- Never place the unit near gas appliances, flames or flammable liquids.
- Never hit or shake the unit. Doing so may cause damage.
- Never cover or obstruct the air inlet or outlet. Doing so may cause overheating.
- Never spray water on or place the unit near water. Doing so may cause electric shock.
- Never connect other appliances to the same power outlet.
- Never connect or disconnect the power plug with wet hands. Doing so may cause electric shock.
- Never insert fingers or objects through the guards when the unit is operating.
- Never use an extension cord.
- Always have a professional technician, manufacturer or service agent replace a damaged power cord.

Precautions

- This appliance is for indoor use only.
- Do not use the unit near windows or where water collects. Rain and water collection may lead to a risk of fire or electric shock.
- Do not place the unit in a damp place or where humidity is high (such as a bathroom).
- Do not leave the unit operating while unattended.
- Do not place the unit in direct sunlight to avoid surface discolouration.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure they do not play with the appliance.
- Avoid electromagnetic interference. Keep the unit at least 1 metre away from electric appliances such as televisions and radios.
- Avoid scratching and damaging the surface. Do not use chemical solvents (i.e. Benzene, alcohol) to clean the surface.
- Place the unit on a stable surface when operating.
- Unplug the unit before cleaning, servicing or maintenance.
- Electrical connections must be in accordance with national or local codes.
- The rear of the unit must be at least 50cm away from the wall.
- Do not place the appliance on its side, back or front while in storage or transport. The unit must be left in an upright position 2 hours before operation.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING:** do not cover the heater. This may cause the unit to overheat.
- Do not use the heater in the immediate surroundings of bathtubs, showers, washing stands or swimming pools.
- The heater must not be located immediately below a socket-outlet.

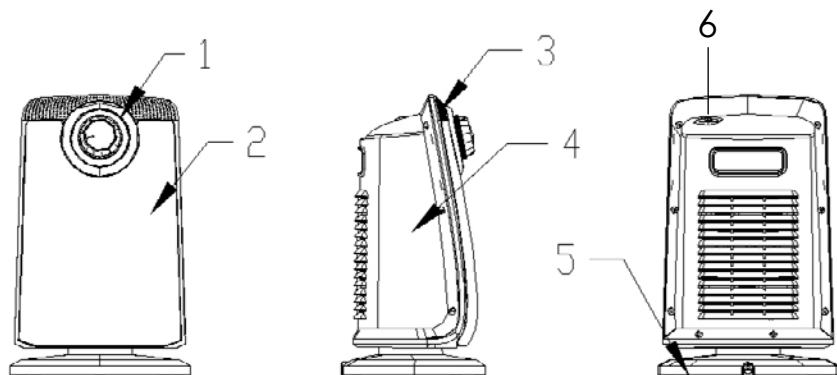


1. Control panel
2. Heat outlet
3. Front cover
4. Back cover
5. Base
6. Oscillation switch

BEFORE FIRST USE

- Please read these instructions carefully before use and keep them for future reference.
- Check your local mains voltage is the same as stated on the appliance.
- Before using for the first time, remove any protective films or stickers from the appliance and ensure the power switch is in the “OFF” position.

Connect the plug to a power supply and switch on the power.


DISPLAY PANEL

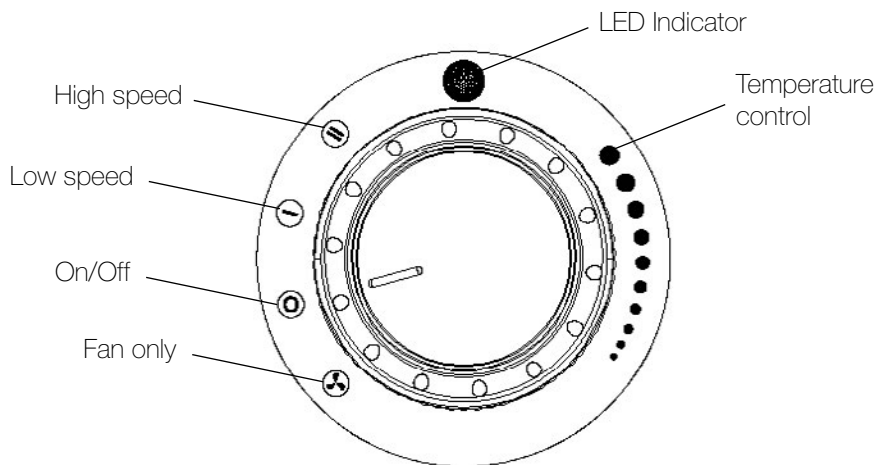

POWER SETTING KNOB

- Rotate the knob to the “Power” position to turn the unit ON or OFF.
- Rotate the knob to the “Low Speed” position to turn the unit on at low heat.
- Rotate the knob to the “High Speed” position to turn the unit on at high heat.
- Rotate the knob the “Fan Only” position to provide fan only operation.


OPERATIONAL PANEL

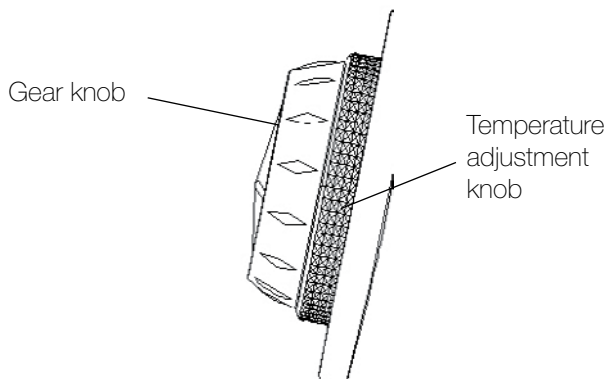

TEMPERATURE ADJUSTMENT KNOB

- Rotate the temperature adjustment knob to set your desired temperature.
- Turn in counterclockwise direction for higher temperatures.
- Alternatively, turn clockwise for cooler temperatures.

OSCILLATION

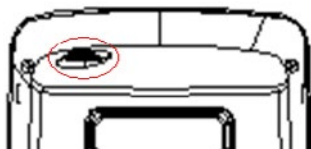

- Press the oscillation button (refer to above diagram) to enable oscillation. Press again to stop oscillation.

CLEANING

Ensure the unit is turned off and the plug is disconnected from the power outlet before commencing any cleaning or maintenance.

Cleaning the unit's surface:

Clean the surface with a damp cloth (add some mild detergent for stubborn marks). Do not use corrosive detergent or solvents to clean; such as petrol/turpentine etc. Do not wash the unit directly with water.

Cleaning the air filter:

Dirt and dust may accumulate in the filter during operation. Cleaning is required to avoid any damage to the unit. This should be done at least once a month.

- Use a soft cloth to clean away the dust/dirt. If you use water for cleaning, please make sure the air filter is dry before reinstalling it.
- Do not use chemicals to clean the air filter.

IMPORTANT

The control panel and other parts must not come into contact with water or any other liquids.



- Do not dispose of electrical appliances as unsorted municipal waste.
- Use separate collection facilities.
- Contact your local government for information regarding the collection systems available.

- If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and well-being.

MAINTENANCE

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

MODEL NO.	DHCER20
Rated Power	2000W
Voltage/Frequency	220-240V/50Hz
Net Weight	2kg
Dimensions Body (HxWxDmm)	347 x 222 x 177
Noise level (max)	50dB
RCM	5336

WARRANTY

The warranty period is 12 months from the date of purchase. For service advice, please contact the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

Glen Dimplex Australia Pty Ltd
1340 Ferntree Gully Road,
Scoresby 3179, Victoria
Australia
Ph: 1300 556 816

Glen Dimplex New Zealand Ltd
38 Harris Road, East Tamaki,
Auckland 2013
New Zealand
Ph: 0800 666 2824