



Quick Start Information:

1. Plug the BAS950BT into the power point.
2. Insert the red and white RCA cables into the corresponding TV input sockets in the BAS950BT.
3. Insert the opposite ends of red and white RCA cables into the corresponding TV output sockets in your TV.
4. Turn the subwoofer power on via the power switch on the back of the subwoofer
5. Press the Standby button on top of the sound bar or on the remote control to turn the BAS950BT on.
6. Make sure your TV is switched on and that your BAS950BT is set to TV input to hear TV audio through your new sound bar.
7. To change the input source between Bluetooth/TV/AUX/USB modes use the Input button.
8. Enjoy your new Bush BAS950BT sound bar.

www.bushaustralia.com.au

For any warranty enquiries please call: 1300 055 518

YOUR WARRANTY

For any Warranty Enquires, please call:

1300 055 518

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

www.bushaustralia.com.au

INTRODUCTION

Thank you for buying this **BUSH** product, which is designed to give you many years of trouble-free service.

You may already be familiar with using a similar unit, but please take time to read these instructions. They are designed to familiarise you with the unit's many features and to ensure you get the very best from your purchase.

Safety is important

Your safety and the safety of others is important.

Please therefore, ensure you read the "Safety Instructions" **before** you operate this unit.

Warranty

In the unlikely event that your product fails to work normally, please call the below free phone number to discuss the problem with one of our qualified service engineers

Bush Warranty: 1300 055 518

SPECIFICATIONS

- | | |
|-----------------------|--|
| 1. Output Power | : 80W + 40W x2 |
| 2. Speaker Size | : Subwoofer - 6.5 inch
Soundbar - 3 inch x 4 |
| 3. Frequency Response | : Subwoofer - 20Hz~85Hz
Sound Bar - 85Hz~20KHz |
| 4. S/N Ratio | : ≥ 73 db |
| 5. Input Sensitivity | : Subwoofer - 350 mV +/- 20mV
Sound Bar - 550 mV +/- 50mV |
| 6. Impedance | : Subwoofer - 4 Ω
Soundbar - 8 Ω |
| 7. THD | : <0.5% (1KHz, 1W) |
| 8. Power Supply | : AC 230V~50Hz |

Note: Specifications are subject to change for improvements.



Warranty

Please keep your receipt as proof of purchase. This product is warranted for any defect in materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only. This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alternation that affects the performance or reliability of the product.

In the unlikely event that your product fails to work normally, please contact the **Bush Warranty on 1300 055 518** and have your receipt of purchase on hand.

This warranty is subject to the following provisions:

- It is only valid within boundaries of the country of purchase
- The product must be correctly assembled and operated in accordance with the instructions contained in the manual
- This product must be used solely for domestic purposes
- The warranty does not cover accidental damage
- The warranty will be rendered invalid if the product is resold or has been damaged by inexpert repair
- The manufacturer disclaims any liability for incidental or consequential damaged

This warranty is in addition to , and does not diminish, your statutory or legal rights .

**PO BOX 6287
Silverwater NSW 1811**

Bush Warranty: 1300 055 518

www.bushaustralia.com.au



THE LIGHTNING FLASH WITH ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED, "DANGEROUS VOLTAGE", WITHIN THE PRODUCTS ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



 
THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE APPLIANCE.

Safety Precautions

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK. DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

If the subwoofer is not linking properly with the soundbar or there is no sound coming from the subwoofer please follow the below steps:

- 1) Press the "STANDBY" button on soundbar or on the remote control, and switch off the subwoofer.
- 2) Press the "STANDBY" button on soundbar or on the remote control again, the soundbar gets into play-mode. And then switch on the subwoofer within 15 seconds after you pressed "STANDBY". After 15 seconds the coding should be completed and the subwoofer will be connected to the soundbar wirelessly. (You can confirm this by the blue light on the front of the subwoofer. If the soundbar and subwoofer are connected the blue light will be solid but if it is flashing then the subwoofer and soundbar are not connected.)
- 3) Please repeat the above steps if the soundbar is not connecting to the subwoofer wirelessly.
- 4) Once the above steps have been completed and the soundbar is connected to the subwoofer the settings will automatically save and there should be no need to follow the above steps again unless the product is disconnected from the mains power.

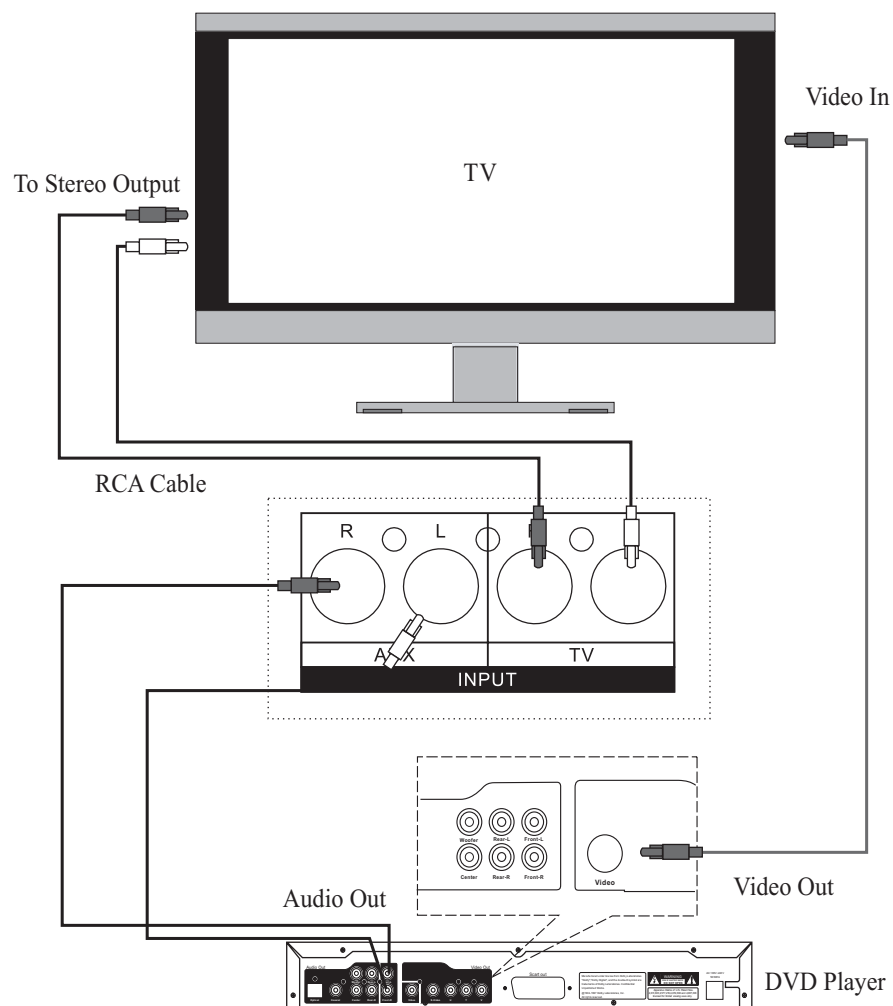

Caution: Please read carefully all the following important safeguards to ensure safe operation.

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Follow Instructions - All operating instructions should be followed.
4. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
5. Power Source - The appliance should be connected to a power supply only of the type specified in the operating instructions or as marked on the appliance.
6. Power-cord Protection - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
7. Water and Moisture - The appliance should not be used near water (for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc.)
8. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. Do not use the appliance on a bed, sofa, rug or similar surface that may block the ventilation openings.

IMPORTANT SAFEGUARDS

9. Heat - Keep the appliance away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.

10. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

11. Damage requiring service - The appliance should be serviced by qualified service personnel when:

- a/ The power-supply cord or the plug has been damaged;
- b/ Objects have fallen or liquid has been spilled into the appliance;
- c/ The appliance has been exposed to rain;
- d/ The appliance does not appear to operate normally or exhibits a marked change in performance;
- e/ The appliance has been dropped, or the enclosure damaged.

12. Servicing - The user should not attempt to service the appliance beyond that specified in the operating instructions. All other servicing should be referred to qualified service personnel.

13. Clean only with dry cloth.

14. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

 
15. Unplug this apparatus during lightning storms or when unused for long periods of time.

REMOTE CONTROL


- 1.STANDBY: Power Standby.
- 2.MUSIC: Music Mode Selection.
- 3.NORMAL: Normal Mode Selection.
- 4.PREV: Play previous song.
- 5.NEXT: Play next song.
- 6.VOL-: Volume Downward Adjustment Button.
- 7.BASS-: Bass Downward Adjustment Button.
- 8.TREBLE-: Treble Downward Adjustment Button.
- 9.INPUT: Input Selection Button .
- 10.MUTE: Mute Function Button .
- 11.RESET: Reset sound settings to default.
- 12.MOVIE: Movie Mode Selection.
- 13.STOP: Stop the song .
/Bluetooth Esc.
- 14.PLAY and PAUSE: Play/Pause song .
- 15.VOL+: Volume Upward Adjustment Button.
- 16.BASS+ : Bass Upward Adjustment Button.
- 17.TREBLE+: Treble Upward Adjustment Button.

REMOTE CONTROL BATTERY REPLACEMENT


- 1.Replace the remote control battery when it no longer operates the unit, or the range is reduced considerably.
- 2.Use only Cr2025 3V lithium batteries
- 3.Bear in mind that lighting & other room conditions, in addition to battery age, can affect the operating range of an infrared remote control.

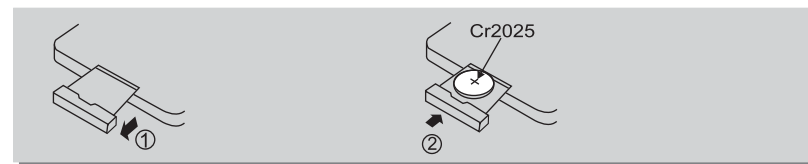

REMOTE CONTROL

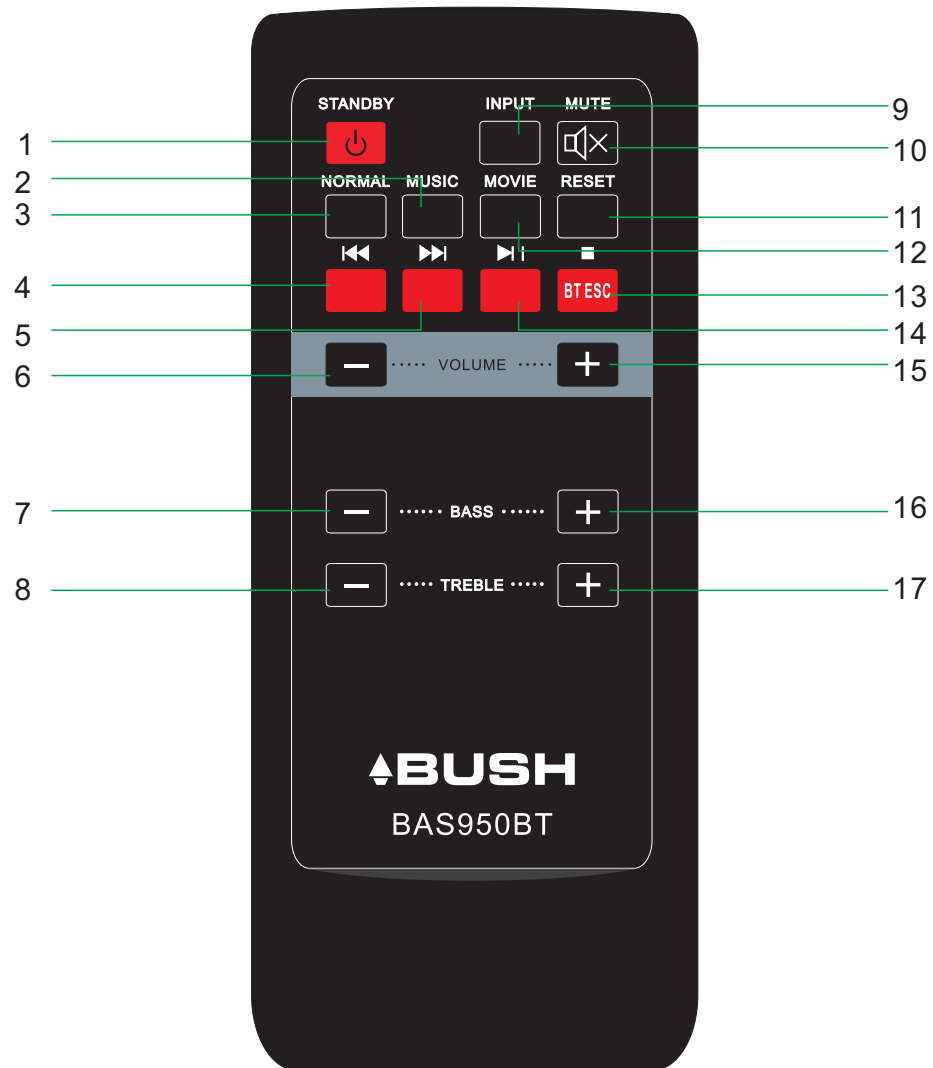 


FRONT PANEL - CONTROLS AND FUNCTIONS

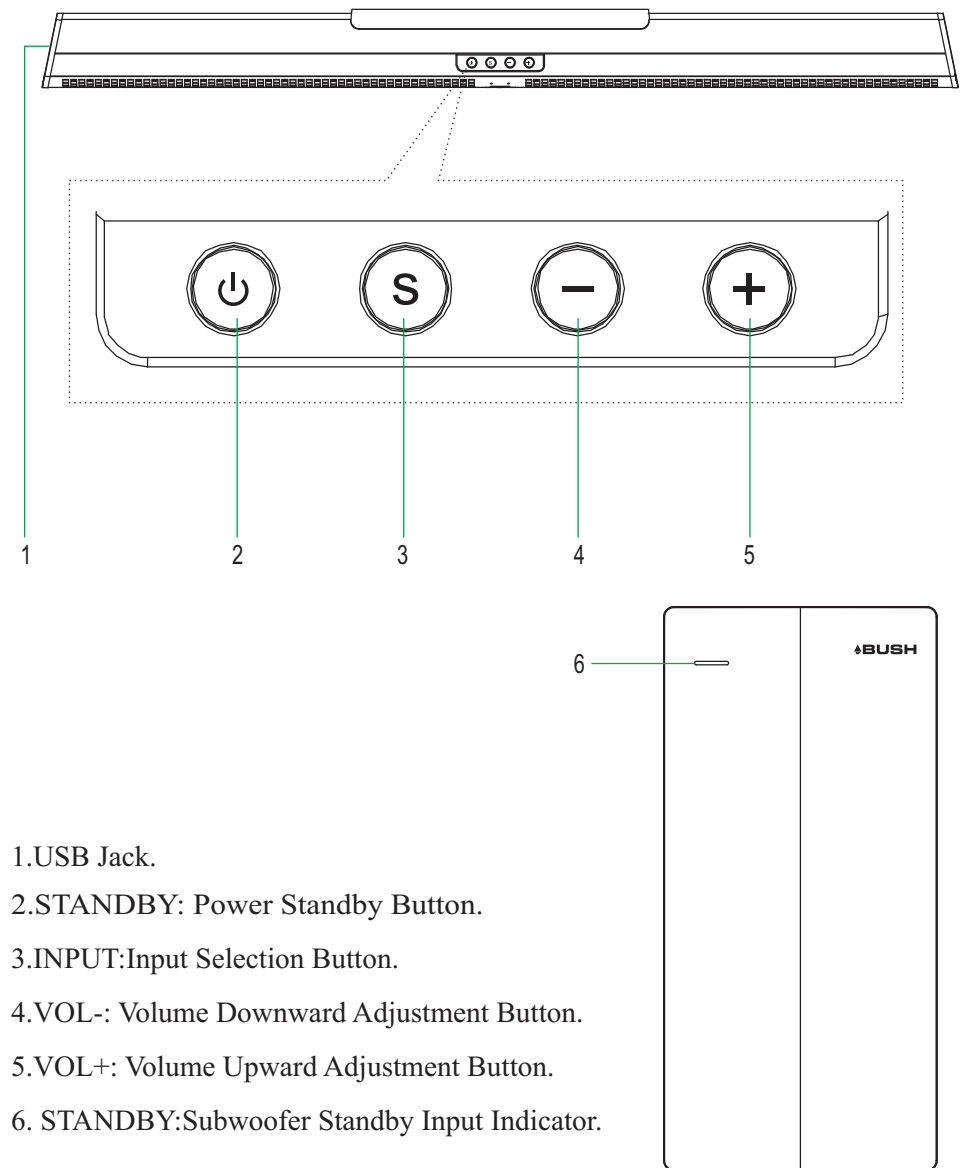 

- 1.USB Jack.
- 2.STANDBY: Power Standby Button.
- 3.INPUT:Input Selection Button.
- 4.VOL-: Volume Downward Adjustment Button.
- 5.VOL+: Volume Upward Adjustment Button.
6. STANDBY:Subwoofer Standby Input Indicator.

 REAR PANEL - CONTROLS AND FUNCTIONS

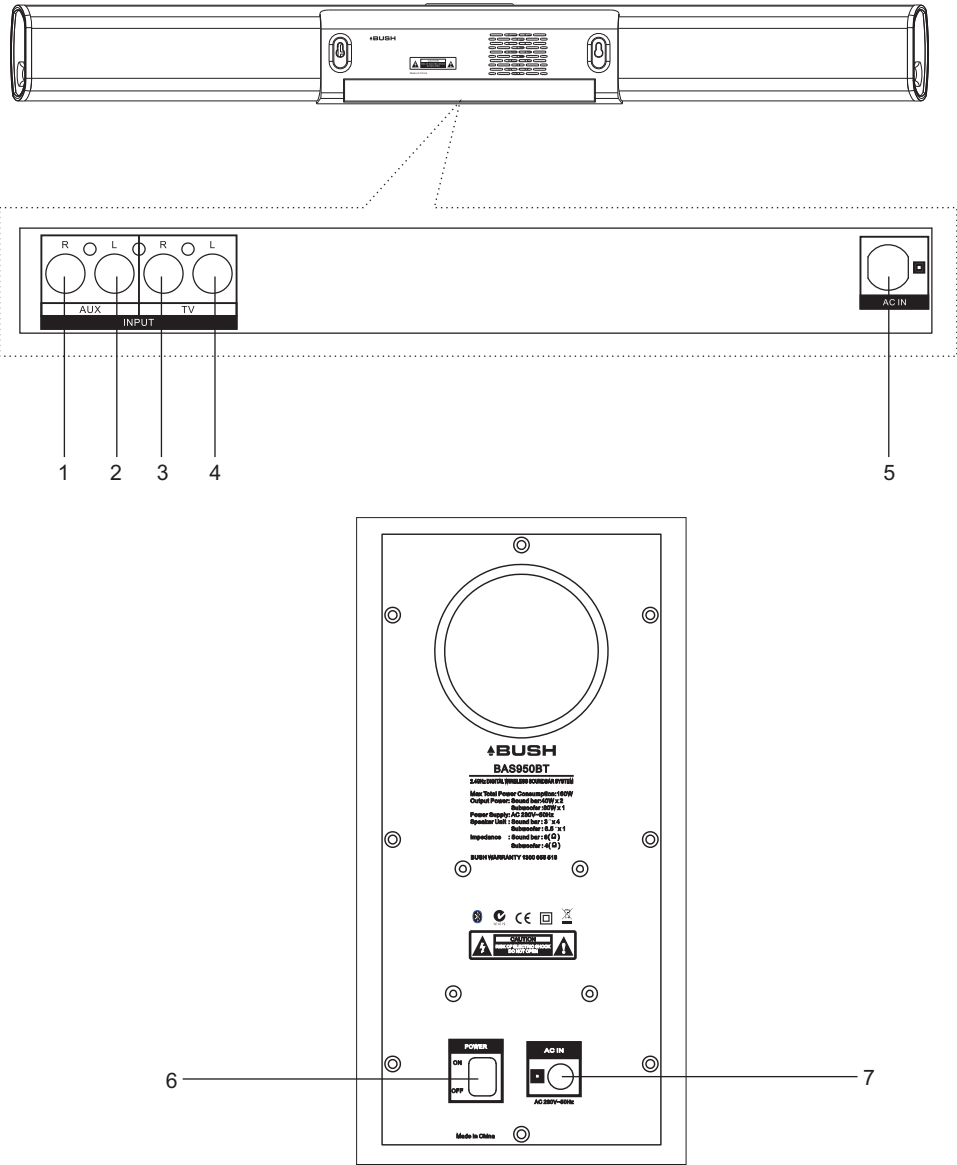

REAR PANEL - CONTROLS AND FUNCTIONS

1. AUX Stereo Right Audio Input.
2. AUX Stereo Left Audio Input.
3. TV Stereo Right Audio Input.
4. TV Stereo Left Audio Input.
5. AC Power Cord.(SOUND BAR)
6. Power On/Off Switch.(SUBWOOFER)
7. AC Power Cord.(SUBWOOFER)