
Installation instructions

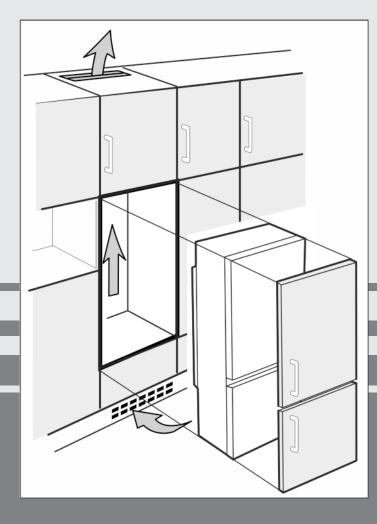

Combined fridge-freezer for integrated use, door-on-door



170215 7085634 - 02

(S)IC.../ (S)ICB.../ ICU... ... LC/ LP

LIEBHERR

General safety information

Contents

1	General safety information	2
2	Transporting the appliance	2
3	Installing the appliance	2
4	Appliance dimensions	3
5	Recess dimensions	3
6	Unit door	4
7	Ventilation of the kitchen unit	4
8	Changing over door hinges	5
9	Water connection	5
10	Installing the appliance in the recess	6
11	Disposing of packaging	6
12	Connecting the appliance	6

The manufacturer works constantly on the further development of all the types and models. Therefore please understand that we have to reserve the right to make design, equipment and technical modifications.

To get to know all the benefits of your new appliance, please read the information contained in these instructions carefully.

The instructions apply to several models. Differences may occur. Text relating only to specific appliances is marked with an asterisk (*).

Instructions for action are marked with a \triangleright , the results of action are marked with a \triangleright .

1 General safety information

- Only install, connect and dispose of the appliance according to the instructions. Take particular note of "Recess dimensions" (see 5) and "Ventilation of the kitchen unit" (see 7).
- The socket must be easily accessible so that the appliance can be quickly disconnected from the supply in an emergency. It must be outside the area of the rear of the appliance.

<u> </u>	DANGER	identifies a situation involving direct danger which, if not obviated, may result in death or severe bodily injury.
<u> </u>	WARNING	identifies a dangerous situation which, if not obviated, may result in death or severe bodily injury.
<u> </u>	CAUTION	identifies a dangerous situation which, if not obviated, may result in minor or medium bodily injury.
	NOTICE	identifies a dangerous situation which, if not obviated, may result in damage to property.
	Note	identifies useful information and tips.

2 Transporting the appliance



CAUTION

Risk of injury and danger of damage as a result of incorrect transport!

- Transport the appliance in a packed condition.
 - ► Transport the appliance upright.
 - ▶ Do not transport the appliance without assistance.

3 Installing the appliance



WARNING

Risk of fire due to short circuit!

If the mains cable/connector of the appliance or of another appliance touch the rear of the appliance, the mains cable/connector may be damaged by the appliance vibrations, leading to a short circuit.

- ▶ Stand the appliance so that it is not touched by connectors or main cables.
- Do not plug the appliance or any others into sockets located near the rear of the appliance.



WARNING

Fire hazard due to dampness!

If live parts or the mains lead become damp this may cause short circuits.

- ▶ The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.
- Only use the appliance when it is installed.



WARNING

Fire hazard due to refrigerant!

The refrigerant R 600a is environmentally friendly but flammable. Escaping refrigerant may ignite.

▶ Do not damage the piping of the refrigeration circuit.



WARNING

Fire hazard and danger of damage!

▶ Do not place appliances emitting heat e.g. microwaves, toasters etc. on the appliance!

NOTICE

Risk of damage from condensation!

If your appliance is **not a Side-by-Side (SBS) appliance**:

do not install the appliance directly next to another fridge/ freezer.

If your appliance is a Side-by-Side (SBS) appliance:


- ▶ install the SBS fridge-freezer combination according to the accompanying sheet.
- ☐ In the event that the appliance is damaged, contact the supplier immediately before connecting to the mains.
- ☐ The floor at the site must be flat and level.
- Do not install the appliance in a location where it is exposed to direct radiation of the sun, next to a cooker, heater and similar.
- Do not install the appliance alone: it is best to work together with two or more people.

ΕN

- ☐ The more R 600a refrigerant there is in the appliance, the larger the room in which the appliance is standing needs to be. In rooms that are too small, a flammable mix of gas and air may be created if there is a leak. According to the EN 378 standard, every 11 g of R 600a refrigerant requires at least 1 m³ space in the room for the appliance. The amount of refrigerant in your appliance is on the type plate inside the appliance.
- ☐ If the appliance is installed in a very damp environment, condensed water may form on the outside of the appliance. Always make sure that there is good ventilation both at air inlet and outlet at the site of installation.


If the transport lock is inserted on the door:

▶ Pull off red transport lock.

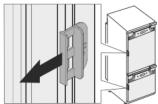

If the transport lock is screwed onto the door:

► Unscrew red transport lock. Close the freed retaining hole with plugs (60).

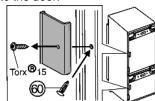

After installation:

Remove protective films, adhesive tapes and transport lock parts etc.

Note

► Clean the appliance (see Operating Instructions, Chapter "Cleaning the appliance").

4 Appliance dimensions


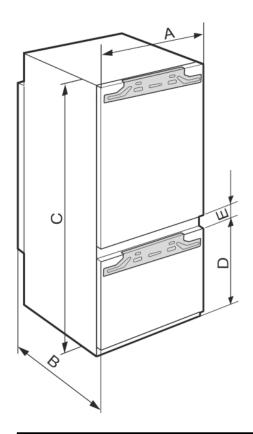


Fig. 1

	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)
ICP 29	559	544	1572	549	15
ICBP 32	559	544	1770	549	15
ICU 33, ICUN 33, ICP 33, ICNP 33, ICN 33, SICN 33, ICBN 33, SICBN 33	559	544	1770	695	15

5 Recess dimensions

The appliance is built-in and therefore completely enclosed by a kitchen unit. The kitchen unit concerned must be built exactly to the prescribed dimensions and allow for sufficient ventilation, both at air inlet and outlet, to ensure proper appliance operation.

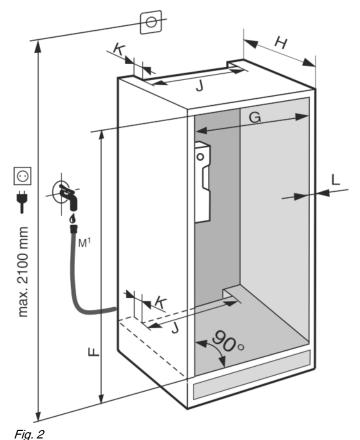

M¹): For N3366 only (see 9)


	F	G	H	J	K	L
	(mm)	(mm)	(mm)	(mm)	(mm)	(mm)
ICP 29	1574 — 1590	560 — 570	min. 550, reco mme nded 560	min. 500	min. 40	max. 19

Unit door

	F	G	H	J	K	L
	(mm)	(mm)	(mm)	(mm)	(mm)	(mm)
ICU 33, ICUN 33, ICP 33, ICNP 33, ICN 33, SICN 33, ICBP 32, ICBN 33, SICBN 33	1772 — 1788	560 — 570	min. 550, reco mme nded 560	min. 500	min. 40	max. 19

The specified energy consumption applies to a unit depth of 560 mm. The appliance will work properly at a unit depth of 550 mm, but at a slightly higher energy consumption.

▶ In the case of Side-by-Side installation, two appliances next to one another, build the appliances into separate kitchen units.

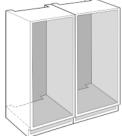

- ► Check the wall thickness of the adjoining cabinets: it must be min. 16 mm.
- ▶ Only install the appliance in robust, stable kitchen units. Secure the units against tipping.
- ▶ Align the kitchen unit using a spirit level and marking square and if necessary compensate with shims.
- ► Ensure that the floor and walls of the unit are at right angles to one another.

6 Unit door

- Two doors are required for this kitchen unit: the upper for the refrigerator and the lower for the freezer compartment.
- The doors must be minimum 16 mm and maximum 19 mm thick.
- When both doors are closed, the gap between the upper and lower door must be at least 3 mm high.
- The gap between unit doors must be at the same level as the gap between the appliance doors.
- There must be a gap of minimum 3 mm in height between the door and the unit door located above it (if one exists).
- The width of the unit doors depends on the style of the kitchen and on the gap size between the door panels of the cabinet. Generally, there should remain a vertical gap of 3 mm between the unit doors.
- The top edges of the upper and lower doors should be on a level with the doors of the adjoining cabinet (or cabinets), if there are other cabinets.
- The unit doors must be planar and mounted stress-free.

NOTICE

Risk of damage from over-heavy unit door!

If the unit door is too heavy, damage to the hinges and resulting impairment of function cannot be excluded.

▶ Before mounting the unit door, make sure that the door does not exceed the approved unit door weight.

Appliance type	Maximum unit door weight (kg)		
	Refrigerator compartment door	Freezer compartment door	
ICP 29	13	12	

Appliance type	Maximum unit door weight (kg)			
	Refrigerator compartment door	Freezer compart- ment door		
ICU 33, ICUN 33, ICP 33, ICN 33, SICN 33, ICNP 33	14	12		
ICBP 32	19	12		
ICBN 33, SICBN 33	20	12		

7 Ventilation of the kitchen unit



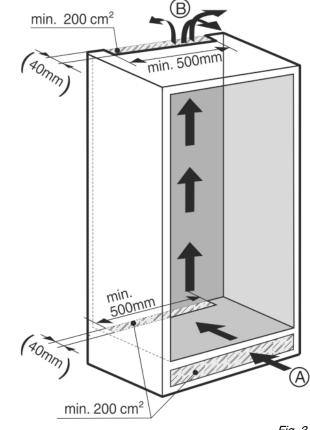


Fig. 3

- There must be an effective ventilation shaft of at least 200 cm² per appliance at the air inlet Fig. 3 (A) and outlet Fig. 3 (B) vent.
- The principle applies that the larger the ventilation shaft, the more energy-saving the operation of the appliance.
- The depth of the ventilation shaft at the back of the cabinet must be min. 40 mm.

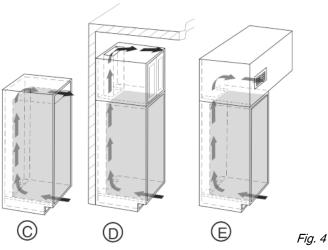

 The upper ventilation shaft can either be positioned directly above the appliance with an optional ventilation grille Fig. 4 (C), close to the ceiling above the unit Fig. 4 (D) or as an air outlet opening in a false ceiling Fig. 4 (E).

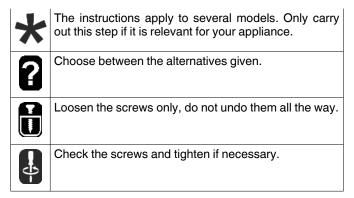

While changing over the door hinges, observe the safety instructions above and also the information in the symbols key.

Change the hinges over as shown at the end of the book.



8 Changing over door hinges

NOTICE

Risk of condensation damage for Side-by-Side appliances! Certain appliances can be set up as Side-by-Side combinations (two appliances next to each other).

If your appliance is a Side-by-Side (SBS) appliance:

Set up the SBS combination in accordance with the enclosed document.

If the positioning of the devices is stipulated:

▶ Do not change the door hinges over.



CAUTION

Risk of injury if soft stop contracts!

► Carefully remove the soft stop mechanism.



CAUTION

Risk of injury if hinges fold!

▶ Leave hinges open.



WARNING

Risk of injury due to the door dropping out!

If the fastening parts are not screwed into place firmly enough, the door may drop out. This may lead to severe injuries. What is more, the door may not close and therefore the appliance may fail to cool properly.

- Screw the hinges and the ball journal of the soft stop mechanism firmly into place, with 4 Nm.
- Screw the holder of the soft stop mechanism firmly into place, with at least 3 Nm.
- ► Check all of the screws and retighten if necessary.

Note

The door hinges can only be changed over if there is sufficient space towards the top to pull out the hinge mounting bracket and to mount it again on the other side. This is generally not the case after installation in the recess.

Change the hinges over before the appliance is installed in the recess.



There is a risk of injury during this stage! Please observe the safety instructions!

9 Water connection*



WARNING

Danger of electric shock!

- Disconnect the appliance by unplugging it before you connect it to the water line.
- Shut off the water supply before you connect the water feed lines of the IceMaker.
- The connection to the drinking water system may be carried out only by a qualified gas fitter and plumber.



WARNING

Risk of poisoning!

- ▶ The water quality has to comply with the drinking water ordinance of the respective country (e.g. 98/8
- Connect to the drinking water supply only.
- The IceMaker serves exclusively for making ice cubes in household quantities and has to be operated with water suitable for the purpose.

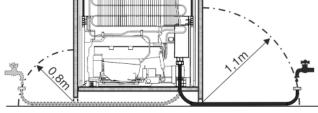


Fig. 5

- The water pressure has to be between 0.15 MPa and 0.6 MPa (1.5 bar - 6 bar).
- The water supply to the appliance must be via a cold water pipe which withstands the operating pressure and complies with the hygiene regulations.
 - Use the accompanying stainless steel hose (1.5 m). Do not reuse old hoses. A 3 m hose is available from the customer service department and has to be fitted by an expert.
 - In the hose connecting piece is a sieve with seal.
- Between the hose and the domestic water connection there has to be a stopcock to interrupt the water supply in case of need.
- All the fixtures and fittings used for water supply have to comply with the applicable regulations of the respective country.

Installing the appliance in the recess

Do not damage or kink the water inlet pipe when installing the appliance.


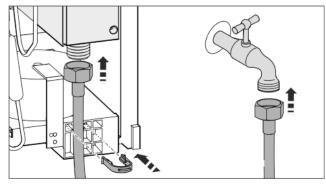


Fig. 6

The solenoid valve is at the bottom back of the appliance. It has a metric R3/4 connecting thread.

Connect the stainless steel hose:

- Connect the fitting with the strainer to the stopcock.
- Connect the other end of the hose to the solenoid valve.
- Fix the stainless steel hose to the housing with the locking hook.
- Open the stopcock of the water supply and check that the entire water system is leakproof. Before initial use:
- Have the water pipe bled of air by the proper expert.

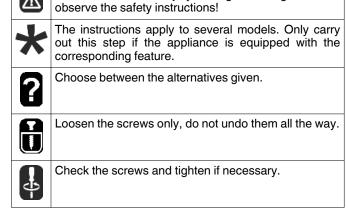

There is a risk of injury during this stage! Please

Please take note of the information in the symbols key during installation.

Install the appliance into the recess as shown at the end of the book.



10 Installing the appliance in the recess



WARNING

Fire hazard from short-circuiting!

- ▶ When pushing the appliance into the recess, take care not to crush, jam or damage the mains power cable.
- Do not operate the appliance with a defective mains power

Risk of damaging the hinges!

If when being pushed the appliance is held by the door, the hinges could be damaged.

hold it by the main body.



WARNING

Danger of suffocation due to packing material and plastic film! ▶ Do not allow children to play with packing material.

The packaging is made of recyclable materials:



- corrugated board/cardboard expanded polystyrene parts
- polythene bags and sheets
- polypropylene straps
- nailed wooden frame with polyethylene panel*
- Take the packaging material to an official collecting point.

NOTICE

When pushing or otherwise moving the appliance, always

12 Connecting the appliance

NOTICE

Risk of damage to the electronic control system!

▶ Do not use stand-alone inverters (conversion of d.c. to a.c./ three-phase) or energy saving plugs.



WARNING

Fire and overheating hazard!

Do not use extension cables or multiple socket outlets.

The type of current (alternating current) and voltage at the installation site have to conform with the data on the type plate (see Appliance at a glance).

The socket must be properly earthed and fused. The tripping current for the fuse must be between 10 A and 16 A.

The socket must be easily accessible so that the appliance can be quickly disconnected from the supply in an emergency. It must be outside the area of the rear of the appliance.

- Check the electrical connection.
- ▶ Plug in the power plug.



For installation into the recess, the following accessories are available from Customer Services:				
Set for limiting the door opening angle to 90°	~ 90°			
Set for mounting divided unit fronts	to and			
Set with cover for concealed hinges				



