



Instruction Manual

65" MiniLED 4K Ultra HD Smart TV - BP650USG60100



Enjoy it.

CONTENTS

General Safety	4
Installation	8
Wall Mounting Instructions	9
Controls and Connections	10
Remote Control	12
Initial Setup	15
Wi-Fi	17
Google	17
Acceptance - Terms of Service	18
Google Assistant Setup	19
Channel Installation	22
Google TV™	23
Dashboard	24
Google Assistant	25
MENU	26
Display	27
Sound	28
System	29
About	30
Parental Control	31
FAQs	32
Specifications	34
Customer Helpline	Last Page

GENERAL SAFETY

Read this manual thoroughly before you start using the TV.

Store this manual, the completed warranty card, your receipt and the product packaging.

The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



The cover (or back) of the unit should not be removed to prevent risk of electric shock.

This unit must be serviced by a qualified service personnel only.



The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Using Cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the television or its controls and to call for an adult to assist.

GENERAL SAFETY (CONT.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not tamper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.
- Danger of explosion if battery is incorrectly placed. Replace with same or equivalent type.

Installation

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this TV set, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- Do not allow anything to rest on or roll over the power cord and antenna cable. Doing so may cause a fire or an electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug this TV during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the wall socket.

GENERAL SAFETY (CONT.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- Batteries from the remote control must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.
- Make sure to always carry TV from the sides, always be sure to have assistance by another person. Do not carry the TV from the middle.

WARNING!

It is STRONGLY RECOMMENDED that you ANCHOR this product.

Toppling furniture and TV's can cause serious injury or death.

TO HELP AVOID ANY SERIOUS OR FATAL INJURY, WE STRONGLY RECOMMEND THAT THIS PRODUCT BE PERMANENTLY FIXED TO THE WALL OR OTHER SUITABLE SURFACE. FIXING DEVICES ARE NOT INCLUDED SINCE DIFFERENT SURFACE MATERIALS REQUIRE DIFFERENT ATTACHMENTS. PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT WHAT FIXING DEVICE TO USE.

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the television on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

GENERAL SAFETY (CONT.)

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the TV set near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the TV set.
- The antenna must be installed away from high-voltage power line,
- Please contact an antenna professional installer to install the antenna to avoid incorrect installation which could result in fire, electric shock or serious injury.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.
- If mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.



This symbol indicates that the appliance has double insulation between the dangerous mains voltage and the parts accessible to the user. In the event of repairs use only identical spare parts.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

INSTALLATION

Install the stand as described below, or if you want to mount it to a wall, please contact a professional installer.

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

Attaching the stand

Step 1

 
Place a soft cushioned material on top of a flat surface to prevent damaging the screen panel. Then place the TV screen flat on top, with the screen side facing down, as illustrated on the right.

Step 2

Align the stand leg to the installation point, as illustrated below.

Step 3

Tighten the screws (supplied) with a screwdriver to affix the stand to the panel, as illustrated on the right.

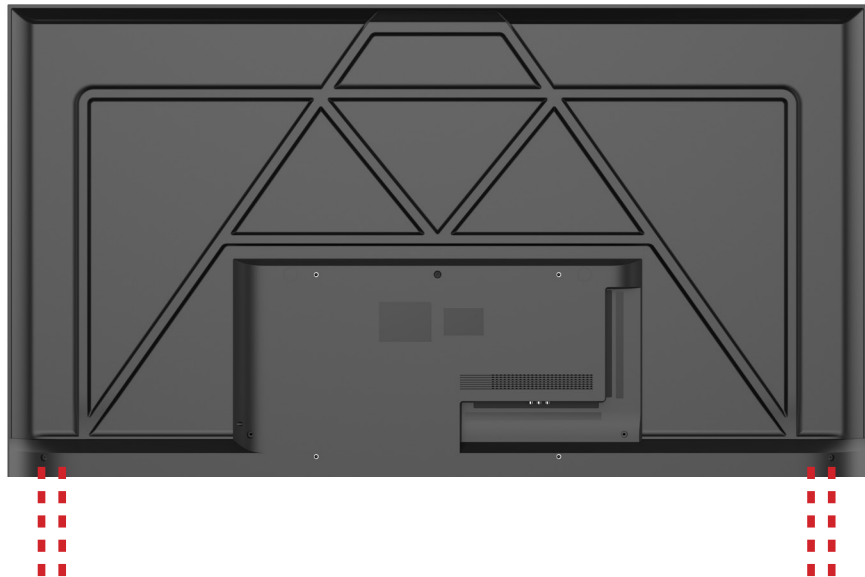

CAUTION!

Do not apply excessive force as this may damage the screw holes.

 
INSTALLATION (CONT.)

Wall-Mounting Instructions

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.


- We recommend you use a professional installer as we assume no liability for any eventual damage to the product or injury to yourself if you mount the TV on your own.

BACK OF TV
VESA PATTERN: 400(w) x 300(h) mm

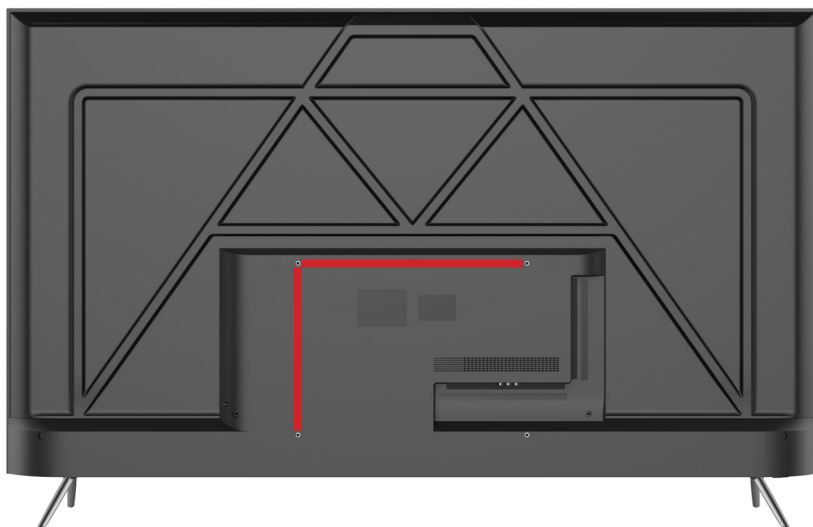

NOTE: If you are wall-mounting the TV, this should be done by a qualified installer.

 CONTROLS AND CONNECTIONS

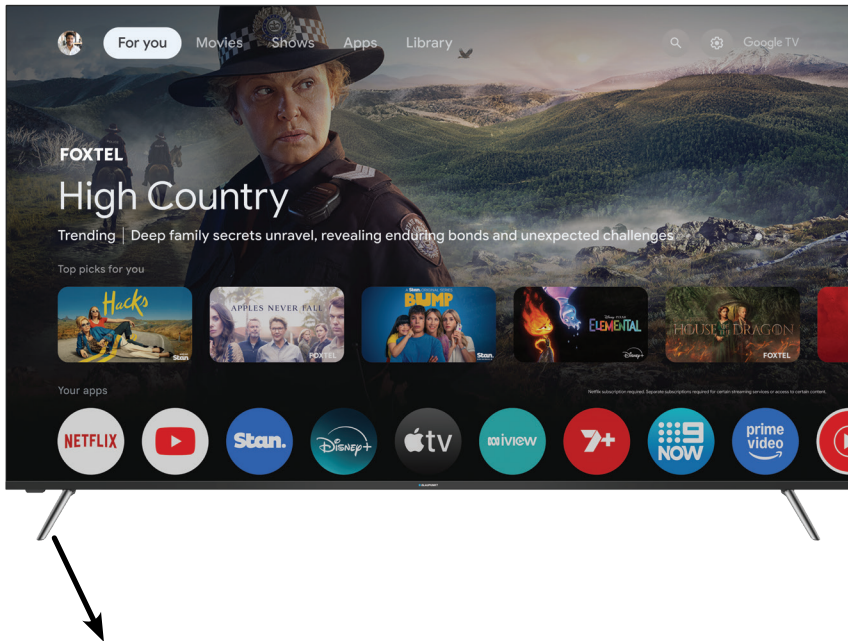

1. Standby Mode:

In non-third-party apps, the main interface or USB mode, press and hold (over 3 seconds) to enter standby.

2. Local Key Menu Operation

When not in third-party apps, main interface, or USB mode, and no local key menu is displayed on screen:

Short press: Opens the local key menu.

Menu options: Power On/Off, Channel +, Channel -, Volume +, Volume -, Input Source.

Menu Navigation:

Short press: Cycles to the next option.

Long press: Confirms the currently highlighted option.

Timeout: The menu automatically closes after 5 seconds of inactivity.

3. Input Source Selection:

 
When the Input Source menu is displayed:

Short press: Move focus to the next source sequentially.


Long press or no action for 1.5s: Switch to the currently highlighted source.

CONTROLS AND CONNECTIONS

SIDE PORTS

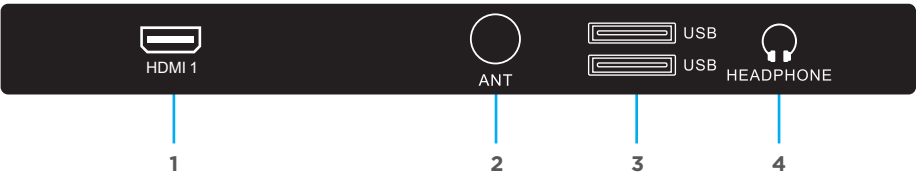

BOTTOM PORTS

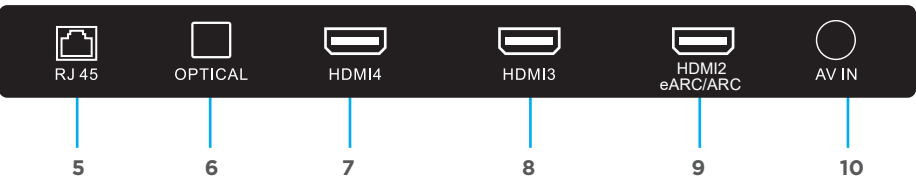 


 - 1. HDMI 1
- 2. ANT (ANTENNA)
- 3. USB x2
- 4. HEADPHONE
- 5. RJ45 (ETHERNET)
- 6. OPTICAL
- 7. HDMI 4
- 8. HDMI 3
- 9. HDMI 2 eARC/ARC
- 10. AV IN







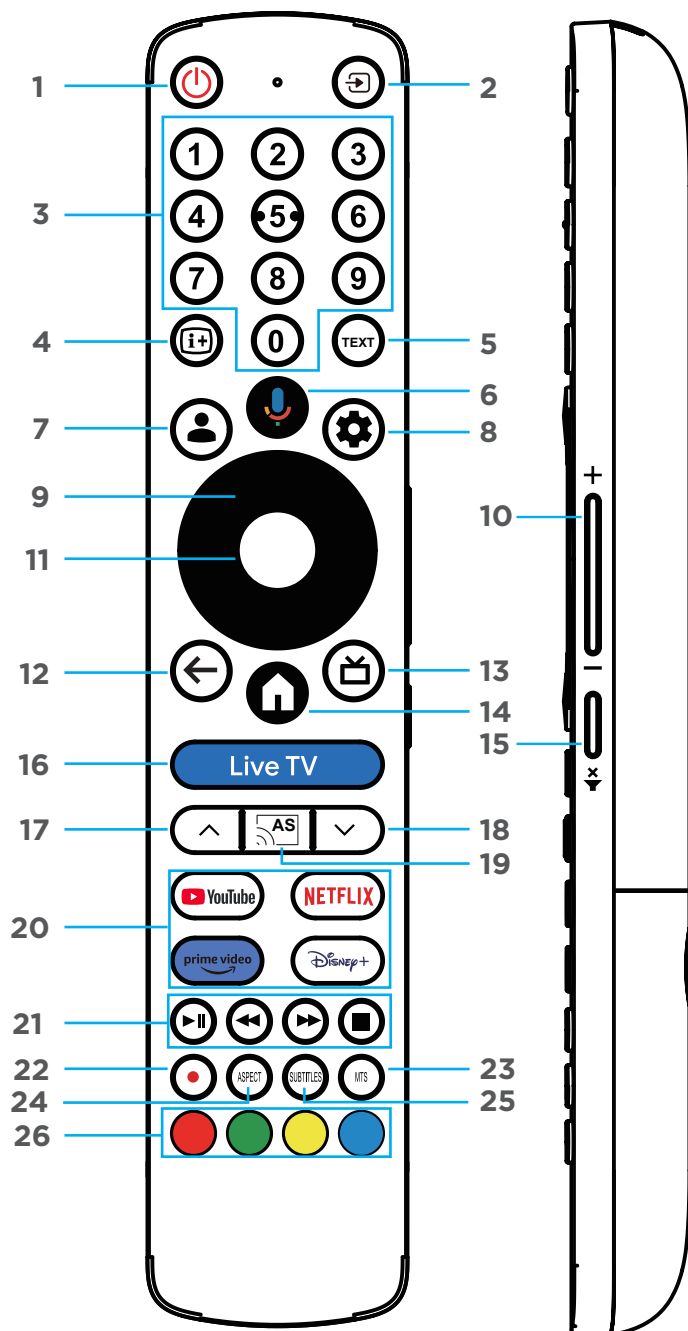




USB connection

Insert a USB storage device into the USB port to record, playback of video/music/photo.

REMOTE CONTROL



REMOTE CONTROL

1. **POWER:** Turn the TV on/off.
2.  : Press to open the input source list.
3. **NUMBER BUTTONS (0-9):** Select a TV channel.
4. **i+:** Display channel information.
5. **TEXT:** Turn Teletext ON/OFF.
6.  : Start a voice search or speak to Google Assistant.
7. **MEMBER:** Choose or add an account.
8. **SETTING:** Press to open the setting option.
9. **ARROWS:** Navigate on-screen menu.
10. **VOLUME:** Increase or decrease TV volume.
11. **OK:** OK to confirm selection.
12. **BACK:** Return to previous menu.
13. **GUIDE:** Display electronic TV guide in DTV mode.
14. **HOME:** Open Google TV home page.
15. **MUTE:** Turn the sound on or off.
16. **Live TV:** Open ATV or DTV channels on LiveTV[®].
17. **CHANNEL-:** Previous TV channel.
18. **CHANNEL+:** Next TV channel.
19. **AS:** Open Airtimes APP.
20. **APPS:** Open Netflix, YouTube, PrimeVideo, Disney.
21.  : Pause and Play playback in multimedia/timeshift mode.
 : Rewind playback in multimedia/timeshift mode.
 : Fastforward playback in multimedia/timeshift mode.
 : Stop multimedia playback, Recording and Timeshift mode.
22.  : Start recording DTV Channel.(must have USB drive inserted)
23. **MTS:** Press to select Mono, Nicam, Stereo for ATV channels and Audio Language for DTV channels.
24. **ASPECT:** Switches the preset screen size mode.
25. **SUBTITLES:** Turn subtitles ON/OFF.
26.     : Operations according to the prompt within menu or while watching TV.

REMOTE CONTROL (CONT.)

 
Using the Remote Control

- Do not mix old and new batteries in the remote
- Do not use different types of battery
- If you do not intend to use the unit for a long time, please remove batteries from the remote to avoid accident.
- Keep batteries away from children and pets.
- Never throw batteries into a fire.
- Do not drop, or impact the remote control as it void warranty immediately.
- The remote control operate at a range of 5 to 6M effectively
- Do not expose the remote control sensor to a bright light.


How to open back of remote control to replace batteries

Place/Replace the batteries making sure that the 2x AAA batteries (included) polarities (+/-) match the battery compartment polarities (+/-).


1. Open the battery compartment cover on the back side.



 3. Closed the cover



 2. Insert 2 x 1.5V AAA batteries in correct polarity. Do not mix old or used batteries with new ones.

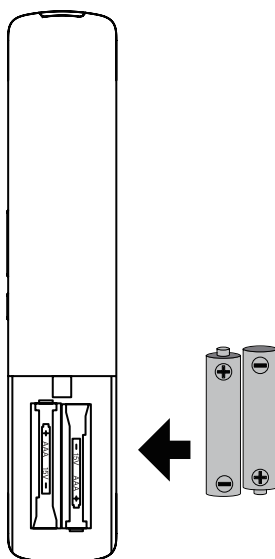


INITIAL SETUP

For the first initial setup, on screen setup wizard will guide you through setting up your TV. Please follow according to onscreen guide to setup your TV correctly.

Be sure to follow the below prompts to pair your Bluetooth remote control. After the pairing is successful, you can now operate the TV.

 
Press **BACK** and **HOME** buttons on RC at the same time for 3 seconds to enter pairing mode.

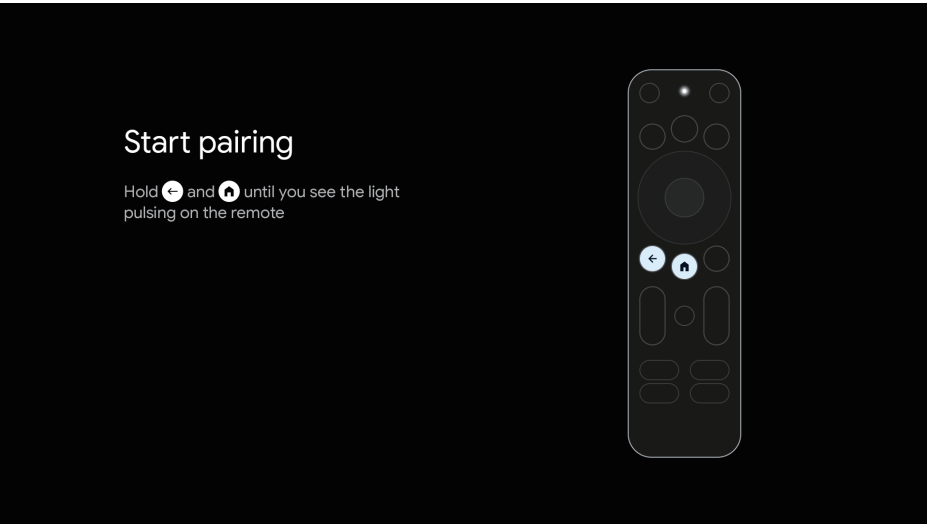

Use the ▲/▼ buttons to select system language, then press **OK/SELECT** to confirm. Select the language you want.



 Use the ▲/▼ buttons to select system language, then press **OK/SELECT** to confirm. Select CORRECT country you are located in otherwise Google TV will not work correctly.

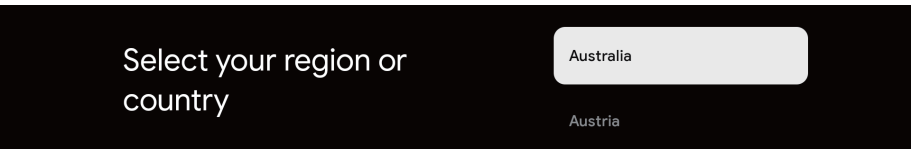

INITIAL SETUP (Cont.)


During the initial setup Google will ask you to log in to Google TV, please follow the instructions below:


GoogleTV3170

Set up with the Google Home app

Download and open the Google Home app on your phone to get started

When instructed in the app, scan the QR code





Setup code
R F J N W B M R

Set up on TV instead

May take longer. Requires typing with the remote.

Select TV Mode, you can set Home Mode or Retail Mode.

BLAUPUNKT

Select TV mode

'Home' mode is optimised for efficient energy usage for home use.

 
'Retail' mode is optimised to shop demo with fixed settings.

Home

Retail


WI-FI

Select your home Wi-Fi network and enter in the password to start connection process.
Once successfully connected you will proceed to the next step.

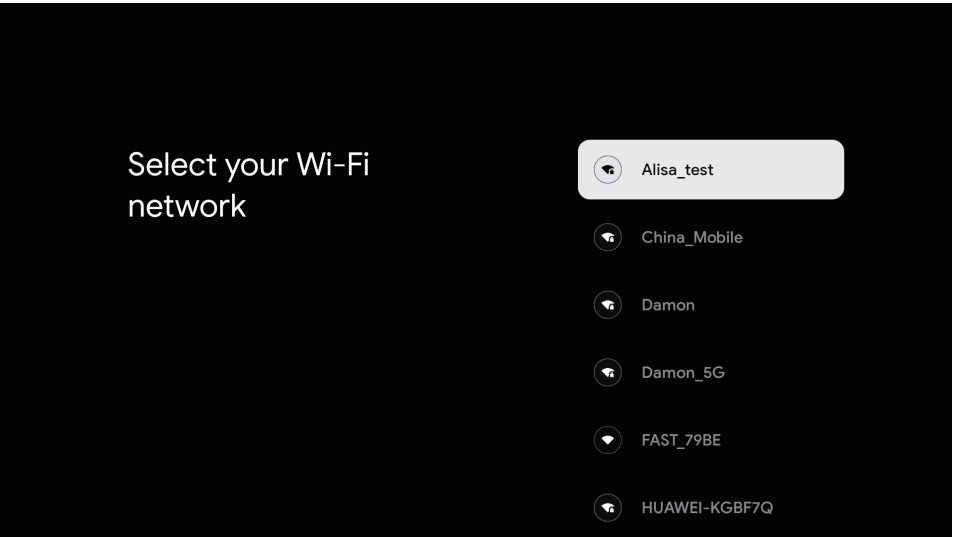

GOOGLE

 To have access and to download applications from **Google Play**, you must sign in with a Google Account. Once you open **Google Play**, you will be prompted to sign in or create a new account.

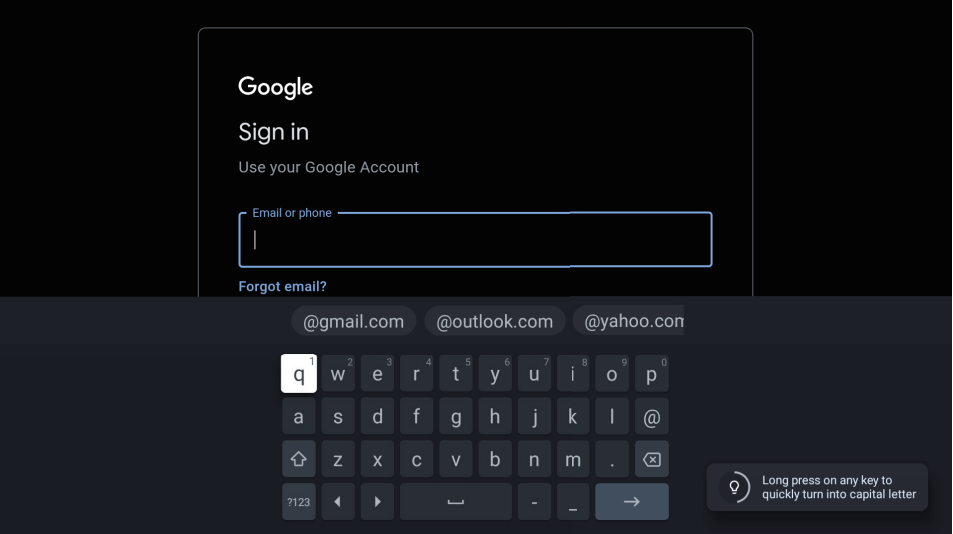

ACCEPTANCE - TERMS OF SERVICE

By accepting the Google Terms of Service to improve the product experience, Select **“ACCEPT”** to proceed with this condition.

Google

By clicking 'Accept', you agree to the Google Terms of Service and the Google Play Terms of Service. The Google Terms of Service also apply to your use of Assistant. The Google Privacy Policy describes how Google handles information generated as you use Google services.

This device may automatically receive and install updates and apps from Google or your device's manufacturer. Some of these apps may offer optional in-app purchases. You can remove them or adjust their permissions at any time from the device settings.

User activity will be visible to other users of the device, including recommendations and YouTube activity. Furthermore, additional Google Accounts may sign in on this device, and Google will be able to infer relationships between signed-in accounts on this device.

Accept

Terms of Service

Play Terms of Service

Privacy Policy

Google services

To learn more about a service, select it below. Data will be used according to Google's Privacy Policy (g.co/privacypolicy). Select Accept to confirm.

Location

On

To get local channels, weather and more, allow Google and apps with your permission to use location estimated from Wi-Fi. Select to adjust settings.

Google Home

This TV will be added to your home in the Google Home app or a new home will be automatically created for you.

Google Assistant

The services you use Google Assistant with will get a unique code from Assistant for privacy purposes.

Help improve Google TV

On

Automatically send diagnostic information to Google. Select to adjust settings.

Updates and apps

Automatically download and install updates and apps from Google and your device's manufacturer. Some of these apps may offer in-app purchases. You can remove these apps at any time.

Recommendations and ads

Your activity from other Google products improves the recommendations and ads that you get.


Learn more

Accept




GOOGLE ASSISTANT SETUP

For the best experience with Google Assistant, please select **“Allow”** for Google Assistant to share requests with your TV’s Installed apps.

Without this permission, Google Assistant may not be bale to find all the content from your TV’s Apps.



Search across all your TV apps



To do this, allow it to share your requests with your TV’s apps.

You can turn this setting off at any time in your TV settings.
[Learn more at g.co/TVappsearch](https://g.co/TVappsearch).

Without this permission, Google Assistant may not be able to find all the content from your TV’s apps.

Allow

No, thanks

Add TV to a Google Home, you can control it with other Google devices nearby.

 
Select a home

By adding your TV to a Google Home, you can control it with other Google Assistant-enabled devices nearby. You will also be able to use this TV to control other smart home devices in your home.


Home

Add another home


GOOGLE ASSISTANT SETUP (CONT.)

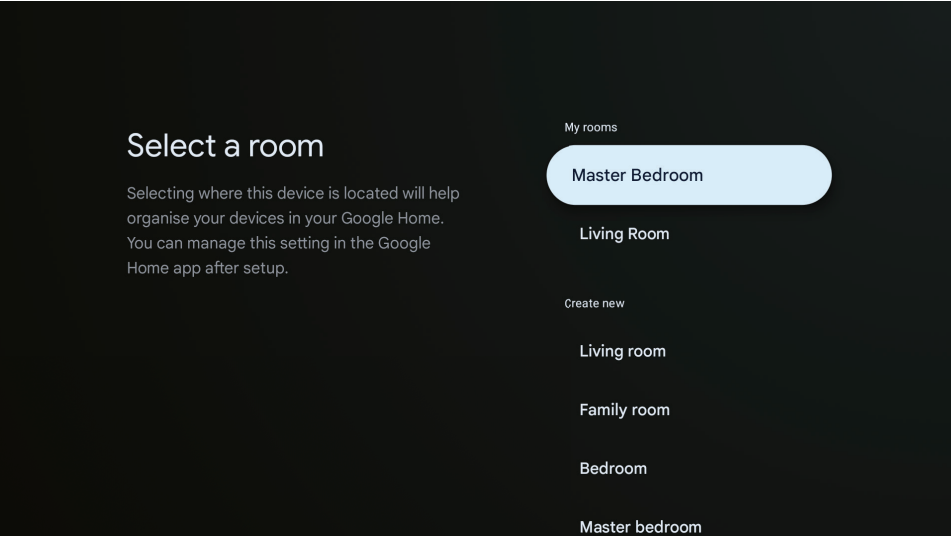

 Google will recommend apps for TV based on your account and network.

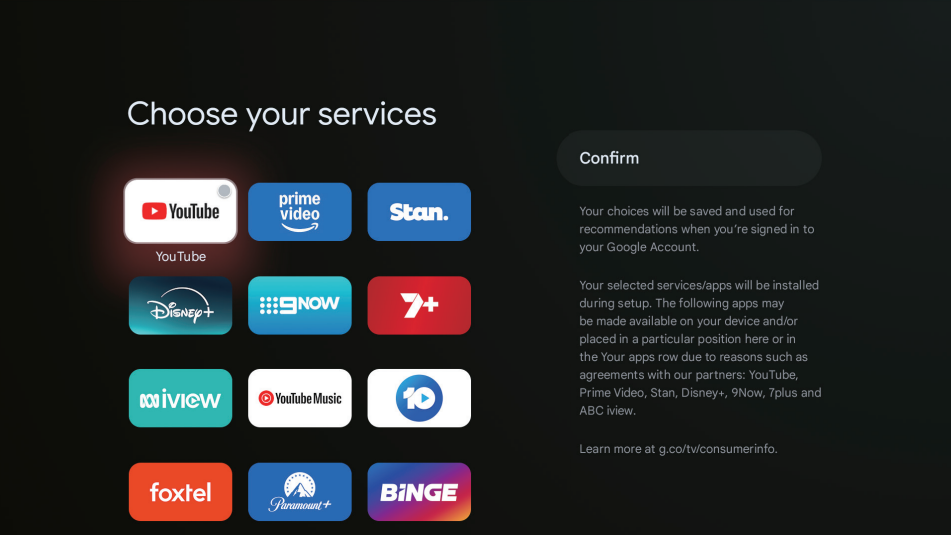


GOOGLE ASSISTANT SETUP (CONT.)

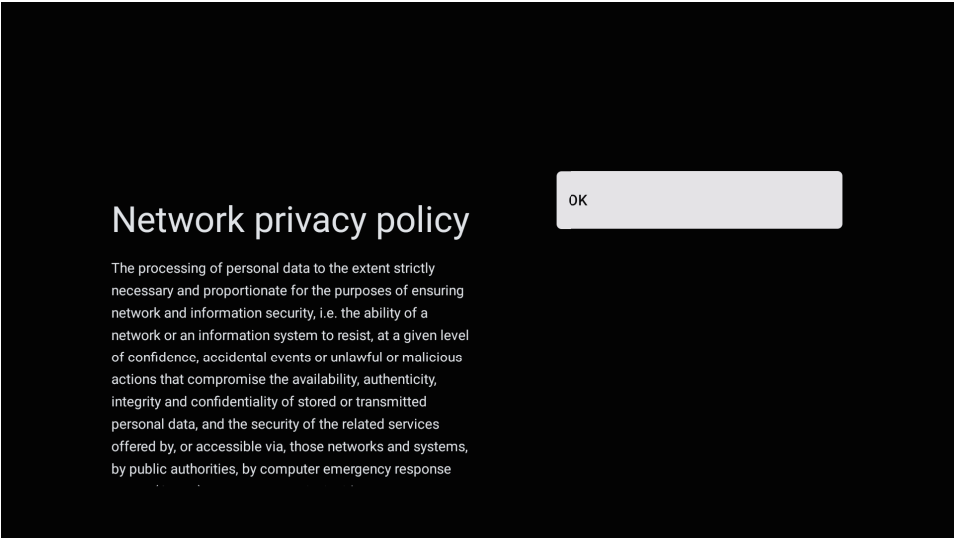 

TIMEZONE

 
Select the timezone you are using the device in with the ▲ / ▼ directional buttons.

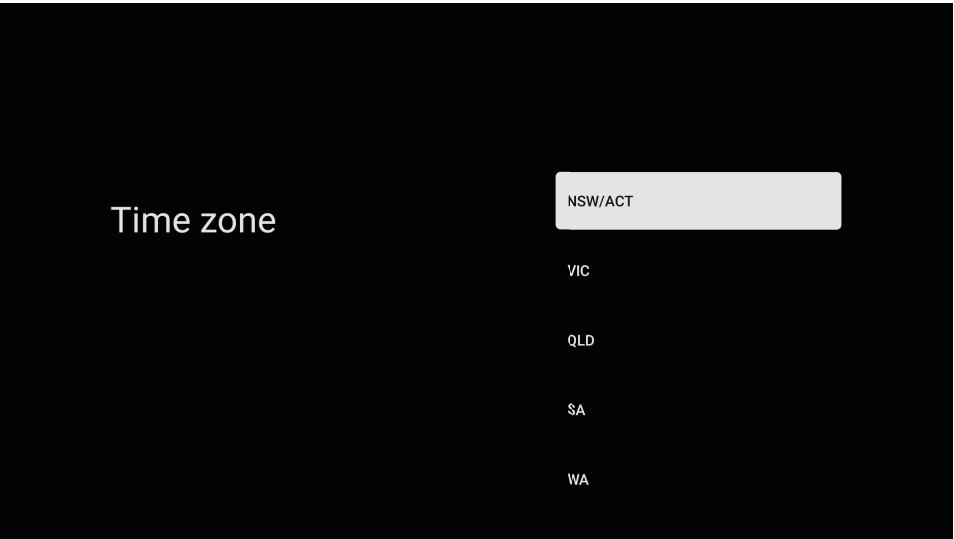


CHANNEL INSTALLATION

Scan channels using antenna cable.

 NOTE: Please make sure **Antenna (RF) cable** is plugged into the **TV** port located on back of TV.

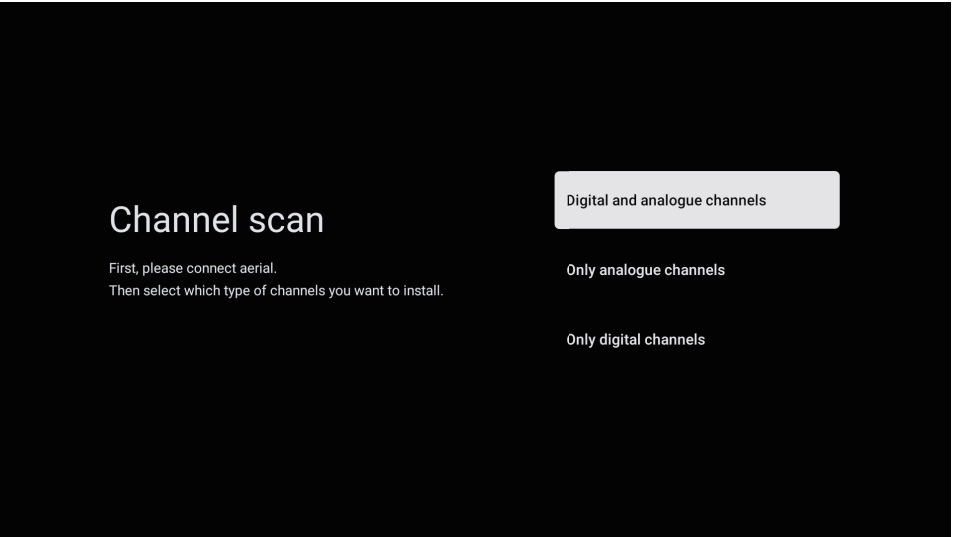


DISCLAIMER

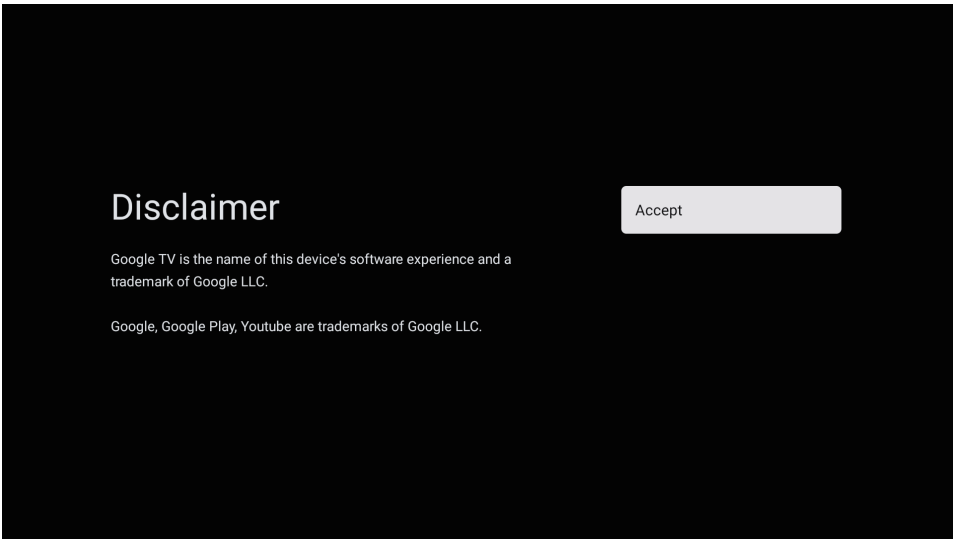 

Installing your apps

14% complete



GOOGLE TV

Get the most out of your Google TV

Your Google TV is ready to go, but here are a few optional features you can set up for a more personalised experience



Google Photos as screensaver

Display photos from your selected Google Photos albums when your TV is idle



Multiple profiles

Add multiple accounts on your TV to give each person tailored recommendations and their own watchlist



 
Children's features

Create a profile for your children, including family-friendly recommendations and parental controls

[Go to Google TV](#)

Once you have completed initial setup, you will now enter the Google TV home screen.


GOOGLE TV (CONT.)

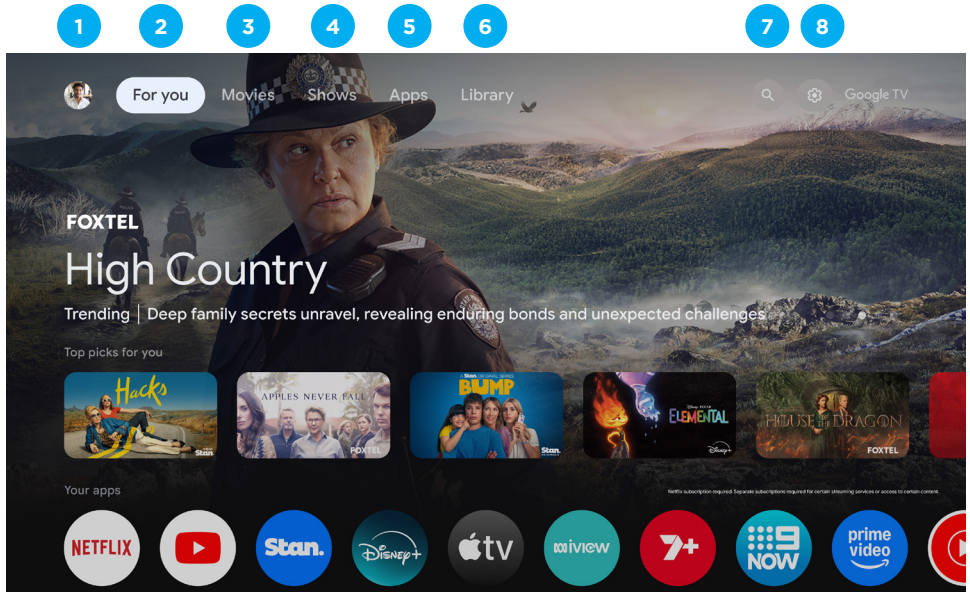


1. **PROFILE** - Select this option if you want to manage your Google Account.
2. **FOR YOU** - Main page for advertised TV shows, Live TV, Installed Apps, and top picks based on content recommendations tailored for you.
3. **MOVIES** - This menu is all movies recommended for you to watch.
4. **SHOWS** - This menu is all TV shows recommended for you to watch.
5. **APPS** - To search for and download/install onto your Google TV.
6. **LIBRARY** - All installed app will appear in this menu, including updates and more.
7. **SEARCH** - Press the Google Assistant button on your remote to do more on your TV with your voice, or select "Search" and type in what you are looking for.
8. **SETTINGS** - Select it to open the setting option,.

GOOGLE ASSISTANT

 Do more on your TV with your voice. Press the Google Assistant button on your remote to quickly search 400,000+ movies and shows, get recommendations to match your mood, control smart home devices, and more.

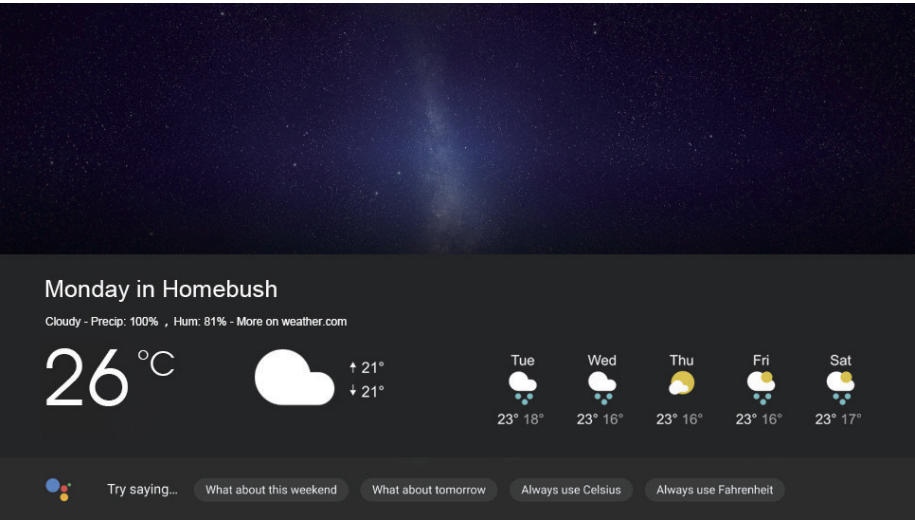

 Ask Google to search for the latest blockbuster, stream shows, or open multiplayer games. Have it dim the lights by connecting smart home devices. Manage tasks and see your calendar. Or ask it questions and see the answers on your TV.

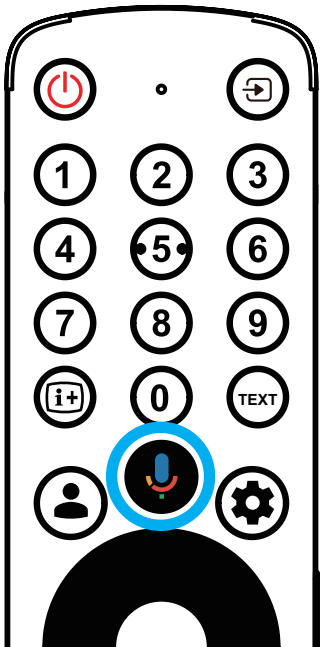


“What’s the weather today?”

SETTINGS MENU

To access **SETTINGS** menu:

 - 1. Select **Settings** Icon (#8 on page 24) menu
- 2. Select **Settings**

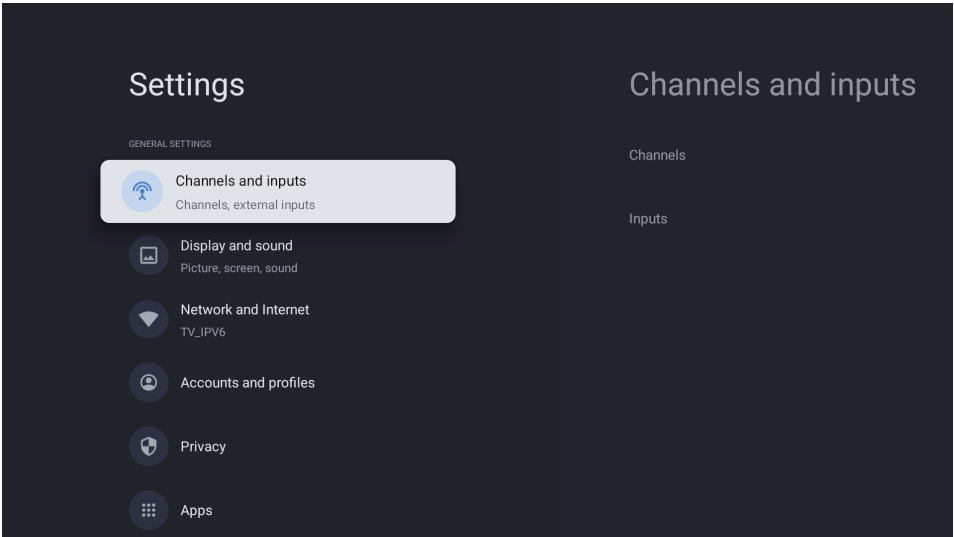


SETTINGS AVAILABLE ARE:

- **Channels & Inputs** - Live TV^x and TV inputs menu
- **Display & Sound** - Picture and Audio settings
- **Network & Internet** - Wi-Fi or Ethernet connection settings
- **Accounts & Sign in** - Google Account settings
- **Privacy**
- **App**
- **System**
- **Accessibility**
- **Remotes and accessories**
- **Help and feedback**

DISPLAY MENU

To access **DISPLAY** menu:

 
- 1. Select **Settings** Icon (#8 on page 24) menu
- 2. Select **Settings**
- 3. Go down and select **Display & Sound**.
- 4. Then select **DISPLAY**

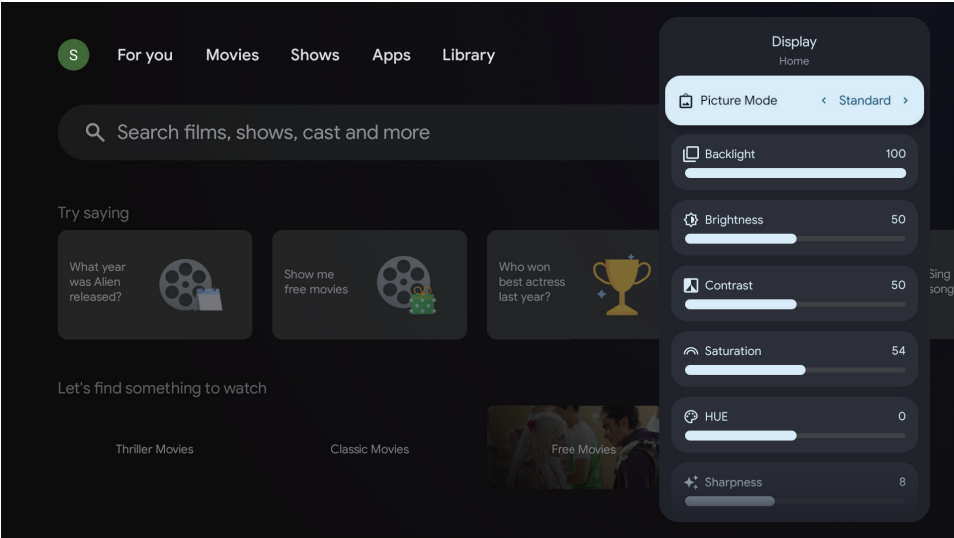

SOUND MENU

To access **Sound** menu:

 
- 1. Select **Settings** Icon (#8 on page 24) menu
- 2. Select **Settings**
- 3. Go down and select **Display & Sound**.
- 4. Then select **Sound**

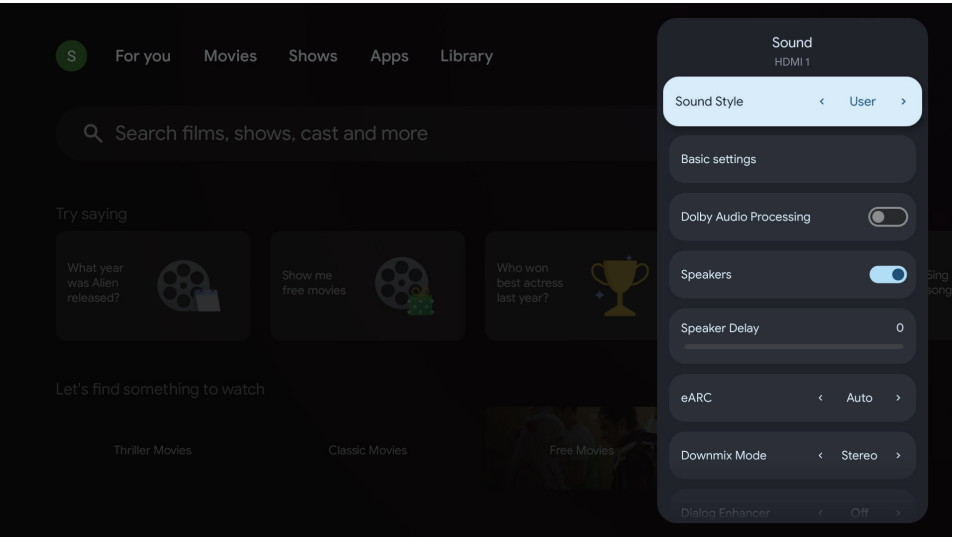

SYSTEM MENU

To access **SYSTEM** menu:

 
- 1. Select **Settings** Icon (#8 on page 24) menu
- 2. Select **Settings**
- 3. Go down and select **SYSTEM**

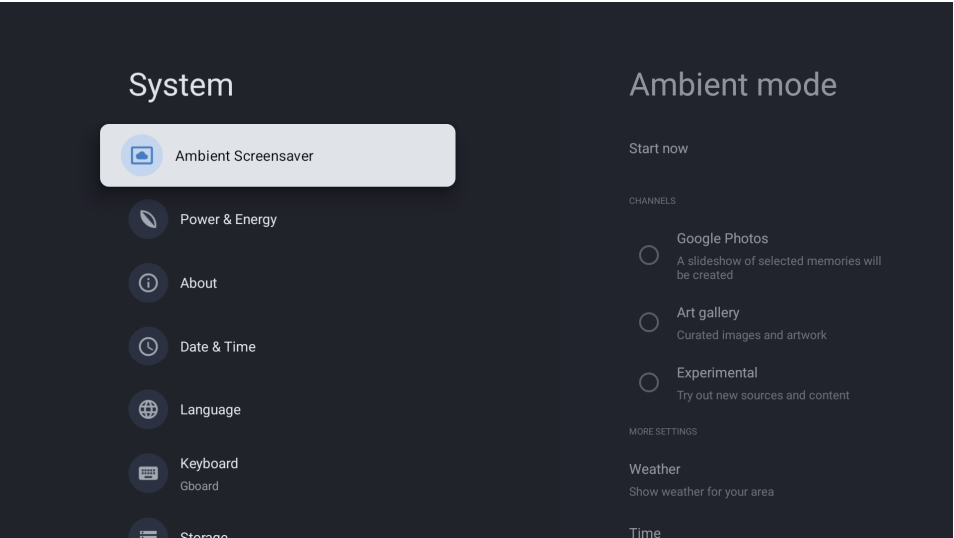

ABOUT MENU

To access **ABOUT** menu:

 - 1. Select **Settings** Icon (#8 on page 24) menu
- 2. Select **Settings**
- 3. Go down and select **ABOUT**


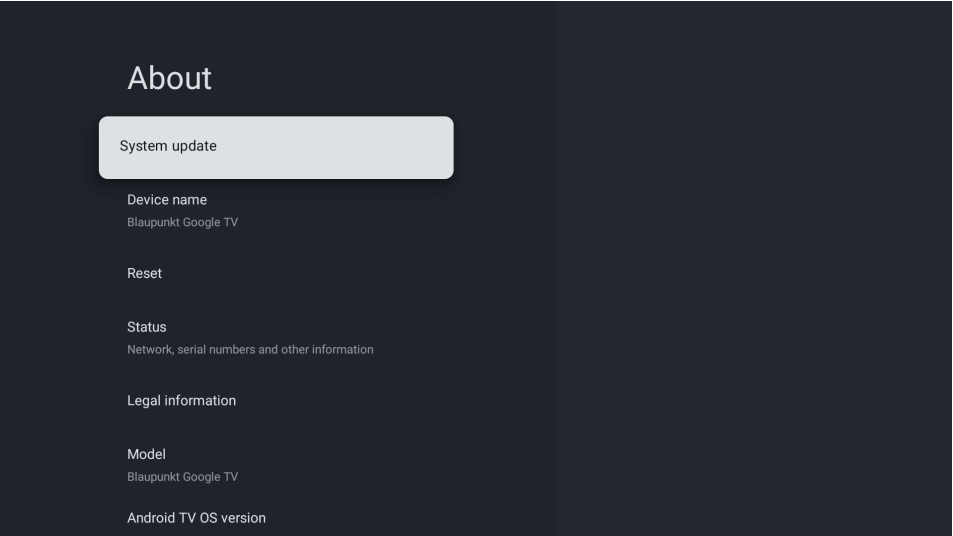


PARENTAL CONTROL

To access **PARENTAL CONTROL** menu,

- 1. Go down and select **Live TV* APP**
- 2. Select setting icon
- 3. Move to **Parent controls.**
- 4. Press OK, then input your password to open **Parent controls menu**

  Note: The password for parental control is set based on your Google account. If you forget password, you can reset it by your Google account.

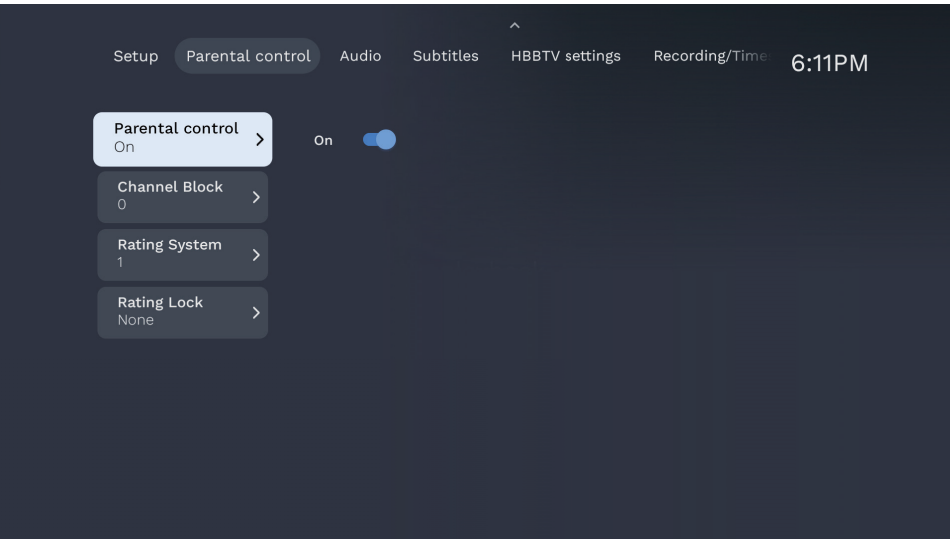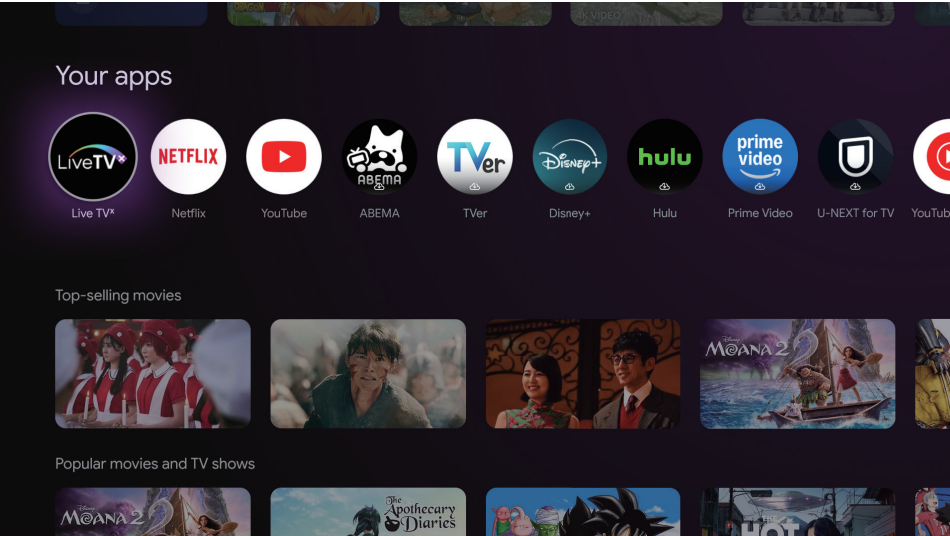

FAQS

GENERAL PROBLEMS WITH TV SET

Symptoms	Items to Check and Actions to Follow
"Ghost" or double image	<ul style="list-style-type: none">• This may be caused by obstruction to the antenna due to high rise buildings or hills. Using a highly directional antenna may improve the picture.
No power	<ul style="list-style-type: none">• Check if the TV's AC power cord is plugged into the outlet.• Unplug the TV, wait for 60 seconds. Then reinsert plug into the outlet and turn on the TV again.
No picture	<ul style="list-style-type: none">• Check antenna connections at the rear of the TV to see if it is properly connected to the TV.• Possible broadcast station trouble. Try another channel.• Adjust the contrast and brightness settings.• Check the Closed Captions control. Some TEXT modes could block the screen.
Good picture but no sound	<ul style="list-style-type: none">• Increase the volume level by pressing the VOL+ button on the remote control or on the TV side control panel.• Press the MUTE button on the remote control to ensure mute is off.
Good sound but poor color	<ul style="list-style-type: none">• Adjust the contrast, color and brightness settings.
Poor picture	<ul style="list-style-type: none">• Poor picture quality may occur when an activated S-VHS camera or camcorder is connected to your TV and other peripherals at the same time. Switch off one of the peripherals.
Snowy picture and noise	<ul style="list-style-type: none">• Check the antenna connection.
Horizontal dotted line	<ul style="list-style-type: none">• This may be caused by electrical interference (e.g. hair dryer, nearby neon lights, etc.) Turn off the equipment.
Television not responding to remote control	<ul style="list-style-type: none">• Check whether the batteries are working. Replace if necessary.• Clean the remote control sensor lens on the TV.• You can still use the buttons on the side of your TV.
Pixels (dots) that are always dark or always lit	<ul style="list-style-type: none">• Your TV is precision-manufactured using an extremely high level of technology. However, sometimes pixels may not display correctly. These types of occurrences are inherent to this type of product and do not constitute a defective product.

FAQS (Cont.)

TURN OFF SUBTITLES ON LIVE TV?

To turn off subtitles on your Google TV, while watching Live TV*:

1. While watching Live TV*, press **"MENU"** on remote control.
2. Go down and select **"Subtitle"**.
3. Switch all choices of subtitles to **OFF**.

Once all options for subtitle are switched off, then you can exit and continue watching Live TV*!

If the Subtitle persists to appear, you may need a software update or for further assistance please contact our customer support centre.

MY REMOTE CONTROL ISN'T PAIRING WITH MY GOOGLE TV?

If your remote control is not pairing or becomes disconnected, please reconnect it and pair it again in the Settings menu:

1. Press **SETTINGS** Icon
2. Select **"REMOTES & ACCESSORIES"**
3. Select **"PAIR ACCESSORY"**
4. Follow the onscreen instructions to pair your remote. Once you detect your Bluetooth Remote control, Press **OK** on remote control to select it and pair.


If it doesn't connect, try the process again until it pairs, otherwise contact our call centre.

NOTE: NOTE: You can still use your remote control without pairing. However, Google Assistant will not be available until the remote control is paired.

GOOGLE TV REMOTE CONTROL - APP

If you want to control your TV via your smart device. Search for: "Google TV or Google Home" app and download. Once following prompts to connect your smart device to your Google TV, you will then be able to control your TV from your smart phone.

SPECIFICATIONS

Operating System	Google TV™	
HDR (High Dynamic Range)	Yes	
Resolution	3840 x 2160	
Display Colours	1.07 Billion	
Aspect Ratio	16 : 9	
Refresh Rate	60Hz	
ETHERNET / WIFI	Yes/ 802.11 a/b/g/n/ac	
Multimedia Playback Format under USB Mode	Movie: MPEG, TS, TRP, TP, MP4, MOV, 3GP, AVI, MKV, ASF, FLV, WEBM	
	Music: MPEG1, MPEG2, VORBIS, LPCM, FLAC	
	Photo: JPEG, BMP, PNG, GIF	
Power Source	100-240V ~ 50/60Hz	
Power Consumption	260W	
USB	5V  max. 500mA	
Dimensions	With stand: 1445 (w) × 333 (d) × 901 (h) mm	
	Without stand: 1445 (w) × 84 (d) × 834 (h) mm	
Weight	Net: 15 kg	
	Gross: 20.6 kg	
Accessories	1 x Instruction Manual	2 x AAA Batteries
	1 x Remote Control	2 x TV Stand (Left and Right)
	1 x Warranty Card	Screws (For TV Stand)

NOTE: This document is for reference only, the operation interface is subject to the TV software.



CUSTOMER SUPPORT:

info@ayonz.com
02 8279 8606

DISTRIBUTED BY:

Ayonz Pty Ltd