

Thinking of you
 **Electrolux**

user manual
**Energy Star Low
Energy Drying System**
EDH97950W



Congratulations

Congratulations and thank you for choosing our EDH97950W condenser dryer. We are sure you will find your new condenser dryer a pleasure to use. Before you use your condenser dryer, we recommend that you read through the whole user manual, which provides information about the condenser dryer and its functions.

To avoid the risks that are always present when you use an electrical appliance it is important that the condenser dryer is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. We recommend that you keep this instruction booklet for future reference and pass it on to any new owners. After unpacking the condenser dryer please check it is not damaged. If in doubt, do not use the appliance but contact your local Electrolux Service Centre.

The symbols you will see in this booklet have these meanings:

**warning**

This symbol indicates information concerning your personal safety

**caution**

This symbol indicates information on how to avoid damaging the dryer

**tips and information**

This symbol indicates tips and information about use of the dryer

**environmental tip**

This symbol indicates tips and information about economical and ecological use of the dryer

Contents

Important safety information..... 3

Installation..... 4

Environment..... 7

Product information 8

Control panel 8

Display 9

Before first use 10

Daily use 11

Care and cleaning..... 15

Troubleshooting..... 19

Replacing the light 20

Technical specifications 21

Machine settings 22

Important notice 22

Warranty 23

Service..... 24



Important safety information



caution

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings. To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Make sure that small pets do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: Cushions, quilts and the like (these items accumulate heat).
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer.
- Always unplug the appliance after use, cleaning and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.
- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat can not escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard.
- Items that have been soiled with substances such as cooking oil, acetone, petrol kerosene, spot removers, turpentine, waxers and wax removers or have been contaminated by hair care products should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer – this will reduce but not eliminate the hazard.
- **Danger of explosion:** Never tumble dry items that have been in contact with flammable solvents (petrol, methylated spirits, dry cleaning fluid and the like). These substance are volatile and could cause an explosion. Only tumble dry items washed with water.
- **Risk of fire:** items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in the tumble dryer.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before loading your tumble dryer.
- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into the appliance.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) so that the items are left at a temperature which ensures they will not be damaged.
- Risk of electric shock! Do not spray down the appliance with jets of water.



warning

- **Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated. Risk of fire!**
- **Lint must not be allowed to accumulate around the tumble dryer.**

Installation



warning


- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Customer Care Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) so that the items are left at a temperature which ensures they will not be damaged.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.
- Care must be taken to ensure that the appliance does not stand on the electrical supply cable.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.

Transporting the appliance



warning

Only tip the appliance on its left side to transport (see illustration), if it cannot be transported in an upright position.

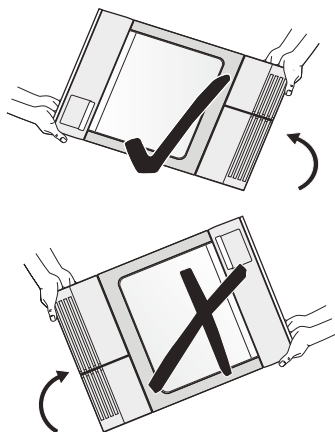

warning

If the appliance was not transported in an upright position, leave it to stand for 12 hours before connecting it to the electricity supply and using it for the first time, so that the oil can flow back to the compressor. Otherwise the compressor could be damaged.

Appliance positioning

- It is recommended that, for your convenience, the machine is positioned close to your washing machine.
- The tumble dryer must be installed in a clean place, where dirt does not build up.
- Air must be able to circulate freely all round the appliance. Do not obstruct the front ventilation grille or the air intake grilles at the back of the machine.
- To keep vibration and noise to a minimum when the dryer is in use, it should be placed on a firm, level surface.

- Once in its permanent operating position, check that the dryer is absolutely level with the aid of a spirit level. If it is not, raise or lower the feet until it is.
- The feet must never be removed. Do not restrict the floor clearance through deep pile carpets, strips of wood or similar. This might cause heat built-up which would interfere with the operation of the appliance.



important

- The hot air emitted by the tumble dryer can reach temperatures of up to 60°C. The appliance must therefore not be installed on floors which are not resistant to high temperatures.
- When operating the tumble dryer, the room temperature must not be lower than +5°C and higher than +35°C, as it may affect the performance of the appliance.
- Should the appliance be moved, it must be transported vertically.
- The appliance must not be installed behind the lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance in such a way that a full opening of the dryer is restricted.


Removing transport safety packaging




caution

Before use all parts of the transport packaging must be removed.

1. Open loading door
2. Pull off adhesive strips from inside machine on top of drum.

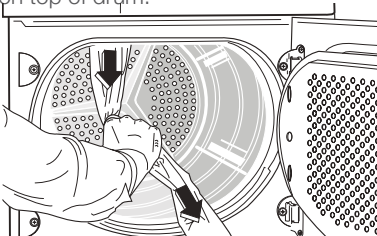

3. Remove foil hose and polystyrene padding from the machine.

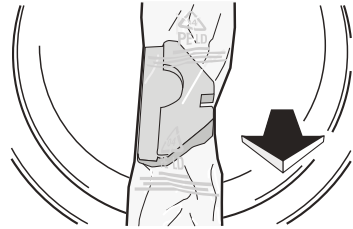

Electrical connection

Details on mains voltage, type of current and the fuses required should be taken from the type plate. The type plate is fitted near the loading aperture (see "Product description" chapter).



warning

The manufacturer declines any responsibility for damage or injury through failure to comply with the above safety precautions.

Should the appliance power supply cable need to be replaced, this must be carried out by our Customer Care Centre.



warning

- **The power supply cable must be accessible after installing the machine.**
- **If this appliance is supplied from a cord extension set or electrical portable outlet, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.**

Door reversal

To make it easier to load or unload the laundry, the door can be reversed.

The door must only be reversed by an authorised service engineer.

Please contact your local Customer Care Centre. The engineer will carry out the door reversal at your cost.

Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only dry fabrics which are designed to be machine dried. Follow the instructions on each garment label.
- Do not dry unwashed items in the tumble dryer.
- Do not overload the appliance. See the relevant section in the user manual.
- Clothes which are dripping wet should not be placed in the dryer.
- Sandy clothes e.g. unrinsed beach towels, should not be placed in the dryer without being rinsed and spun first.
- Garments which have been in contact with industrial chemicals or volatile petroleum products should not be machine dried. If industrial chemicals or volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the tumble dryer if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the tumble dryer is accessible.
- Fabric softeners, or similar products should be used as specified by the fabric softener instructions.
- Do not allow lint to be accumulated around the tumble dryer.
- Provide adequate ventilation to avoid the back flow of gases into the room from appliances burning other fuels, including open fires.

- **Caution – hot surface:** Do not touch the door light cover surface when the light is switched on (only dryers equipped with internal drum light).

Child safety

- This machine is not intended for use by young children or infirm persons without supervision.
- Children should be supervised to ensure that they do not play with the appliance.

- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children – danger of suffocation! Keep them out of children's reach.
- Keep all detergents in a safe place out of children's reach.
- Make sure that children or pets do not climb into the drum.

Special accessories

• Stacking kit



tips and information

Available from your Customer Care Centre or your specialist dealer.

These intermediate installation kits can be used to arrange the dryer and a washing machine (60 cm wide, front loaded) as a space-saving washer/dryer stack. The washing machine is at the bottom and the dryer is at the top. Read the instructions supplied with the kit carefully.

• Drain kit



tips and information

Available from your Customer Care Centre or your specialist dealer

Installation kit for direct draining of condensate into a basin, siphon, gully, etc. The condensate tank then no longer has to be drained, it must however remain in its intended position in the machine. Read the instructions supplied with the kit carefully.

• Pedestal with the drawer




tips and information

Available from your Customer Care Centre or your specialist dealer

To situate the dryer in optimal high and have some additional space to store (e.g. laundry powders).

Read the instructions supplied with the kit carefully.

Environment

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.



environmental tip

Environmental tips

- In the dryer, laundry becomes fluffy and soft. Fabric softeners are not therefore needed when washing.
- Your dryer will function most economically if you:
 - Always keep the ventilation slots on the base of the dryer unobstructed;
 - Use the loading volumes specified in the program overview;
 - Ensure you have good ventilation in the installation room;
 - Clean the micro-fine filter and fine strainer after each drying cycle;
 - Spin the laundry well before drying.



environmental tip

Energy consumption depends on spinning speed set in washing machine. Higher spinning speed – lower energy consumption.

Environmental information

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



important

Important! The heat pump of your dryer contains a closed refrigerant circuit filled with a refrigerant which is free from fluorochlorohydrocarbons. The refrigerant circuit in the heat pump must not be damaged.




warning

When a unit is no longer being used:


- Pull the plug out of the socket.
- Cut off the cable and plug and dispose of them.
- Dispose of the door catch. This prevents children from trapping themselves inside and endangering their lives.

Product Information

- 1 Control panel
- 2 Water reservoir
- 3 Drum light
- 4 Fine lint filters
- 5 Loading door
- 6 Coarse lint filters
- 7 Lint filters
- 8 Push button for base door opening
- 9 Rating plate
- 10 Lint filter
- 11 Ventilation grille
- 12 Heat exchanger door
- 13 Adjustable feet

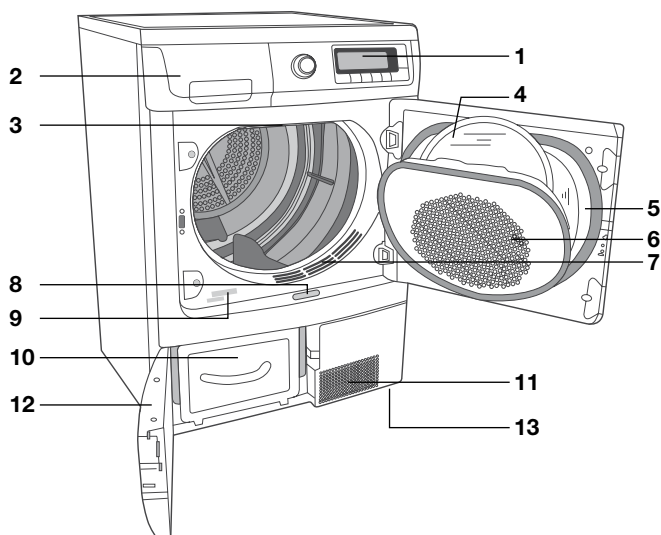

Control panel

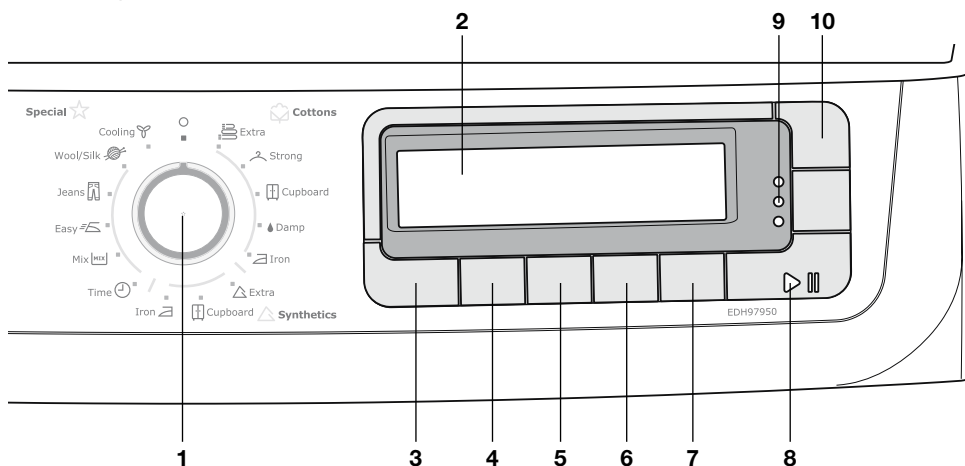

- 1 Program selector and off switch
- 2 Display
- 3 **Wool/Silk** program selection button
- 4 **Dryness** button
- 5 **Long Anticrease** button
- 6 **Buzzer** button

- 7 **Time** button
- 8 **Start/Pause** button
- 9 Warning lights: Condenser, Filter, Full tank
- 10 **Delay** button

Display



| Symbol | Description |
|---------|---|
| | Wool/Silk not selectable |
| | Wool or Silk program selection mode |
| | Wool program selection |
| | Silk program selection |
| | Minimum dryness level |
| | Medium dryness level |
| | Maximum dryness level |
| | Auto dryness level |
| 2 . 3 0 | Time to end (time of time program, time of start delay) |
| | Cycle performance, auto dryness detection |
| | Long antcrease guard |
| | Child lock |
| | Alarm |
| | Delay start |
| | Drying phase |
| | Cooling phase |
| | Antcrease guard phase |
| Err | Error, wrong selection |

Before First Use



warning


 


If the appliance was not transported in an upright position, leave it to stand for 12 hours before connecting it to the electricity supply and using it for the first time, so that the oil can flow back to the compressor. Otherwise the compressor could be damaged.

In order to remove any residues which may

have been produced during production, wipe the dryer drum with a damp cloth or carry out a brief drying cycle (30 min.) with damp cloths in the machine.

- 1. Turn the program knob to ⌚ Time.
- 2. Press the Time button repeatedly until **0 . 30** appears in the display.
- 3. Press the Start/Pause button.



| Program | Max. load (dry clothes) | Application/properties | Care label |
|-------------------|-------------------------|---|------------|
| Cottons | | | |
| Extra | 7kg | Thorough drying of thick or multi-layered fabrics, e.g. terry towelling items, bathrobes. | |
| Strong | 7kg | Thorough drying of thick fabrics, e.g. terry towelling items, towels. | |
| Damp | 7kg | For thin fabrics which are also to be ironed, e.g. knitwear, cotton shirts. | |
| Cupboard | 7kg | Thorough drying of fabrics of even thicknesses, e.g. terry towelling items, knitwear, towels. | |
| Iron | 7kg | For thin fabrics which are also to be ironed, e.g. knitwear, cotton shirts. | |
| Synthetics | | | |
| Extra | 3kg | Thorough drying of thick or multi-layered fabrics, e.g. pullovers, bedding, table linen. | |
| Cupboard | 3kg | For thin fabrics which are not ironed, e.g. easy care shirts, table linen, baby clothes, socks, lingerie with bones or wires. | |
| Iron | 3kg | For thin fabrics which are also to be ironed, e.g. knitwear, cotton shirts. | |
| Special | | | |
| Time | 7kg | For further drying of individual items of laundry. (Dryness function not available) | |
| Mix | 3kg | For drying cotton and synthetic fabrics, uses low temperature. | |
| Easy | 1 kg (or 5 shirts) | Special program with antcrease mechanism for easy care fabrics such as shirts and blouses; for minimum ironing effort. The results depend on the type of fabric and its finish. Place fabrics in the dryer straight after spinning; once dried, immediately remove fabrics and place on a clothes hanger. | |
| Jeans | 7kg | For leisure clothing, such as jeans, sweat-shirts, etc., of different material thicknesses (e.g. at the neck, cuffs and seams). | |





| Program | Max. load (dry clothes) | Application/properties | Care label |
|---|-------------------------|--|--|
|  Wool | 1kg | For drying woollen fabrics after they have been washed, using warm air at minimum mechanical load (Follow section "Sorting and preparing washing"). Recommendation: Remove fabrics immediately after drying, as no anticrease program follows. | |
|  Silk | 1kg | For drying silk using warm air and gentle movement. | |
|  Cooling | 1kg | Special program, lasting around 10 minutes, for refreshing or gently cleaning textiles with commercially available dry cleaning sets. (Only use those products which are declared as suitable for the dryer by the manufacturer; please observe the manufacturer's instructions for use.) Buzzer function available. |  |

Note: Cottons, Cupboard, Max Dryness program is the Energy Rating reference program according to AS/NZS2442.2
Time function available only with ⌚ Time program.

Daily Use

Sorting laundry



- Sort by fabric type:
 - Cotton/linen for programs in  Cottons program group.
 - Mixtures and synthetics for programs in  Synthetics program group.
- Sort by care label: The care labels mean:

| | |
|--|--|
|  | Drying in the tumble dryer possible in principle |
|  | Drying at normal temperature |
|  | Drying at reduced temperature |
|  | Drying in the tumble dryer not possible |



important

Do not place in the appliance any wet laundry which is not specified on the care label as being suitable for tumble-drying.
This appliance can be used for all wet laundry items which are labelled as suitable for tumble-drying.

- Do not dry new, coloured textiles together with light-coloured laundry items. Textile colours may bleed.
- Do not dry cotton jersey and knitwear with the  Extra program. Items may shrink!
- Wool and wool-like textiles can be dried using the  Wool program. Before the drying cycle spin the woollen textiles as well as possible (max. 1200 rpm). Only dry woollen textiles together of similar or the same material, colour and weight. Please dry heavy laundry items made of wool separately.

Preparing laundry

- To avoid laundry becoming tangled: close zips, button up doona covers and tie loose ties or ribbons (e.g. of aprons).
- Empty pockets. Remove all items (paper clips, safety pins, etc).
- Turn items with double-layered fabrics inside out (e.g. with cotton-lined anoraks, the cotton layer should be outermost). These fabrics will then dry better.



important

Do not overload the appliance. Observe max. loading volume of 7kg.

Average laundry weights


| | |
|------------------|-------|
| bathrobe | 1200g |
| quilt cover | 700g |
| man's work shirt | 600g |
| man's pyjamas | 500g |
| sheet | 500g |
| tablecloth | 250g |
| man's shirt | 200g |
| night dress | 200g |
| pillow case | 200g |
| towelling towel | 200g |
| blouse | 100g |
| ladies' briefs | 100g |
| men's underpants | 100g |
| napkin | 100g |
| tea cloth | 100g |

Switching machine on

Turn the program selector to any program. The machine switches on. When the loading door is open, the internal lamp illuminates the drum.

Door opening and laundry loading

1. Open loading door:
Push against the loading door (push point)
2. Load your laundry (do not force it in).

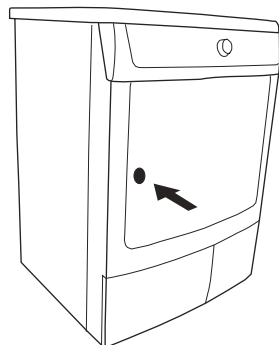


caution

Do not jam laundry in between the loading door and rubber seal.

3. Close loading door securely. Lock must audibly lock.

Selecting the program

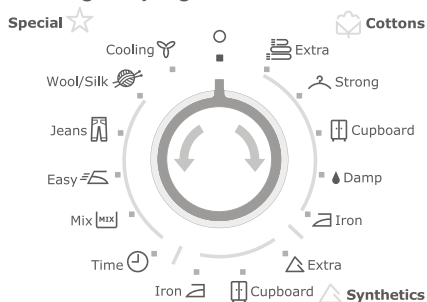

Use the program selector to set the program you require. The estimated time to end of the program appears in the LCD in h:min format (hours:minutes).

During the cycle time elapses by steps of one minute; less than 1 hour the leading zero is not shown (e.g. "59", "5", "0").

Wool/Silk

To chose Wool or Silk while program selector is set to Wool/Silk program.

To activate Wool program performance:



1. Choose the Wool/Silk drying program.
2. Press the Wool/Silk button until the icon is on.

To activate Silk program performance:




1. Choose the Wool/Silk drying program.
2. Press the Wool/Silk button until the icon is on.


If you do not chose Wool or Silk, the Wool program is performed.


Dryness

This function improves the dryness of the laundry. Laundry becomes drier as you move from  to .

MIN MAX

1. Choose the drying program.
2. Press the Dryness button repeatedly until the desired dryness level (  ) is shown in the display.


When humidity adjustment is not foreseen on the related program, the following icon  is shown on the display.

When the Dryness function is not available for a program the Auto icon,  AUTO, will be displayed.

Long anticrease

This function prolongs the anticrease phase to 90 mins in total. The drum rotates in intervals during this phase. The laundry therefore remains relaxed and free of creases.

To activate it:

1. Choose the drying program.
2. Press the Long anticrease button - the display shows the icon: 

If this additional function is selected, the anticrease phase at the end of the drying cycle is lengthened by 60 minutes. The laundry can be removed at any time during the anticrease phase.

To deselect the function press the Long anticrease button again. The icon above is off.


Buzzer

The appliance is supplied with the Buzzer function deactivated.

When activated, the buzzer sounds:

- At the end of the cycle
- When the anticrease phase starts or ends
- When the cycle is interrupted


To activate it:


 


1. Choose the drying program.
2. Press the Buzzer button – the display shows the icon: 

tips and information

To permanently activate or deactivate buzzer see the chapter *Machine settings*.

Time

Use the Time button to select the  program duration after setting the Time program. You can select a program duration from 20 min. to 3 hours in 10-minute increments.



1. Turn the program selector to the Time  program.
2. Press the Time button repeatedly until the desired program duration is shown in the display, e.g.  .   for a program of 20 minutes.

If the program duration is not selected, the duration is automatically set to 10 mins.




Delay

tips and information

With the Delay button, you can delay the start of a program by between 30 minutes and a maximum of 20 hours.

1. Select the program and additional functions.
2. Press the Delay button as many times as necessary until the required time of the delay appears on the display, e.g.   H if the program is to be started in 12 hours.

tips and information

If the display is showing   H and you press the button again, the time delay will be cancelled. The display will show  and then the duration of the selected program.

3. To activate the delay timer, press the Start/Pause button. The amount of time remaining until the program is set to start is continuously displayed (e.g. 15h, 14h, 13h, ... 30' etc).

Child lock


The child lock can be set to prevent a program being accidentally started or a program in operation being accidentally changed. The child lock function locks all buttons and the program selector. The child lock can be activated or deactivated by holding down the Buzzer and Time buttons simultaneously for 5 seconds.




tips and information

If the child lock is set:

- before program is started, the appliance cannot be used
- after program is started, program in operation cannot be changed

The icon  appears in the display to indicate that the child safety device is activated. The child safety device is not deactivated once the program comes to an end. If you want to set a new program, you must first deactivate the child lock.

Starting the program

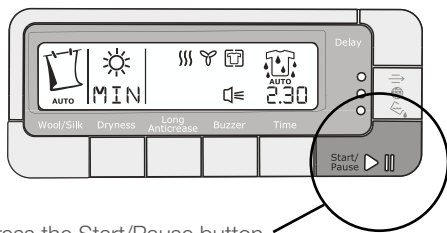

Press the Start/Pause button.

The program starts.

The program progress is shown by elapsing dry time and animated icon  on LCD.


Changing program

To change a program which has been selected by mistake once the program has started, first turn the program selector to

 off and then reset the program.



tips and information

The program can no longer be changed directly once the program has started. If nevertheless there is an attempt to change the program on the program knob, the program progress display and the maintenance indicators flash. If an option button (excluding the Buzzer button) is pressed,  appears on the display. The drying program is not however affected by this (laundry protection).

Putting in extra items or taking items out before end of program

1. Open loading door.





warning


Laundry and drum can become hot. Risk of burns!

2. Load or remove laundry items.
3. Close loading door securely. Lock must audibly lock.
4. Press the Start/Pause button to continue the drying cycle.

Drying cycle complete / removing laundry

Once the drying cycle is complete, the display shows the anticrease icon and flashing

 as well as warning lamps: 

filter and  full tank. If the Buzzer button has been pressed, an acoustic signal sounds intermittently for about one minute.



tips and information

The drying cycles (except from the Wool program) are automatically followed by an anticrease phase which lasts around 30 minutes. The drum rotates at intervals during this phase. This keeps the laundry loose and free of creases. The laundry can be removed at any time during the anticrease phase. (The laundry should be taken out towards the end of the anticrease phase at the latest to prevent creases from forming.) If Long anticrease function has been selected, the anticrease phase is lengthened by 60 minutes.

1. Open door.
2. Before removing the laundry, remove fluff from the micro-fine filter. It is best to use a damp hand for this purpose. (See “Care and cleaning” chapter.)
3. Remove laundry.
4. Turn the program selector to off.
5. Close the door.



tips and information

Important! After each drying cycle:

- Clean the micro-fine filter and fine filter
- Drain the condensed water container (See chapter “Care and cleaning”).

Machine settings

Buzzer permanent on/off

The alarm is by default always off. To set permanent alarm on (off):

1. Turn the program selector to any program.
2. Press simultaneously the Dryness and Long anticrease buttons and hold down for approx. 5 seconds.

Adjusting the level of conductivity

Water contains a variable quantity of limestone and mineral salts of which quantities vary according to geographical locations thus varying its conductivity values.


Relevant variations of the conductivity of the water compared to those prefixed by the factory could slightly influence the residual moisture of the laundry at the end of the cycle. Your dryer allows you to regulate the sensitivity of the drying sensor based on conductivity values of the water.

1. Turn the program selector to any program.
2. Press simultaneously the Long anticrease and Start/Pause buttons and hold down for approximately 5 seconds.
3. Press the Start/Pause button until you set desired level:
 - low conductivity <300 µS/cm
 - medium conductivity 300-600 µS/cm
 - high conductivity >600 µS/cm
4. To memorise setting press simultaneously the Long anticrease (Long anticrease) and Start/Pause (Start/Pause) buttons or turn knob to off position

Care and cleaning

Cleaning lint filters

The filters collect all the lint and fluff which accumulates during drying. To ensure that the dryer works perfectly, the lint filters (micro-fine filter and fine strainer) must be cleaned after every drying cycle.


The warning lamp  lights to remind you of this operation at the end of each cycle.



caution

Never operate the dryer without lint filters or with damaged or blocked lint filters.


1. Open loading door
2. Use a damp hand to clean the micro-fine filter, which is built into the lower part of the loading aperture.

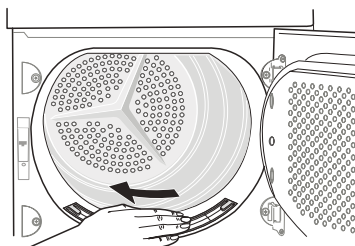


After a period of time, a patina due to detergent residue on laundry forms on the filters. When this occurs, clean the filters with warm water using a brush.

Remove the filter from the door pulling it out. (It can be positioned with the locating spur facing to the left or to the right).


After cleaning do not forget to put it back.

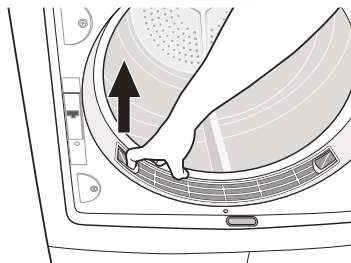

4. Push down the unlock button on the large mesh filter. The large mesh filter pops up.

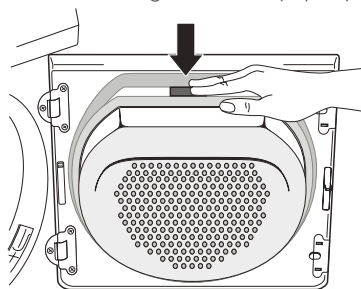

5. Take out fine filter.

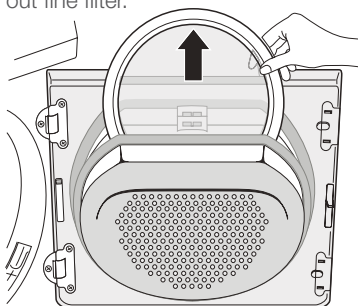

6. Remove the lint from fine filter. It is best to use a damp hand for this purpose.

3.




tips and information


Clean the entire filter area

The filter area does not have to be cleaned after every drying cycle, but should be checked regularly and cleaned of lint if necessary.

7. To do this, grip the top of the large mesh filter and pull it forwards until it comes loose from the two brackets.

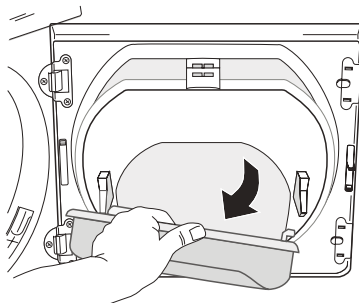

8. Remove lint from the entire filter area. It is best to use a vacuum cleaner for this purpose.
9. Press both journals of the large mesh filter into the brackets on the loading door until they snap into place.
10. Re-insert fine filter.
11. Press against the large mesh filter until it locks into the interlock.

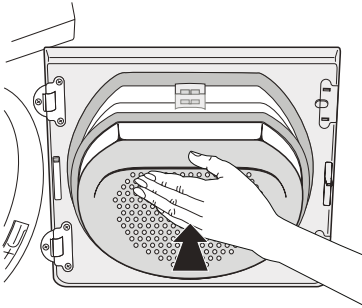


tips and information

If the fine filter is not fitted, the large mesh filter will not snap into place and the loading door cannot be closed.

Clean the door seal

Wipe the door seal with a damp cloth immediately after the drying cycle has finished.


Emptying the water reservoir

Empty the water reservoir after every drying cycle. If the water reservoir is full, an active program will stop automatically and the warning lamp  lights. In order to continue the program, the water reservoir must first be emptied.


warning

The condensed water is not suitable for drinking or for preparing foodstuffs.

1. Take out drawer **1** containing water reservoir completely and pull up the water reservoir's drainage pipe **2** as far as it will go.

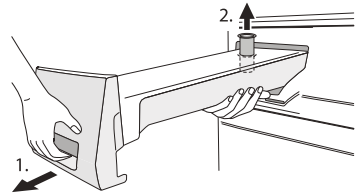

2. Pour the condensed water out into a basin or similar receptacle.

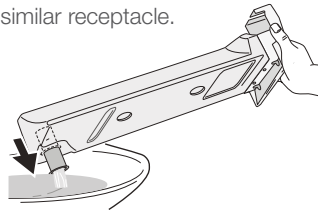

3. Slide drainage pipe in and refit the water reservoir.

If the program has been interrupted as a result of the water reservoir being full, press the Start/Pause button to continue the drying cycle.

tips and information

- The water reservoir has a volume of approximately 4 litres. This is sufficient for around 7 kg of laundry which has previously been spun at 1000 revolutions / minute.
- The condensed water can be used as distilled water, e.g. for steam ironing. However it must first be filtered (e.g. with a coffee filter) to remove any residue and small pieces of fluff.

Cleaning heat exchanger filter


If the warning lamp \Rightarrow lights, the heat exchange fluff filters in the base of the appliance must be cleaned. i.e. after each 5 drying cycles.

**tips and information**


To protect the heat pump from dirt, the dryer is fitted with a lint filter, which is located in the filter housing. Here, large amounts of lint build up over time, which affects the function of the appliance. Water can collect in the filter housing. Therefore it is normal for the heat exchange fluff filters to become wet.

**important**


- Never operate the dryer without the lint filters.
- Operating when the lint filter is clogged with lint can damage the dryer. This also increases energy consumption.
- A dirty heat pump can only be cleaned professionally and may be a costly process.

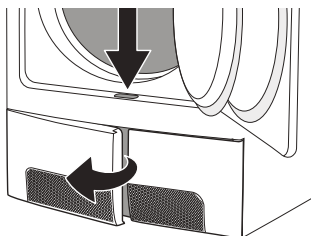



1. Open door in plinth: To do this, press the release button on the right and open the door in the plinth to the left.

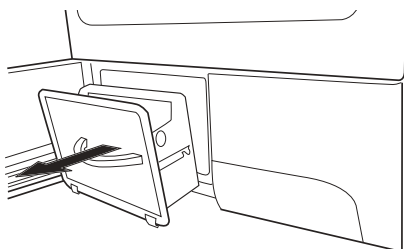


2. Pull the filter housing out of the base by the handle.

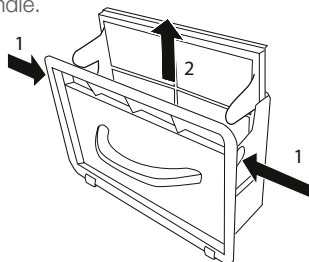

3. To clean the lint filter: remove filter from filter housing. To do this, press the pressure points on the sides and pull the filter frame up and out of the housing.

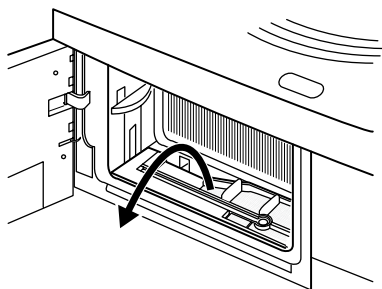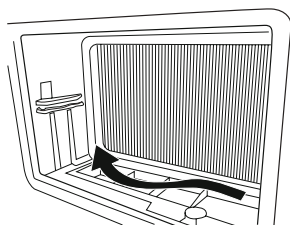

4. Remove lint from the lint filter with a damp hand. If necessary pull out and clean the filter with warm water using a wiper or brush. Clean the inside of the door, the lint filter and the rubber seals taking care to remove all lint.

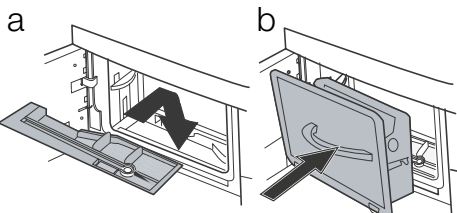


5. Insert the 1st lint filter into the base (a). Insert the 2nd lint filter into the filter housing (until it audibly locks) and slide it inside the filter chamber (b). Close the plinth door.



important

If the lint filter is not inserted in the filter housing, the filter housing will not slide back into the appliance base.

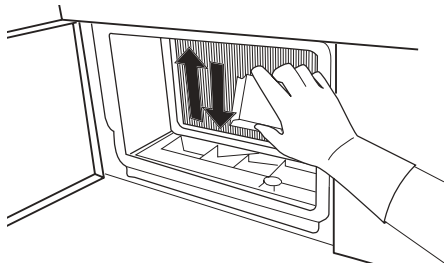

6. Clean filter approximately every 6 months, removing the fluff from the heat exchanger with the sponge supplied. When doing this, please use rubber gloves.



warning

Condenser fins may be sharp, so ensure you only use the sponge supplied. In addition, be careful not to apply too much pressure, ensure you do not cause the condenser fins to bend.



tips and information

The lint can be removed more easily if it is first dampened e.g. with a laundry dampener. It is best to use a vacuum cleaner for this purpose.

Do not use any sharp objects in this area.

Technical specifications

| | |
|--|--------------------|
| Height x width x depth | 850 x 600 x 580 mm |
| Drum volume | 108 litres |
| Depth with loading door open | 1090 mm |
| Height can be adjusted by | 15 mm |
| Weight when empty | approx. 60 kg |
| Loading volume (depends on program) ¹ | max. 7 kg |
| Voltage | 230-240 V |
| Required fuse | 6 Amp |
| Total power | 1350 W |
| Use | Domestic |
| Permissible ambient temperature | + 5°C to + 35°C |

Consumption values

The consumption values have been established under standard conditions. They may deviate when the machine is operated in domestic circumstances.

¹ Different loading volume data may be needed in some countries as a result of different measuring methods.

Replacing the light

Replacing the drum light

Only use a special bulb which is designed specially for dryers. The special bulb can be obtained from your local Customer Care Centre.

Important! When the appliance is switched on, the interior lighting switches itself off after 4 minutes when the door is open.



warning

Do not use standard bulbs! These develop too much heat and may damage the machine!

Before replacing the bulb, disconnect the mains plug; with a permanent connection: fully unscrew or deactivate the fuse.

1. Unscrew the cover above the bulb (this can be found directly behind the loading aperture, at the top; refer to “Product description” chapter.)
2. Replace the defective bulb.
3. Screw cover back down. Check the correct positioning of o-ring gasket before screwing back the door light cover. Do not operate the dryer if the o-ring is missing.



warning





 
For safety reasons, the cover must be screwed down tightly. If this is not done, the dryer must not be operated.

Troubleshooting

Troubleshooting by yourself

If, during operation, the error code **E...** plus number or letter) appears on the LCD: Switch the machine off and on again to reset the program.

Press the Start/Pause button. If the error is still displayed, please inform your local Customer Care Centre and quote the error code.

| Problem | Possible cause | Remedy |
|---|---|--|
| Dryer does not work. | Mains plug is not plugged in or fuse is not working correctly. | Plug in at mains socket. Check fuse in fuse box (domestic installation). |
| | Loading door is open. | Close loading door. |
| | Have you pressed the Start/Pause (Start/Pause) button? | Press the Start/Pause (Start/Pause) button again. |
| Drying results unsatisfactory. | Wrong program selected. | Select a different program the next time you dry (see "Program chart" chapter). |
| | Lint filters clogged. | Clean lint filters. |
| | Overloading of laundry. | Observe recommended loading volumes. |
| | Ventilation slots in base area covered up. | Uncover ventilation slots in base area. |
| | Residue on inside surface of drum or drum ribs. | Clean inside surface of drum and drum ribs. Make an adjustment using the Dryness function (see chapter "Daily use") |
| Loading door does not close. | Fine filter not in place and/or mesh filter not locked in place. | Install fine filter and/or snap large mesh filter into place. |
| When a button is pressed, E... appears on the LCD. | Drying protection. After the start of the program, the option can no longer be set. | Turn the program knob to  (Off). Set the program again. |
| Drum light does not work. | Program selector in  (Off) position. | Turn program selector to any program. |
| | Defective light bulb. | Replace light bulb (see next section). |
| Displayed program time changes erratically or stays unchanged for a long time. | Program time is corrected automatically depending on type and volume of laundry and level of dampness. | Automatic process; this is not a machine fault. |
| Program inactive,  (empty water tank) warning lamp lights. | The water reservoir is full. | Empty the water reservoir, then start program with Start/Pause (Start/Pause) button. |
| Drying cycle ends shortly after program starts. | Not enough washing loaded or washing loaded is too dry for selected program. | Select time program or higher drying level (e.g.  Strong instead of  Cupboard). |
| Drying cycle lasts an unusually long time. Note: After around 5 hours the drying cycle ends Automatically (see "Drying cycle complete"). | Lint filter clogged. | Clean lint filter. |
| | Load volume too big. | Reduce load volume. |
| | Laundry insufficiently spun. | Laundry must be adequately spun. |
| | Particularly high room temperature. Temporary switching off of the compressor to avoid overload. | Automatic process, there is no fault with the appliance. If possible, lower the room temperature. |

Service

In the event of technical faults, please first check whether you can remedy the problem yourself with the help of the operating instructions - see Troubleshooting chapter. If you were not able to remedy the problem yourself, please contact the Customer Care Department or one of our service partners. In order to be able to assist you quickly, we require the following information:

- Model description
- Product number (PNC)
- Serial number (S No. is on rating plate stuck to the product - to find it see chapter Product description))
 - Type of fault
- Any error messages displayed by the appliance

So that you have the necessary reference numbers from your appliance at hand, we recommend that you write them in here:

Model description:

PNC:

S No:

Important Notice

Before calling a Service Technician please check carefully the operating instructions, and the warranty terms and conditions.

| | | |
|--|---|--|
| <p>FOR SERVICE or to find the address of your nearest state service centre in Australia PLEASE CALL 13 13 49 For the cost of a local call (Australia only)</p> | <p>SERVICE AUSTRALIA  Electrolux ELECTROLUX HOME PRODUCTS www.electrolux.com.au</p> | <p>FOR SPARE PARTS or to find the address of your nearest state spare parts centre in Australia PLEASE CALL 13 13 50 For the cost of a local call (Australia only)</p> |
| <p>FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand FREE CALL 0800 10 66 10 (New Zealand only)</p> | <p>SERVICE NEW ZEALAND  Electrolux ELECTROLUX HOME PRODUCTS www.electrolux.co.nz</p> | <p>FOR SPARE PARTS or to find the address of your nearest state spare parts centre in New Zealand FREE CALL 0800 10 66 20 (New Zealand only)</p> |

Electrolux Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND
APPLIANCE: CONDENSER DRYER

This document sets out the terms and conditions of product warranties for Electrolux branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Electrolux product.

General Terms and Conditions

1. In this warranty
 - (a) 'Electrolux' means Electrolux Home Products Pty Ltd ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand;
 - (b) 'Appliance' means any Electrolux product purchased by you accompanied by this document;
 - (c) 'Warranty Period' means
 - (i) where you use the Appliance for personal, domestic or household purposes in Australia the period of '24' months and in New Zealand the period of '24' months;
 - (ii) where you use the Appliance for commercial purposes, in Australia the period of '3' months and in New Zealand the period of '3' months, (if the period stated is 0 months you are not covered by this product warranty) following the date of original purchase of the Appliance;
 - (d) 'you' means the purchaser of the Appliance not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. Electrolux warrants that, when dispatched from an Electrolux warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.
4. During the Warranty Period Electrolux or its Authorised Service Centre will, at no extra charge if your appliance is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use reconditioned parts to repair your appliance. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
5. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
6. Where you are within an Electrolux service area, this warranty covers the cost of transport of the Appliance to and from Authorised Service Centres of Electrolux and travelling costs for representatives of the Authorised Service Centre to and from your home or business. If you are outside an Electrolux service area, you will bear these costs. For information about whether you are within an Electrolux service area, please phone 13 13 49 in Australia, or 0800 10 66 10 in New Zealand.
7. Proof of purchase is required before you can make a claim under this warranty.
8. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following

situations (which are not exhaustive):

- (a) The Appliance is damaged by:
 - (i) accident
 - (ii) misuse or abuse, including failure to properly maintain or service
 - (iii) normal wear and tear
 - (iv) power surges, electrical storm damage or incorrect power supply
 - (v) incomplete or improper installation
 - (vi) incorrect, improper or inappropriate operation
 - (vii) insect or vermin infestation.
 - (b) The Appliance is modified without authority from Electrolux in writing.
 - (c) The Appliance's serial number or warranty seal has been removed or defaced.
 - (d) The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.
9. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the Australian State where the Appliance was purchased or the law applicable in New Zealand if the Appliance was purchased in New Zealand. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

Limitation of Liability

10. To the extent permitted by law:
 - (a) Electrolux excludes all warranties other than as contained in this document;
 - (b) Electrolux shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.
11. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so):
 - (a) in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or
 - (b) in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied; and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Electrolux Home Products Australia

telephone: 1300 363 640
fax: 1800 350 067
email: customercare@electrolux.com.au
web: www.electrolux.com.au

Electrolux Home Products New Zealand

phone: 09 573 2384
fax: 09 573 2221
email: customercare@electrolux.co.nz
web: www.electrolux.co.nz

The Thoughtful Design Innovator.

Do you remember the last time you opened a gift that made you say "Oh! How did you know? That's exactly what I wanted!" That's the kind of feeling that the designers at Electrolux seek to evoke in everyone who chooses or uses one of our products. We devote time, knowledge, and a great deal of thought to anticipating and creating the kind of appliances that our customers really need and want.

This kind of thoughtful care means innovating with insight. Not design for design's sake, but design for the user's sake. For us, thoughtful design means making appliances easier to use and tasks more enjoyable to perform, freeing our customers to experience that ultimate 21st century luxury, ease of mind. Our aim is to make this ease of mind more available to more people in more parts of their everyday lives, all over the world. So when we say we're thinking of you, you know we mean just that.

The "Thinking of you" promise from Electrolux goes beyond meeting the needs of today's consumers. It also means we're committed to making appliances safe for the environment—now and for future generations.

Electrolux. Thinking of you.

Share more of our thinking at www.electrolux.com.au or www.electrolux.co.nz