

Breville

Emporia

Cordfree Kettle

Instructions for use



Model BKE400

	Page
Breville recommends safety first	4
Know your Breville Emporia Cordfree Kettle	5
Operating your Breville Emporia Cordfree Kettle	6
Care and cleaning	8

The background of the entire image is a close-up, high-magnification shot of water bubbles. The bubbles are of various sizes, from small, delicate spheres to larger, more complex, and elongated structures. They are densely packed in some areas and more sparse in others, creating a dynamic and textured visual field. The lighting is soft and diffused, highlighting the refractive properties of the water and the thin, iridescent films that form the walls of the bubbles. The overall color palette is a range of blues, from light, airy tones to deeper, more saturated hues, giving the image a fresh and clean aesthetic.

Congratulations

on the purchase of your new Breville Emporia Cordfree Kettle

Breville recommends safety first

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:


Read all instructions before operating and save for future reference

- This appliance has been designed specifically for the purpose of boiling drinking quality water. Under no circumstances should this product be used to boil other liquids or foodstuffs.
- Always use the appliance on a dry, level surface.
- Do not touch hot surfaces. Use handle for lifting and carrying the appliance.
- Never immerse the kettle base, switch area, power base or cord in water, or allow moisture to come in contact with these parts.
- Keep clear of walls, curtains and other heat or steam sensitive materials. Minimum 200mm distance.
- The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
- Do not place on or near a hot gas burner, electric element, or in a heated oven.
- This appliance is intended for household use only. Do not use this appliance for other than its intended use.
- Do not operate the Keep Warm setting for longer than 2 hours.
- Ensure Keep Warm setting is switched off while boiling.
- Ensure kettle is more than half full when Keep Warm setting is activated.
- Do not leave the kettle unattended when in use or when the Keep Warm setting has been activated.
- Do not operate the kettle on an inclined plane.
- Do not move the kettle while it is switched on.
- Do not use outdoors.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- Regularly inspect the supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire appliance to the nearest authorised Breville service centre for examination, replacement or repair.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the kettle. See your electrician for professional advice.



THIS KETTLE SHOULD BE USED WITH A RESIDUAL CURRENT DEVICE (SAFETY SWITCH) TO LESSEN THE RISK OF SCALDING OR OTHER INJURY FROM HOT WATER THAT MAY BE EJECTED IF THE HEATING ELEMENT ERUPTS. DISREGARD THIS POINT IF YOUR HOME IS FITTED WITH A RESIDUAL CURRENT DEVICE (SAFETY SWITCH).

Know your Breville Emporia Cordfree Kettle

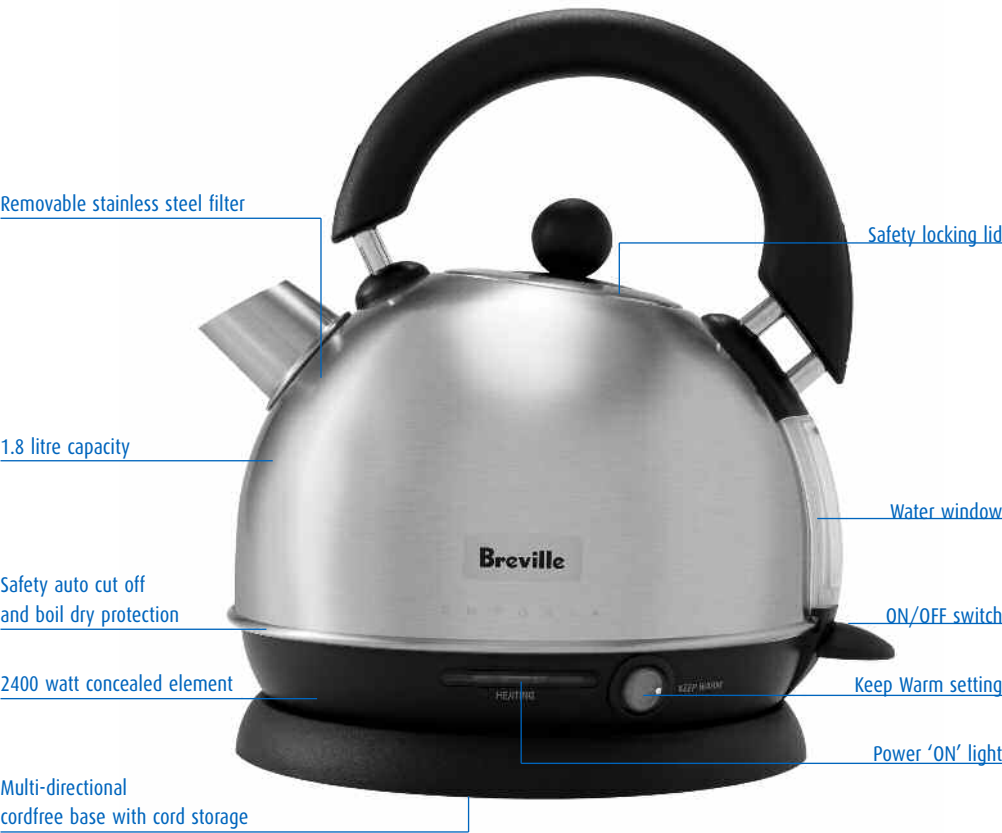

Keep Warm setting

The Keep Warm Setting ensures hot water is always on hand and shortens the re-boil time. Perfect for home or office.

Operating your Breville Emporia Cordfree Kettle

Before first use

Remove any promotional material attached to your kettle. It is recommended that before the first use, the kettle is filled to the maximum level, boiled and the water discarded. Your kettle will only operate when positioned on the power base with the ON/OFF switch in the 'ON' position. The kettle will automatically switch 'OFF' once the water has boiled.

Operation of your kettle

1. To fill the kettle, remove it from the power base and open the lid by pulling up. Fill with the desired amount of water up to the maximum mark on the water window.



2. Ensure that the lid is locked firmly in place. Place the kettle firmly onto the power base. Plug the power cord into 230/240V power point and switch 'ON'.

3. Press the ON/OFF switch to the 'ON' position. The heating light will illuminate.
4. The kettle will automatically switch 'OFF' once the water has boiled. Lift the kettle from the power base and pour the water. Take care to hold the kettle level especially when filled to the maximum level. To re-boil it may be necessary to wait for a few seconds to allow the control to reset. The kettle may be stored on its power base when not in use. The power point should be switched off and the appliance plug unplugged from the power point when not in use.

Always fill the kettle between the minimum (MIN) and the maximum (MAX) marks on the exterior of the kettle. Too little water will result in the kettle switching 'OFF' before the water has boiled. Filling above the maximum mark on the exterior of the kettle may result in boiling water splashing out from the kettle.

This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly.

Note



THIS APPLIANCE IS DESIGNED FOR THE BOILING OF DRINKING QUALITY WATER ONLY, NEVER USE IT TO HEAT OR BOIL ANY OTHER LIQUIDS OR FOODSTUFFS. THE LID SHOULD ALWAYS BE FIRMLY IN PLACE AND LOCKED CLOSED BEFORE USE.

Keep Warm Setting

1. To use the Keep Warm setting, fill the kettle and switch on as normal.
2. Once the kettle has boiled, depress the Keep Warm button to the right to activate. The orange 'KEEP WARM' light will illuminate.
3. The Keep Warm setting will then keep the water in the kettle at near to boiling point.
4. To reboil, press the ON/OFF switch to the 'ON' position. The kettle will reboil in a few seconds.

Safety boil dry protection

The kettle is fitted with a safety device, which protects against overheating should the appliance be operated with insufficient water. If this occurs the kettle will stop heating. Switch 'OFF' at the power point and allow kettle to cool before refilling. The safety device will automatically reset when the kettle has cooled down.

For additional safety your kettle is fitted with an additional thermal cut out. In the event of overheating, the kettle will automatically shut down to prevent further damage. Should this occur, take your kettle to an authorised Breville Service Centre.

Care and cleaning

Always switch off at the power outlet and then unplug the appliance from the power outlet before cleaning.

Removable filter

The Emporia Cordfree Kettle features a removable mesh filter to filter out scale deposits for clearer water. To remove the scale deposits, remove the filter by lifting up and out of the kettle. The filter can be cleaned by running under hot water and rubbing with a cleaning cloth or brush. To replace filter, simply slide the filter down into the slot behind the spout of the kettle.

The concealed element is made from high quality stainless steel. Any brown stains appearing are the result of mineral deposits and are not rust.

Note

Removal of mineral deposits

Mineral deposits in tap water cause the kettle interior and water gauge to discolour over time.

This may be removed by using a proprietary kettle descaler, which is available from most leading supermarkets, department stores and hardware stores.

Alternatively:

1. Fill the kettle until $\frac{2}{3}$ full with 1 part vinegar and 2 parts water. Boil and allow to stand overnight.
2. Empty the solution from the kettle. Fill the kettle with clean water, bring to the boil and discard water. Repeat and the kettle will be ready for use.

To clean the exterior

The outside of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth.

Do not use chemical, steel wool or abrasive cleaners to clean the outside of the kettle.

Note




NEVER IMMERSE THE KETTLE BASE, SWITCH AREA, POWER BASE OR POWER SUPPLY CORD IN WATER, OR ALLOW MOISTURE TO COME IN CONTACT WITH THESE PARTS.

Notes

Notes

Notes

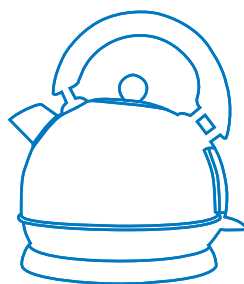

Breville is a registered trademark of Breville Pty. Ltd.
ABN 98 000 092 928

Breville Customer Service Centre Australian Customers



Breville Customer Service Centre
Locked Bag 2000
Botany NSW 2019
AUSTRALIA



Customer Service: 1300 139 798

Fax (02) 9384 9601

Email Customer Service: askus@breville.com.au

New Zealand Customers



Breville Customer Service Centre
Private Bag 94411
Greenmount
Auckland, New Zealand



Customer Service: 09 271 3980

Fax 0800 288 513

Email Customer Service: askus@breville.com.au



© Copyright. Breville Pty. Ltd. 2005

Emporia is a trademark of Breville Pty. Ltd.

Due to continual improvements in design or otherwise, the product you purchase may differ slightly from the one illustrated in this booklet.