 


# Lemair

## User Instruction

**Upright Freezer**

 
**MODEL NO. FR-90VN**

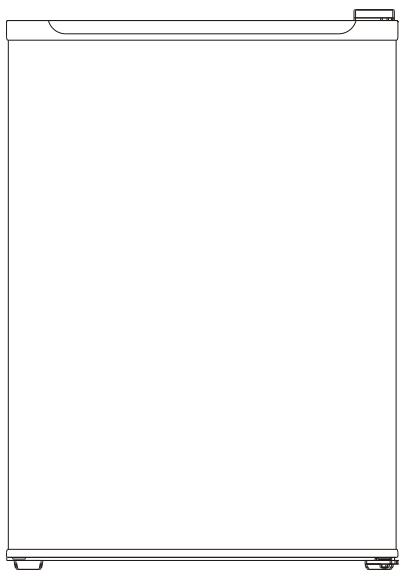


Content	
1.Parts and Features	page 2
2.Instructions for Installation	page 3
3.Cautions for Safety	page 4
4.Important Safeguards	page 5~7
5.Operation	page 8
6.Cleaning and Maintenance	page 9
7. Reversing the Door	page 10~11
8.Troubleshooting	page 12
9.Warnings and Important Disposal Instructions	page 13
10.R600a Refrigerant	page 14
11. Product Information	page 14
12.Warranty Card	page 15~16

---

## Parts and Features :

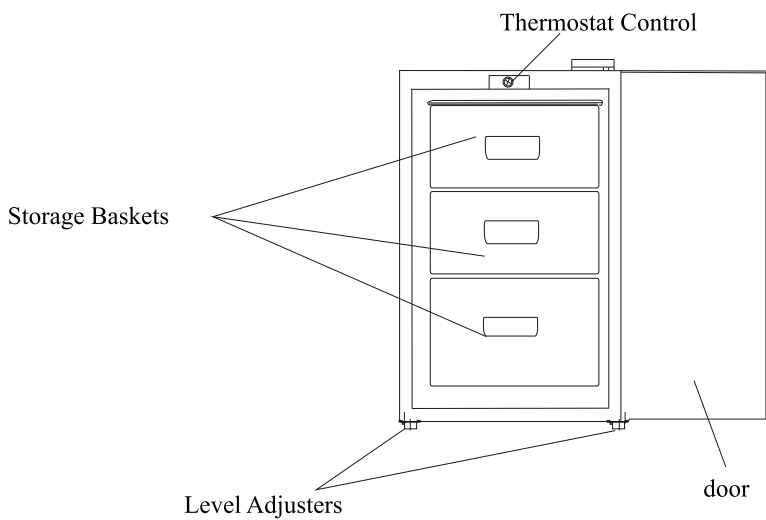


## Thermostat Control

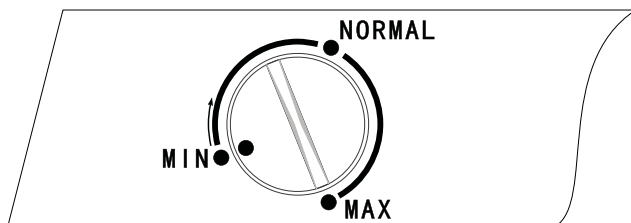 


---

## Instructions for Installation :

 
1. Do not tilt the appliance more than 45°.

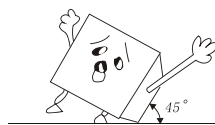

 
2. To ensure the cabinet does not become damaged, do not apply force to any part of the appliance such as the condenser, the door and its handle. Damage to the cabinet will result in poor performance.

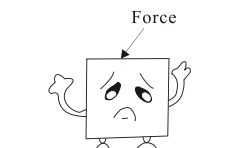

 3. For optimum performance ensure correct ventilation space around the appliance.

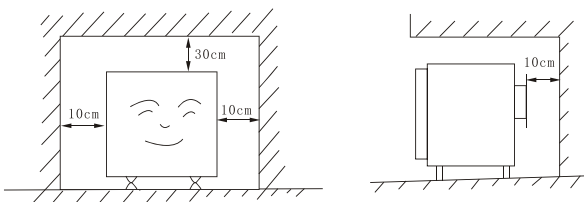

 4. Avoid direct sunlight, heat sources and very moist or humid places. Do not install this appliance near flammable, combustible or explosive materials.

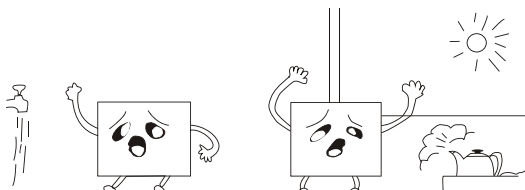

5. Install the appliance on a strong, level floor. Do not install on soft materials such as foam or plastic.
6. The appliance should be left for 2 hours after installation before it is turned on, in order to allow the refrigerant to settle.
7. Avoid installing the appliance in very cold conditions as the performance of the appliance will be impaired.

---

## Cautions for Safety:

- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses
  - By clients in hotels, motels and other residential type environments;
  - Bed and Breakfast type environments

NOTE: If you wish to limit the use of the appliance to less than the above, this must be clearly stated in the instructions.

---

## Important Safeguards

- Carefully read this instruction manual before using appliance.
- Keep appliance out of reach of young children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Ensure children and babies do not play with plastic bags or any packaging materials.
- This appliance is heavy. Care should be taken when moving it. Do not pull or push using the door. Turn off and unplug before moving.
- Do not attempt to modify this product in any way.
- Whenever possible, the back of the appliance should be close to a wall but leaving the required distance for ventilation as stated in these instructions.
- Do not plug into the power socket before set up is completed. The appliance should be left to stand for 2 hours after installation and before turning on to allow the refrigerant to settle.
- **VERY IMPORTANT:**
  - Ensure that appliance does not get wet (water splashes etc.).
  - Do not use appliance with wet hands.
  - Do not immerse appliance in water or other liquids or use near sinks, baths or showers.
- Always operate the appliance from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Position the power supply lead properly so that it will not be walked on, pinched by items placed on or against it or have the appliance resting on it.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - farm houses and by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments
  - catering and similar non-retail applications

---

**WARNING:** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

**WARNING:** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

**WARNING:** Do not damage the refrigerant circuit.

**WARNING:** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

- Do not use appliance if it has been dropped or any part of appliance (including cord or plug) has been damaged. Take appliance to your nearest authorised service centre or qualified dealer for inspection or repair.
- Use only accessories recommended or supplied by an authorised service centre or qualified dealer. The use of accessories not intended for use with this appliance may cause injuries to the user or damage to the appliance.
- Do not install the unit on other appliances, on uneven surfaces or where it could be subject to: heat sources (e.g. radiators or stoves), direct sunlight, excessive dust or mechanical vibrations.
- Appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- Do not operate appliance underneath or near flammable or combustible materials (e.g. curtains).
- Unplug this appliance before cleaning or storing or when unused for long periods of time.
- Any type of servicing, apart from ordinary cleaning, must be carried out by an authorised service centre or qualified dealer. There are no user serviceable parts in this appliance.
- If this appliance is used by a third party, please supply the instruction manual with it.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- To fix stably, the appliance must be placed on a flat and solid surface. It should not be laid on any soft material.
- When positioned or if moving the appliance ensure that it is not set horizontally or declined more than 45° or turned upside down.
- Do not use the unit in very hot or humid places, such as bathrooms or under direct sunlight.
- Close the appliance door immediately after putting in items so the inside temperature will not rise dramatically.
- It is not recommended to use this appliance with an extension cord or power board.
- Do not place any other appliance on top of the appliance.

- 
- This appliance is designed for domestic use only, specifically for the storage of edible foodstuffs only.
  - This product has not been designed for any uses other than those specified in this instruction Manual.
  - An empty fridge can be a dangerous attraction to children. If disposing of the fridge, remove gaskets, latches, lids or the entire door from your unused appliance, or take other action to ensure the fridge is harmless.\

Contact your local council for proper instruction for disposing of the unused appliance.

- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.



**Caution: Risk of Fire** The Refrigerant Gas used in this appliance is flammable.

 
- No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling of appliance.
- This product has not been designed for any uses other than those specified in this booklet



---

## Operation :

1. When operating the appliance for the first time, set the thermostat dial at normal, connect to the electricity and turn it on without loading any food. Wait for the appliance to become cold, usually this takes 2 or 3 hours. Then set the thermostat dial to the desired setting and place foods into the appliance.
2. The temperature of the appliance can be adjusted by turning the thermostatic dial. Setting of the thermostat dial at normal is the most suitable for general operation. Max is the coldest setting.
3. Do not overload the appliance. Where possible open the door less often in order to maintain the temperature of the appliance and save electricity.

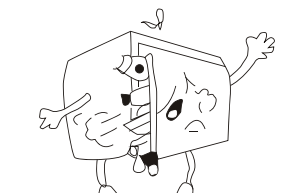

4. Defrost the freezer compartment whenever the layer of frost on the surface reaches 3 or 4 mm. When defrosting, remove all foods, unplug the appliance and open the door. After the frost has melted, discard the water and dry the interior of the appliance. The appliance can then be restarted.

## Cautions :

- When defrosting, never use any sharp or metallic objects to remove the frost / ice on the surface of the evaporator as this will damage the evaporator.
- Do not store bottled beverages in the freezer as liquids may expand during freezing causing the bottle to break and damage the appliance.
- If the power supply is turned off for any reason, wait ten minutes before switching the appliance on again.

 
---

## Cleaning and Maintenance:

1. When cleaning the appliance, first disconnect the appliance from the power supply by removing the plug. Wipe the appliance carefully with a cloth and neutral cleaning agent, then wipe it clean with fresh water.



2. Never use acids, chemical solutions, thinners or the like to clean the appliance because they may damage the paint work and plastic components of the appliance.

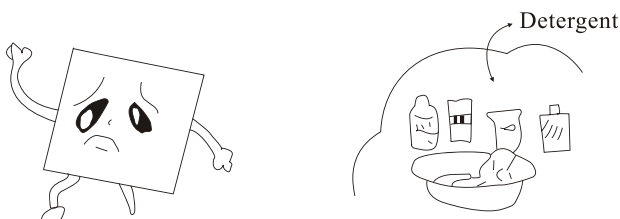

---


## Reversing the Door:

The appliance has the capability of opening the door from either the left or the right side.


The unit is delivered to you with the door opening from the left side. To change the opening direction, please follow these instructions.

**Note:** Before reversing the door, unplug the appliance from the mains or disconnect the electrical power supply.

1. Remove the upper hinge cover (6) first.
2. Remove the two screws (1) that hold the upper hinge (5) (right side) to the frame. Take away the upper hinge (5).
3. Lift the door and place it on a padded surface to prevent scratching it.
4. Remove the two screws (8) that hold the lower hinge (2) and then remove the hinges (2).
5. Remove the left front leg (4) and transfer it to the right side.
6. Remove the hole cover plate(7) to the right side.
7. Before placing this lower hinge (2), remove the bolt-pin (9) and reverse the direction of the lower hinge (2). Then install the lower hinge (2) onto the left side of the lower frame with two screws (8).
8. Insert the bolt-pin (9) to the lower hinge (2).
9. Set the door into place making sure the door seals at the lower hinge (2).
10. Hold the door in the closed position and secure the top hinges (5) to the top frame of the left side with the two screws (1).
- Do not over tighten the two screws. Only tighten until the top of the door is levelled with the counter top.
11. Install the upper hinge cover (6) on the upper hinge.

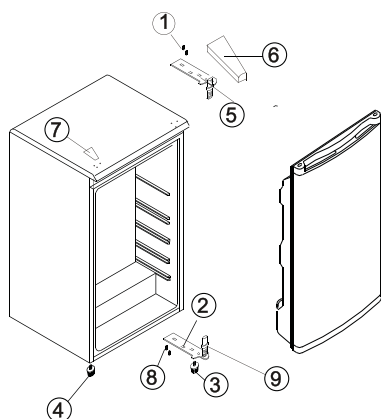 

**FIGURE 1**  
Door opening from left side

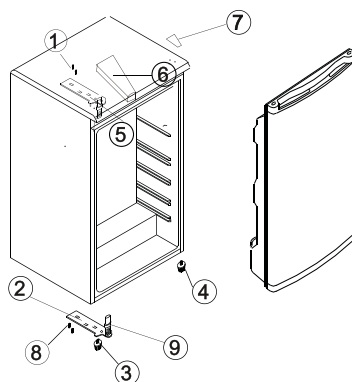 

**FIGURE 2**  
Door opening from right side

---

## Troubleshooting:

1. When the appliance does not operate ensure that:
  - The electric power is supplied and the voltage is normal.
  - The fuse or circuit breaker is not blown out or tripped.
  - The power plug is plugged in firmly in the outlet socket.
2. If the appliance is not cool enough ensure that:
  - The thermostat is at the correct setting.
  - There is enough space around the appliance.
  - The doors are not opened too frequently and for too long.
  - The appliance is not overloaded and hot food has not been placed in the appliance.
  - The appliance is not in direct sunlight or placed near a heat source.
3. When the appliance operates too noisily ensure that:
  - The appliance is properly leveled.
  - The appliance is not touching objects around it.
  - The containers or solid packages stored inside are not touching each other.

## Note:

- During periods of high humidity, moisture may form on the surfaces of the appliance. This is not a fault and maybe wiped away.
- If after checking the above suggestions your appliance is still not functioning properly, please contact Customer Services without delay.

---

## Warnings:

- \* This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- \* Children should be supervised to ensure that they do not play with the appliance.
- \* If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- \* Keep ventilation openings, in the appliance enclosure or in the built-in structure clear of obstruction.
- \* Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- \* Do not damage the refrigerant circuit.
- \* Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

## Important Disposal Instructions:



As a responsible retailer we care about the environment.

As such we urge you to follow the correct disposal procedure for your product and packaging materials, this will help conserve natural resources and ensure that it is recycled in a manner that protects health and the environment.

You must dispose of this product and its packaging according to local laws and regulations. Because this product contains electronic components and sometimes batteries, the product and its accessories must be disposed of separately from household waste when the product reaches its end of life.

Contact your local authority to learn about disposal and recycling.

The product should be taken to your local collection point for recycling.

Remove the plug and ensure that any locks or catches are removed, to prevent young children being trapped inside.

---

## R600a Refrigerant:

This appliance may contain a small quantity of environmentally friendly, but flammable, non-synthetic R600a refrigerant:

- \* Upon opening and installing your product, check that the tubing of the refrigerant circuit is not damaged during transportation.
- \* Leaking refrigerant may cause eye injuries or ignite.
- \* The room for installing appliance must be at least 1m per 8g of refrigerant.  
The amount of refrigerant in the appliance can be found on the rating plate the back of the unit.
- \* Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
- \* Do not damage the refrigeration circuit.

If you are unsure of the refrigerant type check the rating plate

## Product Information:

- \* Model No.: FR-90VN
- \* Product dimension: W500 × D560 × H840 mm

[www.hapl.com.au](http://www.hapl.com.au)

# HOME APPLIANCES

Congratulations on your new purchase and thank you  
for choosing a brand supported by Home Appliances Pty Ltd.



Our friendly Customer Care team will take care of your every enquiry.  
Please ring 1800 444 357 or email [customercare@hapl.com.au](mailto:customercare@hapl.com.au)

Please be aware of the terms and conditions following.



# FOR AUSTRALIA ONLY

## WARRANTY TERMS & CONDITIONS

**This warranty is in addition to your normal statutory entitlements and specific legal rights. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law as prescribed and set out in regulation 90 of the Competition and Consumer Act 2010.**

1 Home Appliances Pty Limited warrants this appliance to the original purchaser against defective materials and workmanship for a period of **24 months** of ownership, that any part with defective material be repaired free of charge, provided that all service work is carried out by Home Appliances Pty Limited or nearest appointed service agent.

### **3 months warranty (Non Domestic USE)**

Regardless of the product type, warranty of appliances installed and operated in a non domestic installation, such as an office or factory etc., is limited to Three (3) Months from date of purchase.

**NOTE:** Portable Appliances such as Benchtop cook tops are **NOT** covered for In House servicing, call Customer Care on **1800 444 357** to discuss servicing of this type of appliance.

2 If you are located **25 kilometres** outside a recognised Home Appliances Pty Limited service area the purchaser must cover the cost of sending the appliance to the service centre or any extra travel cost incurred by the technician in order to service the appliance.

3 If there is a defect in the materials or workmanship during the period of this warranty, Home Appliances Pty Limited will, at its discretion and subject to the following terms and conditions, repair or replace free of charge the component or appliance. Replacement of the appliance under the terms of this warranty does not give right to extension or a new beginning of the period of warranty.

4 Home Appliances Pty Limited is not liable for any other loss other than the appliance itself.

5 This warranty does not cover the following circumstances:

- (i) An act or acts of God, any natural occurrence or other circumstances not within the control of Home Appliances Pty Limited (such as fire, storm or water damage).
- (ii) An attempt by any person (other than an employee or authorised service agent of Home Appliances Pty Limited to repair or modify the appliance.
- (iii) Where the rating plate has been removed or any details on that plate have been rendered illegible.
- (iv)\*If the appliances have been installed, operated or maintained in a manner that is not in accordance with the instructions supplied by Home Appliances Pty Limited.

(v) If product failure is the result of connection to a power supply that does not correspond to that shown on the ratings plate or if the power supply is inadequate or faulty.

(vi) Normal wear and tear, misuse or damage to the appliance or use of the appliance in a manner for which it was not intended.

(vii) Failure of electrical components due to power surges or outages.

(viii) Home Appliances Pty Limited will not be obliged to comply with its obligations under this Warranty until you have paid the full purchase price for the appliances.

\* For Washing machines this includes removal of packaging material and rear packing bolts where applicable.

6 The warranty does not extend to cover:

- (i) Discoloured burners or trivets on gas cooktops or chrome surrounds on electric cooktops
- (ii) Discolouration caused by steam, heat or venting during normal use
- (iii) Plastic or enamel components
- (iv) Light globes, filters or any consumables
- (v) Insect or vermin infestation
- (vi) Corrosion where the product is located within a corrosive environment

7 Home Appliances Pty Limited excludes all warranties and conditions that may be implied into this Warranty or the Contract for Supply and limits its liability for a breach of any implied condition or warranty that cannot be excluded to the greater of (at Home Appliances Pty Limited option):

- (i) For goods, repairing or replacing those goods or paying for the cost of those goods repaired or replaced; and
- (ii) For services, resupplying the services or paying for the cost of having those services resupplied.

8 Proof of purchase will be required for the validation of all warranty claims.

9 Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any reasonably foreseeable loss or damage. You are also entitled to have the goods repaired if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

### **Built-In & Freestanding Appliances**

Access must be granted within normal working hours and our Service Agents must have easy access to these appliances. Any charges will be the responsibility of the purchaser where the service technician cannot obtain easy access to remove the appliances for inspection prior to repair.

## PROOF OF PURCHASE

Proof of purchase will be required for the validation of all warranty claims. Documents suitable for proof of purchase include, but are not limited to the following:

- Delivery dockets;
- Retailer or supplier invoices;
- Kitchen cabinet invoices that incorporate appliances;
- Credit card statements where the purchase of the appliances are clearly depicted.

The inability to provide proof of purchase will lead to the claim being treated as a service call with labour and parts costs being born by the claimant. It is recommended to attach any supporting documentation to this warranty card and keep in a safe place for future reference.

**NOTE:** There is no need to return this or any other warranty card to Home Appliances Pty Limited.

Proof of purchase is the only requirement for warranty claim, please keep a copy of the purchase receipt with this warranty card.