

DWAU149XO smeg underbench dishwasher



ORBITAL WASH SYSTEM

Smeg's orbital wash system has two spray arms which operate simultaneously in opposite directions to ensure water is evenly distributed throughout the inner cavity for a perfect wash.

DELAY START TIMER

Delay Start option allows for up to 24-hours delay start — allowing you to take advantage of off-peak energy usage times.

TOTAL AQUA STOP

Aquastop shuts off the water supply when more than the required amount of water passes, to prevent leakage.



Delay



Flexi Tabs



SAVE ON ENERGY AND PROTECT THE ENVIRONMENT

- always try to run the dishwasher full loaded
- do not wash dishes in running water
- use the washing program that is most appropriate for each time of load
- do not carry out any preliminary rinsing
- if available, connect the dishwasher to a hot water supply up to 60°C

The phosphates contained in dishwasher detergents are harmful to the environment. To avoid using excessive amounts of detergent and to save on electricity, observe the following:


- separate the more delicate items from dishes that are more resistant to aggressive detergents and high temperatures;
- do not pour the detergent directly onto the dishes.






size	600mmW x 820mmH x 570mmD
capacity	14 placesettings
finish	STAINLESS STEEL CONTROL PANEL & DOOR*
programs	five — soak,normal ECO 45°C, ECO 50°C, intensive 65°C, Ultraclean
baskets	grey with light blue handles and plastic inserts upper: 3-level adjustment, EasyGlide lower: completely foldable racks with glass holder*
wash system	orbital upper spray arm six wash directions
drying	natural condenser
timer	3-6-9 hour delay timer
filtration	5-stage water filtration system
drying	natural condenser
safety	TOTAL AQUA STOP LED on/off light end-cycle acoustic indicator self-balancing hinges
noise	45 dBA
water	12.6 litres
energy	1.9 kWh, 10 amps

*** EXCLUSIVE TO THIS MODEL**

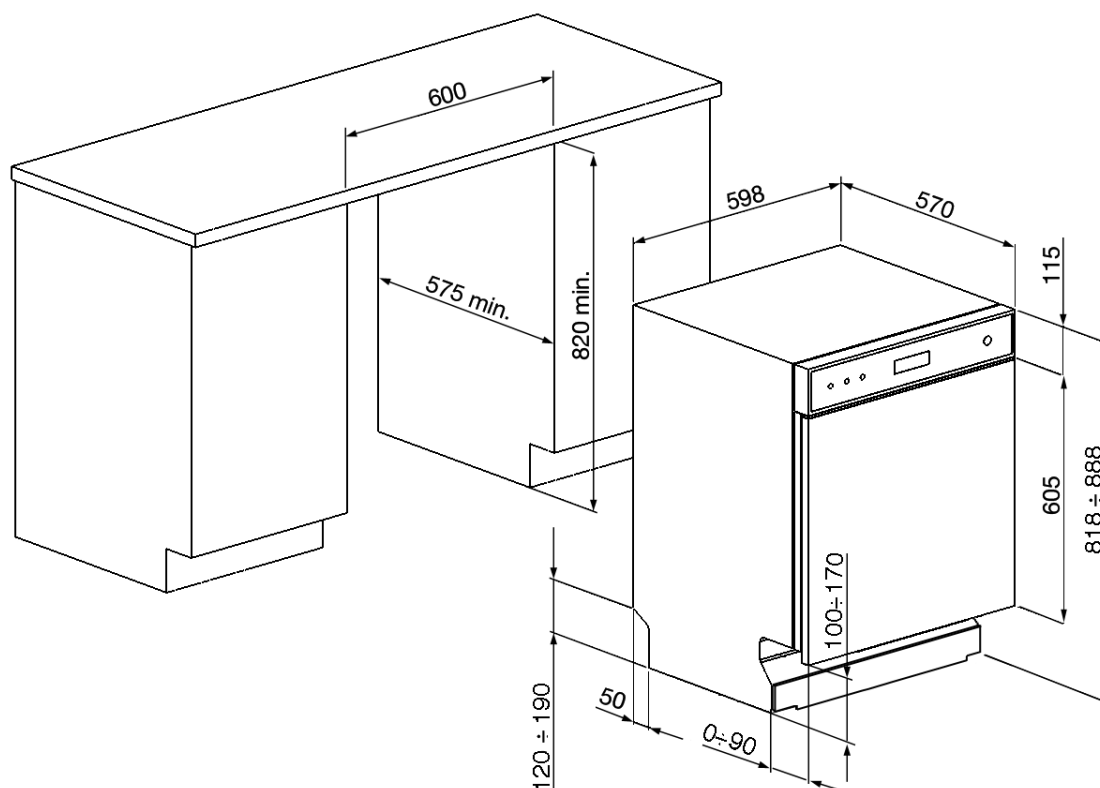

DWAU149XO smeg underbench dishwasher

 

PROGRAM	LOAD	PROGRAM PROGRESS	DURATION	CONSUMPTION	
			minutes	water litres	power kWh
SOAK 	pans and dishes awaiting completion of load	cold prewash	15	3.5	0.02
NORMAL ECO 	crocery and cutlery normally soiled	cold prewash wash at 45°C rinse at 45°C dry	147	12.6	0.71
ECO 	dishes with normal dirt, even with dried-on residue	cold prewash wash at 55°C cold rinse rinse at 70°C dry	100	11	1.3
INTENSIVE 	dishes with normal dirt, even with dried-on residue	cold prewash wash at 65°C cold rinse rinse at 70°C dry	115	13.5	1.35
ULTRACLEAN 	very dirty pans and dishes, even with dried-on residue	hot prewash wash at 70°C cold rinse rinse at 70°C dry	150	15.5	1.70