

*Sunbeam*

pure elements

toaster



## Instruction Booklet

Please read these instructions carefully and retain for future reference

TA8200/B

# Contents

Sunbeam's Safety Precautions	1
Features of your Toaster	3
Using your Toaster	5
Care and Cleaning	7

## Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich daß die obenstehenden Sicherheitsmaßnahmen Verstanden werden

Βεβαιώνετε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری بکنید کہ احتیاط‌های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

# Sunbeam's Safety Precautions

## SAFETY PRECAUTIONS FOR YOUR SUNBEAM PURE ELEMENTS TOASTER.

- Do not place any objects such as toast, bread or similar on top of your toaster when in use.
- Operate the toaster on a flat level surface.
- Use your toaster well away from walls, curtains or other combustible materials.
- Do not leave your toaster unattended when in use.
- Clean crumb tray regularly.
- Do not allow crumbs to accumulate in the crumb tray.
- Do not toast stale bread, rice crackers or similar, on high settings as they may catch fire.
- WARNING: Never attempt to extract jammed toast, crumpets or muffins with a knife or any other object, as contact with live element may cause electrocution.

**Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
- For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit [www.sunbeam.com.au](http://www.sunbeam.com.au) or contact the Sunbeam Consumer Service Line. Ensure the above safety precautions are understood.

# Features of your Sunbeam Pure Elements™ Toaster

## Extra wide & deep bread slots

Enables you to toast a large variety of breads, regardless of thickness.

## Self-centring bread slots

Whether you are toasting thick or thin bread, your bread will always be held in the centre of the slot to ensure even toasting.

## Cool touch exterior

 
Remains cool to touch preventing burns and plastic wrappers clinging to the side of your toaster.

 
## Removable crumb tray

Pulls out from underneath your toaster for easy cleaning.

## Cord storage

The cord can be wrapped underneath the toaster for safe and convenient storage.

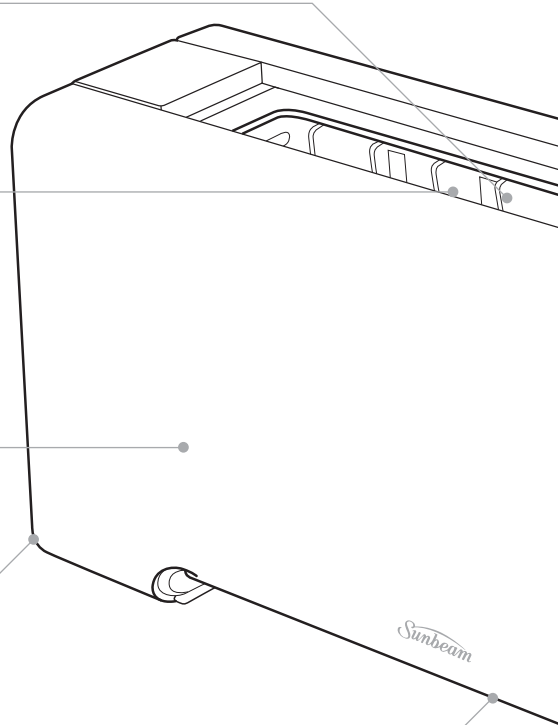

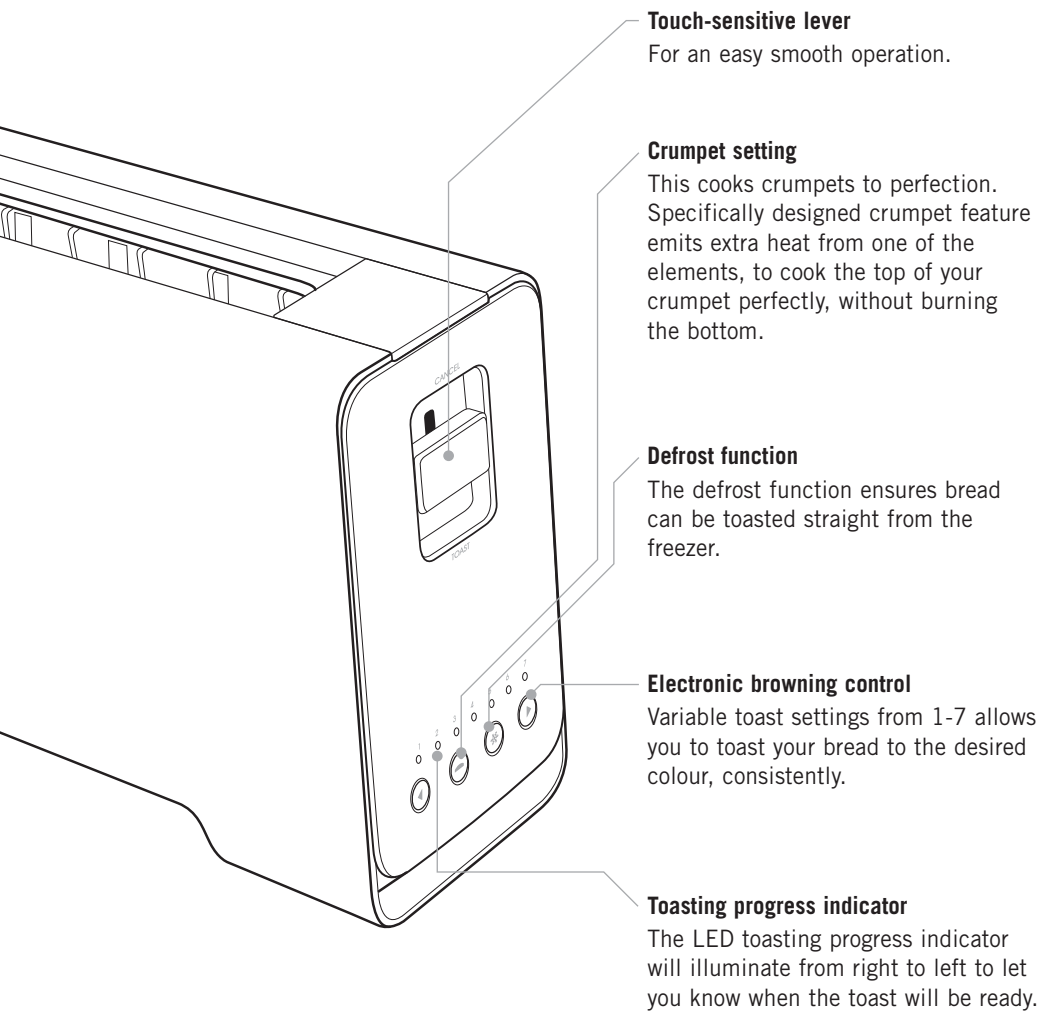

**Touch-sensitive lever**

For an easy smooth operation.

**Crumpet setting**

This cooks crumpets to perfection. Specifically designed crumpet feature emits extra heat from one of the elements, to cook the top of your crumpet perfectly, without burning the bottom.

**Defrost function**

The defrost function ensures bread can be toasted straight from the freezer.

**Electronic browning control**

Variable toast settings from 1-7 allows you to toast your bread to the desired colour, consistently.

**Toasting progress indicator**

The LED toasting progress indicator will illuminate from right to left to let you know when the toast will be ready.

# Using your Sunbeam Pure Elements™ Toaster

Plug the toaster into a 230-240 volt AC power outlet and switch the power on.

## Toasting Bread

1. Position the bread into the bread carriage.
2. Select the desired colour setting with the Electronic Browning Control.
3. To start the toasting cycle, lightly press the TOAST lever down and the carriage will slowly lower. The toasting progress indicator will start to gradually countdown, indicating the toasting progress.
4. When the colour setting is achieved, the toaster will automatically turn off and slide the toast up.

 
**Note:** A beep will also sound to indicate toasting has finished, unless the CANCEL function is activated.

**Tip:** If you need to remove the toast before the cycle is complete, lightly lift the TOAST/CANCEL lever and release. The cancel function will immediately interrupt the toasting cycle and slide the toast up.

**Important:** Do not toast stale bread, rice crackers or similar on a high setting as they may catch fire.

## Specialised Crumpet Setting

This feature will toast crumpets and muffins to perfection. Golden, warm and soft crumpet tops with crisp bases, achieved with additional heat added to one element.

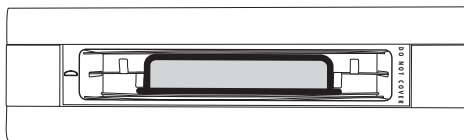

1. Position the crumpets as per illustration.  
A graphic of a crumpet is pressed into the top of the stainless steel toasting carriage to indicate the correct crumpet position.
2. Select the desired colour setting with the Electronic Browning Control buttons.
3. Push the crumpet button. The light button will illuminate and will remain on until pressed again.
4. To start the toasting cycle, lightly press the TOAST lever down and the carriage will slowly lower. The toasting progress indicator will start to gradually countdown, indicating the toasting progress.
5. When the toasting cycle is finished, the toaster will automatically turn off and slide the toast up.

**Tip:** If you need to remove the crumpet before the cycle is complete, lightly lift the TOAST/CANCEL lever and release. The CANCEL function will immediately interrupt the toasting cycle and slide the crumpet up.

### **Defrost Setting**

This feature ensures bread can be toasted to perfection, in one action straight from the freezer.

1. Position the bread into the bread carriage.
2. Select the desired colour setting with the Electronic Browning Control buttons.
3. Press the DEFROST button. The button will illuminate and will remain on until pressed again. The DEFROST function when activated will add to the toasting time, as it will defrost the bread first and then start toasting.
4. To start the toasting cycle, lightly press the TOAST lever down and the carriage will slowly lower.
5. When the toasting cycle is finished, the toaster will automatically turn off and slide the toast up.

# Care and cleaning

Always turn the power OFF and remove the plug from the power outlet after use and before cleaning your toaster.

## **To clean the exterior.**

Wipe exterior with a slightly dampened cloth and polish with a soft dry cloth.

**Do not use metal scourers or abrasives as this may scratch the exterior surface.**

## **Removable Crumb Tray.**

To remove the crumbs, simply slide out the tray, empty and place it back in the toaster.

**Important:** Clean the crumb tray regularly. Do not allow crumbs to accumulate, as this may cause a potential fire hazard.

## **To clean the toaster interior.**

Clean inside the toaster regularly. To do this, unplug the appliance, turn it upside down over the bin and gently shake all the crumbs out.



# Notes

# Notes



toaster

## 12 Month Replacement Guarantee

In the unlikely event that this appliance develops any malfunction within 12 months of purchase (3 months commercial use) due to faulty materials or manufacture, we will replace it for you free of charge.

Should you experience any difficulties with your appliance, please phone our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand. Alternatively, you can send a written claim to Sunbeam at the address listed below. On receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the appliance is defective, advise you on how to obtain a replacement or refund.

Your Sunbeam 12 Month Replacement Guarantee naturally does not cover misuse or negligent handling and normal wear and tear.

Similarly your 12 Month Replacement Guarantee does not cover freight or any other costs incurred in making a claim. Please retain your receipt as proof of purchase.

The benefits given to you by this guarantee are in addition to your other rights and remedies under any laws which relate to the appliance.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law and under the New Zealand Consumer Guarantees Act.

In Australia you are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should your appliance require repair or service after the guarantee period, contact your nearest Sunbeam service centre.

For a complete list of Sunbeam's authorised service centres visit our website or call:

### **Australia**

[www.sunbeam.com.au](http://www.sunbeam.com.au)

**1300 881 861**

Units 5 & 6, 13 Lord Street  
Botany NSW 2019 Australia

### **New Zealand**

[www.sunbeam.co.nz](http://www.sunbeam.co.nz)

**0800 786 232**

26 Vestey Drive, Mt Wellington  
Auckland, New Zealand



toaster

## Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

### In Australia

Visit [www.sunbeam.com.au](http://www.sunbeam.com.au)

Or call 1300 881 861

### In New Zealand

Visit [www.sunbeam.co.nz](http://www.sunbeam.co.nz)

Or call 0800 786 232

*Sunbeam* is a registered trademark.

'Sunbeam Pure Elements' is a registered trademark of Sunbeam Corporation.

Made in China.

Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2011.

ABN 45 000 006 771

Units 5 & 6, 13 Lord Street

Botany NSW 2019 Australia

Unit 3, Building D

26 Vestey Drive

Mt Wellington Auckland

New Zealand

Sunbeam Corporation is a division of GUD Holdings Ltd.