

AIRFLO®

INSTRUCTION MANUAL



 
Bagless Vacuum

model AFV802

IMPORTANT SAFETY REMINDERS

- This appliance should be for domestic use only, as described in this users' guide. Please ensure that this manual is fully understood before using the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- To ensure the continued safe and efficient operation of this appliance, we recommend that any servicing or repairs are only carried out by an authorised service agent.
- Power off before unplugging from electrical outlet. Unplug the electrical cord when not in use and before servicing. Do not touch plug or vacuum with wet hands.
- To reduce the risk of electric shock, do not use outdoors or on wet surfaces.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not leave the appliance unattended while in use.
- To protect against electric shock, do not immerse cords, plugs or appliances in water or any other liquid.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Do not use this appliance to pick up flammable or combustible liquids such as gasoline.
- Do not allow cord to touch hot surfaces. Use extra care when cleaning on stairs. Do not run appliance over cord.
- Do not pick up anything that is burning or smoking such as cigarettes, matches or hot ashes.

PARTS

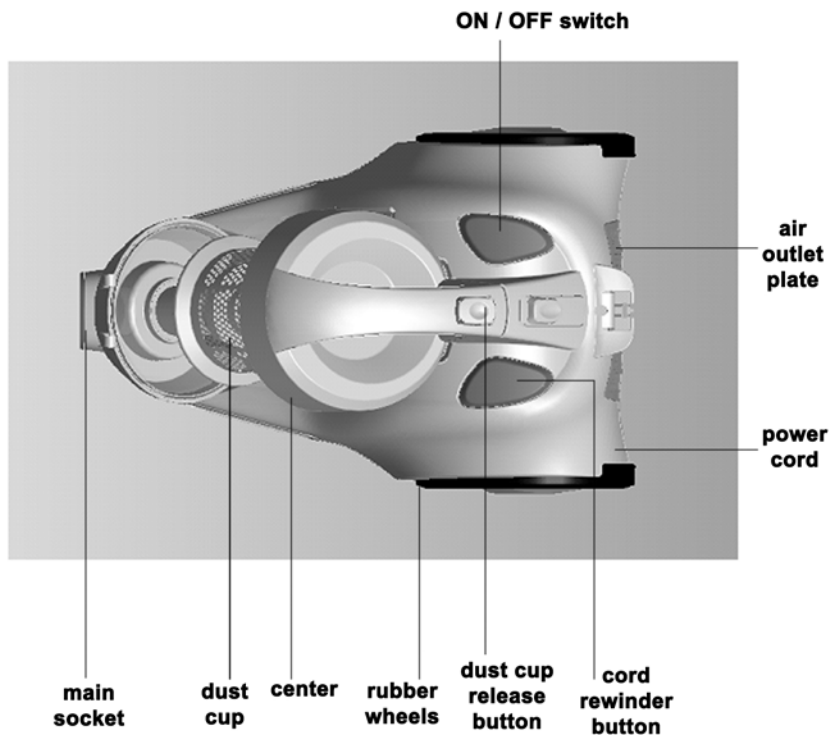

OPERATION

- Connect the hose accessories: insert the hose end into the hose socket of the vacuum cleaner and then connect to the main unit. (Fig 1)

- Connect the rod to the elbow of the hose.

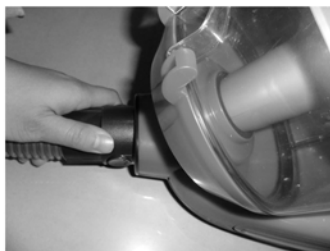 


Fig. 1

- Connect the different nozzle tools to the metal extension rod for different cleaning purposes:

Floor brush for carpet or floor (Fig 2);

Combined brush and nozzle for couches, wall surfaces, curtains, corners or space between furniture, etc. (Fig 3)



Fig. 2

- Start the machine: insert the plug of the cord into the power socket and press the ON /OFF switch pedal (Fig 4). The machine will then start working.



Fig. 3



Fig. 4



Fig. 5

- Cord rewinding: hold the plug and pull out the cord; press the cord rewinding pedal, the power cord will be drawn in. (Fig 5)

Additional reminders...

- Before first use, make sure the dust barrel is properly installed.
- Make sure the power supply is 220-240V, 50/60Hz
- Do not vacuum water and inflammable material.
- Do not vacuum burning material and ashes.
- Do not use the machine without a motor protection filter filled.
- Change the dust barrel immediately if damaged.
- Do not store or use the machine close to high temperature places.
- If abnormal noise, smell, smoke or any other failure or breakage arise during operation, turn off the switch and unplug the machine. Contact your service center for repair. Do not repair it yourself.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

MAINTENANCE

Clean the dust cup regularly (specially when it's full).

- Press the dust cup release button (Fig 6)
- Pull out the dust cup (Fig 7)
- Take out the HEPA filter (Fig 8 and 9)
- Wash the filter with water and dry completely before reinserting the cup and filter.



Fig. 6

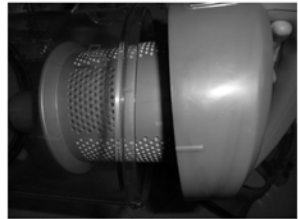 


Fig. 7

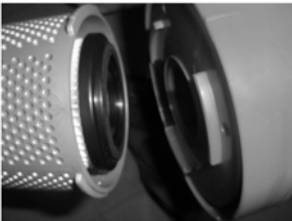 


Fig. 8



Fig. 9

Clean the air outlet plate filter

- Remove the air outlet plate (Fig 10)
- Wash it with water and dry it thoroughly before placing it back (Fig 11)



Fig. 10



Fig. 11