

Breville

Emporia Toaster

With crumpet control



INSTRUCTIONS FOR USE

Model CT45

CONTENTS

	Page
Breville Recommends Safety First	4
Know your Breville Emporia Toaster	6
Using your Breville Emporia Toaster	7
Care and Cleaning	10

Emporia Toaster

Congratulations

on your purchase of your new Breville Emporia Toaster



BREVILLE RECOMMENDS SAFETY FIRST

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

READ ALL INSTRUCTIONS BEFORE OPERATING AND SAVE FOR FUTURE REFERENCE

- Ensure that the power source to be used is the same as the voltage requirements of the product.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use. Keep appliance clear of walls and other heat sensitive materials. Minimum 200mm distance.
- Always switch the power off at the outlet and then remove the plug before attempting to move the appliance, when the appliance is not being used and before cleaning or storing.
- Place the appliance on a dry, level surface.
- Do not touch hot surfaces. Use side areas for lifting and carrying the appliance.
- Never immerse the power supply cord or appliance in water or any form of liquid.
- At no time should the appliance be left unattended during toasting.
- This appliance is not intended for use by young children or infirm persons without supervision.
- Close supervision is required at all times when operating the appliance near children.
- Young children should be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance where children can touch hot surfaces.
- Do not let the power supply cord touch hot surfaces or become knotted, or hang from the edge of bench tops.
- Do not place on or near a hot gas burner, electric element, or in a heated oven.
- Suitable for domestic use only.
- Not intended for use in moving vehicles or boats.
- Do not use outdoors.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening and is not too thick or long that it will jam or wedge the bread carriage.
- Never cover the appliance whilst it is plugged into the mains or while hot. Do not place cold toast on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

- Regularly inspect the power supply cord, plug and actual appliance for any damage. If found damaged in any way, immediately cease use of the appliance and return the entire unit to the nearest authorised Breville service centre for examination, replacement or repair.



NOTE!!

This Breville toaster is electronically controlled and will not lock down into the toast position until the toaster is plugged into a 230/240 volt power point and switched on.



NEVER OPERATE TOASTER ON ITS SIDE.

NEVER ADD ANY FOOD SUBSTANCE TO THE BREAD, MUFFINS OR CRUMPETS AS THIS CAN LEAD TO ELECTROCUTION OR FIRE.

THIS TOASTER IS FOR TOASTING BREAD, CRUMPETS AND MUFFINS ONLY. PLACING OTHER ITEMS IN THE TOASTER CAN LEAD TO ELECTROCUTION OR FIRE.

NEVER ATTEMPT TO EXTRACT JAMMED TOAST, CRUMPETS OR MUFFINS OR ANY OTHER ITEM WITH A KNIFE OR ANY OTHER OBJECT, AS CONTACT WITH LIVE ELEMENTS MAY NOT ONLY DAMAGE THE ELEMENT, BUT CAUSE ELECTROCUTION.

KNOW YOUR BREVILLE EMPORIA TOASTER

Right carriage control lever

Left carriage control lever

High lift levers raise
crumpets and muffins
higher for safer removal

Extra wide self centring toasting
slots adjust automatically to
toast thick or thin bread

Independent electronic
variable browning controls

Cancel function


Defrost setting

Crumpet control (available for
front 2 toasting slots only)
adjusts heating elements to
perfectly toast golden crumpets
without burning the bottom



FRONT
SLOTS

REAR
SLOTS

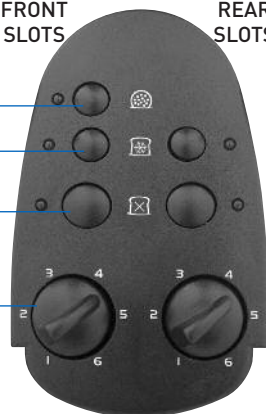


Tidy cord storage



Removable crumb tray

USING YOUR BREVILLE EMPORIA TOASTER

1. Insert the power plug into a 230/240 volt power outlet and then turn the power on.
2. Place up to 4 slices of bread or muffins into the bread slots. For one or two slices always place in the front two bread slots. See fig 1.
4. The toaster turns off when the desired toast colour is achieved and automatically raises the toast. The toasting process can be stopped at any time by pressing the CANCEL button.

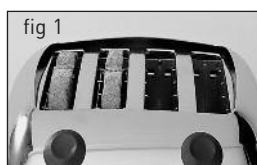

3. Select the desired browning setting, from No.1 to No.6 on the browning control knob. (No.1 - lightest, No.6 - darkest). When using the toaster for the first time, we suggest you toast on setting No.3. Varying types of bread and personal preference may require a different browning setting, eg. Raisin toast and white light-textured breads may require a lower setting, whilst heavier textured rye breads may require a darker setting. The toasting cycle will automatically commence.



NOTE!!

If the toaster is not plugged in and switched on at the power outlet the high lift levers will not click into place.



NOTE!!

Toasting time commences when the control lever is depressed.



DO NOT LEAVE UNATTENDED WHEN IN USE AS TOAST MAY BECOME JAMMED.

USING YOUR BREVILLE EMPORIA TOASTER cont'd

HIGH LIFT

To remove smaller items such as crumpets and muffins, lift the high lift lever approximately 20mm above the starting position.



TOASTING CRUMPETS

This function adjusts heating elements to perfectly toast golden crumpets without burning the bottom.

To toast crumpets, place them into the front two toasting slots with the top facing inwards as marked on the toaster. Lower the high lift lever until it clicks into place.



The crumpet control setting is activated by pressing the crumpet button.



A small indicator light will illuminate to confirm that the crumpet setting has been activated.

This setting when activated adjusts the heating elements to produce additional heat to the centre elements to cook the top of your crumpet faster than the bottom.



NOTE!!

Crumpets can only be toasted, using the Crumpet Control Setting, in the front two toasting slots. The toaster always reverts back to the bread toast setting after each toasting cycle, unless the crumpet control setting is activated again.

TOASTING FROZEN BREAD

To toast frozen bread, place the bread into the bread slots, select the desired browning setting, press the carriage control lever down until it clicks into place and then press the Defrost Button.



A small indicator light will illuminate to confirm the defrost setting has been activated.



NOTE!!

In the unlikely event that the bread, crumpets or muffins become jammed, switch the power off at the power outlet. Remove the power plug from the power outlet and then carefully ease the bread out of the toaster, ensuring that you do not damage the element.

CARE AND CLEANING

The crumb trays should be cleaned regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster.

1. Always switch the power off at the outlet and then remove the plug before cleaning your toaster.
2. To remove any crumbs from the toaster, slide out the crumb tray from under the toaster, empty and replace it in the toaster before using again.
3. Wipe the outside of the toaster with a slightly dampened cloth and polish with a soft dry cloth.
4. To clean the interior, turn the toaster upside down over the sink and shake crumbs free.

STORAGE

Always switch off, at the power outlet and then unplug the appliance from the power outlet before cleaning.



DO NOT USE THE TOASTER WITHOUT THE SLIDE OUT CRUMB TRAYS IN PLACE.

DO NOT ALLOW CRUMBS TO BUILD UP IN THE CRUMB TRAY. CRUMB TRAY SHOULD BE CLEANED REGULARLY.

NOTES

NOTES

Breville

Breville is a registered trademark of Breville Pty. Ltd.
ABN 98 000 092 928

Breville Customer Service Centre

Australian Customers



Breville Customer Service Centre
Locked Bag 2000
Botany NSW 2019
AUSTRALIA



Customer Service: 1300 139 798

Fax (02) 9384 9601

Email Customer Service askus@breville.com.au

New Zealand Customers



Breville Customer Service Centre
Private Bag 94411
Greenmount
AUCKLAND, NEW ZEALAND



Customer Service: 09 271 3980

Fax 0800 288 513

Email Customer Service askus@breville.com.au

www.breville.com.au



© Copyright. Breville Holdings Pty. Ltd. 2003

Due to continual improvements in design or otherwise,
the product you purchase may differ slightly from
the one illustrated in this booklet.



Model CT45
Issue 1/03