

Haier

HRFZ-213

FRIDGE FREEZER



USER'S INSTRUCTIONS

 
CONTENTS

Parts and Features	2
Instructions for Installation	3
Cautions for Safety	4
Operation	4
Cleaning and Maintenance	6
Troubleshooting	7

- Please read this users operation manual before using.
- Because of production improvement, your refrigerator may vary from this user manual.

Parts and Features :

(Freezer)

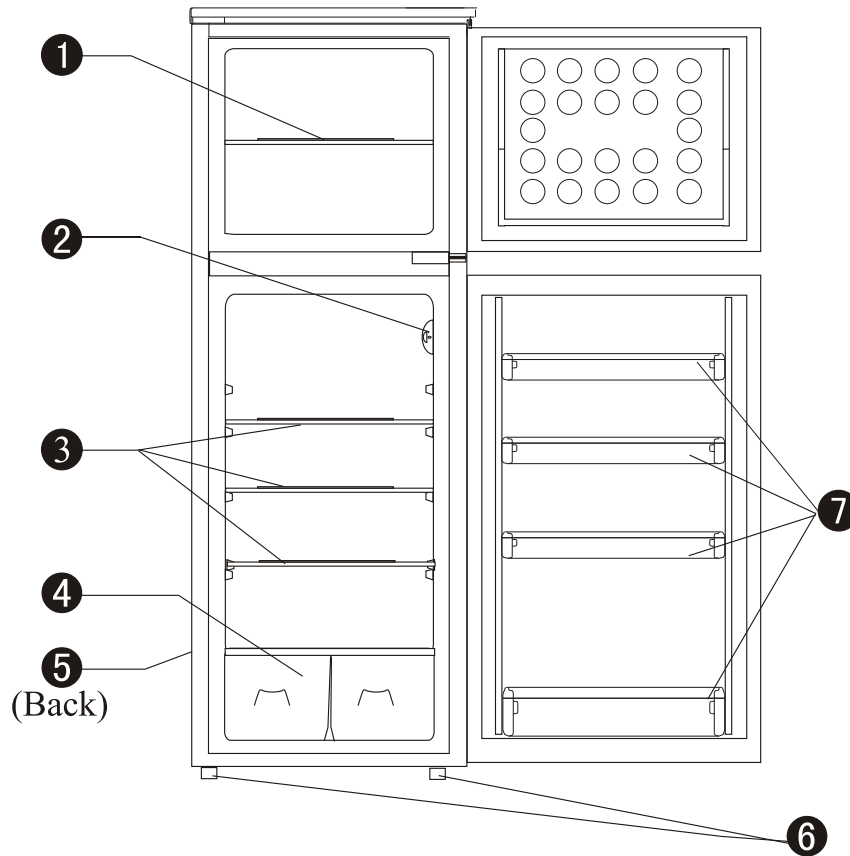

(Refrigerator)

 
- ① Shelf in freezer compartment
- ② Thermostat
- ③ Shelf in fresh food compartment
- ④ Crisper box
- ⑤ Compressor
- ⑥ Adjustable foot
- ⑦ Door bottle rack

Instructions for Installation :


1. Do not tilt the refrigerator more than 45° from upright when moving it.

Do not apply force to any part such as the condenser, the door and its handle.


In order to prevent the refrigerator from deforming, or else its performance will be influenced.

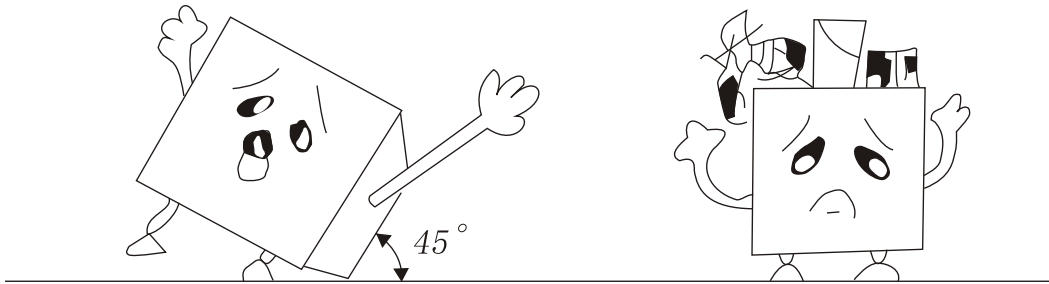

 2. Ensure that there is enough space around the refrigerator in order to let it work well .

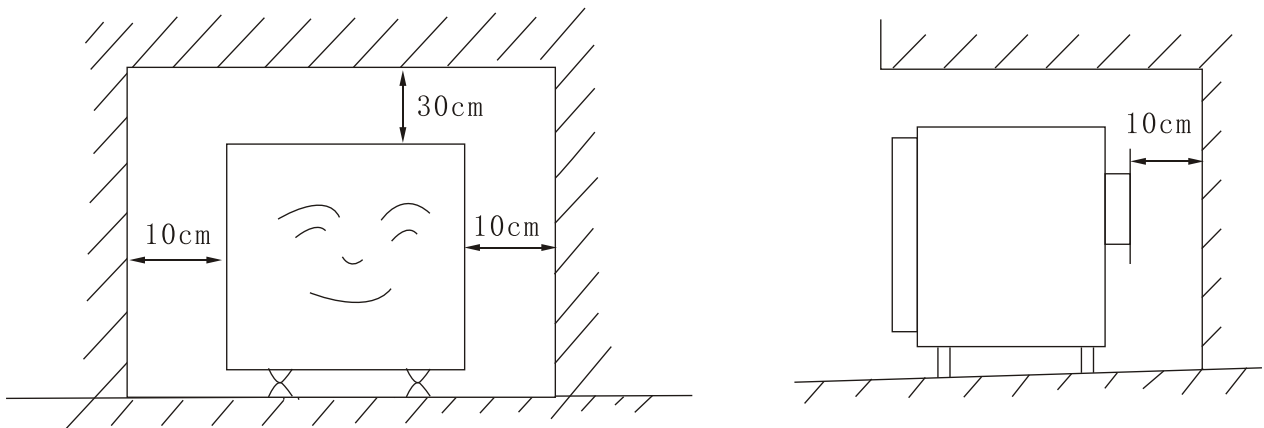


 3. The refrigerator should be kept away from high temperature, sunshine or humid conditions.

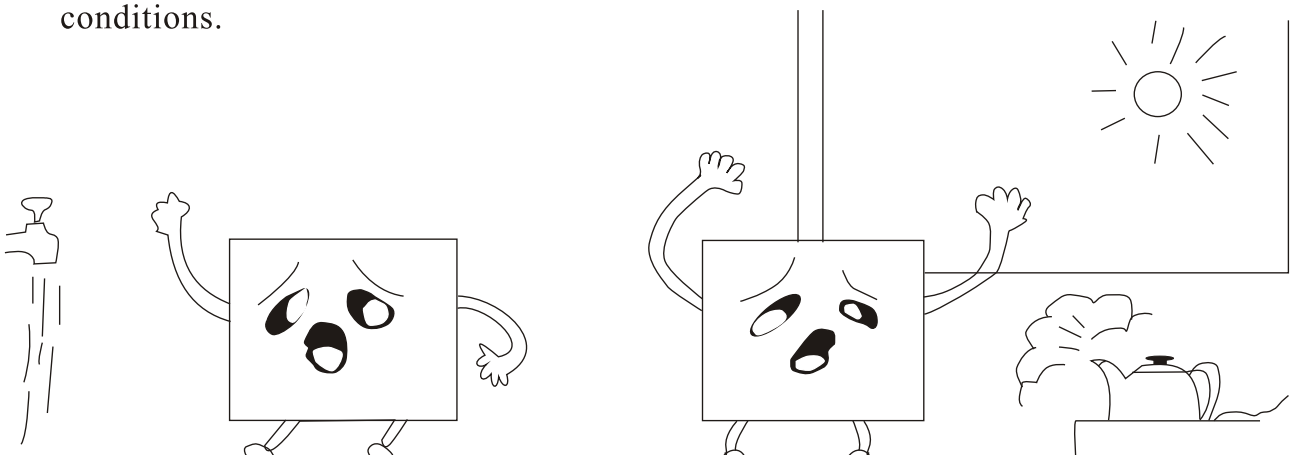


Cautions for Safety :

 1. It must be checked that voltage used should be the same as the rated voltage before the refrigerator is used.
2. The power plug should have its own separated socket in order to prevent the electric wire from being over heated by other plugs.

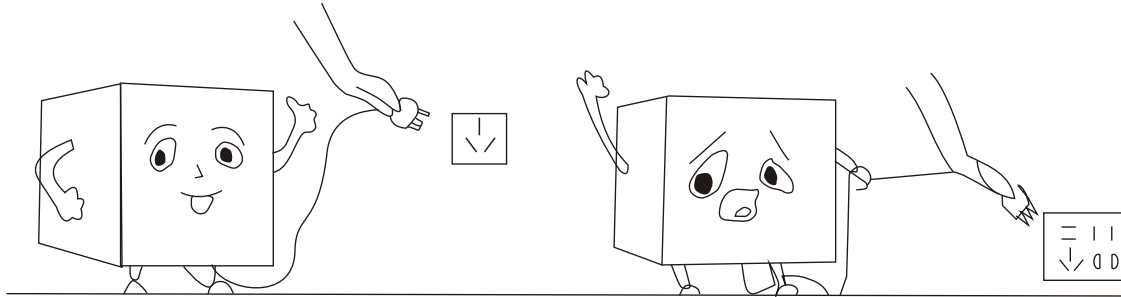

 3. Do not splash water on to the refrigerator. Otherwise it may cause malfunctions of the refrigerator or electric shock.
4. Do not store flammable materials such as petrol, LP gas and glue etc, in the refrigerator.

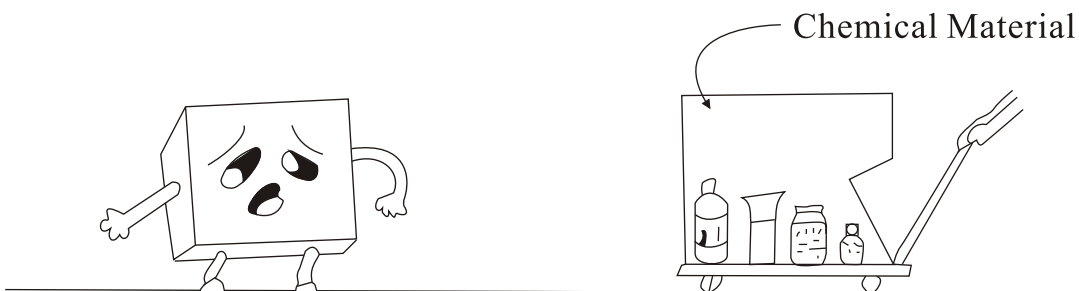


Operation :

1. When operating the refrigerator for the first time , set the thermostat dial at 3, connect to the electricity and run it without loading any food. Usually this takes 2 or 3 hours. Then set the thermostat dial to the desired setting and place foods into the refrigerator .

2. The temperature of the refrigerator can be adjusted by turning the thermostatic dial. Setting of the thermostat dial at 3~4 is the most suitable for general operation. The thermostat dial number higher the refrigeration capability stronger.

 3. Do not put too much food in the refrigerator.
Where possible open the door less often in order to maintain the temperature of the refrigerator and save electricity.

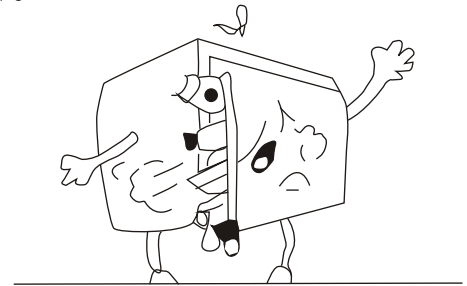


4. The refrigerator will defrost automatically. Defrost the freezer whenever the layer of frost on the surface reaches 3 or 4 mm. When defrosting, remove all foods, unplug the appliance and open the door. After the frost has melted, discard the water and dry the interior of the refrigerator. The refrigerator can then be restarted.

Cautions :


- When defrosting , never use any sharp or metallic objects to remove the frost on the surface of the evaporator as this will damage the evaporator .
- Do not store bottled beverages in the freezer as liquids may expand during freezing causing the bottle to break and damage the appliance.
- If the power supply is turned off for any reason, wait ten minutes before starting the appliance again.

Cleaning and Maintenance:

 1. When cleaning the refrigerator, first disconnect the appliance from the power supply by removing the plug. Wipe the appliance carefully with a cloth and neutral cleaning agent, then wipe it clean with fresh water.

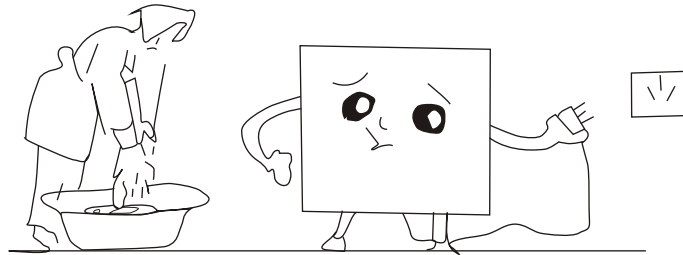


 2. Never use acids, chemical solution, thinner, gasoline or the like to clean the refrigerator because they may damage the painting cover and plastic parts of it.

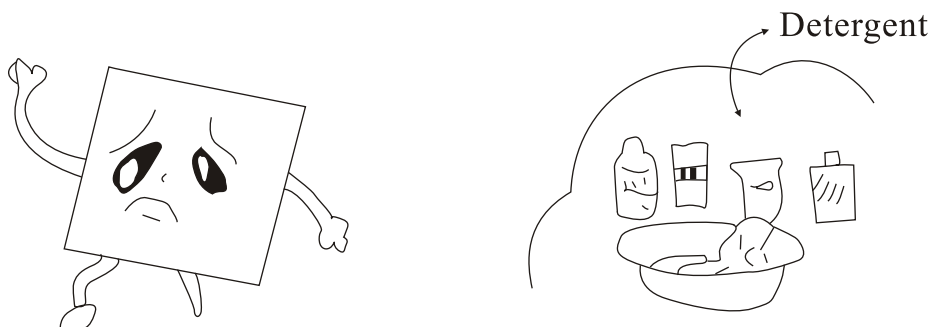

Changing the light bulb

 1. Remove the water drip tray.
2. Hold the lamp cover and push toward inside of the cabinet.
3. Remove the lamp cover.
4. Unscrew the bulb and screw in a new 10W bulb.
5. Hold the lamp cover and put the hook of the lamp cover to click into the thermostat box.
6. Pull the lamp cover forward to click into the thermostat box.
7. Replace the water tray.

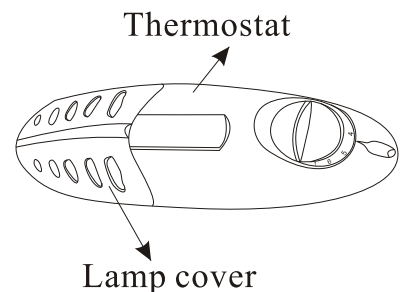

Troubleshooting

1. When the refrigerator does not operate :ensure that
 - The electric power is supplied and the voltage is normal.
 - The fuse is not burned out .
 - The power plug is plugged in firmly in the socket .

2. When the refrigerator is not cool enough: ensure that
 - The thermostat is at the correct setting .
 - There are enough space around the refrigerator .
 - The doors are not opened too frequently and for too long .
 - The refrigerator is not under direct sunlight or placed near the heat source .
 - There are not too many foods and hot foods in the refrigerator.

3. When the foods in the refrigerator are frozen: ensure that
 - The thermostat is at the correct setting .
 - There is not too much food in the refrigerator .

4. When the refrigerator operates too noisily : ensure that
 - The refrigerator is properly leveled .
 - The refrigerator is not touching objects around it .
 - The containers or solid packages stored inside are not touching each other .

Note:

During periods of high humidity, moisture may form on the surfaces of the refrigerator. This is not a fault and maybe wiped away.

If after checking the above suggestions your refrigerator is still not functioning properly, please contact Customer Services without delay.

Warnings

- * This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- * Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- * Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- * Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- * Do not damage the refrigerant circuit
- * Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

IMPORTANT DISPOSAL INSTRUCTIONS



As a responsible retailer we care about the environment.

As such we urge you to follow the correct disposal procedure for your product and packaging materials, This will help conserve natural resources and ensure that it is recycled in a manner that protects health and the environment.

You must dispose of this product and its packaging according to local laws and regulations. Because this product contains electronic components and sometimes batteries, the product and its accessories must be disposed of separately from household waste when the product reaches its end of life. Contact your local authority to learn about disposal and recycling.

The product should be taken to your local collection point for recycling. Same collection points accept free of charge.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

