

esatto

This little Quick Start Guide is everything you need to get started so that your **EBTDW2D Benchtop Dishwasher** does all of your dirty work, literally!



Get ready to use your new EBTDW2D Benchtop Dishwasher!

The Controls


- 1 On/Off power button
- 2 Delay Start button
- 3 Delay Start indicators
2, 4, 6 & 8 hours
- 4 Rinse Aid indicator
Fill the Rinse Aid compartment
- 5 Program End indicator
Your wash program has completed
- 6 Water Failure indicator
Faucet may not be open
- 7 Program Selector button
- 8 Start/Pause button
- 9 Program indicators

For a complete guide on operating your dishwasher, refer to user manual on page 9.

Program Cycles

- **Quick 35'**
A quick 35 minute wash suitable for lightly soiled dishes—does not include a drying stage.
- **Super 90'**
A fast 90 minute daily program for lightly soiled dishes.
- **Glass**
Suitable for lightly soiled delicate glassware.
- **ECO 50° C**
A standard program for daily use with reduced energy and water consumption.
- **Heavy**
A program suitable for heavily soiled dishes.
- **Intensive 70° C**
A hot intensive program suitable for heavily soiled dishes and cookware.

Note: To assist drying, we recommend partially opening the door after the program has finished.

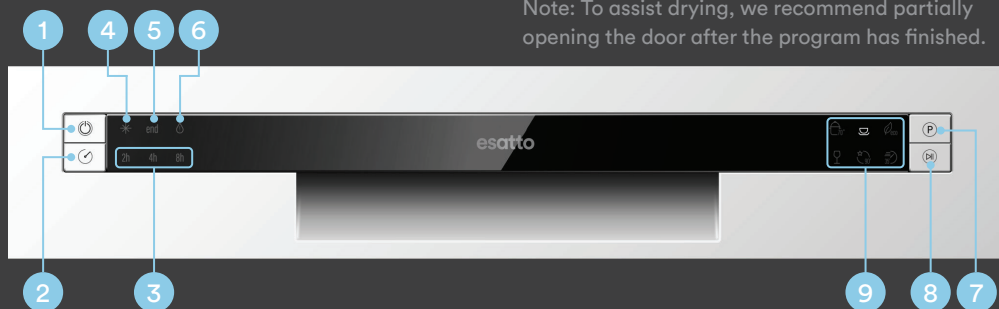

Product Details

Dimensions (W, D, H mm) / **550 x 500 x 590**
 Energy Rating (MEPS/WELS) / **2.5 Stars / 3.5 Stars**
 Capacity / **8 Place Settings**
 Warranty / **2 Years**

Register your Esatto product online for a free additional year esatto.house/warranty

Get in Touch

Need help? Contact our friendly support team via the contact details below.

Phone / **1300 11 4357**

Email / support@residentiagroup.com.au

Instagram @esatto.house Facebook @esatto.house

www.esatto.house