 


GDH-DEH30E


30L DEHUMIDIFIER

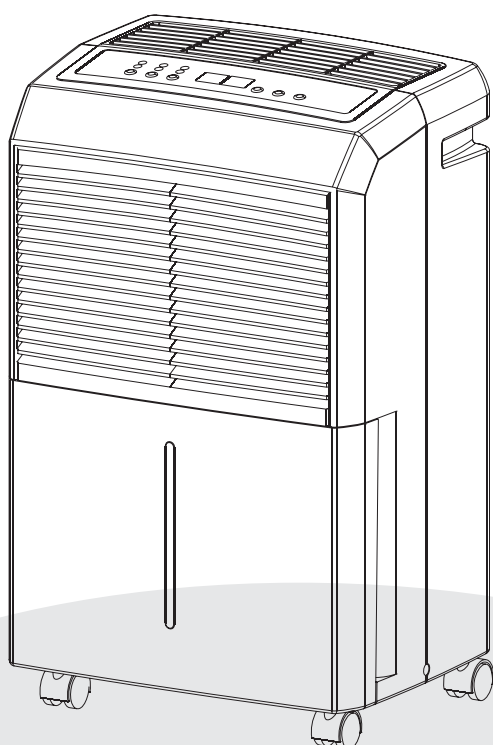


CONTENTS

Description of Components/Function	1
Operating Instructions	2
Continuous Drainage Feature	3
Safety Guide	4
Maintenance	5
Specifications	Last page

 DESCRIPTION OF COMPONENTS

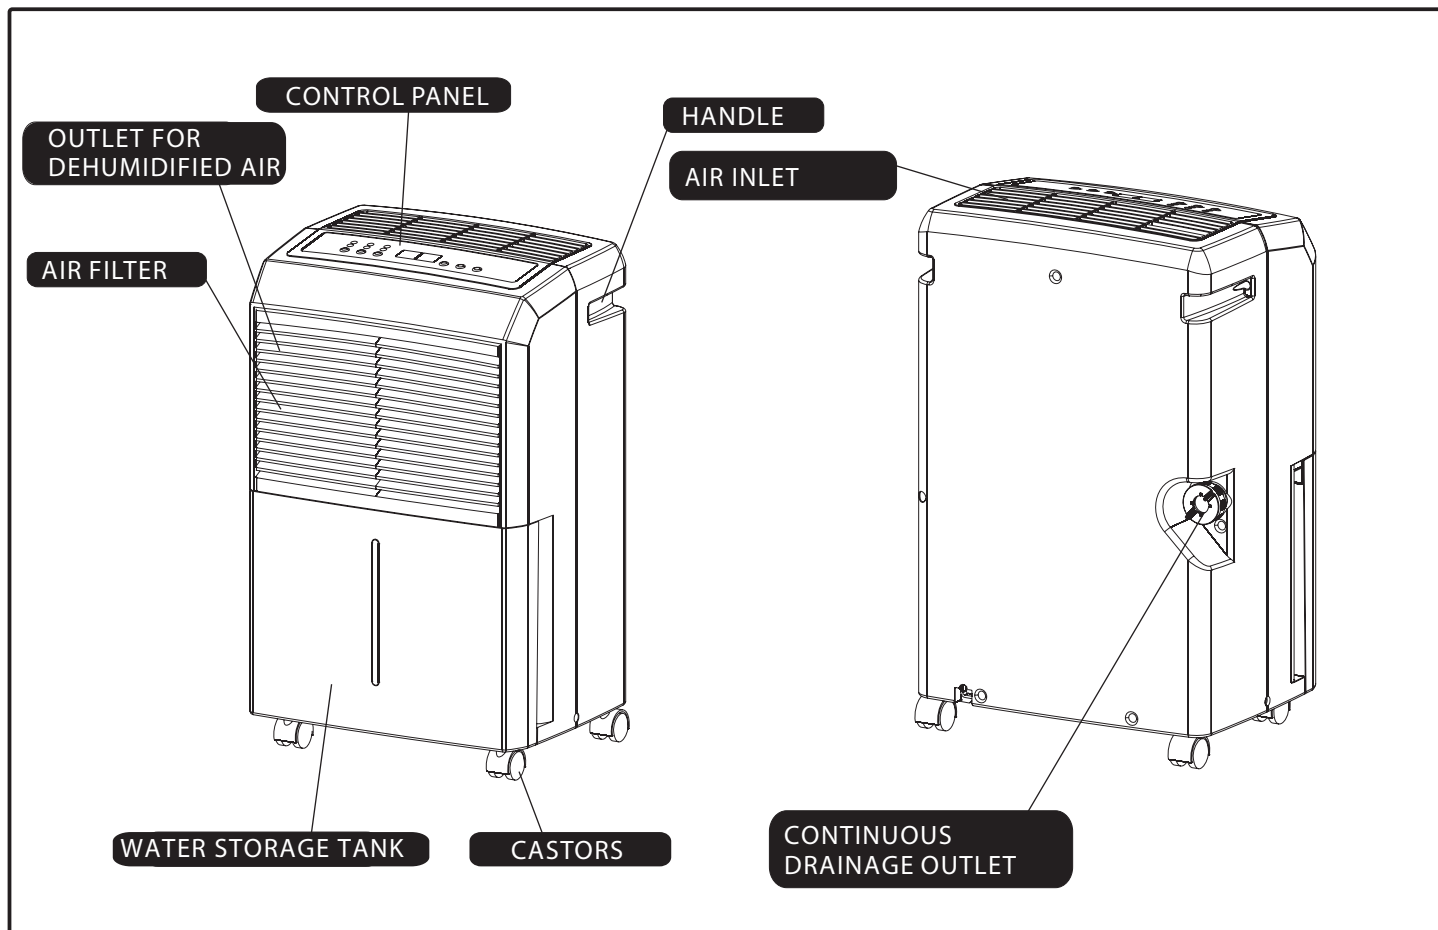




FUNCTION EXPLANATION

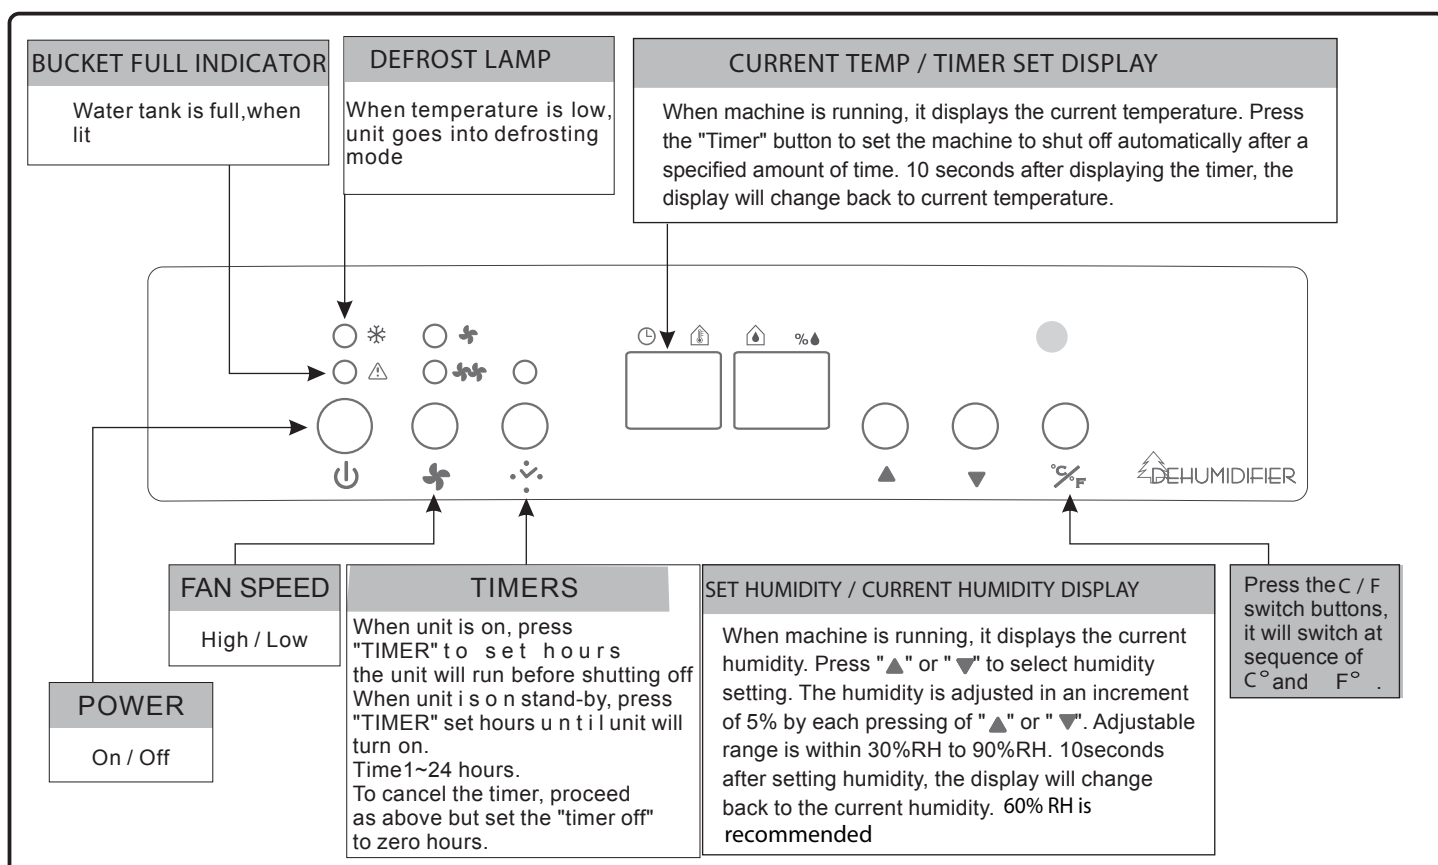 

OPERATING INSTRUCTIONS


● Operation

   - 1) Place the product in an upright position on a flat, steady, stable, heat-resistant surface. Make sure there is nothing flammable or heat sensitive within 100 cm .
Operating the product in any other position could be hazardous.
- 2) Insert the plug into a suitable wall socket. The dehumidifier is suitable for operation on an electricity supply of the same voltage as that shown on its rating label.
- 3) Make sure the water tank is correctly located. (After switching on the machine for the first time, if the "Bucket Full" lamp illuminates, just pull out the water tank, check the "float" lever is able to move freely, then return the water tank to the correct position.)

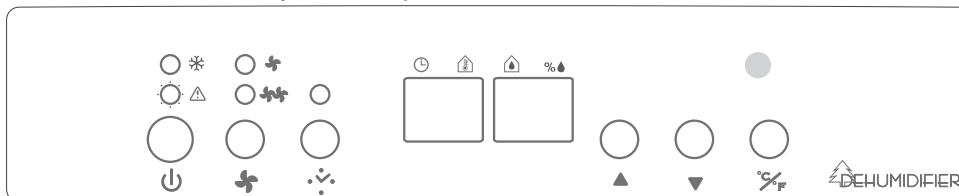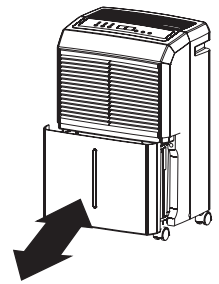

● When Bucket Full Lamp Is On

 When the water tank is full the machine will stop and the "Bucket Full" light will illuminate. The water tank should be carefully removed from the machine by sliding it outwards from the front of the machine and it should be emptied. When the empty tank is replaced properly into the machine, the machine will start up and run normally.

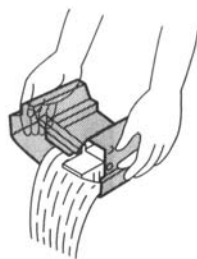







Please use both hands to carefully empty the water tank.

● DEFROST

When the machine is operated at low temperatures (less than 12°C) the surface of the evaporator may accumulate a layer of frost which would reduce the efficiency of the machine. When this happens the machine will go into periodic defrost mode. The defrost symbol on the LCD display will come on. The machine will operate in temperatures down to 5°C. The time taken to defrost may vary. If the machine freezes up, it should be turned off at the power supply and re-started. If the room temperature remains below 5°C the machine should be switched off.



CONTINUOUS DRAINAGE FEATURE

      Drainage hose is not included with this unit

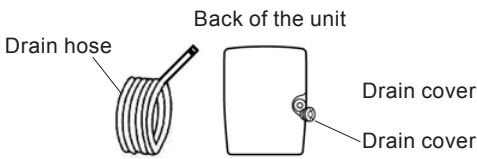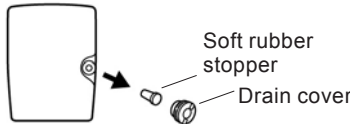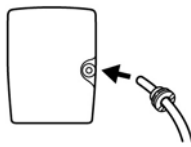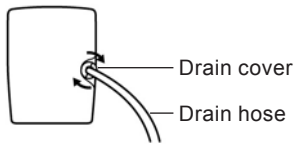1. To save having to periodically empty the water tank, this unit can be configured for continuous drainage. You can use a PVC drain hose to connect to the continuous drainage connector.	 <p>Back of the unit Drain hose Drain cover Drain cover</p>
2. Unscrew and remove the drain cover at the rear of the unit. 3. Remove the soft rubber stopper. Put it into the water tank for safe keeping.	 <p>Soft rubber stopper Drain cover</p>
4. Insert the drain hose through the hole of the drain cover.	 <p>Drain cover Drain hose</p>
5. Connect the drain hose to the drain port.	
6. Tighten the drain cover in clockwise direction onto the rear of the unit.	 <p>Drain cover Drain hose</p>
7. Place the bucket on its original location.	 <p>Drain hose Bucket</p>


INSTALLING DRAINAGE PVC HOSE

  When using the function of continuous drainage, the PVC hose must be placed horizontally below the drainage hole. Must avoid uneven ground and folding the hose.

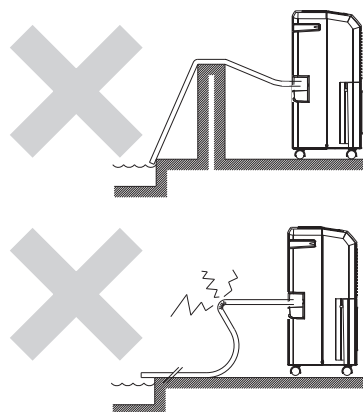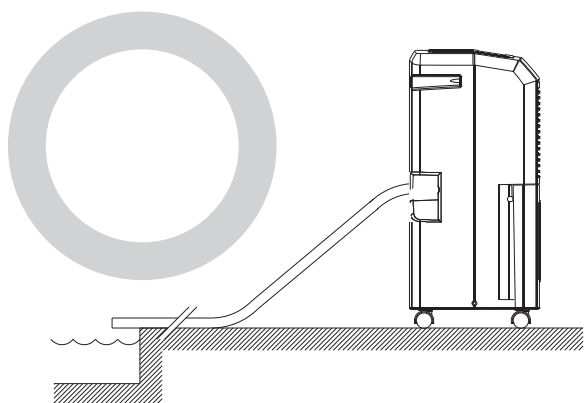


SAFETY GUIDE

 
- Do not pull the plug out by the cord

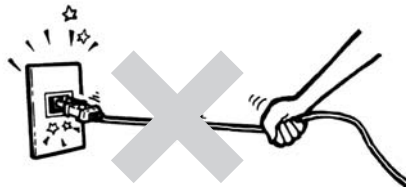

 
- Do not spray insect repellent, oil or paint spray near the machine

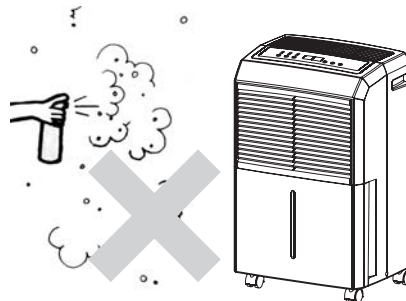

 
- Do not place the machine on an uneven surface

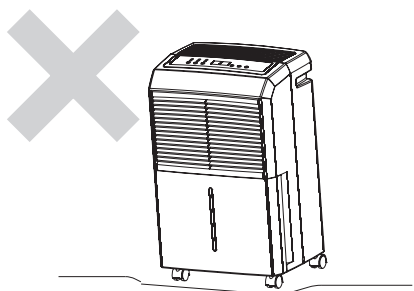

 
- Please always keep the unit 20 cm away from the wall to dissipate the heat properly.

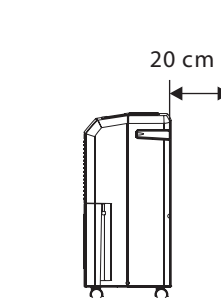


- Do not put objects in the machine

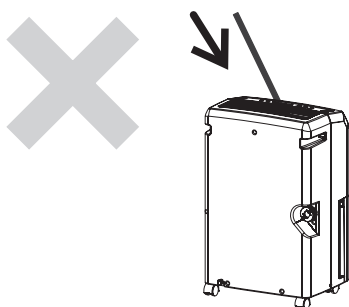 

 
- Close all the door and windows when in use

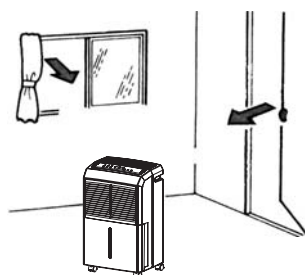

 - Keep the machine away from any type of heat sources.

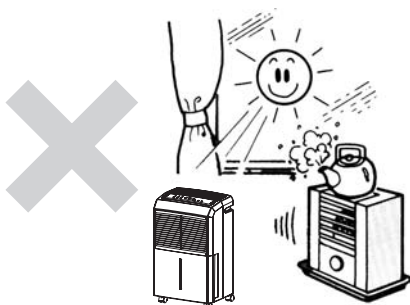


 - When moving or put in storage, keep dehumidifier upright

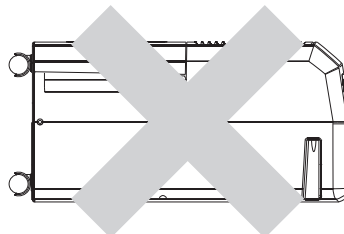

MAINTENANCE

 For safety reasons, make sure the dehumidifier is unplugged before cleaning .

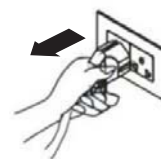

1) Cleaning the casing

 
- A. Wipe the casing with a clean, soft cloth.
- B. Use mild detergent then wipe off with a damp cloth
- C. Do not immerse dehumidifier in water.

2) Cleaning the air filter :


The purpose of the air filter is to filter dust and other materials from the air.
Clean the filter every two weeks.

● Cleaning Steps :

- A. Pull the air filter out gently.

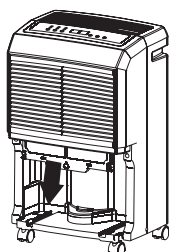

 - B. Clean the filter with a vacuum cleaner or wash it with clean water and dry with cloth.

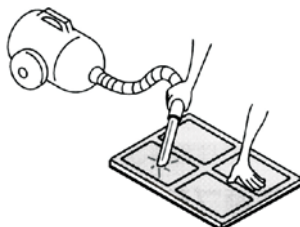

- C. Put the clean air filter back in place and continue to operate the dehumidifier.

If a problem occurs, unplug the machine and contact the Dimplex Service center immediately on 0800 666 2824 Do not tamper with the internal workings of the unit.

SPECIFICATION

MODEL	GDH-DEH30E
POWER	220-240V /50Hz
MOISTURE REMOVAL	30 L/D (30 °C 80%RH)
POWER INPUT	520W
SIZE OF SHELL (H W D)	565*335*240
WEIGHT	16 kg
OPERATING TEMPERATURE	5°C - 35°C

- If the power cord on this unit is damaged it must be replaced by the manufacture,its service agent or qualified persons in order to avoid a hazard

Waste electrical products should not be disposed of with household waste.
Please recycle where facilities exist. Check with your local authority or retailer
for recycling advice.



Glen Dimplex Australia

2/205 Abbotts Road
Dandenong South VIC 3175
1300 556 816