

Contents

NE

1	Instructions	4
1.1	General safety instructions	4
1.2	Manufacturer liability	5
1.3	Appliance purpose	5
1.4	Disposal	5
1.5	Identification plate	6
1.6	This user manual	6
1.7	How to read the user manual	6
2	Description	7
2.1	General Description	7
2.2	Control panel	8
2.3	Other parts	8
2.4	Available accessories	9
3	Use	10
3.1	Instructions	10
3.2	First use	10
3.3	Using the accessories	11
3.4	Using the oven	11
3.5	Cooking advice	17
3.6	Special functions	22
3.7	Preset programs	30
3.8	Personal recipes	36
3.9	Settings	41
4	Cleaning and maintenance	47
4.1	Instructions	47
4.2	Cleaning the surfaces	47
4.3	Ordinary daily cleaning	47
4.4	Food stains or residues	47
4.5	Removing the door	47
4.6	Cleaning the door glazing	48
4.7	Removing the internal glass panes	48
4.8	Cleaning the inside of the oven	49
4.9	Vapour Clean (on some models only)	50
4.10	Pyrolytic (on some models only)	53
4.11	Extraordinary maintenance	57
5	Installation	59
5.1	Electrical connection	59
5.2	Cable replacement	59
5.3	Positioning	60

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities.

For further information on the product: www.smeg.com



Instructions

1 Instructions

1.1 General safety instructions

Risk of personal injury

- During use the appliance and its accessible parts become very hot.
- Never touch the heating elements during use.
- Keep children under eight years of age at a safe distance if they are not constantly supervised.
- Children must never play with the appliance.
- Never rest metallic objects such as knives, forks, spoons and lids on the appliance during use.
- Switch off the appliance immediately after use.
- Never try to put out a fire or flames with water: Turn off the appliance and smother the flames with a fire blanket or other appropriate cover.
- The appliance must never be cleaned by unsupervised children.
- Have qualified personnel carry out installation and assistance interventions according to the standards in force.
- Do not modify this appliance.
- Do not insert pointed metal objects (cutlery or utensils) into the slots in the appliance.

- Do not try to repair the appliance yourself or without the intervention of a qualified technician.
- If the power supply cable is damaged, contact technical support immediately and they will replace it.

Risk of damaging the appliance

- Do not use abrasive or corrosive detergents on glass parts (e.g. powder products, stain removers and metallic sponges).
- Use wooden or plastic utensils.
- Do not seat on the appliance.
- Do not use steam jets to clean the appliance.
- Do not obstruct ventilation openings and heat dispersal slots.
- Never leave the appliance unattended during cooking operations where fats or oils could be released.
- Never leave objects on the cooking surface.
- Do not use the appliance to heat rooms for any reason.



For this appliance

- Ensure that the appliance is switched off before replacing the bulb.
- Do not rest any weight or sit on the open door of the appliance.
- Take care that no objects are stuck in the doors.

1.2 Manufacturer liability

The manufacturer declines all liability for damage to persons or property caused by:

- Use of the appliance other than as envisaged;
- Non-observance of the user manual provisions;
- Tampering with any part of the appliance;
- Use of non-original spare parts.

1.3 Appliance purpose

- This appliance is intended for cooking food in the home environment. Every other use is considered improper.
- This appliance may be used by children aged at least 8 and by people of reduced physical and mental capacity, or lacking in experience in the use of electrical appliances, provided that they are supervised or instructed by adults who are responsible for their safety.
- The appliance is not designed to operate with external timers or with remote-control systems.

1.4 Disposal



This appliance must be disposed of separately from other waste (Directives 2002/95/EC, 2002/96/EC, 2003/108/EC). The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.

To dispose of the appliance:

- Cut the power supply cable and remove it along with the plug.



Power voltage

Danger of electrocution

- Disconnect the main power supply.
- Unplug the appliance.
- Deliver the appliance to the appropriate recycling centre for electrical and electronic equipment waste, or return it to the retailer when purchasing an equivalent product, on a one for one basis.



Instructions

Our appliances are packed in non-polluting and recyclable materials.

- Deliver the packing materials to the appropriate recycling centre.



Plastic packaging Danger of suffocation

- Do not leave the packaging or any part of it unattended.
- Do not let children play with the packaging plastic bags.

1.5 Identification plate

The identification plate bears the technical data, serial number and brand name of the appliance. Do not remove the identification plate for any reason.

1.6 This user manual

This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.

Read this user manual carefully before using the appliance.

1.7 How to read the user manual

This user manual uses the following reading conventions:

Instructions



General information on this user manual, on safety and final disposal.

Description



Description of the appliance and its accessories.

Use



Information on the use of the appliance and its accessories, cooking advice.

Cleaning and maintenance



Information for proper cleaning and maintenance of the appliance.

Installation



Information for the qualified technician: Installation, operation and inspection.



Safety instructions



Information



Advice


1. Use instruction sequence.

- Standalone use instruction.



2 Description

2.1 General Description

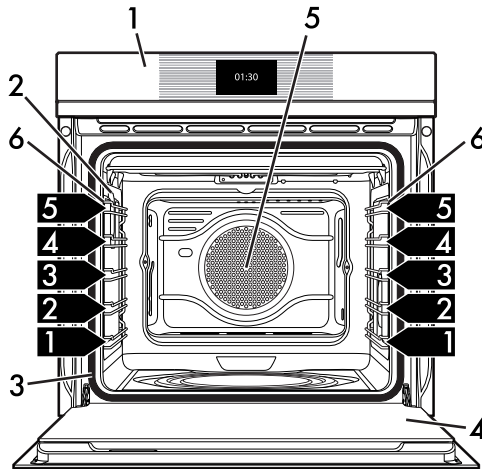

1 Control panel

2 Oven light

3 Seal

4 Door

5 Fan


6 Rack/tray support frames

1,2,3... Frame shelf





Description

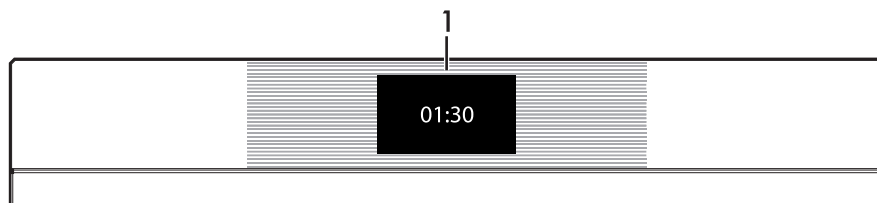2.2 Control panel



1 Display

The touchscreen display allows you to interact with the appliance. Press the icons to access the various available functions. The display will show all operational parameters, such as: selected function, time/temperature settings or pre-set cooking program settings.


In general, press the symbol  to return to the previous menu or end a function; press the symbol  to confirm the selected options.

2.3 Other parts

Shelves

The appliance features shelves for positioning trays and racks at different heights. The insertion heights are indicated from the bottom upwards (see 2.1 General Description).

Cooling fan

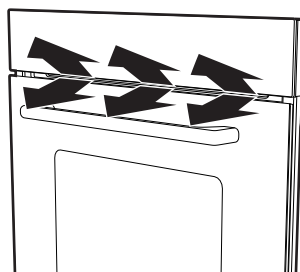






The fan cools the oven and comes into operation during cooking.

The fan causes a steady outflow of air from above the door which may continue for a brief period of time even after the appliance has been turned off.

Interior lighting

The appliance interior lighting comes on:

- When the door is opened
- When any function is selected, apart from the ,  and  functions
- Press the symbol  to manually activate the oven light or the symbol  to deactivate it during use.




2.4 Available accessories




Some models are not provided with all accessories.

Rack

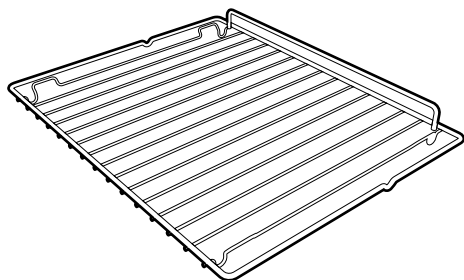


Useful for supporting containers with food during cooking.

Tray rack

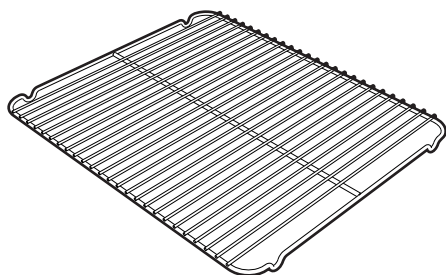


To be placed over the top of the oven tray; for cooking foods which may drip.

Oven tray

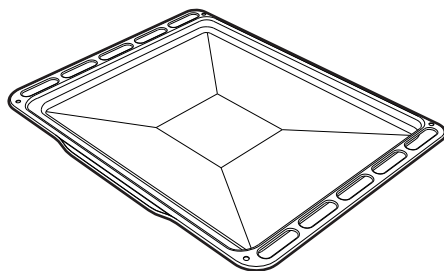

Useful for collecting fat from foods placed on the rack above.

Deep tray

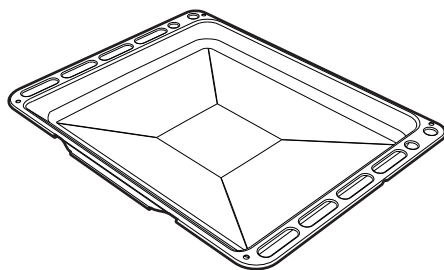

Useful for collecting fat from foods placed on the rack above and for cooking pies, pizzas, baked desserts, biscuits, etc.



The oven accessories intended to come into contact with food are made of materials that comply with the provisions of current legislation.



Supplied original and optional accessories can be requested to Authorised Assistance Centres. Use only original accessories supplied by the manufacturer.



3 Use

3.1 Instructions



High temperature inside the oven during use

Danger of burns

- Keep the oven door closed during cooking.
- Protect your hands wearing heat resistant gloves when moving food inside the oven.
- Do not touch the heating elements inside the oven.
- Do not pour water directly onto very hot trays.
- Do not allow children to get near the oven when it is in operation.



High temperature inside the oven during use

Danger of fire or explosion

- Do not spray any spray products near the oven.
- Do not use or leave flammable materials near the oven.
- Do not use plastic kitchenware or containers when cooking food.
- Do not put sealed tins or containers in the oven.
- Do not leave the oven unattended during cooking operations where fats or oils could be released.
- Remove all trays and racks which are not required during cooking.



Improper use

Risk of damage to enamelled surfaces

- Do not cover the bottom of the oven cavity with aluminium or tin foil sheets.
- If you wish to use greaseproof paper, place it so that it will not interfere with the hot air circulation inside the oven.
- Do not place pans or trays directly on the bottom of the oven cavity.
- Do not pour water directly onto very hot trays.

3.2 First use

1. Remove any protective film from the outside or inside of the appliance, including accessories.
2. Remove any labels (apart from the technical data plate) from the accessories and from the oven cavity.
3. Remove and wash all the appliance accessories (see 4 Cleaning and maintenance).
4. Heat the empty oven at the maximum temperature to burn off any residues left by the manufacturing process.





3.3 Using the accessories

Racks and trays

Racks and trays have to be inserted into the side guides until they come to a complete stop.

- The mechanical safety locks that prevent the rack from being taken out accidentally have to face downwards and towards the oven back.

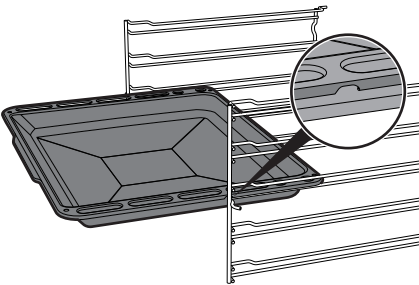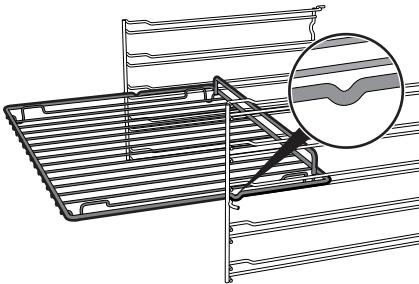


Gently insert racks and trays into the oven until they come to a stop.



Clean the trays before using them for the first time to remove any residues left by the manufacturing process.


Tray rack

The tray rack has to be inserted into the tray. In this way fat can be collected separately from the food which is being cooked.

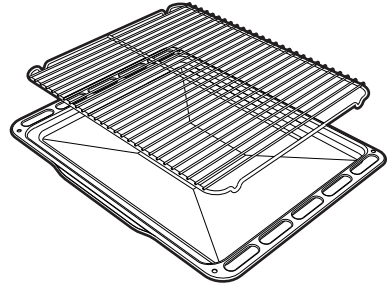

3.4 Using the oven

First use

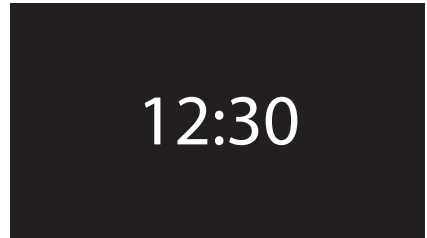

On the first use, or after a power failure, **00:00** will be flashing on the appliance's display. In order to be able to start any cooking program, the current time must be set (if the oven is being turned on for the first time, it is also recommended you set the required language).

Touch the display to enter the settings menu.



On first use, the appliance language is set to "English" by default.




Use



When first connecting or after the power has been cut for a time it will be necessary to wait a few seconds before you can interact with the appliance.

Home screen

Press the time on the display. It is now possible to select the various available functions on the home screen of the appliance.

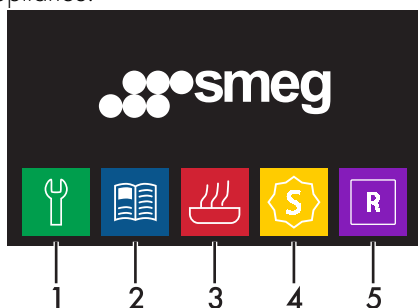


- 1 Settings
- 2 Preset programs
- 3 Cooking functions
- 4 Special functions
- 5 Personal programs

Favourites

Press the text  on the "home screen" to display the last preset programs or personal programs used


(in the example, the program **recipe 1** has been stored, see "Adding a recipe").

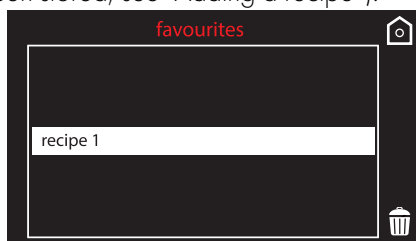


Deleting favourites

If you wish to delete the memory:

1. Press the text  on the "home screen" to display the last preset programs or personal programs used.
2. Press the symbol .

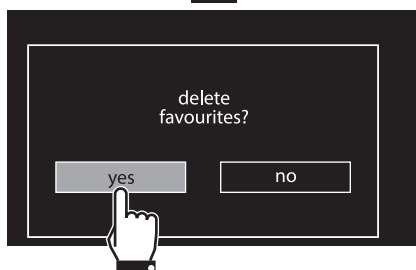


3. Select **yes** if you wish to delete the favourites.

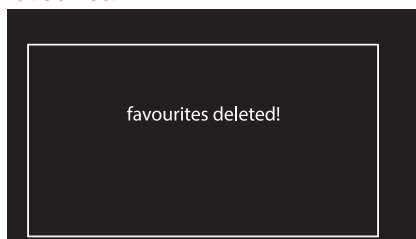




Cooking functions


1. Select the **cooking functions**  icon on the "home screen".




2. Select the required function.

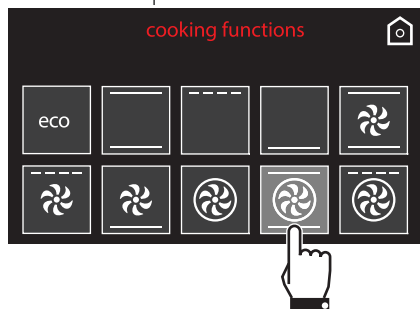

3. The appliance will begin preheating. The display will show the chosen function, the pre-set temperature, the current time and the progress bar of the temperature reached (preheating).

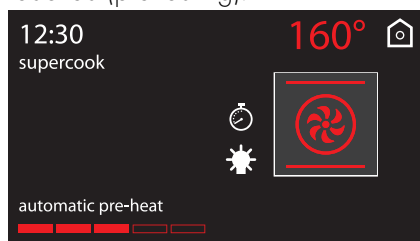


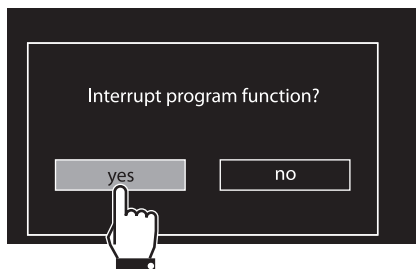
4. When the preheating stage is over a buzzer will sound to indicate that the food can be placed inside the oven.

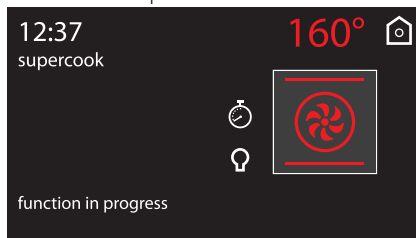


It is not recommended to place the dish in the oven during the automatic pre-heat stage.

Interrupting a function

Press the return symbol  for approximately 2 seconds to interrupt a cooking function. Select the required option.




Press and hold the return symbol  for a few seconds to immediately interrupt cooking at any time and return to the main menu.



Use

Changing a function during cooking


1. Press the function symbol to modify it.

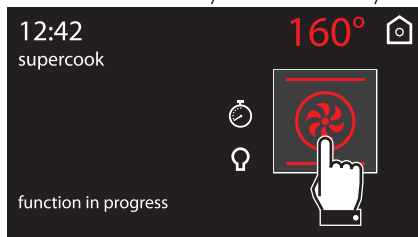

2. Press the symbol of the new function required.



3. The display will show the new function chosen, the preset temperature, the current time and the progress in reaching the new temperature.

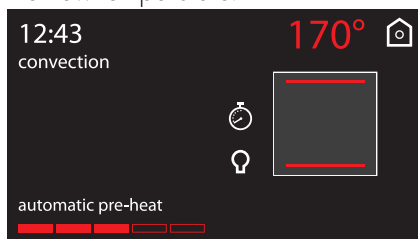


Modifying the preset temperature


1. Press the displayed temperature to change it.




2. Use the symbols  and  to set the required temperature.

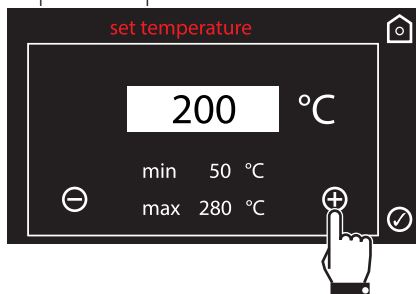

3. Press the symbol  to confirm.

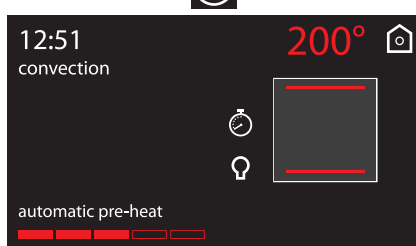

To avoid accidentally exiting the current function or screen displayed, the symbol  must be pressed and held down for longer than usual. Pressing and holding the symbol for 3 seconds always exits the current screen and function.



List of cooking functions

ECO

Eco

The combination of the fan and the circular heating element, in ECO mode, is particularly indicated for cooking on a single shelf, with reduced power consumption.

Convection

As the heat comes from above and below at the same time, this system is particularly suitable for certain types of food. Traditional cooking, also known as static cooking, is suitable for cooking just one dish at a time. Perfect for all types of roasts, bread and cakes and in any case particularly suitable for fatty meats such as goose and duck.

Grill

The heat coming from the grill element gives perfect grilling results above all for thin and medium thickness meat and in combination with the rotisserie (where fitted) gives the food an even browning at the end of cooking. Perfect for sausages, ribs and bacon. This function enables large quantities of food, particularly meat, to be grilled evenly.

Bottom

The heat coming just from the bottom allows you to complete the cooking of foods that require a higher bottom temperature, without affecting their browning. Perfect for cakes, pies, tarts and pizzas.



Fan assisted

The operation of the fan, combined with traditional cooking, ensures consistent cooking even with complex recipes. Perfect for biscuits and cakes, even when cooked simultaneously on several levels. (For multiple-level cooking, we recommend using the 1st and 4th shelves.)



Fan grill

The air produced by the fan softens the strong heatwave generated by the grill, grilling perfectly even very thick foods. Perfect for large cuts of meat (e.g. shin of pork).



Baker's function

The combination of the fan with just the lower heating element allows cooking to be completed more rapidly. This system is recommended for sterilising or for finishing off the cooking of foods which are already well-cooked on the surface, but not inside, which therefore need a little more heat. Perfect for any type of food.



Fan forced

The combination of the fan and the circular heating element (incorporated in the rear of the oven) allows you to cook different foods on several levels, as long as they need the same temperatures and type of cooking. Hot air circulation ensures instant and even distribution of heat. It will be possible, for instance, to cook fish, vegetables and biscuits simultaneously (on different levels) without mixing odours and flavours.



Supercook

The combination of fan-assisted cooking and traditional cooking allows different foods to be cooked on several levels extremely quickly and efficiently, without odours and flavours mingling. Perfect for large volumes that call for intense cooking. (For multiple-level cooking, we recommend using the 1st and 4th shelves.)



Circulaire + fan with grill

The combination of fan assisted cooking and traditional cooking allows you to cook different foods on several levels extremely quickly and efficiently, without odours and flavours mingling. Perfect for large volumes that call for intense cooking.



3.5 Cooking advice

General advice

- Use a fan assisted function to achieve consistent cooking at several levels.
- It is not possible to shorten cooking times by increasing the temperature (the food could be overcooked on the outside and undercooked on the inside).
- To prevent condensation from forming on the glass, hot food should not be left inside the oven for too long after cooking.

Advice for cooking meat

- Cooking times vary according to the thickness and quality of the food and to consumer taste.
- Use a meat thermometer when roasting meat, or simply press on the roast with a spoon. If it is hard, it is ready; If not, it needs another few minutes cooking.

Advice for cooking with the Grill and the Fan with grill

- Meat can be grilled even when it is put into the cold oven or into the preheated oven if you wish to change the effect of the cooking.
- With the Fan with grill function, we recommend that you preheat the oven before grilling.
- We recommend placing the food at the centre of the rack.

Advice for cooking desserts/pastries and biscuits

- Use dark metal moulds: They help to absorb the heat better.
- The temperature and the cooking time depend on the quality and consistency of the dough.
- To check whether the dessert is cooked right through: At the end of the cooking time, put a toothpick into the highest point of the dessert. If the dough does not stick to the toothpick, the dessert is cooked.
- If the dessert collapses when it comes out of the oven, on the next occasion reduce the set temperature by about 10°C, selecting a longer cooking time if necessary.

Advice for defrosting and proving

- Place frozen foods without their packaging in a lidless container on the first shelf of the oven.
- Avoid overlapping the food.
- To defrost meat, use the rack placed on the second level and a tray on the first level. In this way, the liquid from the defrosting food drains away from the food.
- The most delicate parts can be covered with aluminium foil.
- For successful proving, a container of water should be placed in the bottom of the oven.



Use


To save energy


- Stop cooking a few minutes before the time normally used. Cooking will continue for the remaining minutes with the heat which has accumulated inside the oven.
- Reduce any opening of the door to a minimum to avoid heat dispersal.
- Keep the inside of the appliance clean at all times.
- (Where fitted) When it is not being used, remove the pizza plate and put the cover back in its slot.

Timer during function



This function only activates the buzzer, without stopping cooking.

1. Press the symbol  during a cooking function.
2. Press on **timer**.

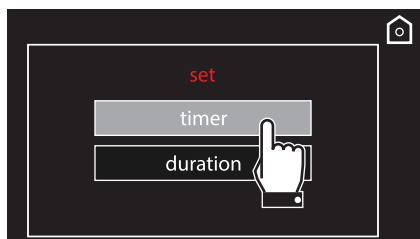



The duration of the timer can be from a minimum of 1 minute to a maximum of 4 hours.

3. Enter the required duration (for example 25 minutes: first touch the minutes box, then the numbers 2 and 5).



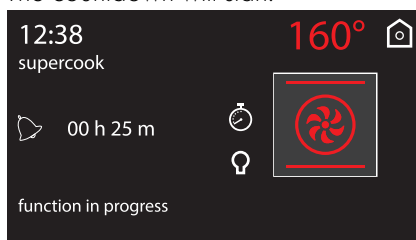


4. Press the symbol  to confirm.
5. The countdown will start.



6. Wait for the buzzer to indicate that the time has finished. The symbol  flashes.



Press the symbol  or  to deactivate the buzzer. Press the symbol  again to select another minute minder.



Timed cooking




Timed cooking is the function which allows a cooking operation to be started and then ended after a specific length of time set by the user.




Activation of timed cooking cancels any minute minder timer which may previously have been set.

1. Press the symbol  during a cooking function.
2. Press on **duration**.

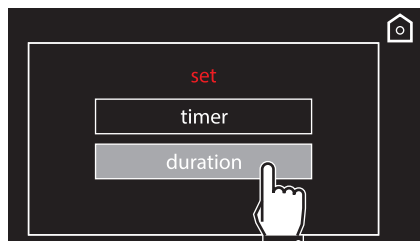




The duration of the timer can be from a minimum of 1 minute to a maximum of 13 hours.

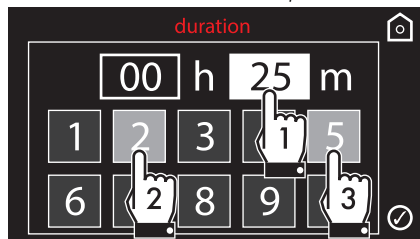
3. Enter the required duration (for example 25 minutes: first touch the minutes box, then the numbers 2 and 5).



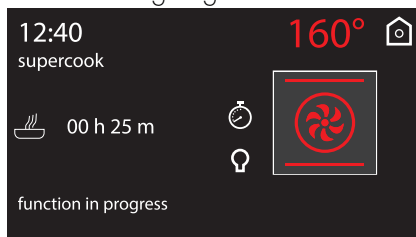

4. Press the symbol  to confirm.
5. Timed cooking begins.

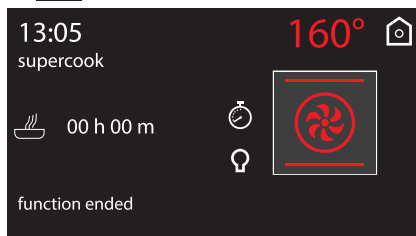

6. At the end of the cooking cycle, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing the symbols  or .




To extend the cooking time manually, press the symbol  followed by the symbol . The appliance will resume its normal operation with the previously selected cooking settings.




Use

Modifying the data set during timed cooking


During operation, it is possible to modify timed cooking duration:


1. Press the symbol .
2. Press on **duration**.

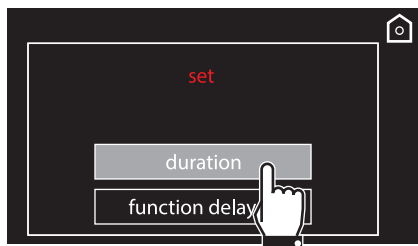

3. Enter the new duration required and press the symbol  to confirm.

3. Enter the time at which you require cooking to end (for example at 7:30 p.m.: first touch the hours box, then the numbers 1 and 9; touch the minutes box, then the numbers 3 and 0).

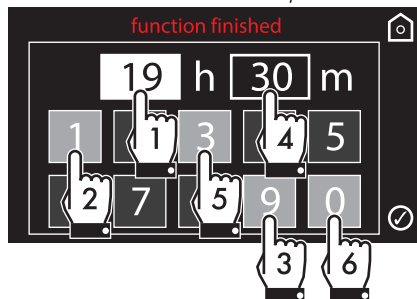


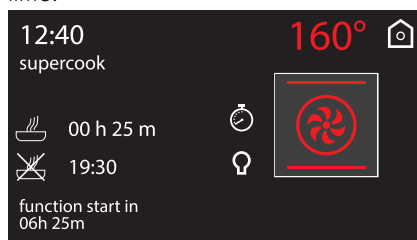
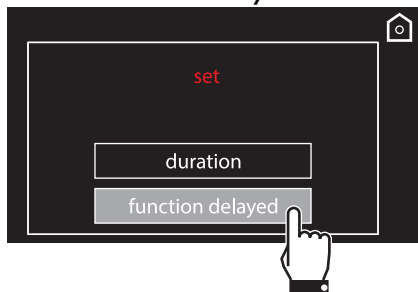
4. Press the symbol  to confirm.
5. The appliance waits for the delay start time.

Delayed cooking



Delayed cooking is the function which allows a cooking operation to be stopped at an established time depending on the time set by the user, after which the oven will switch off automatically.

1. After setting a cooking duration, press the symbol .
2. Press on **function delayed**.






6. Based on the values set, the appliance will start a preheating stage of approximately 10 minutes.






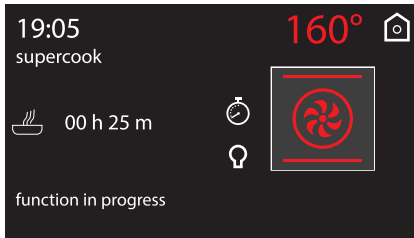

7. It will then proceed with the selected function.

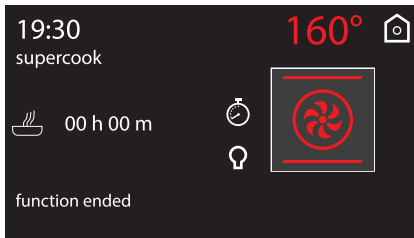

8. At the end of the cooking cycle, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing the symbols  or .



To extend the cooking time manually, press the symbol  followed by the symbol . The appliance will resume its normal operation with the previously selected cooking settings.





For safety reasons, it is not possible to set the cooking end time by itself without setting the cooking duration.


Modifying the data set during programmed cooking






After modifying the cooking duration, the end of cooking time must be re-set.

During operation, it is possible to modify programmed cooking duration:

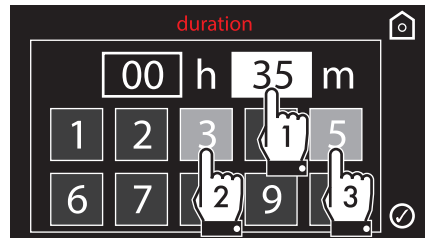1. Press the symbol .
2. Enter the new duration required (for example 35 minutes) and press the symbol  to confirm.




3. Press the symbol  again.
4. Enter the new cooking end time required (for example 7:00 p.m.) and press the symbol  to confirm.

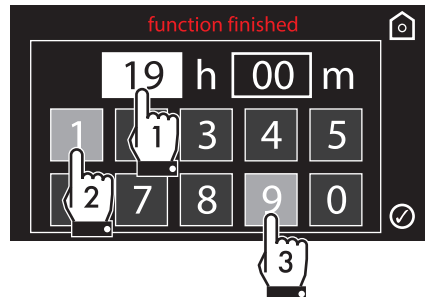



3.6 Special functions

The special functions menu contains some functions like the timer with the oven off, defrosting or cleaning functions.

Select the **special functions**  icon on the “home screen”.



Certain functions are not available on all models.

List of special functions



Timer

This function sounds a buzzer when the time set has elapsed.



Defrost by weight

This function defrosts foods on the basis of the type and weight of the frozen product.



Defrost by time

This function allows you to defrost food on the basis of a selectable time.



Proving

The proving function, using the heat coming from the top, makes it possible to prove all types of dough, guaranteeing perfect results quickly.



Food warming

To heat food or keep it hot.



Sabbath

This function allows food to be cooked while respecting the requirements of the Jewish Sabbath.



Vapour clean (on some models only)

This function makes cleaning easier using the steam produced by a little quantity of water poured onto the appropriate drawing placed on the bottom.



**ECO
P**

ECO pyrolytic (on some models only)

When this function is set, the oven executes a pyrolytic cycle at 500°C for a pre-set time. For use in the case of ovens which are not too dirty.

P

Pyrolytic (on some models only)

Setting this function, the oven reaches temperatures up to 500°C, destroying all the grease which forms on the internal walls.

i

The more complex special functions are illustrated below. For functions such as Vapour Clean, Pyrolytic and ECO Pyrolytic, see "4 Cleaning and maintenance".

Timer


i

The duration of the minute minder can be from a minimum of 1 minute to a maximum of 4 hours.


1. Select **timer** from the "special functions" menu.




2. Enter the required duration (for example 25 minutes: first touch the minutes box, then the numbers 2 and 5).

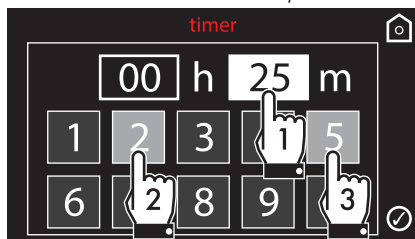

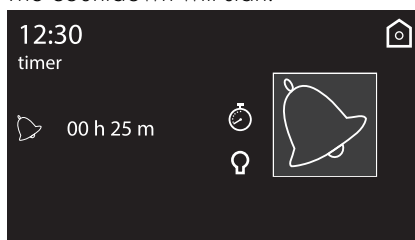


3. Press the symbol  to confirm.
4. The countdown will start.




5. Wait for the buzzer to indicate that the time has finished. The symbol  flashes.




Press the symbol  or  to deactivate the buzzer. Press the symbol  again to select another timer.



Use

6. If you leave the timer setting screen, the symbol  will be displayed at the top left, indicating that a minute minder timer is active.

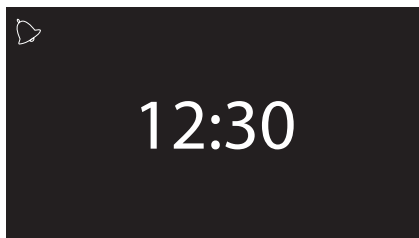

You must return the counter to zero to remove the special timer.




If a function is activated after setting a timer time, this time will be automatically used as a timer for the function, except for some special functions, automatic preset programs and personal programs.




This function only activates the buzzer, without stopping cooking.

Defrost by weight


1. Place the food inside the appliance.
2. Select **defrost by weight** from the "special functions" menu.

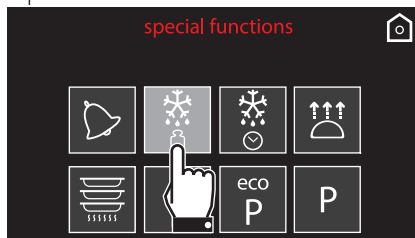

3. Select the type of food to defrost.

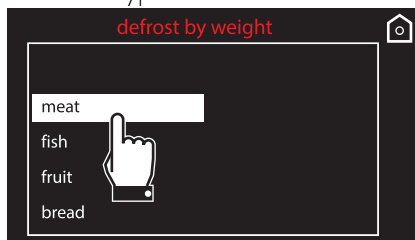


4. Use the symbols  and  to enter the weight (in kilograms) of the food to defrost.

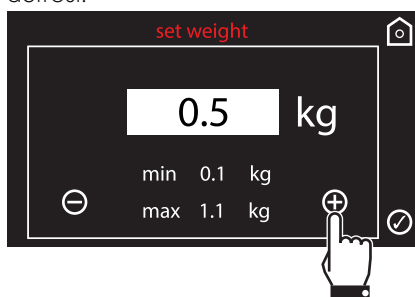


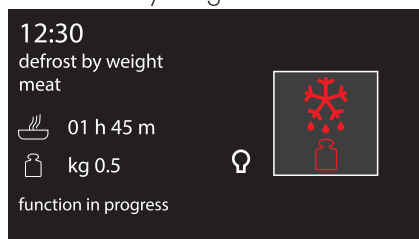
5. Press the symbol  to confirm.




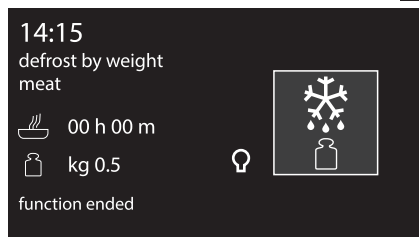
6. Select **start** to start defrosting, or select **change** to further modify the set parameters.

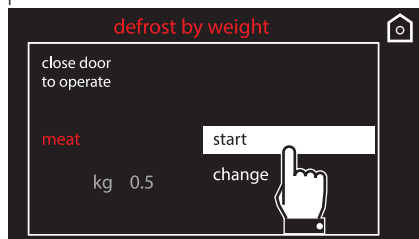

7. Press the symbol  to start the defrost by weight function.
8. The defrost by weight will start.



9. At the end of the function, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing the symbol .



Preset parameters:

Type	Weight (kg)	Time
Meat	0.5	01h 45m
Fish	0.4	00h 40m
Fruit	0.3	00h 45m
Bread	0.3	00h 20m


NE

Defrost by time

1. Place the food inside the appliance.
2. Select **defrost by time** from the "special functions" menu.




3. Enter the required duration (for example 1 hour: first touch the hours box, then the numbers 0 and 1).

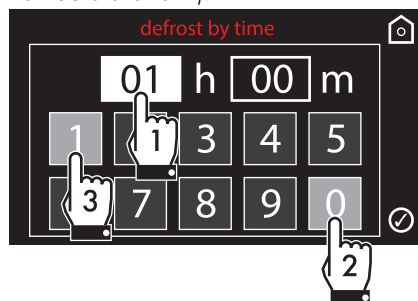



4. Press the symbol  to confirm.





Use

5. Press the symbol  again to start the defrost by time function.
6. The defrost by time will start.



7. While the function is in progress, it is possible to further modify the defrosting duration (see "Timed cooking"). Press the symbol  to make the desired changes.
8. At the end of the function, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing the symbol .

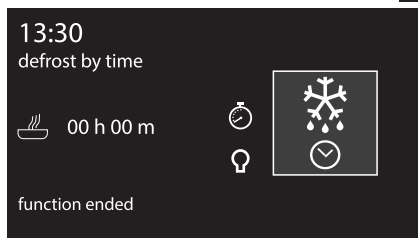

 The duration of the defrost by time can be from a minimum of 1 minute to a maximum of 13 hours.

Proving



For successful proving, a container of water should be placed in the bottom of the oven.


1. Position the dough to prove on the second level.
2. Select **proving** from the "special functions" menu.




3. Press the symbol  to start the proving function.
4. The appliance will begin preheating.



5. It will then proceed with the selected function.

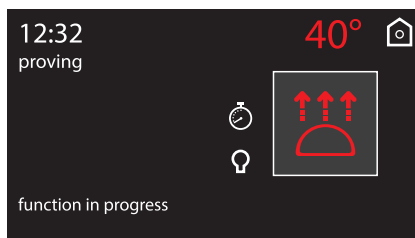





6. While the function is in progress, it is possible to set a timer for a maximum of 4 hours (see "Timer during function"), a proving duration (see "Timed cooking") or a delayed proving (see "Delayed cooking"). Press the symbol  to make the desired changes.




Unless otherwise set, the proving will have a maximum duration of 13 hours.



For optimum proving, the oven light is kept off, but it can be turned on at any time with the symbol .


7. At the end of the function, "function ended" appears on the display and a buzzer will sound that can be deactivated by pressing the symbol .

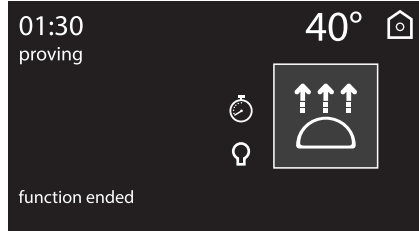

It is not possible to modify the default temperature of the proving function (40°C).


Food warming

1. Position the tray on the first shelf and place the plates to be warmed at the centre of it.

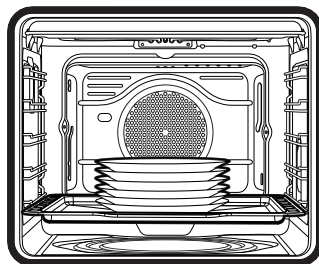


Do not stack plates too high. Stack plates a maximum of 5/6 high.

2. Select **food warming** from the "special functions" menu.

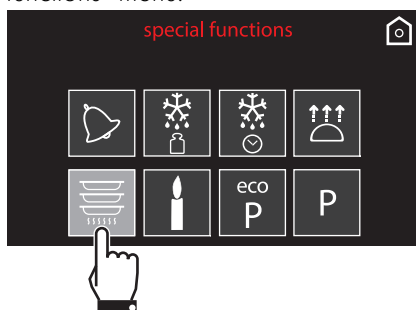



Use


3. Press the symbol  to start the food warming function, or press the preset temperature value to change it (from 40° to 80° C).

4. The appliance will begin preheating.



5. It will then proceed with the selected function.






6. While the function is in progress, it is possible to set a timer for a maximum of 4 hours (see "Timer during function"), a warming duration (see "Timed cooking") or a delayed warming (see "Delayed cooking"). Press the  symbol to make the desired changes.



Unless otherwise set, the food warming function will have a maximum duration of 13 hours.

7. At the end of the function, "function ended" appears on the display and a buzzer will sound that can be

deactivated by pressing the symbol  or .

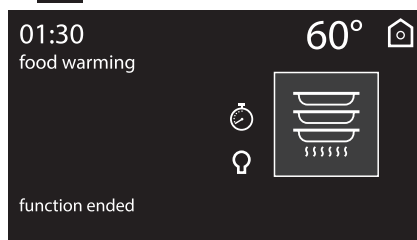




Sabbath



The appliance follows some specific behaviour when operating in this function:


- Cooking can proceed indefinitely, it is not possible to set any cooking duration.
- No preheating will be performed.
- The cooking temperature which can be selected varies between 60-100 °C.
- Oven light disabled, any operation such as opening the door or manual activation will not activate the light.
- Oven fan disabled.
- Buzzers disabled.





After activating the Sabbath function it will no longer be possible to modify any parameters. Any action will produce no effect; only the return symbol  remains active to allow you to return to the main menu.

1. Select **sabbath** from the "special functions" menu.



2. Press the symbol  to start the Sabbath function, or press the preset temperature value to change it (from 60° to 100° C).

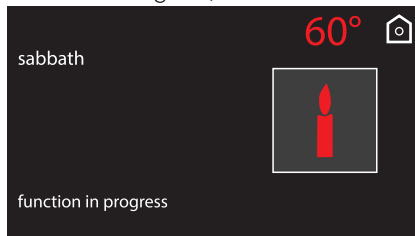


3. When finished, press and hold the return symbol  to return to the main menu.



Use



3.7 Preset programs

This mode allows you to select a pre-set food cooking program. The appliance will automatically calculate the optimum cooking parameters based on the weight entered.

Select the **preset programs**  icon on the “home screen”.




Starting a program


1. Press the symbols  and  to select the type of dish required from the “preset programs” menu. Then press the name of the dish to confirm.




2. Select the sub-category of dish to cook and press the name of the sub-category of dish to confirm.

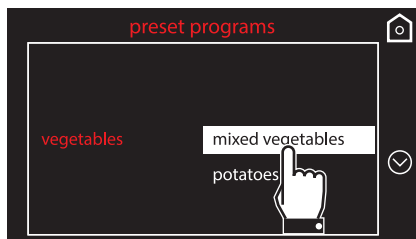

3. Select the type of cooking (where possible, depending on the dish chosen) and press the name of the cooking type to confirm.

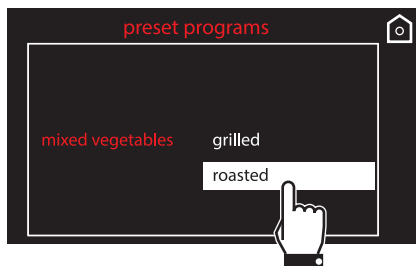

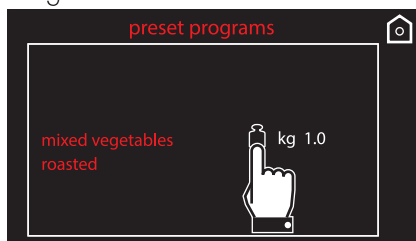

4. Press the symbol  to change the weight of the dish.






5. Use the symbols  and  to enter the weight (in kilograms) of the dish.



6. Press the symbol  to confirm.
7. Press the symbol  again to move to the next screen.
8. At this point it is possible to start the selected preset program, permanently modify the settings or perform delayed cooking.



9. If you choose the **start** option, cooking will start with the preset program's predefined settings and the display will show all the parameters set.

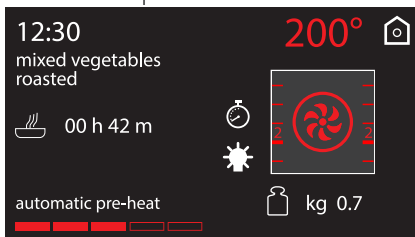



The time shown does not include the time to reach temperature.




Some predefined cooking parameters can be changed at any time, even after cooking has started.

10. A buzzer will sound and a message will be displayed to indicate when to place the food in the oven and enable the start of cooking.

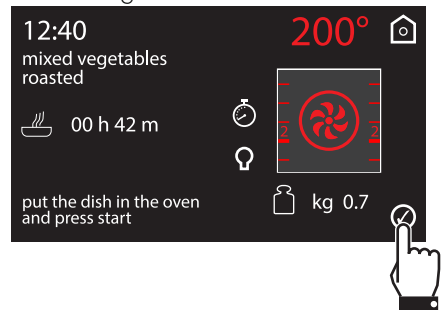


11. Press the  symbol to start cooking.

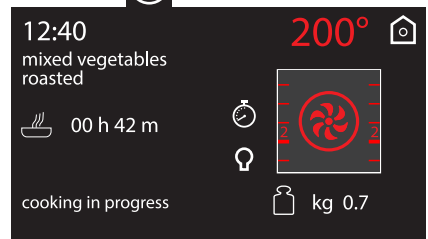






Use


Ending a preset program

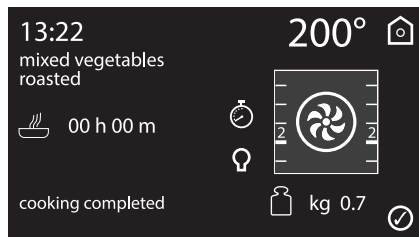
1. At the end of the preset program, the appliance will notify the user with a buzzer and the symbol  will flash.



2. Press the symbol  to perform cooking with the same parameters currently set (press the symbol twice if the buzzer is active). The appliance will automatically restart cooking if it is at the correct temperature; otherwise it will also resume preheating.


 Cooking in sequence is useful to cook multiple dishes of the same type. For example, it can be used to cook several pizzas in a row.

 It is not recommended to place the dish in the oven during the automatic pre-heat stage. Wait for the specific message.


3. Press and hold the return symbol  to exit and end the preset program.

Changing a preset program permanently


1. Inside the selected preset program, select **change** from the menu of the selected dish.

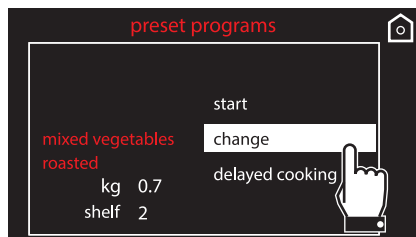

All parameters which can be changed will be highlighted in yellow on the main screen.

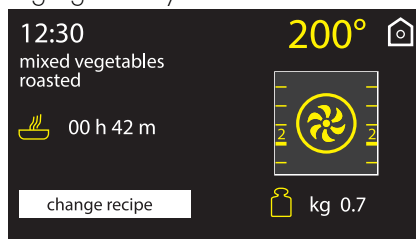

2. Press the parameter you wish to change:
 - Cooking temperature

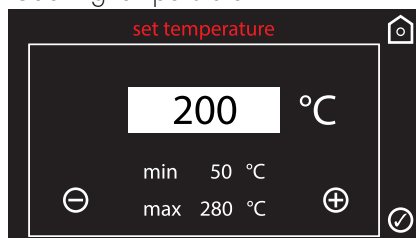




- Cooking function




- Cooking time

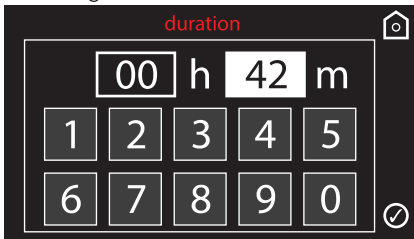


- Oven shelf





- Weight of dish

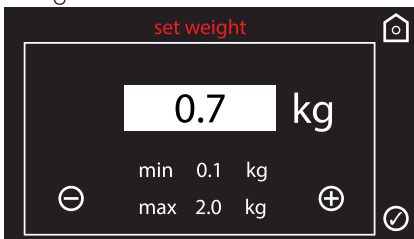


3. Make the required changes.

4. Press the symbol  to store the program. The appliance will ask to confirm the changes which have just been made.

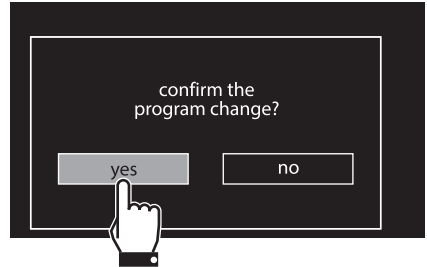

 If the changes are not confirmed, the preset program will remain unchanged.

5. If the change is confirmed the display will show confirmation of this.

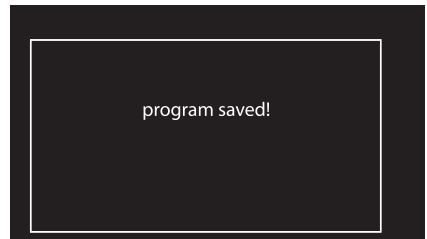



Use

Preset program table

MEATS

Subcategory	Cooking	Weight (Kg)	Function	Level	Temp. (°C)	Time (minutes)
Roast beef	rare	1	Fan forced	2	200	35
	medium	1	Fan forced	2	200	40
	well done	1	Fan forced	2	200	45
Pork loin	-	1	Supercook	2	190	75
Lamb	medium	1	Supercook	2	190	100
	well done	1	Supercook	2	190	110
Veal	-	1	Fan assisted	2	190	65
Pork spare ribs	-	1	Fan grill	4	250	16
Pork chops	-	1	Fan grill	4	280	15
Pork sausages	-	1	Fan grill	4	280	12
Bacon	-	0.5	Fan grill	4	250	7
Turkey	roasted	3	Fan assisted	1	190	110
Chicken	roasted	1	Supercook	2	200	64
Rabbit	roasted	1.5	Fan forced	2	190	80

FISH

Subcategory	Cooking	Weight (Kg)	Function	Level	Temp. (°C)	Time (minutes)
Fresh fish	-	0.5	Fan assisted	2	160	35
Frozen fish	-	0.5	Fan forced	2	160	45
Firm fish	-	1	Fan forced	2	160	45
Delicate fish	-	0.8	Fan forced	2	160	60
Snapper	-	1	Fan forced	2	180	30
Snapper	-	1	Fan forced	2	160	35

VEGETABLES

Subcategory	Cooking	Weight (Kg)	Function	Level	Temp. (°C)	Time (minutes)
Mixed vegetables	grilled	0.5	Grill	4	250	25
	roasted	1	Fan forced	2	200	45
Potatoes	roasted	1	Supercook	2	220	40
	Frozen fried	0.5	Fan assisted	2	220	13



DESSERTS/PASTRIES

Subcategory	Cooking	Weight (Kg)	Function	Level	Temp. (°C)	Time (minutes)
Ring cake	-	1	Fan assisted	2	160	60
Biscuits	-	0.6	Supercook	2	160	18
Muffins	-	0.5	Fan forced	2	160	18
Profiteroles	-	0.5	Supercook	2	180	70
Meringues	-	0.3	Supercook	2	120	90
Sponge cake	-	1	Fan forced	2	160	60
Strudel	-	1	Convection	2	170	40
Tarts	-	0.8	Convection	2	170	40
Brioche bread	-	1	Fan assisted	2	180	40
Croissants	-	0.6	Fan forced	2	160	30

BREAD

Subcategory	Cooking	Weight (Kg)	Function	Level	Temp. (°C)	Time (minutes)
Leavened bread	-	1	Fan forced	2	200	30
Focaccia	-	1	Supercook	2	180	25

PIZZA

Subcategory	Cooking	Weight (Kg)	Function	Level	Temp. (°C)	Time (minutes)
Pan baked pizza	-	1	Fan assisted	1	280	7
Stone baked pizza	fresh	0.5	Fan assisted	1	280	4
	frozen	0.3	Fan assisted	1	230	6

PASTA/RICE

Subcategory	Cooking	Weight (Kg)	Function	Level	Temp. (°C)	Time (minutes)
Pasta bake	-	2	Convection	1	220	40
Lasagne	-	2	Convection	1	230	35
Paella	-	0.5	Fan assisted	2	190	25
Quiche	-	0.5	Convection	1	200	30
Soufflé	-	0.5	Fan forced	2	180	25



Use

LOW TEMPERATURE COOKING

Subcategory	Cooking	Weight (Kg)	Function	Level	Temp. (°C)	Time (minutes)
Veal	-	1	Supercook	2	90	360
Beef	rare	1	Convection	2	90	105
	well done	1	Convection	2	90	380
Pork	-	1	Supercook	2	90	330
Lamb	-	1	Supercook	2	90	360



The cooking times in the table refer to the dish indicated in the program and are a guide only; they may vary depending on personal taste.




The tables give the factory-set data. To reset a preset program with the original settings after it has been modified, just enter the data given in the table.



If ECO logic mode (see 3.9 Settings) has been activated, cooking times or preheating times may vary.

3.8 Personal recipes

This menu allows you to enter a personal recipe with the parameters you wish to use. On first use, the appliance will only offer to let you add a new recipe. After storing your recipes, these will then be available in the relative menu.

Select the **personal recipes**  icon on the “home screen”.



Up to 10 personal recipes can be stored.




Adding a recipe

1. Select **add** from the "personal recipes" menu.




All parameters which can be changed will be highlighted in yellow on the main screen.

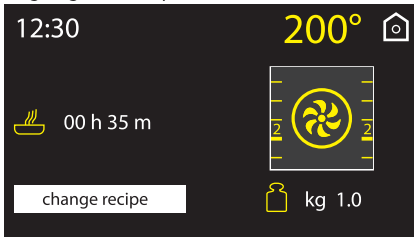

2. Press the parameter you wish to change:


- Cooking temperature

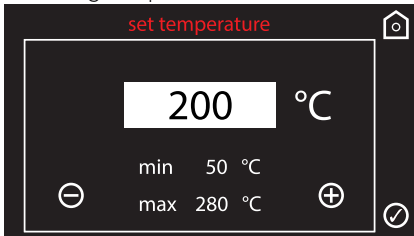

- Cooking function




- Cooking time

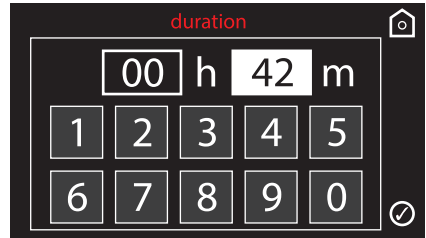

- Oven shelf



- Weight of dish

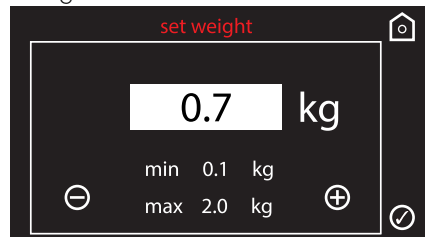

3. Make the required changes.




Use

4. Press the symbol  to store the recipe.

The appliance will ask you to enter a name for the recipe you have just created.




5. Enter the name of the recipe. The character  deletes the previous letter (in the example, the recipe, **recipe 1** has been stored).



The recipe name can contain maximum 10 characters, including spaces.



In order to be able to save the recipe, the name must contain at least one character.

6. After entering the name of the new recipe, press the symbol  to confirm.

7. The appliance will ask to confirm the changes which have just been made. Select **yes** if you wish to store the recipe.



If you select **no** you will lose all changes made.

8. If saving the recipe is confirmed the display will show confirmation of this.






Starting a personal recipe


1. Select a previously saved **personal recipe** from the "personal recipes" menu (in the example the recipe, **recipe 1**, has been saved).



2. Select the **start** option.

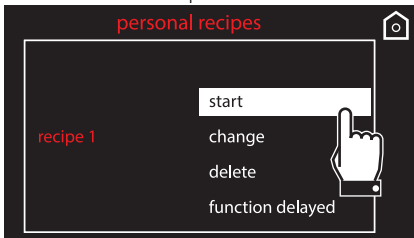

3. Cooking will start with the parameters previously set for the recipe.

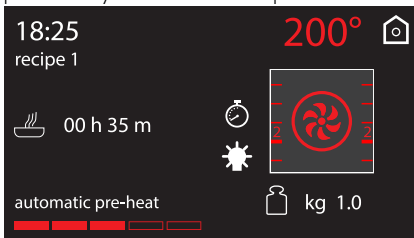


During cooking it is always possible to modify the temperature and cooking time, but this will not be saved to the recipe for future use.

Changing a personal recipe

1. Select a previously saved **personal recipe** from the "personal recipes" menu (in the example the recipe, **recipe 1**, has been saved).




2. Select the **change** option.

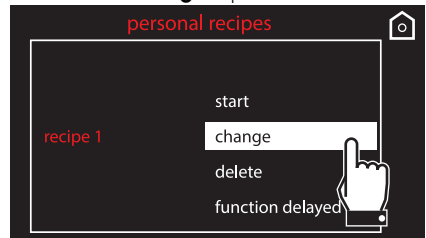

3. Repeat the same steps, starting at point 2 of the chapter "Adding a recipe".

Deleting a personal recipe

1. Select a previously saved **personal recipe** from the "personal recipes" menu (in the example the recipe **recipe 1** has been saved).

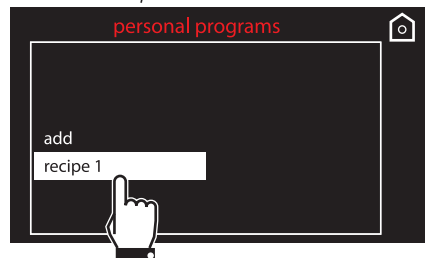




Use

2. Select the **delete** option.



3. Confirm the deletion. Select **yes** to permanently delete the recipe.

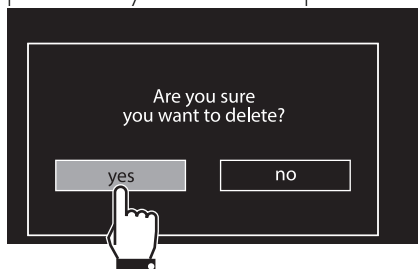

4. If you confirm the deletion, the display will show confirmation of this.




Delay cooking


1. Select a previously saved **personal recipe** from the "personal recipes" menu (in the example the recipe, **recipe 1** has been saved).




2. Select the **function delayed** option.

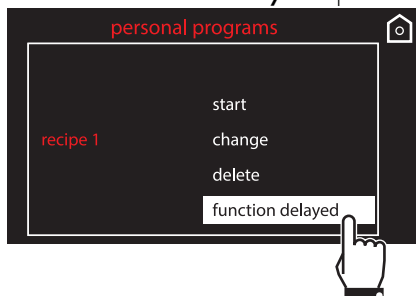


3. Enter the time at which you require cooking to end (for example at 7:30 p.m.: first touch the hours box, then the numbers 1 and 9; touch the minutes box, then the numbers 3 and 0).

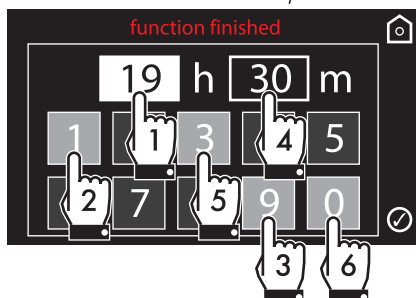



4. Press the symbol  to confirm.
5. The appliance waits for the delay start time.

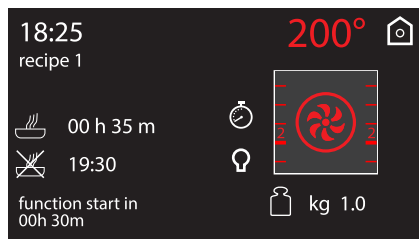

3.9 Settings

The product is set using this menu.

Select the **settings**  icon on the "home screen".




In the event of a temporary power cut, all personal settings will remain stored.

Language




Sets the interface language from those available.

1. Select **language** from the "settings" menu.

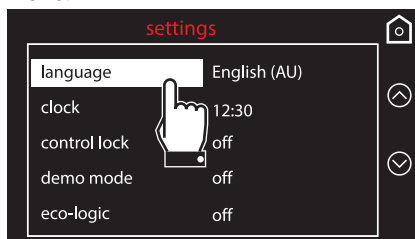

2. Press the symbols  and  to select the required language.

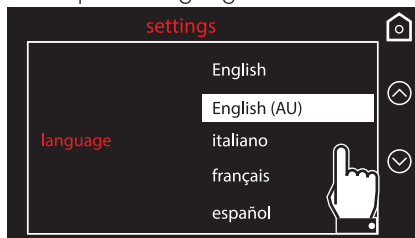

3. Confirm the selected language.




Use

Clock




Sets the time displayed.

1. Press the symbol  or  and select **clock** from the "settings" menu.

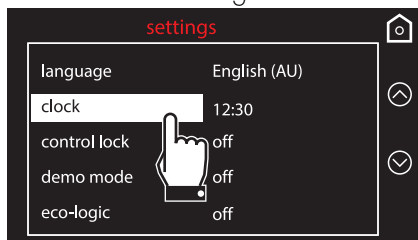

2. Enter the current time

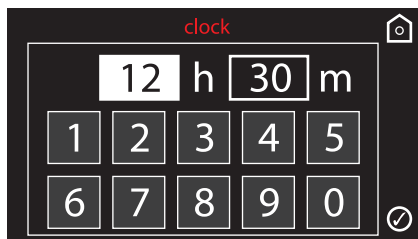


3. Press the symbol  to confirm.

Control lock



Allows the appliance to automatically lock the controls after one minute of normal operation without any intervention from the user.

1. Press the symbol  or  and select **controls lock** from the "settings" menu.

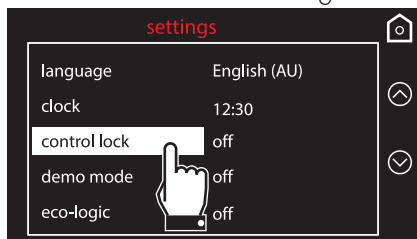


2. To confirm activation of the controls lock, select **yes**.



During normal operation it is indicated by the indicator light  coming on.




To temporarily release the lock during cooking, press and hold the symbol  for 3 seconds. One minute after the last setting the lock will become active again.




Demo mode (for showrooms only)

i This mode deactivates all the appliance's heating elements, while keeping the control panel active.

1. Press the symbol  or  and select **demo mode** from the "settings" menu.

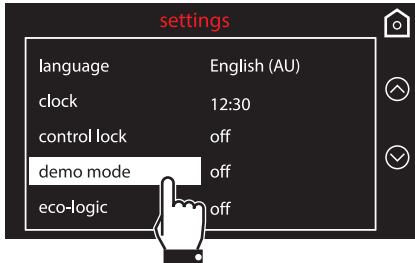

2. To confirm activation of demo mode, select **yes**.

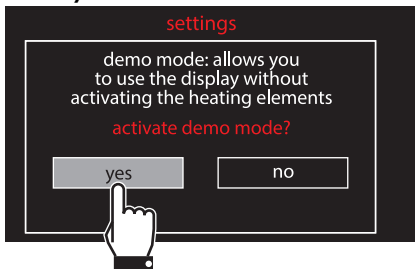


i If the mode is active, "demo mode" will be shown on the display.


 To use the appliance normally, set this mode to **OFF**.

Eco-Logic


i This mode allows the appliance to limit the power used. Indicated for use of multiple appliances at the same time on circuits with limited maximum power.


If this option is enabled, the symbol  will appear next to the function on the display.

1. Press the symbol  or  and select **eco-logic** from the "settings" menu.

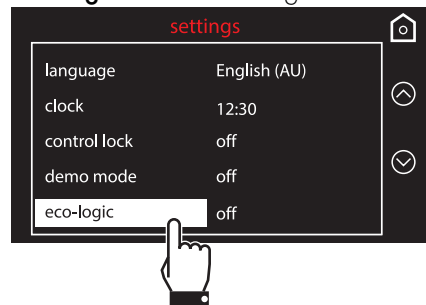

2. To confirm activation of eco-logic mode, select **yes**.

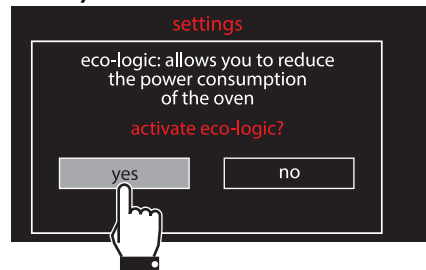

 When eco-logic mode is active, preheating and cooking times may be extended.




Use


Sound

i Whenever one of the display symbols is pressed, the appliance beeps. This setting disables these sounds.

1. Press the symbol  or  and select **sound** from the “settings” menu.

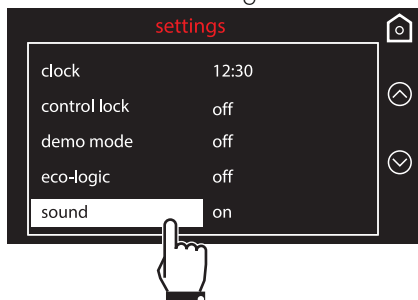


2. Select **no** to disable the sounds associated with pressing the symbols.

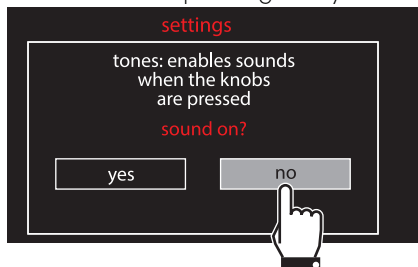

Keep warm

i This mode allows the appliance to keep cooked food warm (at low temperatures) after cooking finishes with a cooking cycle for which a duration has been set (if this is not manually interrupted), without altering the taste and smell obtained during cooking.

1. Press the symbol  or  and select **keep warm** from the “settings” menu.

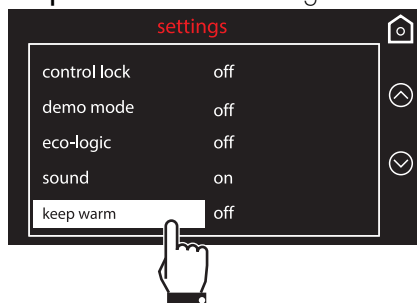


2. To confirm activation of the keep warm function, select **yes**.





The keep warm function will be activated as soon as cooking is finished; this is indicated by a series of beeps (see cooking or function finished). The screen below will be shown on the display after a few minutes.

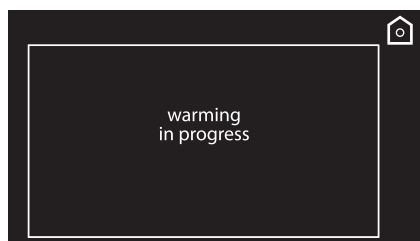


Eco-Light




For greater energy savings, the light is automatically deactivated one minute from the start of cooking.

1. Press the symbol  or  and select **eco-light** from the "settings" menu.

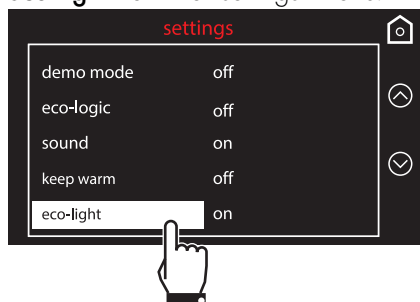

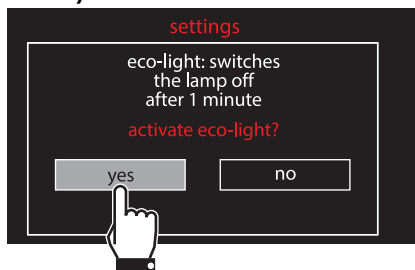

2. To confirm activation of eco-light mode, select **yes**.



To stop the appliance from automatically deactivating the light after one minute, set this mode to OFF.



Manual on/off control is always available. Press the symbol  when available, to manually activate the oven light or the symbol  to deactivate it.



The eco-light function is "**on**" by default (factory setting).




Use

Digital clock




Displays the time in digital format.


1. Press the symbol  or  and select **digital clock** from the "settings" menu.

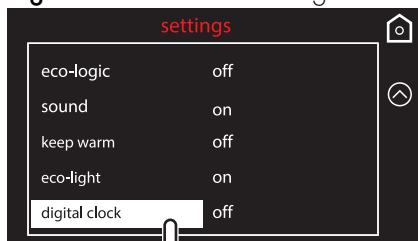

2. To confirm activation of the digital clock, select **yes**.

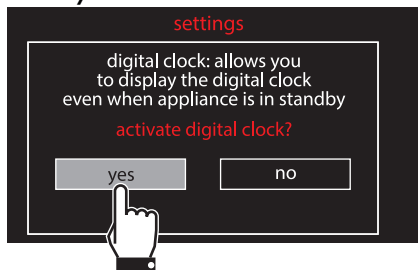

When no appliance function is active, the display will show the current time in digital format.

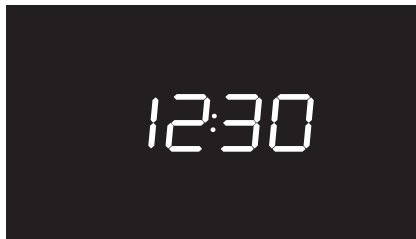

In the event of a temporary power cut, the digital version will remain selected.



4 Cleaning and maintenance

4.1 Instructions



Improper use
Risk of damage to surfaces

- Do not use steam jets to clean the appliance.
- Do not use cleaning products containing chlorine, ammonia or bleach on steel parts or parts with metallic finishes on the surface (e.g. anodizing, nickel- or chromium-plating).
- Do not use abrasive or corrosive detergents on glass parts (e.g. powder products, stain removers and metallic sponges).
- Do not use rough or abrasive materials or sharp metal scrapers.

4.2 Cleaning the surfaces

To keep the surfaces in good condition, they should be cleaned regularly after use. Let them cool first.

4.3 Ordinary daily cleaning

Always use only specific products that do not contain abrasives or chlorine-based acids.

Pour the product onto a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or a microfibre cloth.

4.4 Food stains or residues

Do not use metallic sponges or sharp scrapers as they will damage the surfaces.

Use ordinary non-abrasive products with the aid of wooden or plastic utensils if necessary. Rinse thoroughly and dry with a soft cloth or a microfibre cloth.



Do not allow residues of sugary foods (such as jam) to set inside the oven. If left to set for too long, they might damage the enamel lining of the oven.

4.5 Removing the door

For easier cleaning, the door can be removed and placed on a canvas.

To remove the door proceed as follows:


1. Open the door completely and insert two pins into the holes on the hinges indicated in the figure.

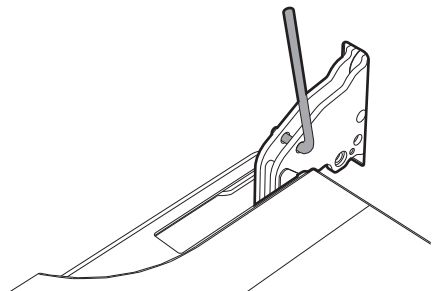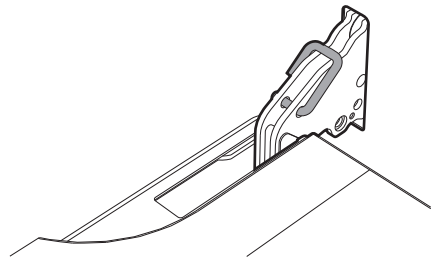




Cleaning and maintenance

2. Grasp the door on both sides with both hands, lift it forming an angle of around 30° and remove it.

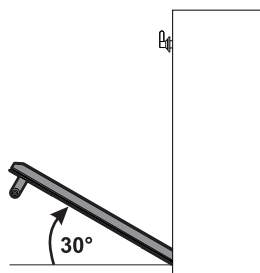

3. To reassemble the door, put the hinges in the relevant slots in the oven, making sure that grooved sections **A** are resting completely in the slots. Lower the door and once it is in place remove the pins from the holes in the hinges.

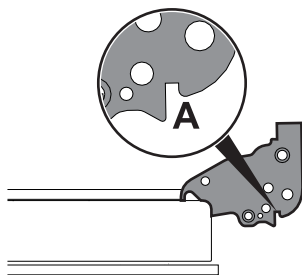

4.6 Cleaning the door glazing

The glass in the door should always be kept thoroughly clean. Use absorbent kitchen roll. In case of stubborn dirt, wash with a damp sponge and an ordinary detergent.




We recommend the use of cleaning products distributed by the manufacturer.


4.7 Removing the internal glass panes

For easier cleaning the door internal glass panes can be disassembled.

1. Remove the internal glass pane by pulling the rear part gently upwards, following the movement indicated by the arrows (1).
2. Then, pull the front part upwards (2). In this way, the 4 pins attached to the glass detach from their housings in the oven door.

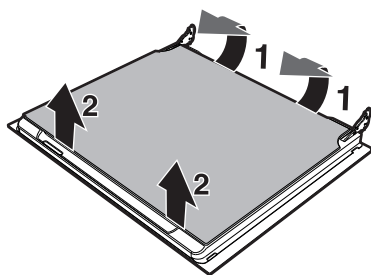


3. Some models have an intermediate glass pane. Remove the intermediate glass pane by lifting it upwards.

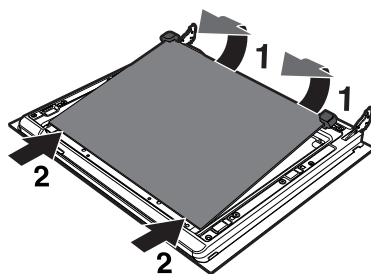




4. Clean the external glass pane and the panes previously removed. Use absorbent kitchen roll. In case of stubborn dirt, wash with a damp sponge and neutral detergent.

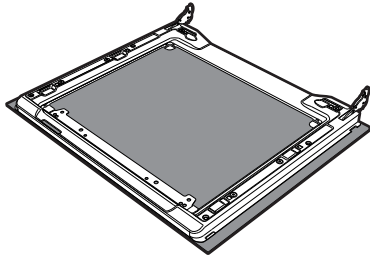

5. Refit the panes in the reverse order in which they were removed.
6. Reposition the internal glass pane. Take care to centre and insert the 4 pins into their housings in the oven door by applying slight pressure.

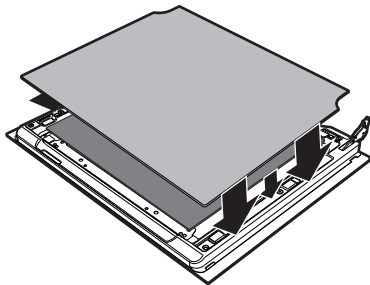


4.8 Cleaning the inside of the oven

For the best oven upkeep, clean it regularly after having allowed it to cool.

Take out all removable parts.

Clean the oven racks with warm water and non-abrasive detergent. Carefully rinse and dry damp parts.

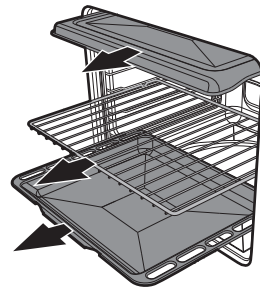

The oven should be operated at the maximum temperature for about 15-20 minutes after the use of specific products, to burn off the residues left inside the oven.



For easier cleaning, remove the door.




Cleaning and maintenance

Removing racks/trays support frames

Removing the guide frames enables the sides to be cleaned more easily. This operation should be performed each time the automatic cleaning cycle is used (on some models only).

To remove the guide frames: Pull the frame towards the inside of the oven to unhook it from its groove **A**, then slide it out of the seats **B** at the back.

When cleaning is complete, repeat the above procedures to put the guide frames back in.

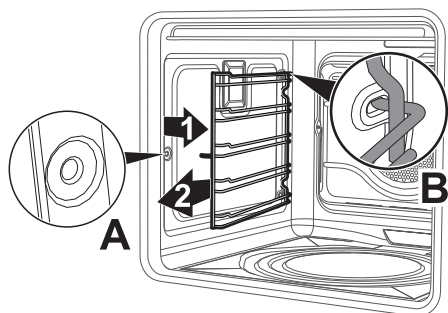

4.9 Vapour Clean (on some models only)



Vapour Clean is an assisted cleaning procedure which facilitates the removal of dirt. Thanks to this process, it is possible to clean the inside of the oven very easily. The dirt residues are softened by the heat and water vapour for easier removal afterwards.



Improper use Risk of damage to surfaces

- Remove any food residues or large spills from previous cooking operations from the inside of the oven.
- Carry out assisted oven cleaning operations only when the oven is cold.


Preliminary operations

Before starting the Vapour Clean function:


- Completely remove all accessories from inside the oven. The upper guard can be left inside the oven.



- Pour approx. 40 cc of water onto the floor of the oven. Make sure it does not overflow out of the cavity.

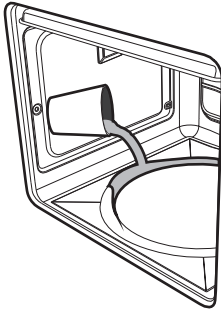

- Spray a water and washing up liquid solution inside the oven using a spray nozzle. Direct the spray against the side walls, upwards, downwards and towards the deflector.

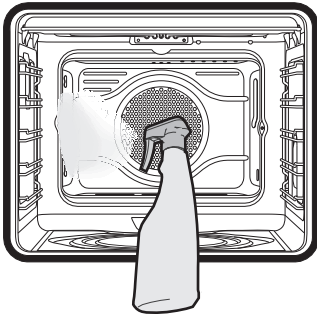

- Close the door.




We recommend spraying approx. 20 times at the most.

Vapour Clean setting




If the internal temperature is greater than that required for the Vapour Clean function, the cycle will be stopped immediately and "Internal temperature unsafe, please wait until the oven is cool" will appear on the display. Leave the appliance to cool down before activating the assisted cleaning cycle.

1. Select the **Vapour Clean** function from the "special functions" menu.

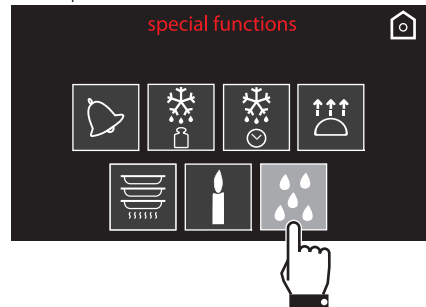

2. The duration and temperature of the cleaning cycle will appear on the display.

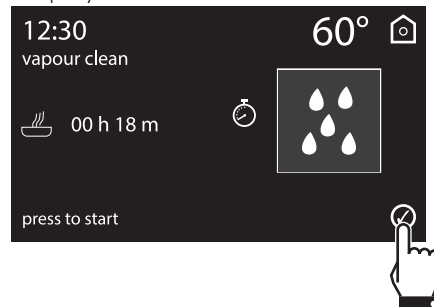


The duration and temperature parameters cannot be modified by the user.




Cleaning and maintenance


3. Press the symbol  to confirm. The assisted cleaning cycle will start.

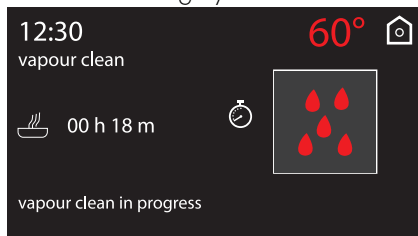

4. If the temperature inside the oven is too high, a warning buzzer and message on the display will instruct you to wait for it to cool.

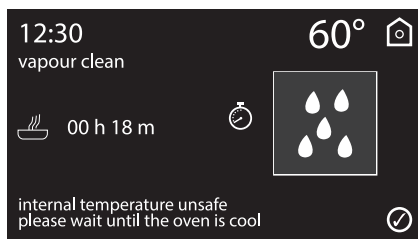


5. A buzzer will indicate the end of the Vapour Clean cycle.

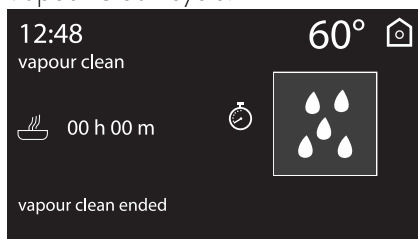


Setting programmed Vapour Clean


It is possible to program the Vapour Clean start time, like any cooking function.

1. After selecting the Vapour Clean special function, press the symbol .



2. Enter the time at which you require the Vapour Clean function to end (for example at 7:30 p.m. first touch the hours box, then the numbers 1 and 9; touch the minutes box, then the numbers 3 and 0).

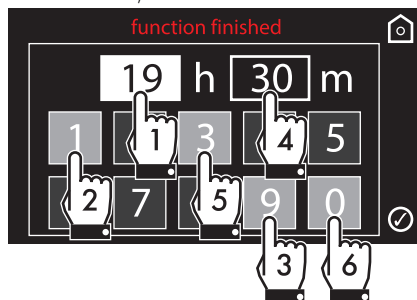

3. Press the symbol  to confirm.
4. The appliance waits until the set start time to start the cleaning cycle.



End of the Vapour Clean cycle

5. Open the door and wipe away the less stubborn dirt with a microfibre cloth.
6. Use an anti-scratch sponge with brass filaments on tougher encrustations.
7. In case of grease residues use specific oven cleaning products.
8. Remove the water left inside the oven.

For improved hygiene and to avoid food being affected by any unpleasant odours, we recommend that the oven is dried using a fan assisted function at 160°C for approximately 10 minutes.



We recommend wearing rubber gloves for these operations.



For easier manual cleaning of the parts difficult to reach, we recommend removing the door.

4.10 Pyrolytic (on some models only)



Pyrolytic is an automatic high-temperature cleaning procedure which causes dirt to dissolve. Thanks to this process, it is possible to clean the inside of the oven very easily.



Improper use Risk of damage to surfaces

- Remove any food residues or large spills from previous cooking operations from the inside of the oven.
- Switch off the burners or electric hot plates of the hob installed above the oven.

Preliminary operations

Before starting the pyrolytic cycle:



- Clean the internal glass pane following the usual cleaning instructions.
- For very stubborn encrustations spray an oven cleaning product onto the glass (read the warnings on the product); leave for 60 minutes, then rinse and dry the glass using kitchen roll or a microfibre cloth.
- Completely remove all accessories from inside the oven.
- Remove the racks/trays support frames.
- Remove the upper guard (when fitted).
- Close the door.




Cleaning and maintenance

Pyrolytic function setting


1. Select **eco pyrolytic** or **pyrolytic** from the "special functions" menu.

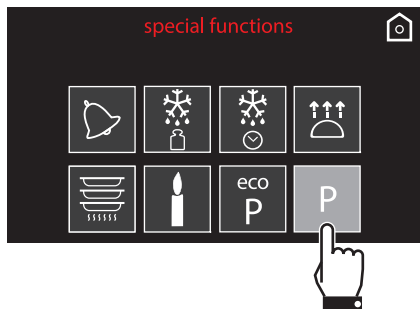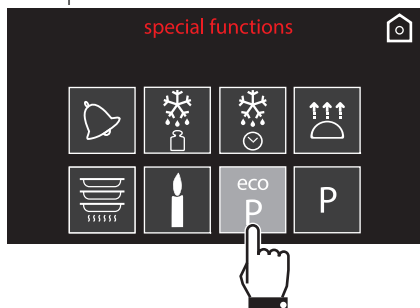


2. Enter the required duration of the cleaning cycle (for example 2 hours and 30 minutes: first touch the minutes box, then the numbers 3 and 0).

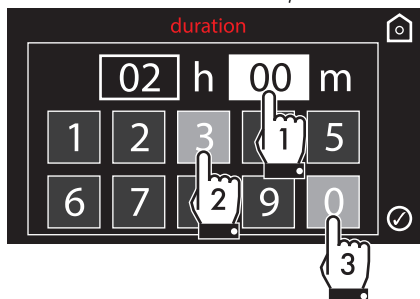

3. Press the symbol  to confirm.


4. The appliance is ready to start the automatic cleaning cycle. A warning reminds the user to remove any accessories from inside the oven. Press the symbol  to start pyrolytic cleaning.

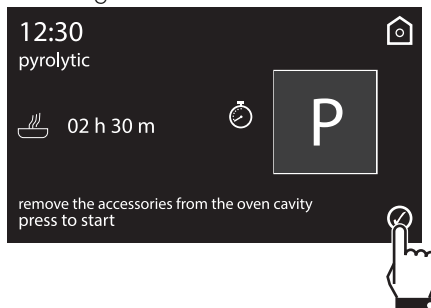

Recommended pyrolytic cycle duration:


- Light dirt: 2 hours.
- Medium dirt: 2 ½ hours.
- Heavy dirt: 3 hours.




With the **eco pyrolytic**  function, the duration is set to 2 hours and cannot be modified).




Pyrolytic cycle

The display shows “cleaning in progress” and the remaining time to indicate that the appliance is carrying out the automatic cleaning cycle. Two minutes after the pyrolytic cycle has started the door is locked (the door lock indicator light  comes on) by a device that prevents the door from being opened.

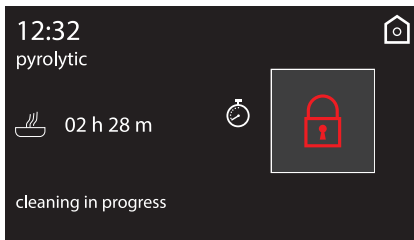

It is not possible to select any function once the door lock device has been activated. It remains possible, however, to switch off the appliance using the specific controls.

- At the end of the pyrolytic cycle, the door remains locked as long as the temperature inside the oven returns to safety levels.

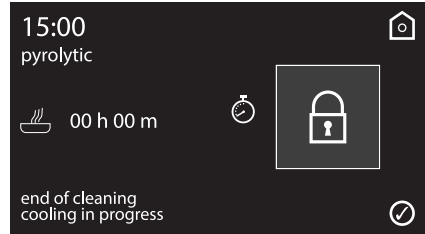

- After around 20 seconds, the display will indicate that the cooling procedure is in progress.



- Wait for the oven to cool down and collect the residues deposited inside with a damp microfibre cloth.



Cleaning and maintenance



During the first pyrolytic cycle, unpleasant odours may occur due to the normal evaporation of oily manufacturing substances. This is an absolutely normal phenomenon which disappears after the first pyrolytic cycle.




During the pyrolytic cycle the fans produce a more intense level of noise due to a greater rotation speed. This is an absolutely normal operation, intended to provide more effective heat dispersal. At the end of the pyrolytic cycle, the fans will continue to operate for long enough to avoid overheating the walls of adjacent units and the front of the oven.



If the pyrolytic cycle gives unsatisfactory results at minimum duration, it is recommended to set a longer time for successive cleaning cycles.


Setting of programmed pyrolytic cycle

It is possible to program the pyrolytic cycle start time like all other cooking functions.


1. After choosing the duration of the pyrolytic function and pressing the symbol  to confirm, press the symbol




2. Press on **function delayed**.

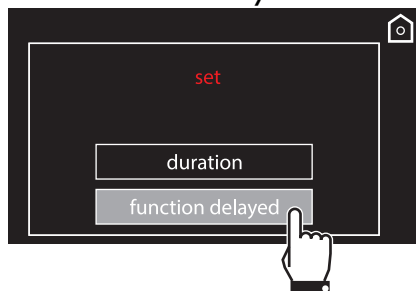

3. Enter the time at which you require cooking to end (for example at 7:30 p.m.: first touch the hours box, then the numbers 1 and 9; touch the minutes box, then the numbers 3 and 0).

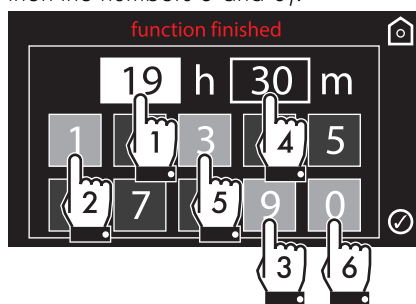

4. Press the symbol  to confirm.
5. The appliance waits until the set start time to start the cleaning cycle.



4.11 Extraordinary maintenance



Live parts

Danger of electrocution


- Disconnect the oven power supply.




Do not touch the halogen lamp directly with your fingers, but wrap it in insulating material.

Replacing the internal light bulb

1. Completely remove all accessories from inside the oven.
2. Remove the racks/trays support frames.
3. Remove the bulb cover using a tool (e.g. a screwdriver).

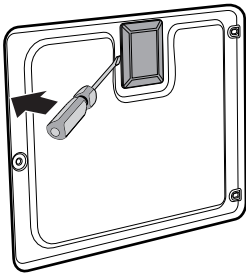


4. Slide out and remove the lamp.

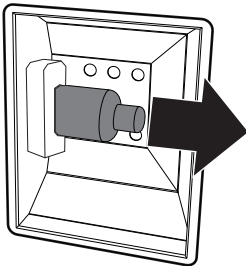

5. Replace the lamp with one of the same type (40W).
6. Refit the cover correctly, so that the moulded part of the glass is facing the door.
7. Press the cover completely down so that it attaches perfectly to the bulb support.

Removing the door seal (not on pyrolytic models)

The oven seal can be removed to allow thorough cleaning. There are fasteners on all four corners to attach it to the front face of the oven. Pull them outwards to remove the seal.

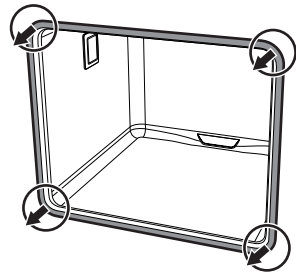



Cleaning and maintenance

What to do if...

The display is completely off:

- Check the mains power supply.
- Check that any circuit breakers upline of the appliance supply line are in the "ON" position.

The appliance does not heat up:

- Check whether it has been set in "demo" mode (for further details see "Settings").

The controls do not respond:

- Check whether it has been set to "control lock" mode (for further details see "Settings").

The cooking times are longer than those indicated in the table:

- Check whether it has been set to "eco-logic" mode (for further details see "Settings").

After the (pyrolytic) automatic cleaning cycle it is not possible to select a function:

- Verify whether the door lock has deactivated. If it has not, the oven has a safety device that does not allow functions to be selected while the door lock is active. This is because the temperature inside the oven is still too high to permit any type of cooking.

The display shows "Error 4":

- The door lock has not properly attached to the door. This might be because the door was accidentally opened during the door lock activation. Switch the oven off and on again, waiting a few minutes before selecting a new cleaning cycle.

If the door is opened during a fan assisted function, the fan stops:

- This is not a fault. It is a normal operation of the appliance, useful when cooking foods in order to avoid excessive heat escaping. When the door is closed, the oven will return to normal operation.



If the problem has not been resolved or in the case of other types of fault, contact your local technical support centre.



If other Error XX error messages are indicated:
note down the error message, function and set temperature and contact your local technical support centre.



5 Installation

5.1 Electrical connection




**Power voltage
Danger of electrocution**

- Have the electrical connection performed by authorised technical personnel.
- The appliance must be connected to ground in compliance with electrical system safety standards.
- Disconnect the main power supply.

General information

Check the grid characteristics against the data indicated on the plate.
The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance.
Do not remove this plate for any reason.
The appliance works at 220-240 V~.
Use a three-core cable (3 x 1.5 mm² cable, referring to the cross section of the internal conductor), rated to withstand temperatures of at least 90 °C.
Perform the ground connection using a wire that is 20 mm longer than the other wires.

220-240V~

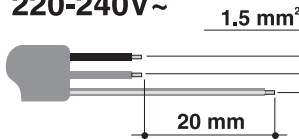

Fixed connection

Fit the power line with an omnipolar circuit breaker in compliance with installation regulations.

The circuit breaker should be located near the appliance and in an easily reachable position.

Connection with plug and socket

Make sure that the plug and socket are of the same type.

Avoid using adapters and shunts as these could cause overheating and a risk of burns.


5.2 Cable replacement



**Power voltage
Danger of electrocution**

- Disconnect the main power supply.

1. Unscrew the rear casing screws and remove the casing to access the terminal board.

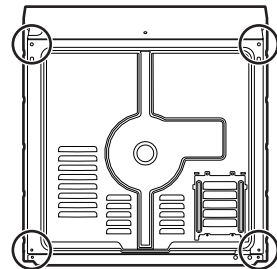

2. Replace the cable.
3. Make sure that the cables (for the oven or any hob) follow the best route in order to avoid any contact with the appliance.



Installation

5.3 Positioning



Heavy appliance
Danger of crushing injuries

- Position the appliance into the cabinet cutout with the help of a second person.



Pressure on the open door
Risk of damages to the appliance


- Never use the oven door to lever the appliance into place when fitting.
- Avoid exerting too much pressure on the oven door when open.



Heat production during appliance operation
Risk of fire

- Check that the piece of furniture material is heat resistant.
- Check that the piece of furniture has the required slots.


Position of the power cable

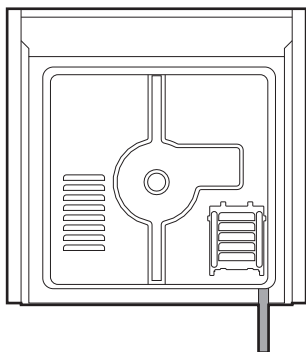


(rear view)

Fastening bushings


Remove the bushing covers inserted on the oven front.

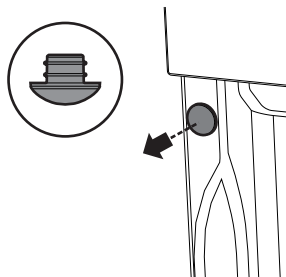

Mount the appliance into the recess.
Secure the appliance to the piece of furniture using screws.

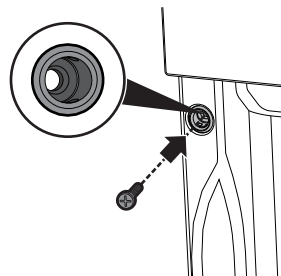


Cover the bushings with the covers removed previously.

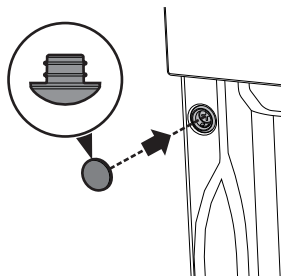





Appliance overall dimensions (mm)

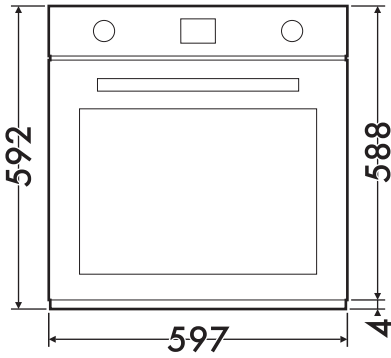



(front view)

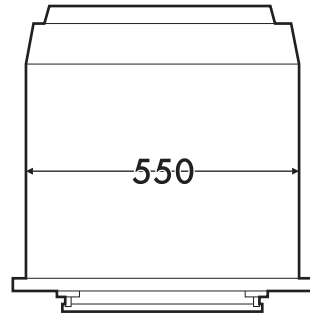

(top view)

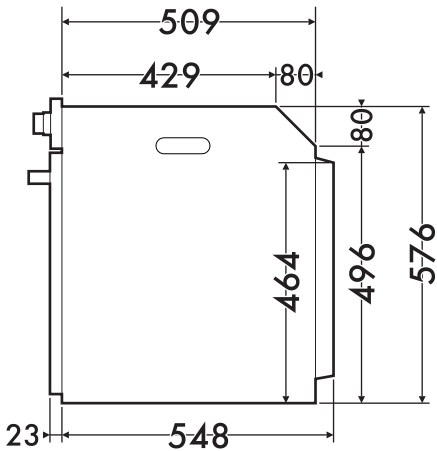



(side view)

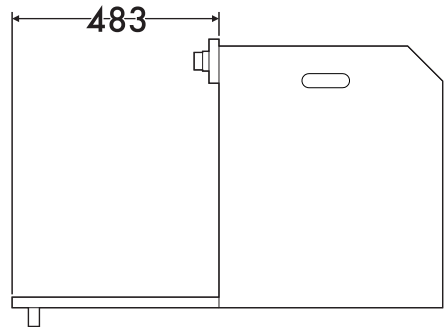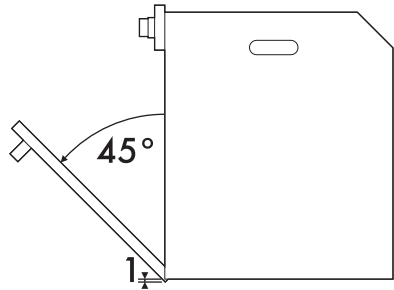





Installation

Mounting under worktops (mm)

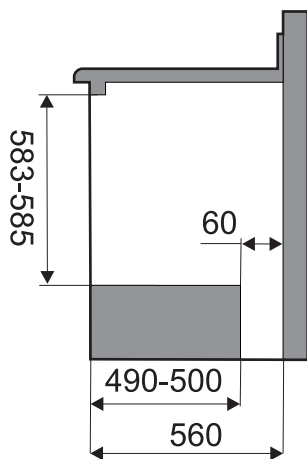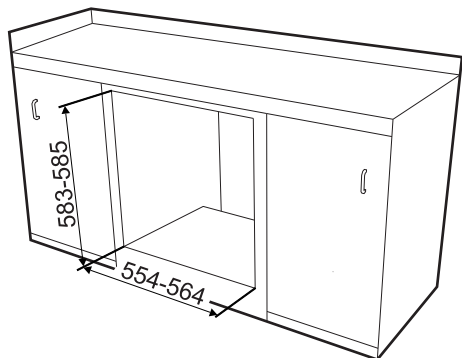

Mounting into a column (mm)

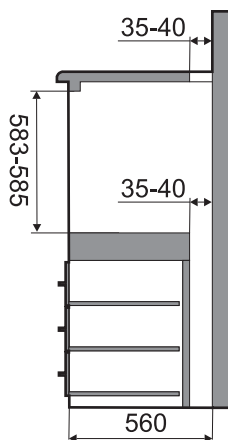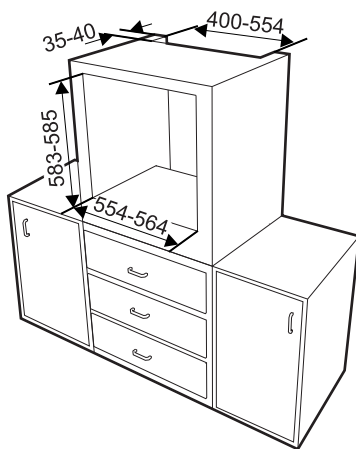

Make sure that the piece of furniture rear/bottom part has an opening of approx. 60 mm.



Make sure that the piece of furniture top/rear part has an opening approx. 35-40 mm deep.



914775847/A