

# Instruction Manual

Robot Vacuum Cleaner



# Instruction Manual

Safety Regulations	03
Product Instruction	06
Parameter	10
Attention	11
Maintenance	19
Alarm Tips	23
FAQ	24
Wi-Fi Connection	25

# 1. Safety Regulations

Please read the manual carefully before using the product and keep this instruction for reference.

- Products cannot be used by children under 8 years of age. If you need to use it, please do so under the supervision of a guardian. Please do not let children ride on the product.
- Problems that may arise in cleaning products should be fixed or removed as early as possible.
- Clean the power cords and small items on the floor to prevent the product from being blocked during the cleaning process.
- Fold the edge of the carpet to the underside of the carpet, and keep hanging curtains, tablecloths, etc from touching the ground.
- If there is a suspended environment such as a staircase, test the product first to see if it can detect the edge of the suspended area without falling.
- Protective barriers should be installed at the edge of the suspended area to prevent falling products. Make sure that the protective equipment does not cause personal injury.
- Please follow the manual in the instructions to use the product. Use only accessories recommended or sold by the manufacturer.
- Ensure that the power supply voltage meets the voltage indicated on the cradle.
- Use only in indoor home environments. Do not use in outdoor, commercial or industrial locations.
- Use only original rechargeable batteries and charging docks that are unique to the manufacturer.
- Do not use non-re-chargeable batteries. For battery specifications, please refer to "Technical Data".
- Ensure that dust boxes and filter materials are installed before using products.

# 1. Safety Regulations

Please read the manual carefully before using the product and keep this instruction for reference.

- Use of the product in an environment with open flames or fragile items is prohibited.
- Do not use the product in extreme heat (above 104 ° F) or very cold (below-41 ° F).
- Keep your hair, clothes, fingers and other body parts away from the opening and operating parts of the product.

- Do not use the product on wet or watery ground.
- Avoid any items such as follows:
  - Stones, waste paper.
  - Flammable materials such as toner, toner or toner for printers or copies.
  - Cigarettes, matches, ash, or other items that may cause a fire.
- Do not take any product that is burning
- Do not place items at the suction outlet. Do not use products when suction is blocked. Clean dust, cotton wool, hair, etc. at the suction port to ensure smooth air circulation at the suction port.
- Use the power cord carefully to avoid damage. Do not use the power cord to drag or pull the product and the product charging stand.
- Do not use the power cord as a handle.
- Do not clamp the power cord into the door seam.
- Do not pull the power cord at sharp corners and corners.
- Do not use the product if the power cord, power outlet or charging stand are damaged.
- Do not use the product when it is not working properly due to dropping, damage, outdoor use or water ingress. To avoid injury, the product should be repaired by the manufacturer or its after-sales service.
- Turn off the product switch before cleaning and maintaining the product.

### **FCC Statement**

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.


# 2. Product Instruction

## 2.1. What is in the box


1. Robot Vacuum Cleaner	3. Remote Control	5. Side Brushes X 4	7. Clean Brush	9.Water tank
2. Charging Base	4. Power Adapter	6. HEPA X 2	8. Magnetic stripe	10.Instruction Manual

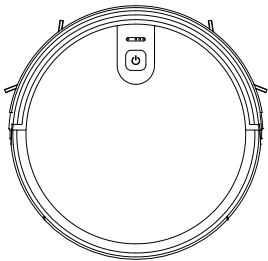


1

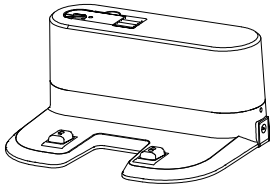 


2

 


3

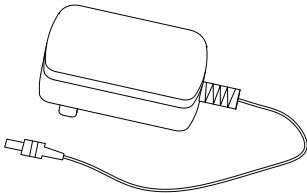 


4

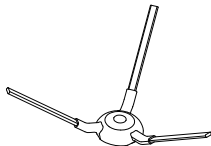 


5

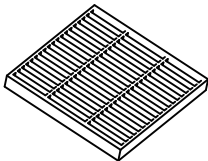 


6

 


7

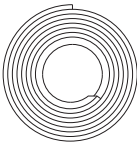 

8

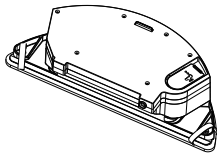 

9

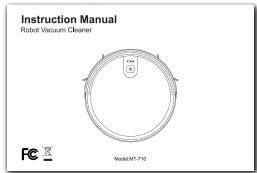 


10


## 2.2. Assembly Name

 
### ► Master

Top View

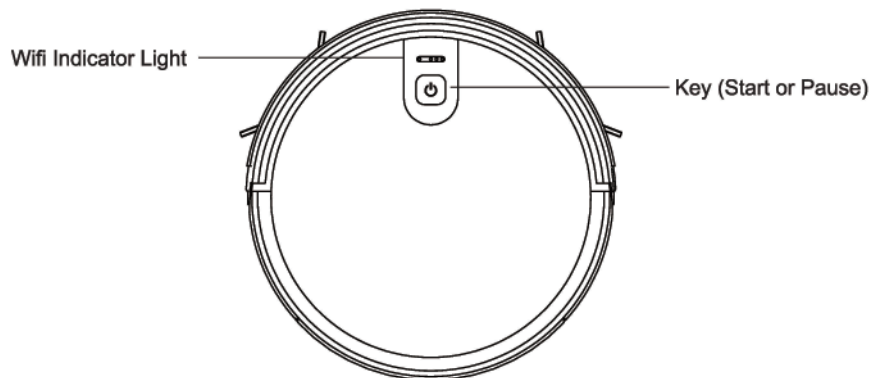


Bottom View

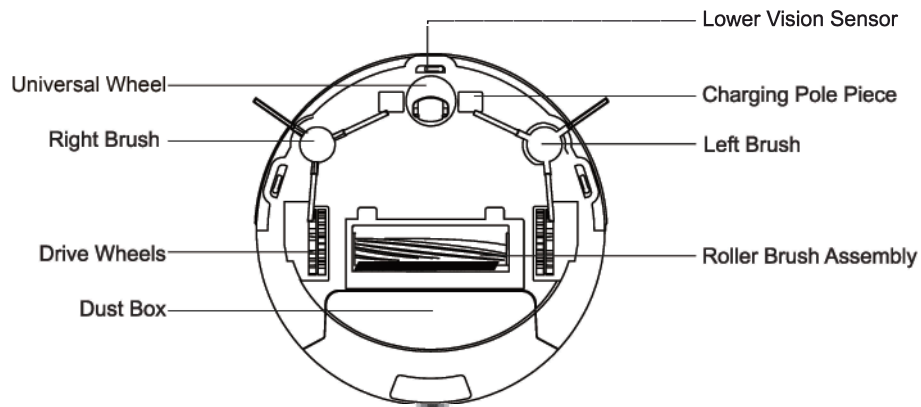 


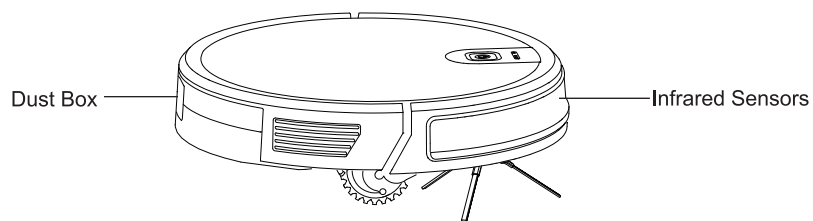 


### ► Dust box

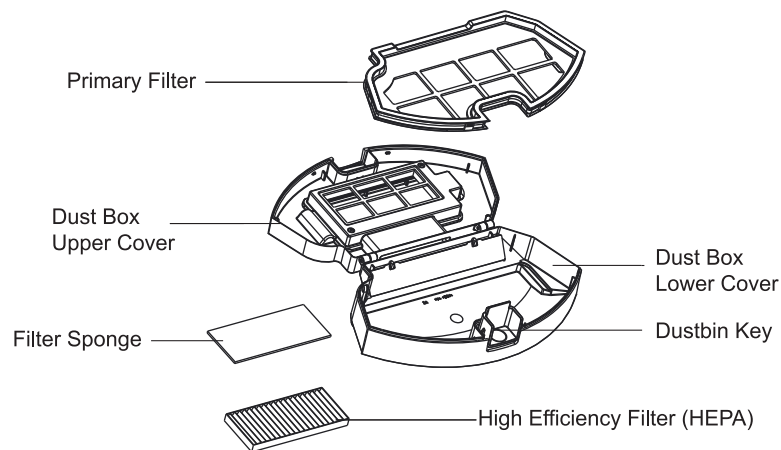 


### ► Water Permeable Rag Assembly

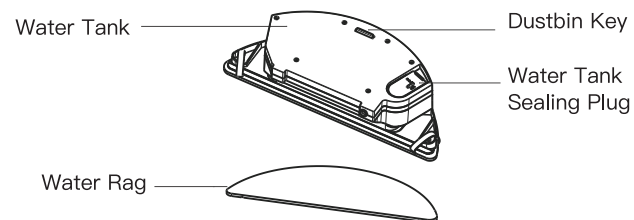 

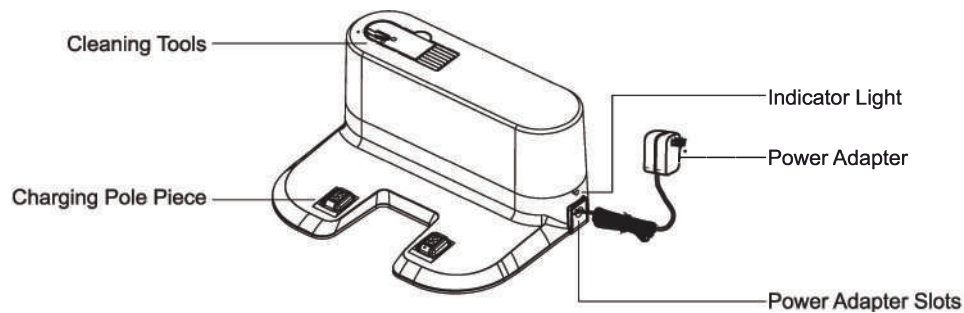 


## ► Changing Stand Assembly

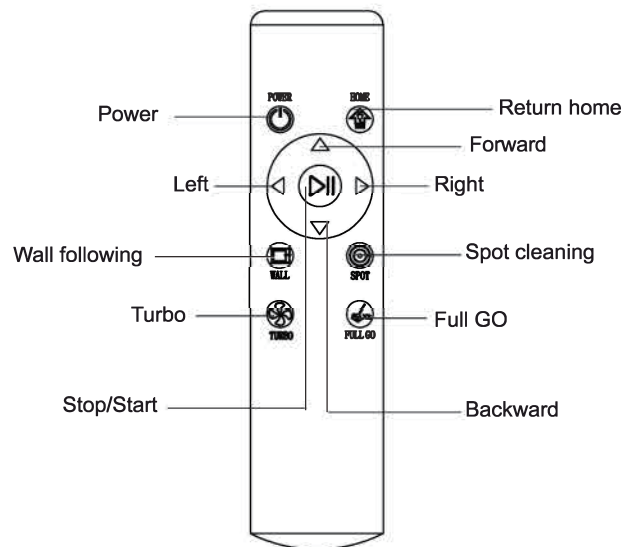 

## ► Remote Control

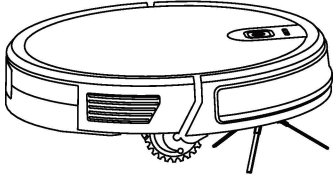 

### 3. Parameter

 
	Product Model	Xsonic Wifi Pro
	Input	DC 14.4V
	Power	30W
	Battery Capacity	DC 14.4V Li-ion 2500mAh
	Dust Box Capacity	0.6L
	Cleaning Time	120 min
	Charging Time	300 min
	Battery	DC 3V(AAA)
	Remote Control Method	Infrared
	Emitting and Receiving Distance	≤5M
	Input	100-240V/50-60Hz
	Output	19V/0.6A

Install 2 AAA batteries before using the remote control for the first time. Make sure the positive and negative ends are facing the correct polarity direction as marked in the battery compartment.


## 4. Attention

### 4.1 Considerations

Please refer to the following guidelines to check the cleaning area before the cleaner works.

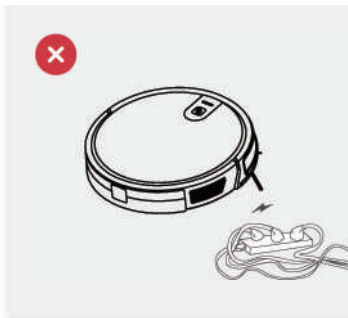

 
1. Power lines and other debris scattered on the ground may trip up product must be removed.

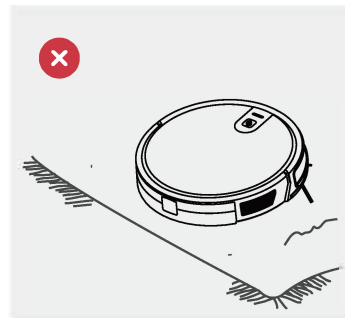

2. Please roll the carpet tassels or work on short-hair rugs.



 3. A gap of less than 8 cm on the bottom of the furniture may catch the product. If you need to clean it, please remove the furniture.

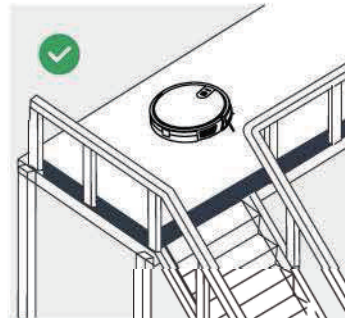


4. A guardrail should be placed at the edge of the duplex to ensure safe operation of the product.

## 4.2 Rapid Operation
 
### 4.2.1 Install the Side Brushes


Please install the right brush into the right bottom mounting port of the machine, the left brush into the left bottom mounting port of the machine and ensure that the two side brushes are in place.

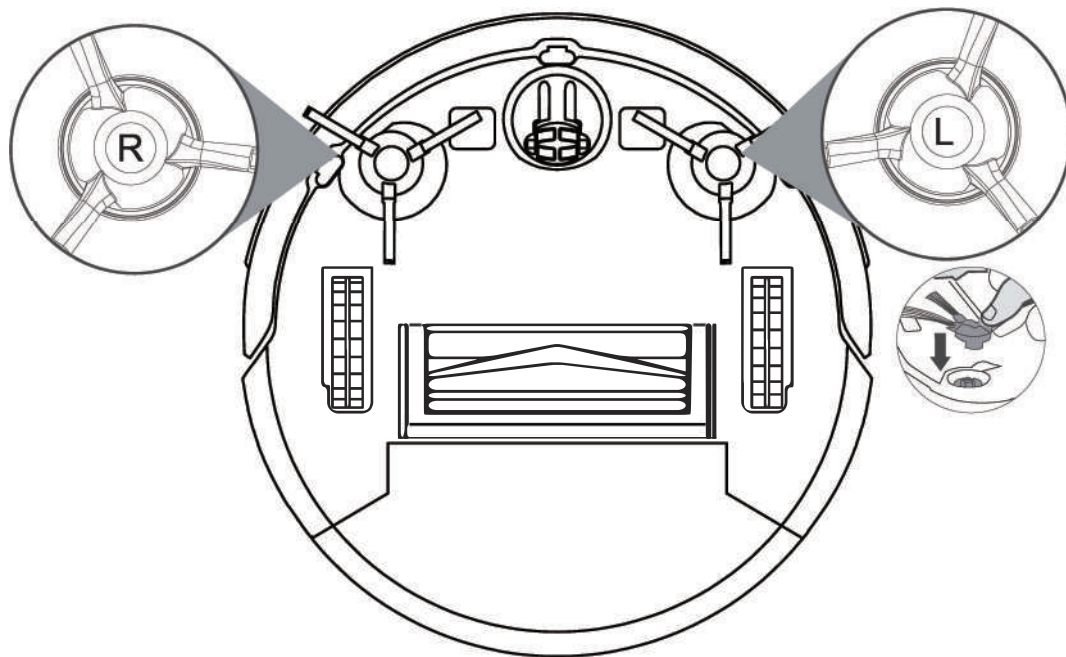

## 4.2.2 Charging Operation


1. Connect the adapter to the charging stand.

 Place the charging stand flat against the wall. Do not place objects in the left and right 1M and the front 2M and do not have objects with strong reflection surfaces such as mirrors.

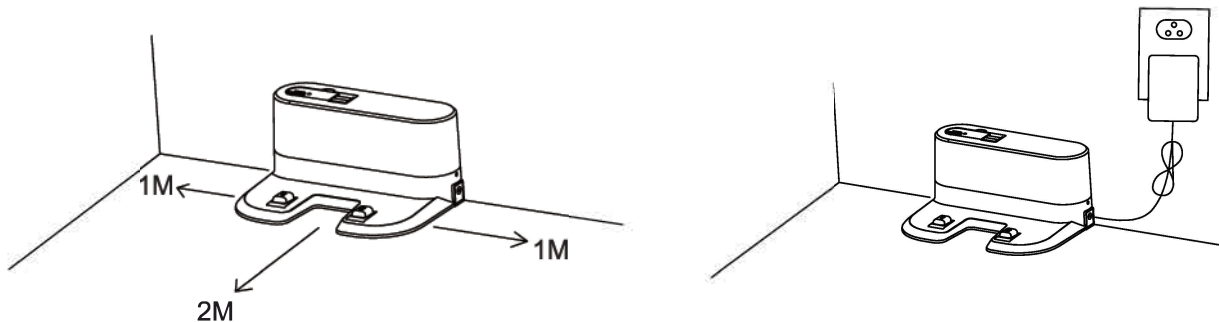

2. Turn on The Master

 Please press the start/pause key to turn on the master. It is recommended to keep the master in the charging stand after each time use instead of shutting it down instantly to make sure it can perform well next time.

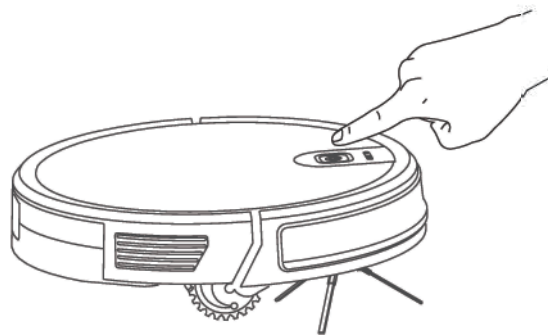

### 3. Master Charge

Place the master in the charging stand and pay attention to the charging pole piece.

Turn on the power switch, the robot will enter standby mode.

 
⏻ Red light flashes indicates that the battery needs to be charged.

⏻ Blue light breathing light flashes indicate charging.

When the ⏻ blue light is off means charging is completed.

For the first use, please charge continuously for more than 6 hours.

Note: Please match the charging pole piece.

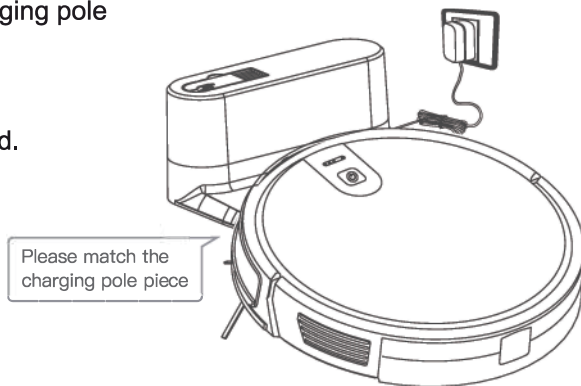


#### 4.2.3 Start/Stop Cleaning

1. Start or stop by pressing the master's ⏻ key or the remote controls ⏻ / ⏮ key.

Note: Before starting the mode, make sure that the outer ring of the ⏻ key is blue and the master is in the state of being awakened. If the master does not wake up, short press the master ⏻ to wake it up.

 The master enters the sleep state after 10 minutes of standby, and the ⏻ key light is off.

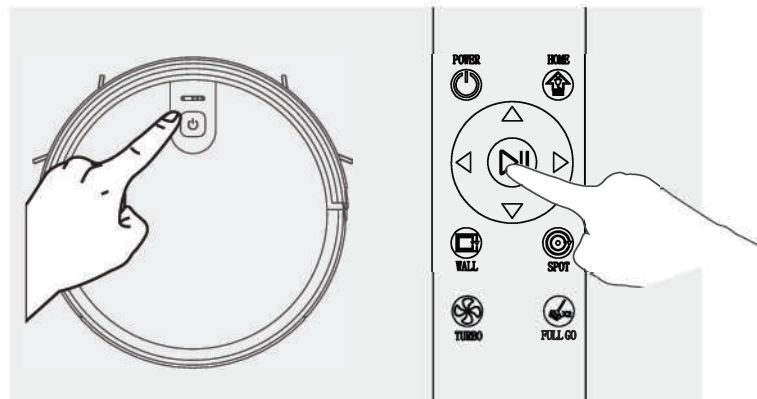

2. If you need to select another mode, please refer to (The Mode Selection) section.



## 4.2.4 Mode Selection

 
To adapt to different ground conditions and achieve deep cleaning, this product has a variety of cleaning modes, which can be selected by remote control as needed.

The remote control can switch any mode directly.

Before starting the mode, make sure that the outer ring of the  key is blue and the master is in the state of being awakened. If the master does not wake up, short press the master  to wake it up..

### Fixed-point Mode


It is suitable for the ground environment where the garbage is concentrated. The master centralized cleaning in the designated area, and master centralized cleaning with the spiral route.

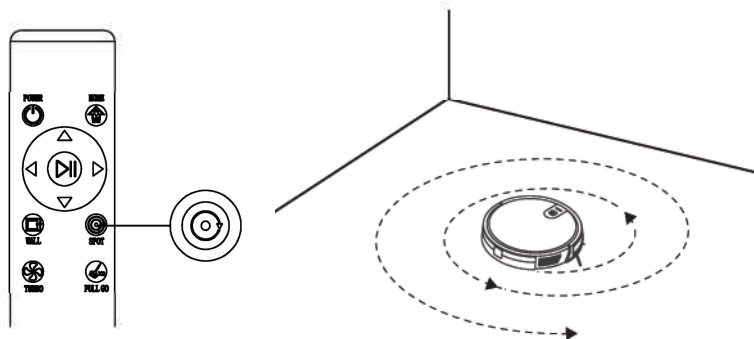

### Edge Mode

It is suitable for cleaning at the corners of the room.


 
The master is cleaned around the periphery of a fixed object (such as a wall) and cleaned back to the charging stand.

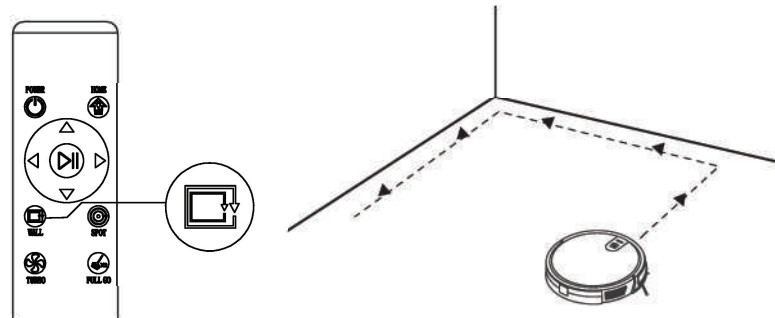

## Return Charging Mode

During the cleaning process, the master can sense that its power is insufficient, and automatically find the charging stand for charging.

  You can press the “home” button or press the “power” button twice to make the master return to the charging stand for charging.

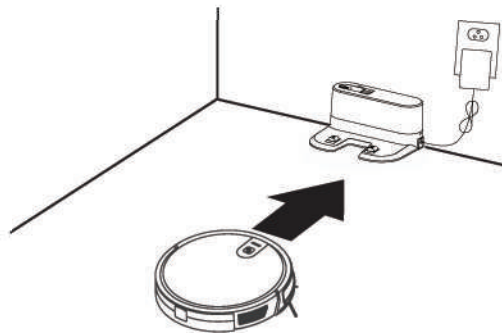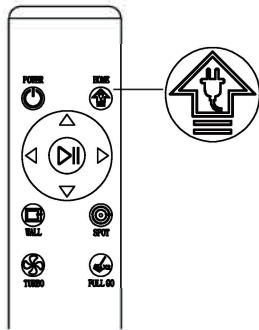

## Twice Cleaning Mode

Press the “Full Go” button on the remote control.

 
After the first-time cleaning, robot will go back to charge to full and continue the second time cleaning automatically.

## Suction Power Setting

Press the “Turbo” button on the remote control.


With three modes of suction(Power Max/Standard/Low). Standard mode can be used for daily cleaning while the Max mode would increase the suction and Low mode would lower the noise.

Low suction mode can be used for cleaning wood floor and tile floor, standard mode for common household cleaning while the max mode can be used for cleaning rugs.

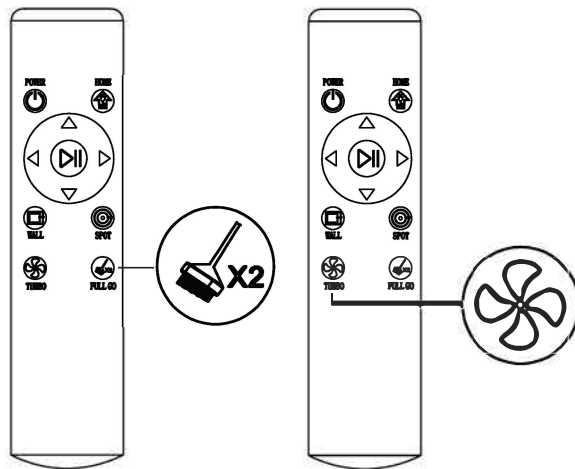

## 4.2.5 Roller Brush Assembly and Cleaning

 Remove the roller brush cover plate, remove the roller brush, cut off the hair wound on it and then use the cleaning brush to clean it.

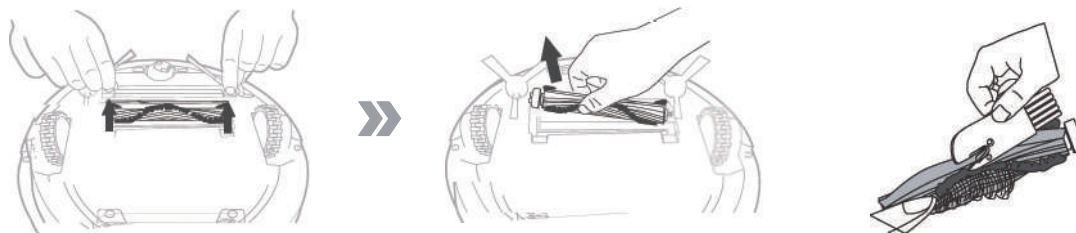

Set roller brush assembly: take out sucking assembly first, set the roller brush, cover the board, and press it to lock.



## Use of Water Permeable Rag

This product is equipped with a water tank assembly. After the cleaning work is completed, if there is a demand for mopping, the dust box can be replaced with a water tank assembly. For the cleaning method, please refer to the [Maintenance] section in this manual.

 
Do not use the water tank assembly on the carpet. When cleaning with the rag function, fold the edge of the carpet to avoid foreign matter on the rag from soiling the carpet.

In the cleaning, please pay attention, add water, or clean up in time, remove the water storage box when adding water

When charging, be sure to remove the water permeable wiper assembly.


### ■ Add Water

Open the water inlet cover and take enough water.

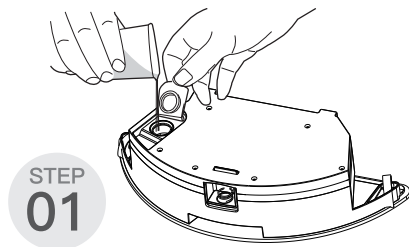


### ■ Install Water Tank Assembly

 Press the dust box release button at the rear of the master to remove the dust box and replace the water tank assembly.

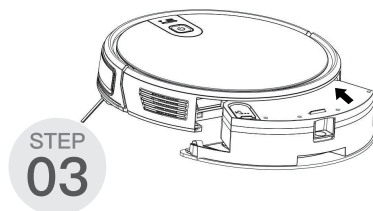


### ■ Sticking The Water Rag

 Close the water inlet cover and stick the water rag.

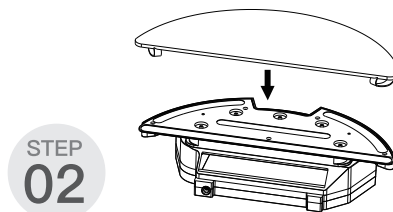

### ■ Mop

 Start any cleaning mode as needed, and the master will perform cleaning and mopping

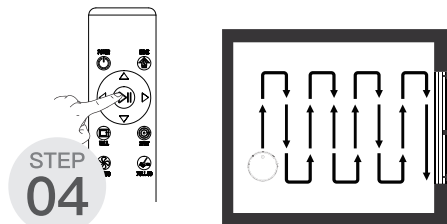


## 5. Maintenance

### 5.1 Dust Box and Filter




When cleaning and maintaining the master and its accessories, turn off the master and unplug the charging stand.

1. Remove the dust box, open the dust box cover, and clean the garbage.
2. Remove dust filter. HEPA is not recommended for washing. Please pat and remove ash.
3. Flush the dust box and the primary filter.
4. Dry the dust box and the dust filter assembly and keep it dry.

 
STEP  
01

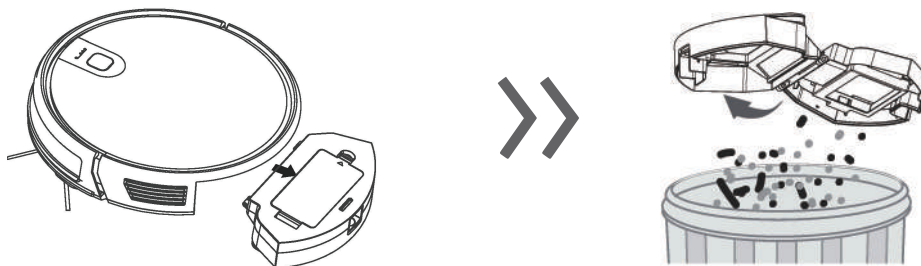

   
STEP  
02

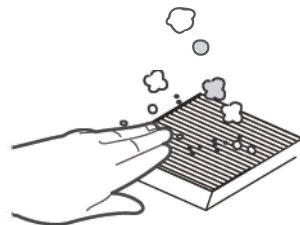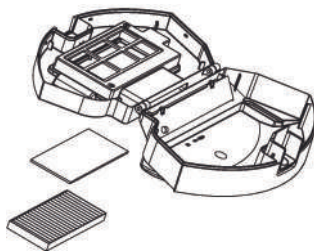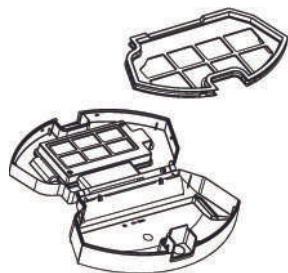

 STEP  
03

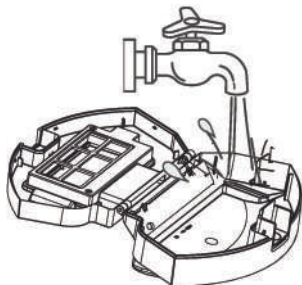

 STEP  
04

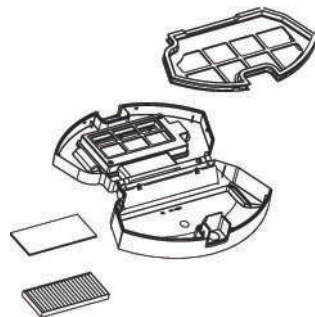

Please let these parts dry naturally for more than 24 hours.




# Water Tank Assembly
   
## Cleaning of Water Rag

- **Remove:** After the mopping is completed, remove the water tank assembly, and remove the water permeable rag.
- **Maintenance:** Rinse and dry the water rag
- **Cleaning the Water Reservoir**

**Remove:** After mopping the floor, remove the water tank assembly, remove the water permeable cloth, and pour off the remaining water in the water reservoir.

**Maintenance:** Dry the reservoir and allow it to dry.

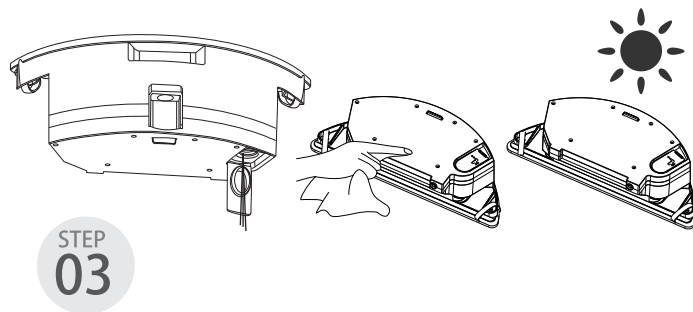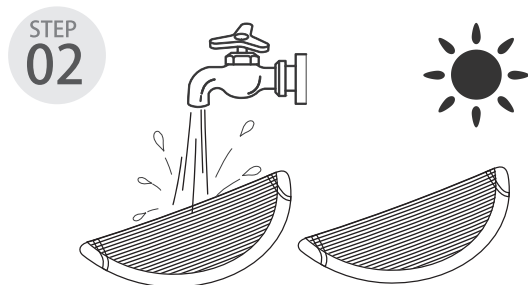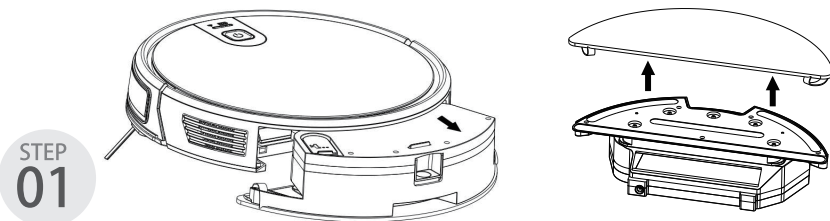

## 5.2 Side Brushes

### Cleaning Side Brushes

 
 
Pull out the side brush and wipe it with a clean rag.

## 5.3 Other Assembly

Cleaning the universal wheel to reduce hair entangle.

Clear down the sensor to ensure the sensitivity of the sensor.

To clean the charging pole pieces, use a dry rag to clean the charging poles on the bottom of the master or the charging stand.

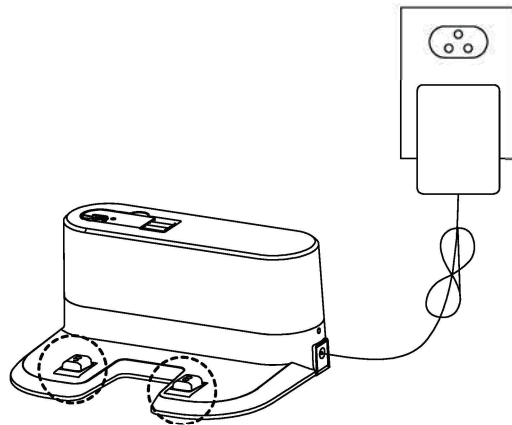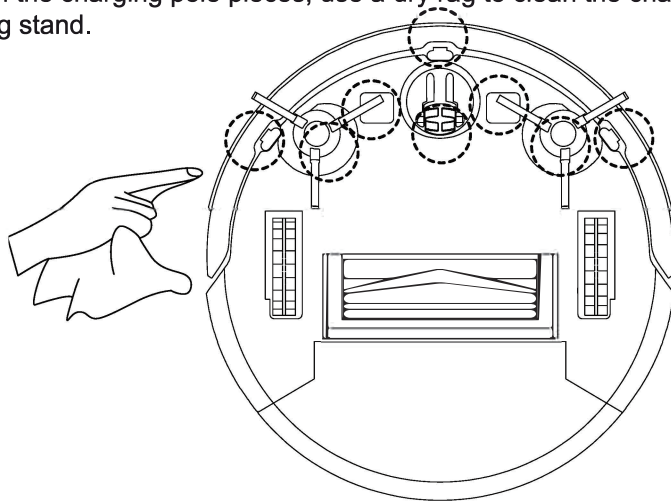

If you will not use the product for a long time, please remove the battery and keep it in a safe place. If the battery leaks, remove the battery and wipe the battery compartment clean.

This product uses a high-life battery and does not require frequent replacement. If you need to replace, you can contact our company for after-sales service replacement.

## 6. Alarm Tips

Cause of Issue	Display light	APP content	Solution
Side brush	Red light on	Please check side brushes are jammed	Clean side brush
Fan abnormality	Red light on	Motor cooling error	Please wait an hour before using
Roller brush	Red light on	Please check roller brush is jammed	Clean roller brush
No dustbin inside	Red light on	Please check if dustbin is installed correctly	Please check whether dustbin put in position
Failure of ground detection	Red light flash	Please check if wheels are on the floor	Clean the ground detector and make sure I am not picked
Out of trouble	Red light flash	Please help me, I'm stuck	Please take me to the open space
Low battery	Red light flash	Battery low, please recharge me	Manually move the cleaner back to the dock station recharging
Abnormality charging	Red light flash	Please turn on the power switch for charging	Please turn on the power switch for charging
Gyroscopes fail	Red light flash	Navigation failure, please restart me	Turn on the switch again

## 7. FAQ

Please install the right brush into the right bottom mounting port of the machine, the left brush into the left bottom mounting port of the machine and ensure that the two side brushes are in place.

Q : What if the strength of vacuuming is weak?

A : First of all, check whether the dust bin is full, and the robot is full charged. If it is, you can try to switch it to the higher mode. For litter which is difficult to collect, try to clean it on Spot Cleaning Mode.

Q: What if my charger has difficulties charging the robot?

A : Please make sure you turn on the charging stand before charging and check if the electrical cord is connected to the charging stand (Put it back manually or press the Power button when the robot is 1 meter in front of the charging stand.)

Q : What if the robot cannot find the charging stand?

A : The charging stand should be placed against the wall with at least 1 meter clearance each side and 2 meters in front. Sometimes you can just put it back manually.

Q: What should I do if the remote control is out of order?

 
- A:
1. The remote control has an effective control distance of 5 meters. Please make sure that the remote point to the master.
  2. Replace the battery with a new one if the battery has run out capacity.
  3. Please make sure the master power switch is turned on and has sufficient power to complete the operation.
  4. Please wipe the infrared emitter of the remote control and the infrared receiver of the master with clean towel.

Q: Why does the master return to charging after cleaning?


A : The working time of the master varies depending on the complexity of the room, the amount of garbage and the cleaning mode.

## 9. Wi-Fi Connection

1. Please scan the QR code or search “Smart Life” and download App.
2. After the App is installed, please follow the App instructions to register the account and login.
3. Open the APP and click 「add device」 、 「Small Home App」 、 「Robot Vacuum」

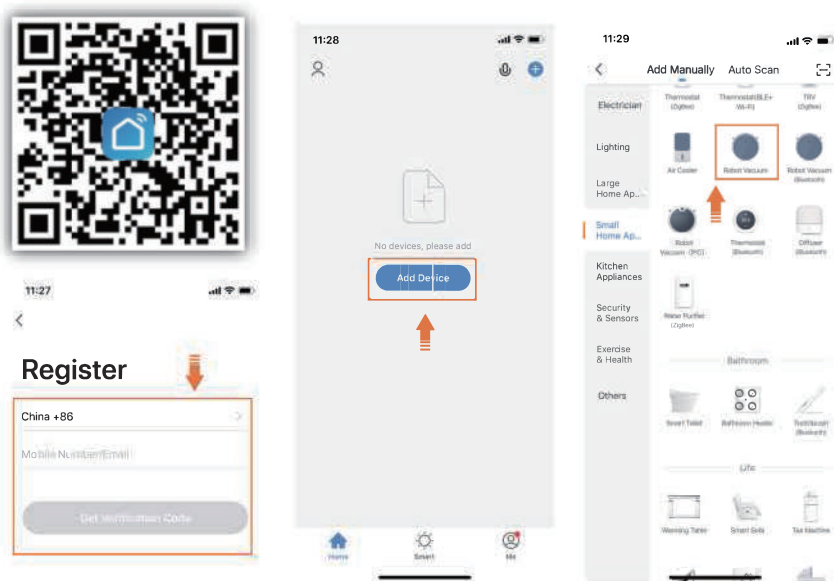


 4. Please make sure that the product is “on” like the picture shows.



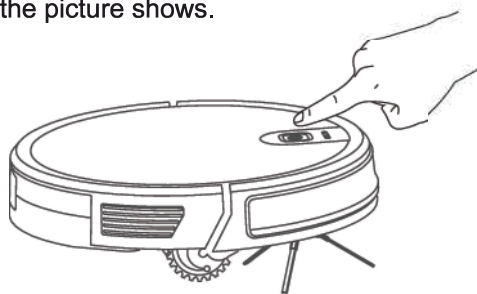


5. Please make sure that the Wi-Fi indicator is flashing / Wi-Fi

 Push the front bumper and long press the  until the  flashes. When the Wi-Fi indicator flashes, click the 「Confirm indicator rapidly blinks」 on the APP.

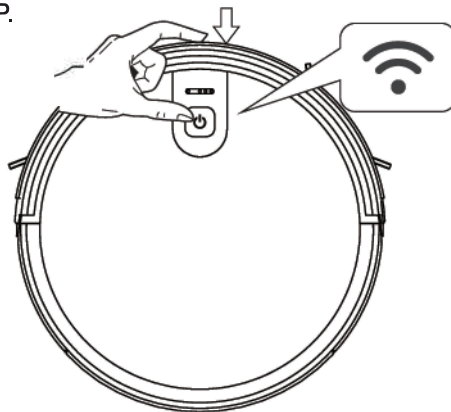

   6. Input the Wi-Fi account and password. (Only supports 2.4G Wi-Fi now, 5G Wi-Fi cannot be connected.)

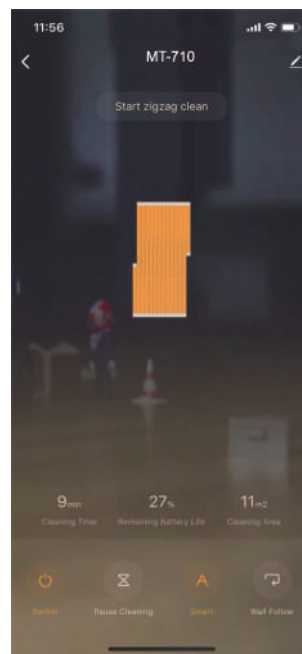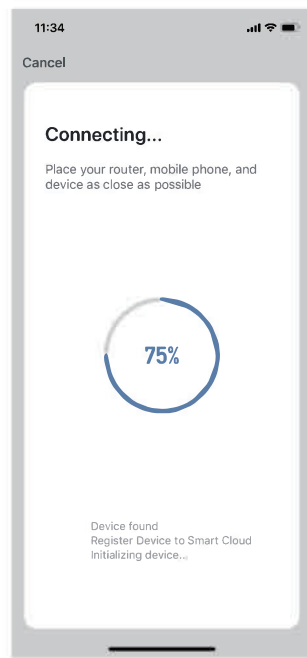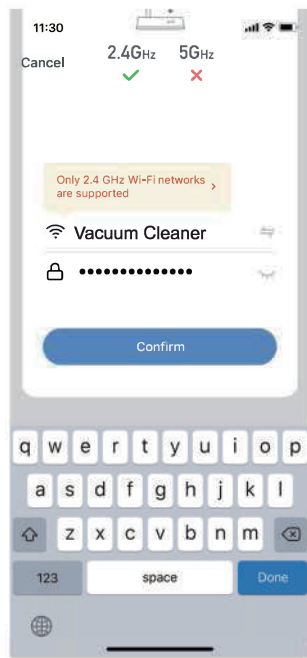



[www.mygenieshop.com.au](http://www.mygenieshop.com.au)



## Consumer Warranty

MyGenie would like you to enjoy your new purchase. This warranty card is provided to ensure that you get satisfaction.

Our goods come with guarantees that cannot be excluded under Australian Consumer Law. You are entitled to a replacement or refund for a major failure for any other reasonably foreseeable loss or damage.

You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. The benefits of this warranty are in addition to the consumer's rights and remedies under law.

### Warranty Period

The warranty is 12 months from the date of purchase.

### Registering Your Purchase

Please register your purchase on [www.mygenieshop.com.au](http://www.mygenieshop.com.au)

### Procedure for claiming under warranty

Should you need to make a claim under this warranty please email direct to [support@mygenieshop.com.au](mailto:support@mygenieshop.com.au)