



**HIGH DEFINITION DIGITAL SET TOP BOX WITH
INTEGRATED BLU-RAY PLAYER**



DFTA60BR

Toll Free Warranty and Service: 1800509 394

Gold Technical Support Line: 1902 215259

(Charges will apply at \$2.95 per minute for Gold Technical Support Only)

Safety Instructions

- Always read the safety instructions carefully
- Keep this Instruction Manual for future reference
- Keep this device away from humidity
- Lay this device on a reliable flat surface before setting it up
- Do not stand it on soft furnishings
- If any of the following situation arises, get the Set Top Box checked by a service technician:
 - ✍ It has been exposed to moisture
 - ✍ It has been dropped and damaged
 - ✍ It has obvious sign of breakage
 - ✍ It has not been working well or you cannot get it to work according to the Instruction Manual

Warning

- To prevent the risk of electric shock, do not open the cover or the back of the receiver.
- Do not block the ventilation holes of the device. Leave appropriate gap above and around it to allow for adequate ventilation.
- Do not place the device in an unventilated cabinet or on top of a unit which emits heat.

Copyright Statement

No part of this publication may be reproduced in any form by any means without the prior written permission. Other trademarks or brand names mentioned herein are trademarks or registered trademarks of their respective companies.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.



This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts. When servicing use only identical replacement parts.

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or cords.

Introduction

Thank you for buying this Bush product, which is designed to give you many years of trouble-free service.

You may already be familiar with using a similar unit, but please take time to read these instructions. They are designed to familiarise you with the unit's many features and to ensure you get the very best from your purchase.

Safety is important

Your safety and the safety of others is important. Please therefore, ensure you read the "Safety Instructions" before you operate this unit.

Warranty

In the unlikely event that your product fails to work normally, please call the below Bush warranty number for support.

Australia

Bush Warranty: 1800 509 394

New Zealand

Bush Warranty: 0800 450 259

About the High Definition Digital Set Top Box with Integrated Blu-Ray Player

This DVB-T TV Receiver allows you to access Free-to-Air Digital TV Channels and Radio Broadcasts on your TV set. Its digital reception covers VHF & UHF band. Digital TV eliminates noise and interference and offers high quality video and audio. It also can support multi-format of BD and DVD disk play back.

An easy to use on-screen installation guide is provided. In addition, a fully featured Remote Control is included that offers you access to every feature with a simple press of a button.

Main Features

Compliant with Australian DVB-T Standards

Bandwidth of 7/8MHz Supported

COFDM Demodulator

Receives All High Definition Digital Free to Air Channels

Integrated Blu-Ray Player

Blu-Ray Player Supports Multi Format Playback (BD/DVD/DVD +/-R, RW/MP3/ CD/CD-R/CD-RW/ VCD/DVD +/-JPEG Formats)

USB Input Supports MP3, WMA and JPEG files

Easy Set Up Out of the Box with Auto and Manual Channel Scan

On Screen 7 Day Program Guide with Now and Next Event Info

HDMI Output for Perfect Picture Quality

Composite Video Output

Digital Audio via SPDIF Coaxial Output for Connection to a Surround

Sound Amplifier

Teletext (where applicable) with Subtitle Support for the Hard of Hearing

Parental Lock

Remote Control

Package Contents

Before installation, please check the items of the package.

The package should contain the following items:

- | | |
|--------------------------------------|---------|
| ~ Set Top Box | x1 pc |
| ~ Remote Control | x1 pc |
| ~ AAA Battery for the Remote Control | x1 pair |
| ~ Instruction Manual | x1 pc |
| ~ Composite RCA Cable | x1 pc |

Table of Contents











Overview	2
Front Panel and Rear Panel Illustration.....	3
Remote Control	6
Main Menu Introduction	8
Player Configuration via System Menu.....	10
DVB-T Function.....	15
BD-Live Operation.....	17
Troubleshooting	19
Specifications.....	20
Warranty.....	21

OVERVIEW

This High Definition Digital Set Top Box with Integrated Blu-Ray Player will provide you with high definition, cinema-like pictures and multi-channel audio.

PLAYABLE DISK TYPES

Please see below the disk formats that are accepted and can be played by your Bush DFTA60BR player:

Format	Logo	Format	Logo
Blu-Ray™ Disks		DVD-RW	
DVD Video Disks (DVD-ROM)		DVD-R	
Audio CDs (CDDA)		DTS-CD	
VCD		MP3/WMA/JPEG Data CD	
HDMI		DVB-T	

NOTES:

For recordable DVD & CD disks formats, only DVD-RW/-R & CD-R/-RW disks recorded with UDF or ISO9660 format can be played via this unit. The disks must be finalised via VR-mode.

 
If your disk format type is not specified above then it may not work with this unit or perform specific operations.

REGION CODE

If the region number of a Blu-Ray or DVD disk does not correspond to the region number of this unit the disk will not be available for playback. The region code is printed on the rear panel of this unit.


Front Panel and Rear Panel Illustration

Front panel

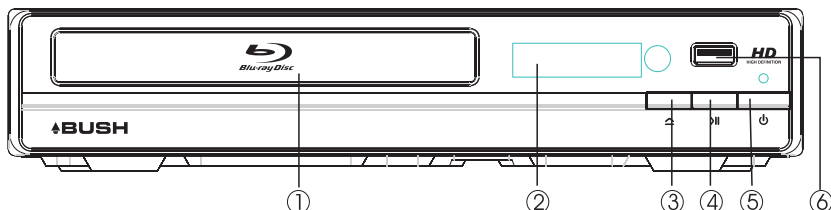

- ① **Disc Tray:** Once you press the Eject Button the Disc Tray will open and you can load your DVD or Blu-Ray disk.
- ② **LED Display:** The LED Display will display the channel you are watching.
- ③ **EJECT BUTTON:** Used to open or close the disc tray.
- ④ **PLAY/PAUSE BUTTON:** Used to playback or pause the program being viewed.
- ⑤ **STANDBY BUTTON:** Press the STANDBY Button to turn the unit on or off.
- ⑥ **USB Input:** USB Input Supports JPEG Files, Music Files, Video Files and Software Upgrade.

 
Rear panel

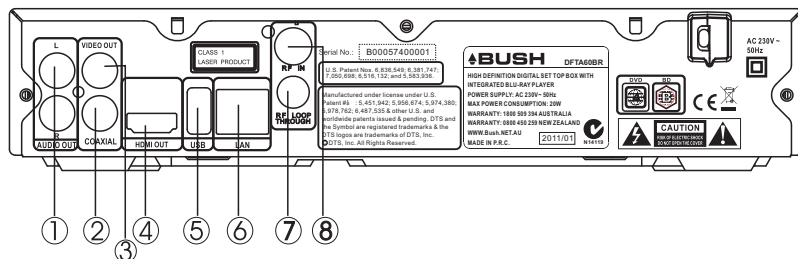

- ① **AUDIO L/R:** This socket outputs Analog Audio L/R signal.
- ② **COAXIAL:** This socket connects to a Coaxial cable on your surround sound system.
- ③ **VIDEO:** This socket outputs composite video signal.
- ④ **HDMI:** High definition audio and video output used to connect to a HDMI device.
- ⑤ **USB:** Supports JPEG Files, Music Files, Video Files and Software Upgrade.
- ⑥ **LAN:** The Lan Connection allows you to connect to the internet and access any links on your Blu-Ray disk. The disk must support BD live 2.0. Alternatively it can be used for software upgrades.
- ⑦ **R F LOOP THROUGH:** This socket will bypass the RF signal to either your TV or another video system.
- ⑧ **RF IN:** This socket connects to your external Aerial.

Front Panel and Rear Panel Illustration

 TV Set Connections

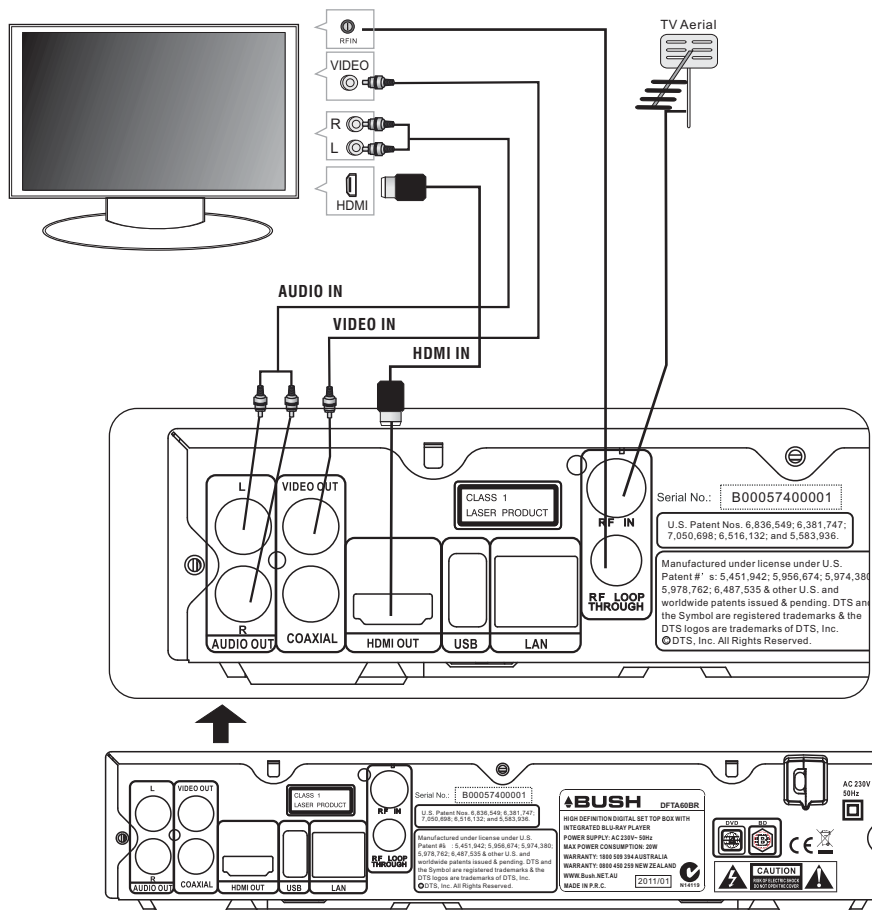

CONNECTING THE BLU-RAY PLAYER TO YOUR TV SET VIA THE AV CONNECTION

Connect the unit's L and R audio output via the composite cable provided to the corresponding audio input on your TV.

 
Then connect the unit's video output via the composite cable provided to the corresponding video input on your TV.

CONNECTING THE BLU-RAY PLAYER TO YOUR TV SET VIA THE HDMI CONNECTION

Use a HDMI cable (not supplied) to connect your unit to your TV via the HDMI Output. It will supports video resolution up to 1080p 60Hz.

Front Panel and Rear Panel Illustration


Connecting to an AV Amplifier with Digital Audio Input

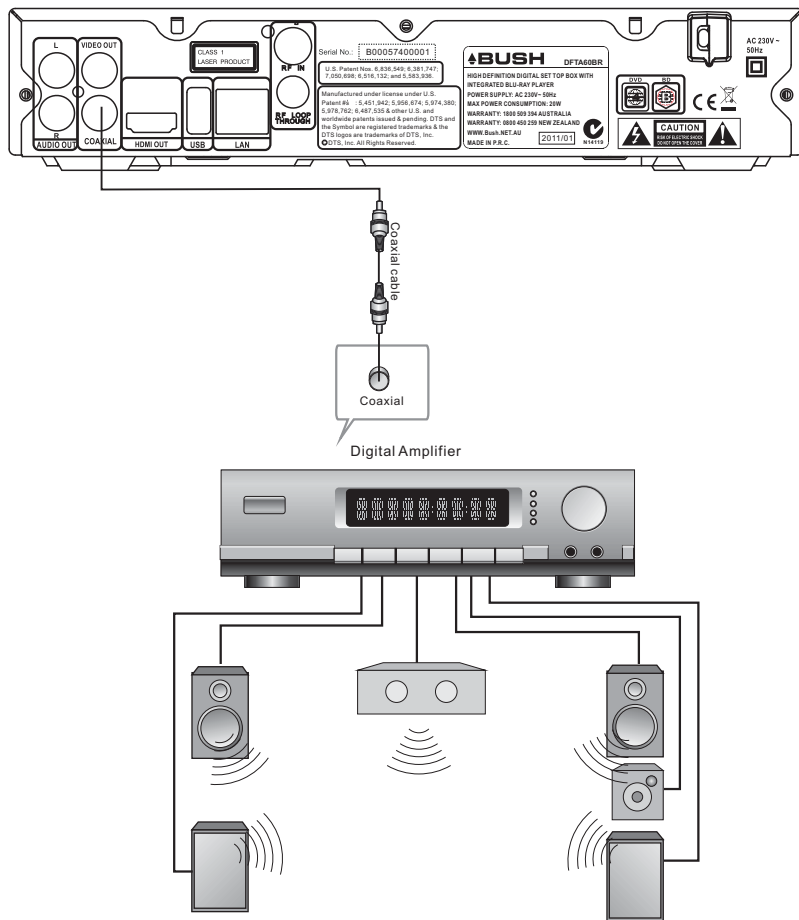

Notes:

1. Connect the unit to your external sound system/amplifier via the coaxial output.
2. Make sure you set the digital amplifier to the AV input source.

 Remote Control

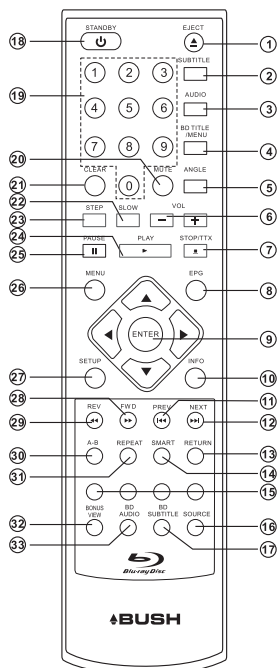

1. Eject

Press this button to open/close the disk tray.

2. SUBTITLE

Press the Subtitle Button to enable/disable subtitle feature in both BD and Set Top Box mode. Press to cycle through the language options.

3. AUDIO

Press the Audio Button to select the available audio languages or set the sound mode in both BD and Set Top Box mode.

4. BD Title/Menu

Press the BD Title/Menu when in BD mode to enter the movie main menu. (Not available on all disks).

5. Angle

Some BD and DVDs are filmed with more than one camera angle. During playback of such a disk, pressing this button will allow you to switch camera angles. (Not available on all disks)

6. VOL (+/-)

Press the VOL + Button to increase the volume level and press the VOL - Button to decrease the volume level.

7. STOP/TTX

Press the Stop Button to stop play in BD/DVD mode or press the TTX Button in Set Top Box mode to enter the Teletext Menu.

8. EPG

Press the EPG Button in Set Top Box mode to enter the Electronic Program Guide.

9. Navigation Keys

Use the Navigation Keys to scroll through the on-screen menus, channels and other on-screen functions.

10. INFO

Press the Info Button to display the current program information.

11. PREV

Press the Previous Button to play the previous title, chapter, track or file.

12. NEXT

Press the Next Button to play the next title, chapter, track or file.

13. Return

Press the Return Button to return to the previous folder, menu or switch to the previously watched channel.

14. SMART

Press the SMART Button to open the operation menu.

15. Colour Keys

The Colour Keys (red, green, yellow, and blue) are used to implement disk-specific features on some BD disks and to operate specific functions in the teletext menu.

16. Resolution

Press the Resolution Button to change the resolution settings directly.

17. BD Subtitle

Press the BD Subtitle Button to enter subtitle function in BD mode only.

Remote Control

18. STANDBY

Press the Standby Button to turn the unit on or off.

Note: After the power has been turned on, the unit will take up to 16 seconds to run Linux and initialise hardware, please be patient. Please wait while the system loads.

19. Numeric Keypad

The Numeric Buttons are used to select channel numbers or input information into the settings menu.

20. MUTE Mute Mute Off

Press the Mute Button to turn off the audio output only. Press the Mute button to turn it back on.

21. CLEAR

Press the Clear Button to clear any incorrect input information in the menu or setting options.

22. SLOW

Press the Slow Button to slow down the speed of play in BD mode. Press repeatedly to scroll through the possible speeds (1/2, 1/4, 1/8, 1/16, 1/32).



23. Step

Press the Step Button to play the movie by one frame in BD mode.

24. Play

Press the Play Button to start or resume playback in BD/DVD mode.

25. Pause

Press the Pause Button to pause playback in BD/DVD mode.

26. Menu

Press the Menu Button to access the unit main menu.

27. Setup

Press the Setup Button to enter the settings menu.

28. Fast Forward

Press the Fast Forward Button to scroll forwards through play in BD/DVD mode.



29. Rewind

Press the Rewind Button to scroll backwards through play in BD/DVD mode.



30. A-B

Press the A-B Button once to save a "start point" for repeating play in BD/DVD mode.

Press again to select an "endpoint" of you want repeated.



31. REPEAT

Press the Repeat Button to cycle through the possible repeat modes based on content played.

32. BD View

 
Press the BD View Button to turn the video portion of the director's commentary (picture-in-a-picture) on and off.

Note: Director's commentary must have been turned on in the BD's main menu in order for this to work.

33. BD Audio

Press the BD Audio Button to cycle through all of the languages available for the director's Commentaries.


Main Menu Introduction

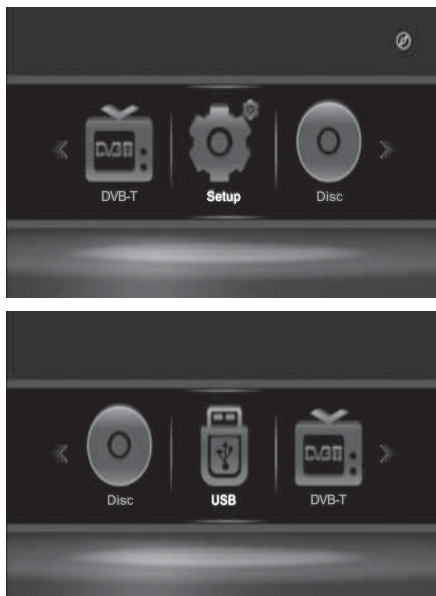

In the main menu mode, use the LEFT and RIGHT Buttons to scroll through options. Then press the ENTER Button to select.

Playback on USB device

 To play your USB, please insert your USB, the screen will display USB CONNECTED. Then select the USB icon and press the ENTER Button to begin your USB function.

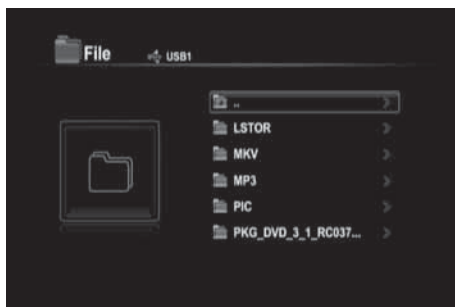


USB function will support files such as JPEG, MP3, WMA, MPEG2, MPEG4, AVI, VOB, WAV, MKV, MITS and TS. Press the SOURCE Button if you wish to return to the main menu or press the STOP Button to return to the file list.

Main Menu Introduction

Playback

SMART Function

 When playing disc, press the SMART Button to open Smart Menu. This will provide you with quick access to; MUTE, AUDIO, VIEWMODE, DISPLAY, VOLUME, ZOOM, ANGLE, SEARCH, DISCMENU and TITLE. Use the LEFT and RIGHT Buttons to choose one icon and press the ENTER Button to start.

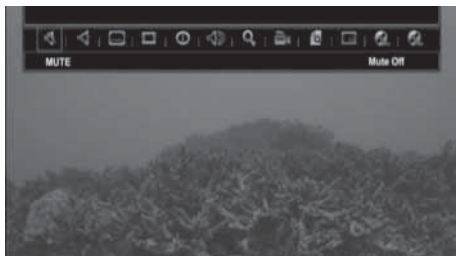

Time Function

Press the INFO Button to select time information.



 
Display Function

Press the INFO Button to view the current program or movie information.



Player Configuration via System Menu

Press the SOURCE button on the remote control to select the Setup or you can press MENU button then press RETURN button to select the Setup option. Then press the ENTER button to select. You will be able to amend the unit Settings for your personal requirements, including on screen language, Subtitle language, Disc menu & Disc audio.

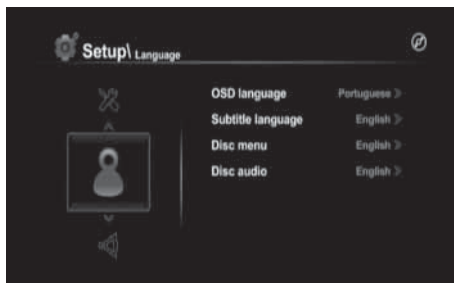

1. In the Setup Menu use the Up/Down Buttons to select the settings category you wish to change.
2. Use the Right Button to skip to the selected setting.
3. Press ENTER to cycle through each possible option or display a list of the options.
When a list of options appears, press the Up/Down direction buttons to move among the displayed options.
4. Press ENTER again to choose the option and change the setting.
5. Use the Left direction button to return back the category, and ready to change settings in a different category.
6. Pressing the Setup button while the Setup Menu is displayed will turn off the Setup Menu.

Language setup

Language setup will change the system's language settings.



OSD Language

Use this item to select the language of the setup menu and screen display.

Subtitle Language

This option provides the preset subtitle language.

Disc Menu

This option provides the film's menu language options.

 
Disc Audio

Select the built-in disc dubbing language options.

Player Configuration via System Menu

Audio setup

The Audio Setup Menu allows you to change the audio Settings.

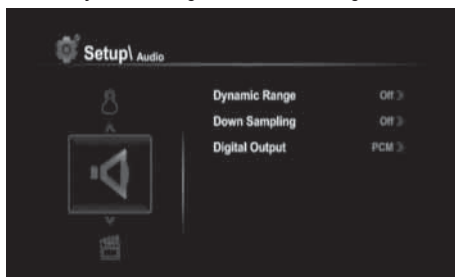

Dynamic Range

Select on or off to control Dynamic Range.

Down sampling

Select down sampling function on or off.

ON: System will down sample rate for high sampling rate audio (more than 96K).

OFF: Disable this function.

Digital output(Optional)

Adjust the audio output of the Coaxial ports/HDMI output to work in harmony with your audio equipment (e.g. receiver, amplifier) connected to the player.

Off: Digital audio output is disabled.

 
PCM: Transfer stereo 2 channels signals

RAW: Transfer the DVD original audio track

Note: This item is only for the player with coaxial output.

Video setup

The video Setup Menu allows you to change the video/picture Settings.

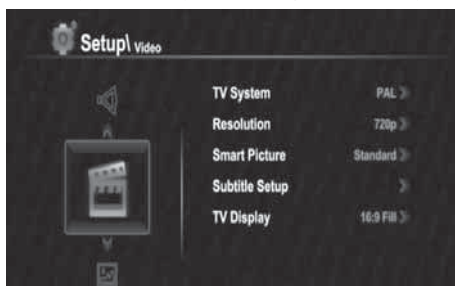

TV System

This feature allows you to change the reception system.

Note: The DVD player setting should be matched to your TV set.

For more information of output format, refer to the instructions or your TV set.

Player Configuration via System Menu

Resolution

After you set the video output to HD output, you can choose the resolution of the HDMI output.

Smart Picture

You can change the Smart Picture to Standard, Bright or Soft to optimise the effect of the screen.

Subtitle Setup

This feature allows you to change the font size item to Big/Middle/small.

This feature allows you to change the font colour item to White/Red/Yellow/Green/Blue/Gray.

This feature allows you to change the position item to change font position to Bottom or Top.

TV Display

Here you can change the aspect ratio.

Notes:

The image display ratio is related to the recorded disc format.

 
Some disc cannot display images in the aspect ratio you choose.

If you play a disc recorded in 4:3 format on a wide screen TV, black bars will appear on the left and right side of the screen.

You must adjust the screen setting depending on the type of the television you have.

Slide Setup

The Slide Setup Menu allows you to create a Slide Show of the images on your USB.

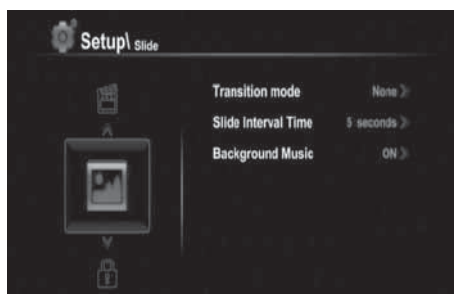

Transition Mode

The Transition Mode allows you to change the Style of Slide Show you would like.

There are None / Slide / Stripes / Fade / Wipe and Random modes to lay picture to choose from.

Slide Interval Time

You can choose the Slide Interval Time as 5 Seconds / 10 Seconds / 30 Seconds / 1 Minute / 5 Minutes.

Background music

You can select On or Off to control the Slide Background music.

Player Configuration via System Menu

Parental Control



The Parental Control Menu allows you to lock certain channels to protect children from inappropriate programs. To set a password, you will have to enter the default password 666666.

DVB-T Rating

In the System Menu you can set the Parental Guidance settings to restrict access to unsuitable channels. To restrict/lock the selected channels you will need to enter either the default password 666666 or your own password and then follow the prompts.

 
Rating Level

This feature lets you lock certain Rated programs.

Changing the Password

In the System Menu you are able to set your own password. Enter your old password or the default password 666666 to unlock this setting. Then you will then be asked to enter your new password. To confirm re-enter your new password. Once it is confirmed.

Network Setup

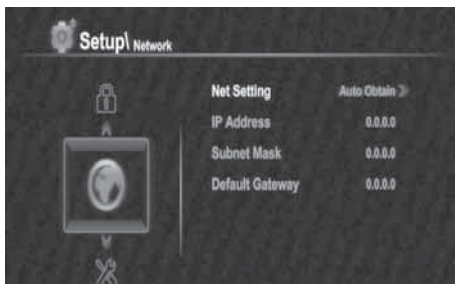

In Network Setup, select Auto Obtain and press ENTER to obtain the IP address. If successful you see successful onscreen or Connection failed if it fails. Select Fix IP to manually input your IP Address.

Player Configuration via System Menu

DVB-T setup



Country Select

Confirm your country of residence. Use the navigation buttons to select your desired country.

Time offset

The Time Offset can be set to auto or manual. If set to auto the Set Top Box will automatically change day light savings time etc.

Country Region

The Country Region option also allows you to set the state time in which you live. Select the Country Region option when Time Offset is set to Auto.

Time Zone

You can also change the Time Zone, this is best used when the Time Offset is set to Manual.

Logical channel Number

In the Program Menu you can set the LCN to on or off.

General setup



Screen Saver

You can turn on or off the unit Screen Saving in this option.

Use Default Settings

This feature allows you to conduct a unit factory reset. This will clear/delete all unit settings & channel lists. If you have any issues with this unit, it is recommended to do a factory reset to fix.

BD Info Storage

This option allows you to see the BD info Storage. Select this option to clear the Blu-ray storage.

Version

To display the current Software version.

Software Update

From time to time new software may be available for your digital box, which can be updated via the USB port or by receiving the software via your network.

DVB-T Function

 
 
The DVB-T Menu can give you access to the basic setting function of your digital box. To view the menu, press the **MENU** button on your remote control, or press the **SMART** button to select the *Channel Setting* option to enter the Menu mode.

Auto Scan

The Auto Scan option allows you to conduct a full automatic search for all available channels. All channels that are found will be stored in the channels list. Please note that when you conduct a channel search it will clear all preset channels.


Manual Scan

To conduct a Manual Scan, input the channel number and then press the **ENTER** Button to scan for that channel. If there is a repeated program in the list, it will show No new channels found.

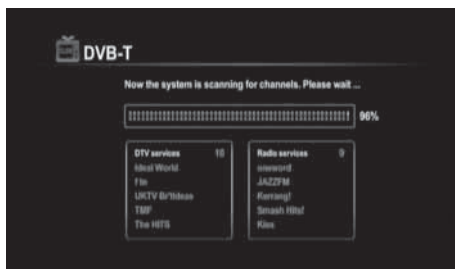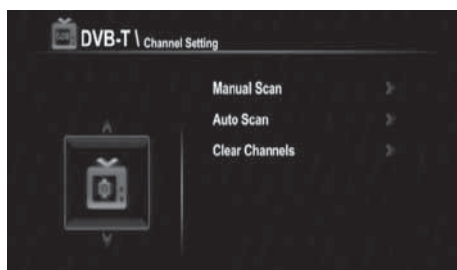

DVB-T Function

 1) Channel list: You can set favorite channels, lock, delete and move channels in your channel list.

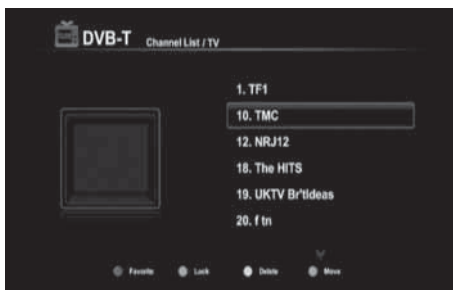

RED will delete programs, GREEN will lock chosen programmes.
YELLOW to delete chosen programmes. BLUE to move chosen programmes.

2) EPG



The Electronic Programme Guide, is an on-screen TV guide. It shows all scheduled programmes in advance for every tuned in Channel.

You can use the **▲▼** buttons to select a different channel. Press **ENTER** to watch the selected channel in the preview window

3) AUDIO: The Audio option will allow you to adjust the audio level.

4) SUBTITLE: The Subtitle option will allow you to set the subtitle function.

5) TELETEXT: The Teletext function will display the Teletext Menu.

6) TV/RADIO/LOCK/FAVORITE: Press the **ENTER** Button and use Navigation Buttons to select TV/RADIO/LOCK/FAVORITE programmes.

BD-Live Operation

Some (but certainly not all) BD disks contain additional features that are made available to players that are connected to the internet, and have additional memory added. These additional features may include things like

- the ability to download new movie trailers,
- additional 'commentary' by actors and directors,
- multiplayer game play and chat

In order to access BD-Live functions, the player must be properly configured for BD-Live internet access, and it must be equipped with additional memory.

Adding external BD-live Memory to player

Obtain USB memory which has been formatted as FAT32.
Insert the USB memory stick into the USB slot on the player.

Setting BD-Live Internet Access Mode

In the BD Player's main setup menu, go to the **Other** menu choice; Then, choose **BD-Live Internet Access**. Be sure that **Always Allow Access** is checked.

Once the USB memory stick has been inserted, if there is not at least 100Mbyte of free space on the device, you should choose **Clear BD Storage** from the **Other** setup menu.

In the BD Player's main setup menu, go to the **Network** menu. Then, choose **IP mode**. Set up the Network IP addresses per your router's or ISPs' recommendations.

NOTE: The **Connectivity Test** must pass, or you are not connected to the internet, and cannot access BD-Live Content on the web.

BD-Live Internet Access Example

 
Obtain a BD-Live disk like <The 6th Day>

Select BD-Live option from Special Features Menu (or on some disks, you can see BD-Live option in main menu)



BD-Live Operation

The player will connect to internet and show the download menu as below picture.
 Note: This can take several minutes.

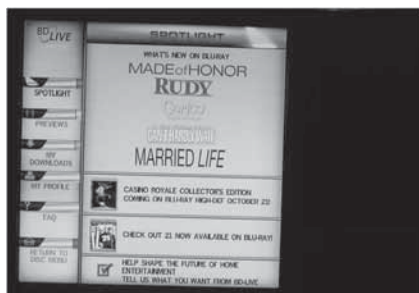

You can select the content to download from the Previews sub menu.
 Note: This can take several minutes.



The downloaded content is stored under My Downloads. You can choose to either playback or delete the downloaded content.



BD-Live Notes

This player only support the connection of USB memory in order to store BD 2.0 downloaded content. Any externally connected device will be set as BD-Live storage and internal storage will be ignored. Some BD-Live content will expire and not playable, users need to manually delete the contents in BD storage in order to free space.

Troubleshooting

If you experience problems with your Set Top Box/Blu-Ray Player, we recommend you follow the below suggestions first which are outlined to assist you with any basic issues. If you continue to have problems we recommend you contact the Bush Service and Warranty Toll Free Number - 1800509394 .

NO PICTURE OR SOUND

- Ensure the power button is on.
- Ensure the power outlet is operational.
- Ensure the power cord is not damaged.
- Ensure the power plug is connected firmly to the outlet.

PICTURE BUT NO SOUND

- Ensure the audio jacks are securely connected.
- Ensure the audio connector is not damaged.
- Ensure you have set the player's Audio settings correctly.
- Ensure you have entered the correct AV input for your TV.
- Ensure the audio is not set to mute.

SOUND BUT NO PICTURE

- Ensure the video jacks are securely connected.
- Ensure you have entered the correct AV input for your TV.
- Ensure the video connector is not damaged.
- Ensure you have set the player's VIDEO settings correctly.

POOR PICTURE OR SOUND

- Ensure you have set the player's Audio settings correctly.
- Ensure the disc is not scratched or stained.
- Ensure the AV connector or the output terminal is not damaged.

REMOTE NOT WORKING

- Make sure the mains power and the unit's power is on.
- Ensure the remote batteries are working.
- Point the remote control directly at the player's IR sensor.
- Remove any obstacles between the remote and the IR sensor.

UNIT NOT WORKING

- Turn off the power, and then turn it on again.

NO DISC DISPLAYED

- Conduct a Factory Reset
- Ensure you have put the disc on the tray.
- Ensure the disc is not upside down.
- Ensure the disc is not distorted, stained or scratched.

Specifications

Item	Specification	
General	Power requirements:	100-240V~ 50/60Hz
	Power consumption:	20W
Discs Compatibility	BD,DVD,DVD+/-R/RW,VCD,CD-DA,CD-R/RW.	
Video out	HDMI	
	CVBS:	1.0V(p-p)/75 Ω , sync, negative polarity, RCA pin jack x 1
Audio out	2 channel out:	RCA pin jackx2
	Coaxial out:	0.5V(p-p)75 Ω , RCA pin Jack x 1
	Frequency response:	20Hz to 20kHz
	S/N ratio:	> 90dB
	Total harmonic distortion:	< -65dB
DVB-T TV-Tuner	Input Frequency Range	
	VHF:174 - 230 MHz UHF:470 - 862 Mhz	
	Bandwidth:7 or 8 MHz	
	Input Signal Level:-75 ~ -20 dBm	
	RF Input Connector:IEC169-2 type, F type	
	Demodulation Mode	
	Waveform:COFDM	
	Demodulation:QPSK, QAM16, QAM64	
	Transmission Mode:2K, 8K	
	Guard interval:1/4, 1/8, 1/16, 1/32	

Specifications are subject to change without notice.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Rovi Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Rovi Corporation. Reverse engineering or disassembly is prohibited.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS-HD, DTS-HD Advanced Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software.
© DTS, Inc. All Rights Reserved.

Warranty

Please keep your receipt as proof of purchase. This product is warranted for any defect in materials or workmanship for one year after the original date of purchase. This product is for normal domestic and office use only.

This warranty does not cover damage from misuse or neglect, accidental damage, vermin infestation, excessive voltages such as lightning or power surges or any alteration that affects the performance or reliability of the product.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In the unlikely event that your product fails to work normally, please contact the Bush Warranty on **1800 509 394 (Australia)** or **0800 450 259 (New Zealand)** and have your receipt of purchase on hand.

This warranty is subject to the following provisions:

- It is only valid within the boundaries of the country of purchase.
- The product must be correctly assembled and operated in accordance with the instructions contained in this manual.
- The product must be used solely for domestic purposes.
- The warranty does not cover accidental damage, misuse, cabinet parts or consumable items.
- The warranty will be rendered invalid if the product is resold or has been damaged by inexperienced repair.
- The manufacturer disclaims any liability for incidental or consequential damages.

This warranty is in addition to, and does not diminish, your statutory or legal rights.

PO BOX 6287,
SILVERWATER NSW 1811
www.bushaustralia.com.au
Bush Warranty: 1800 509 394 Australia
Bush Warranty: 0800 450 259 New Zealand

PO BOX 6287,
SILVERWATER NSW 1811
www.bushaustralia.com.au