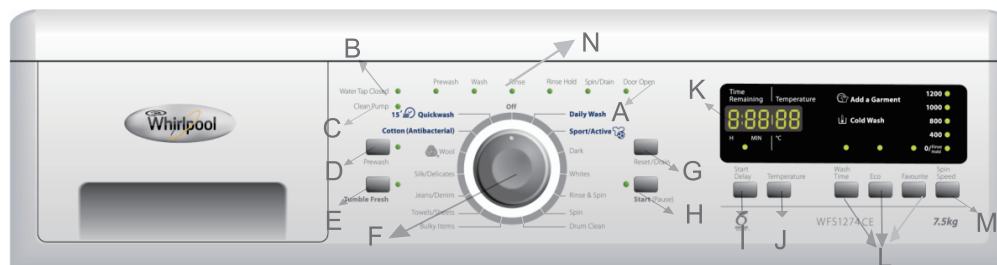


WFS1274CE

This washing machine is equipped with automatic safety functions which detect and diagnose at an early stage and react appropriately, e.g.:

- A. "Door Open" indication
- B. "Water Tap Closed" indication
- C. "Clean Pump" indication
- D. "Prewash" button
- E. "Tumble Fresh" button
- F. Programme selector
- G. "Reset/Drain" button






 
 



 

 
 


 

 




 
 
 
 
 
 
 
 



PROGRAMME CHART



Whirlpool®

- H. "Start/Pause" button
- I. "Start Delay" button
- J. "Temp." button – Temperature adjustment
- K. Time and Temperature display
- L. "Wash Time" - "ECO" - "Favourite" option buttons
- M. "Variable Spin" selector
- N. Programme sequence indicator

Prewash Wash Rinse Rinse Hold Spin/Drain

Programme	Care Labels	Type of wash/Notes –for temperature selection, respect the manufacturer's recommendations on the care label	Temperature °C	Max. Load Kg	Detergent and additives			Special options								Max.Spin Speed rpm		
					Pre wash 	Main Wash 	Softener 	Start Delay	Temp.	Pre wash	Tumble fresh	Rinse Hold	Wash Time	Variable Spin	ECO		Favourite	
Cotton/ (Antibacterial)	   	Normally to heavily soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen. At a temperature of 95°C, this programme eliminates bacteria, ensuring sanitization of your laundry. The bacteria removal efficiency has been tested following a similar methodology to the NF EN 13697 standard of Nov. 2001.	70-95	7.0	*	Yes	*	*	*	*	*	*	*	* ⁽²⁾	*	*	*	1200
			60	7.5														
			20-50	7.0														
Dark	  	Lower temperature to ensure dark fabrics do not fade in colour or mix	20 - 40	7.0	*	Yes	*	*	*	*	*	*	*	*	*	*	1200	
Whites	   	Removes easily visible stains on white garments	20 - 95	7.0	*	Yes	*	*	*	*	*	*	* ⁽²⁾	*	*	*	1200	
Daily Wash	 	Slightly to normally soiled textiles made of cotton and/or synthetics.	20 - 60	3.0	*	Yes	*	*	*	*	*	*	*	*	—	*	1200	
Quick Wash	 	Refresh briefly worn outer clothing made of cotton, artificial fibres and blends with cotton.	20 – 40	3.0	—	Yes	*	*	*	—	*	*	—	*	—	*	1200	
			50	7.0														
Silk/Delicates	 	Delicate clothing, dresses skirts, shirts and blouses.	20 - 30	1.5	*	Yes	*	*	*	*	*	*	*	*	—	*	1000 ⁽¹⁾	
Wool		Only woollens, labelled with the Woolmark and identified as machine washable. This programme (40°C) is tested and approved by the Woolmark Corporation for machine washable wool. If you select “Rinse Hold” do not leave items to soak for too long.	20 - 40	1.0	—	Yes	*	*	*	—	*	*	*	*	—	*	1000 ⁽¹⁾	
Towels/Sheets	   	Washes towels and sheets without too much wrinkling and optimum temperature and spin speed	20 - 60	7.0	*	Yes	*	*	*	*	*	*	*	*	*	*	1200	
Bulky Items	   	Blankets made of synthetic fibres, bed covers filled with polyester or other artificial fibres, sleeping bags, bath mats and similar items.	20 - 95	7.0	*	Yes	*	*	*	*	*	*	* ⁽²⁾	*	*	*	1200	
Jeans/Denim	 	Normally soiled cotton jeans wear and garments made of robust jeanslike material such as trousers and jackets.	20 - 60	7.0	*	Yes	*	*	*	*	*	*	*	*	*	*	1200	
Drum Clean	—	In this programme, the drum can be cleaned, when required. Detergent quantity should be approximately a quarter of that used for a normal load. (Recommended once per month.	20 - 95	—	—	Yes	—	*	*	—	—	—	—	—	—	*	400	
Rinse & Spin	—	Same as the last rinse and the final spin in the "Cotton" programme.	—	7.5	—	—	*	*	—	—	*	*	—	*	—	*	1200	
Spin	—	In this programme spin speed and spin time can be selected.	—	7.5	—	—	—	*	—	—	*	—	—	*	—	*	1200	
Sport/Active	  	Normally soiled and sweaty sportswear made of cotton, synthetics, jersey or microfibres. This programme includes a prewash cycle - you can add detergent also to the prewash chamber. Do not add any softner.	20 - 60	3.5	*	*	—	*	*	*	*	*	*	*	—	*	1200	

* optional / Yes: dosing required.

(1) For improved garment care, spin speed is restricted to 1000 rpm in this program.

(2) Option available for use under 70 °C.

 Cotton

 Synthetics

 Delicates

BASIC CHART

Whirlpool is a registered trademark of Whirlpool USA

PROGRAMME DATA

Programme	Temperature °C	Max. Load (Kg)	Approx. Duration (hours:minutes)*
Daily Wash	40	3.0	0:57
Quick Wash	30	3.0	0:15
Quick Wash	50	7.0	0:59
Cotton antibacterial	60	7.5	3:25
Cotton antibacterial Eco **	60	7.5	3:45
Cotton (Antibacterial) ***	95	7.0	2:15
Dark	40	7.0	1:59
Whites	60	7.0	3:25
Bulky items	40	7.0	1:59
Towels/Sheets	60	7.0	3:25
Jeans/Denim	40	7.0	1:59
Silk/Delicates	30	1.5	0:40
Sports/Active	40	3.5	1:32
Wool	30	1.0	0:42
Rinse & Spin	—	7.5	0:30
Spin	—	7.5	0:16
Drum Clean	60	—	1:10

* The actual running time can deviate from the values in the table, because it takes into account the operating conditions applicable at that time.

** Reference programme for Energy and Water Labelling, according to the Australian Standards, AS/NZS 2040.1 and AS/NZS 2040.2.

*** To reduce water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

ADD DETERGENTS, CLOSE THE DOOR AND SELECT THE PROGRAMME

Add detergent as indicated on the front page and as described in the chapter “Detergent and Additives” in your Instructions for Use. The detergent can also be added as a solution dissolved in warm water. (Always use high efficiency, low foam detergent for front load washing machine.)

1. Turn the **programme selector** to the desired programme and temperature.
2. The **time display** shows the duration of the chosen programme (in hours and minutes), and the **“Start / Pause”** indication lamp is flashing.
3. The **indication lamp** of the predefined spin speed lights up.

SELECT ANY DESIRED OPTION

Press the selected option button once, the current value is displayed on the display. By pressing the button repeatedly, the display will display the values in sequence. By pressing the button of the desired option, the respective indicator lights up. When the combination of programme and additional options is not possible, the indication lights switch off automatically.

Unsuitable combinations of options are deselected automatically.

“Prewash” button

• Only for heavily soiled loads (for example, sand, granular dirt, etc.). Initial set time for the “Prewash” is about 18 minutes, during which the drum will rotate. The “Soak” time, which will commence after the “Prewash” cycle, can be increased by 10 minutes for each additional press of the button. Press the “Prewash” button to set the desired “Soak” time. The appliance will complete the “Prewash” cycle, lasting about 18 minutes and then keep the laundry soaked, up to the selected time. The water is then drained out.

• Do not use liquid detergent for the main wash when activating “Favourite” button:

If there is a programme setting which you use frequently, the

Appliance offers possibility to save one setting for each program so that it can be used again by just pushing one button.

- Select the desired programme, temperature, spin speed and options, push and hold the **“Favourite”** button for at least 3 second. The lamp next to **“Favourite”** shortly blinks and then lights up - the programme setting is saved. Next time you want to use your individual programme setting, select the programme, push the **“Favourite”** button and start by pushing **“Start(Pause)”**.

If you want to replace the saved programme setting by another one, proceed as already described above.

“Wash Time” button:

- The wash time can be adjusted by pressing the button. Each press of the button either increases or decreases the time by approximately 10 minutes, depending on the Wash Programme selected.

“ECO” button:

- With a prolonged washing duration and lower washing temperature, a desirable washing performance can be obtained and reduces energy consumption.

“Variable Spin” button:

- Every programme has a pre-defined max. spin speed.
- Press the button to set another spin speed.
- If spin speed **“0/Rinse/Hold”** is selected, The laundry remains in the last rinse water without progressing to the final spin cycle, to avoid creasing of the laundry.
- Do not leave the laundry to soak for too long in the **“Rinse Hold”** state, to prevent colours from being affected.
- The programme stops at **“Rinse Hold”** when the **“Rinse Hold”** light in the programme sequence indication is on. Also, the indication lamp next to the **“Start / Pause”** button flashes.
- To terminate **“Rinse Hold”**, by spinning the laundry, press the **“Variable Spin”** button to select the desired

spin speed and then press the **“Start / Pause”** button. The programme will then terminate automatically after the spin cycle.

- To terminate **“Rinse Hold”** and drain the water, without any spinning, press the **“Start / Pause”** button.

“Tumble fresh”

- Select this option if you cannot unload the laundry soon after programme end, or if you tend to forget the laundry in your washing machine; it will help to keep your laundry fresh.
- The washing machine will start to tumble the laundry periodically about half an hour after programme end.
- The light of the **“Tumble fresh”** button will blink while this function is active, and the display will show “0:01” with blinking colon.
- The periodic tumbling will last up to approximately 12 hours after the end of your wash programme, and you can stop it at any time by pressing the **“Tumble fresh”** or **“Reset”** button; it will last a while until you can open the door.
- After the **“tumble fresh”** period has run out, the display indicates “End”.

“Add garment”

If you want to add garments in the process of the washing, please press “Start/Pause” button

- If can add garment, the washing time in the big screen will wink , waiting for the door open indicator lights, then open the door and add the garment.
- If the washing time in the big screen doesn't wink, it means you can't add garment in the process of the washing, it may be caused by the water temperature over 40°C or over the time for adding garment.

TEMPERATURE CONTROL

On selecting a programme, a predefined temperature is displayed. Press the button to set another temperature.

START DELAY

The **“Start Delay”** function allows the machine to be run at the consumer's convenience, for example at night when electricity is cheaper.

- Select the programme, temperature and the required options.
- Press the **“Start Delay”** button to select one of the delay time steps between 0:10 and 23:00 hours.
- Press the **“Start / Pause”** button.
- The LED display above the **“Start Delay”** button, displays the delay time and the countdown begins.
- The time delay indication disappears when the programme starts and is replaced by the remaining programme time.
- To change the time delay, once the **“Start / Pause”** button has been pressed, press the **“Start / Pause”** button and then press the **“Start Delay”** button to select the required time delay.

To Cancel “Start Delay”:

To cancel the Start Delay, do one of the following:

- Turn the programme selector to another position, or;
- Press the **“Start / Pause”** button, or;
- Press the **“Reset”** button for at least 3 seconds, the **“Start Delay”** time disappears from the time display.

PROGRAMME START

Open the tap and press the **“Start / Pause”** button. The indication lamp next to the **“Start / Pause”** button lights up. The programme sequence indicator shows the current programme phase, from left to right, as Prewash, Wash, Rinse, Rinse Hold and Spin / Drain.

The time display shows the remaining programme time. Due to variations in load and the temperature of the inlet water, the remaining time is re-calculated in certain programme phases. When this occurs, the remaining programme time is replaced by an animation.

“DOOR OPEN” INDICATION

Before the start and after the end of a programme, the **“Door Open”** indication lamp, lights to show that the door can be opened. While a wash programme is running, the door remains locked and must on no account be forced open. In case, there is an urgent need to open it during a running programme, press the **“Start / Pause”** button and then press the **“Reset”** button.

REFER TO “CANCEL / RESET A RUNNING PROGRAMME BEFORE THE END”.

RED FAILURE INDICATIONS

“Water Tap Closed”:

If the appliance has insufficient or no water supply, the **“Water Tap Closed”** indication will light up. Open the water tap. If the indication still lights up, refer to the **“Trouble Shooting Guide”** in the Instructions for Use.

“Clean Pump”:

If the waste water is not being pumped out, the **“Clean Pump”** indication will light up. Check whether the drain hose or the filter requires to be cleaned. In the latter case, refer to, **“Removing the Filter”** in the Instructions for Use.

PROGRAMME END

- The display shows **“End”** and the **“Door Open”** indication lights up.
- All the lights of the programme sequence indicators are off.

1. Turn the programme selector to the **“Off / 0”** position.
2. Close the water tap.
3. Open the door and unload the machine.
4. Leave the door ajar, to allow the drum to dry.

CHANGE PROGRAMME AND / OR OPTIONS AFTER PROGRAMME START

1. Press the **“Start / Pause”** button to pause the programme. The indication light flashes.
2. Select the new programme, the temperature, options and the required spin speed.
3. Press the **“Start / Pause”** button again. The new programme continues at the same position, where the previous programme was interrupted. Do not add detergent again.

CANCEL / RESET A RUNNING PROGRAMME BEFORE THE END

The **“Reset/Drain”** button cancels a set programme before the end of the cycle. To reset, press the button for at least 3 seconds. Water from the machine is then drained out, before the door can be opened.

Whirlpool is a registered trademark of Whirlpool USA
W10512049A