


*Thinking of you*  
 **Electrolux**

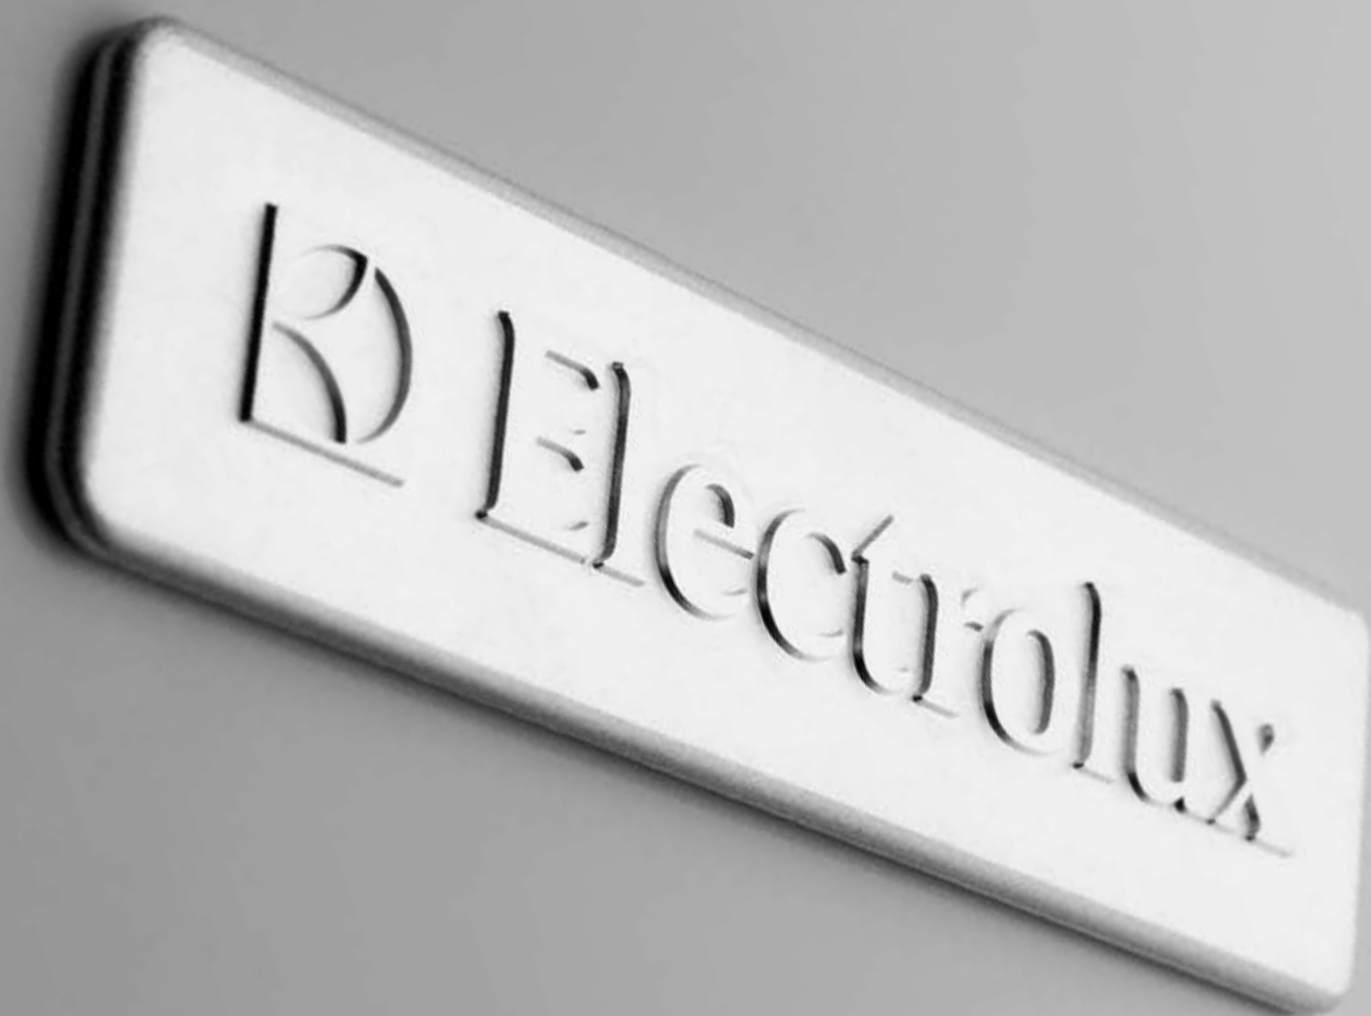

user manual  
**refrigeration**





## Congratulations

Congratulations and thank you for choosing our products. We are sure you will find your new appliance a pleasure to use. Before you use the appliance, we recommend that you read through the entire user manual, which provides the description of the appliance and its functions. To avoid the risks that are always present when you use an electric appliance, it is important that the appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards. We recommend that you keep this instruction booklet for future reference and pass it on to any future owners. After unpacking the appliance please check it is not damaged. If in doubt, do not use the appliance but contact your local Electrolux Customer Care Centre.

## Contents


• Important safety instructions	1
• Installing your new appliance	2
• Ice station assembly	3
• Initial start up	4
• Electronic display controls – electronic models only	4
• Changing the temperature	4
• Manual (rotary) controls – manual models	6
• How to use the features of your appliance	7
• Care and maintenance	9
• General information	10
• Troubleshooting	11
• Warranty	12

 **environmental tip**

## Information on disposal for users

- Most of the packing materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.


Top mount freezer model (TM)

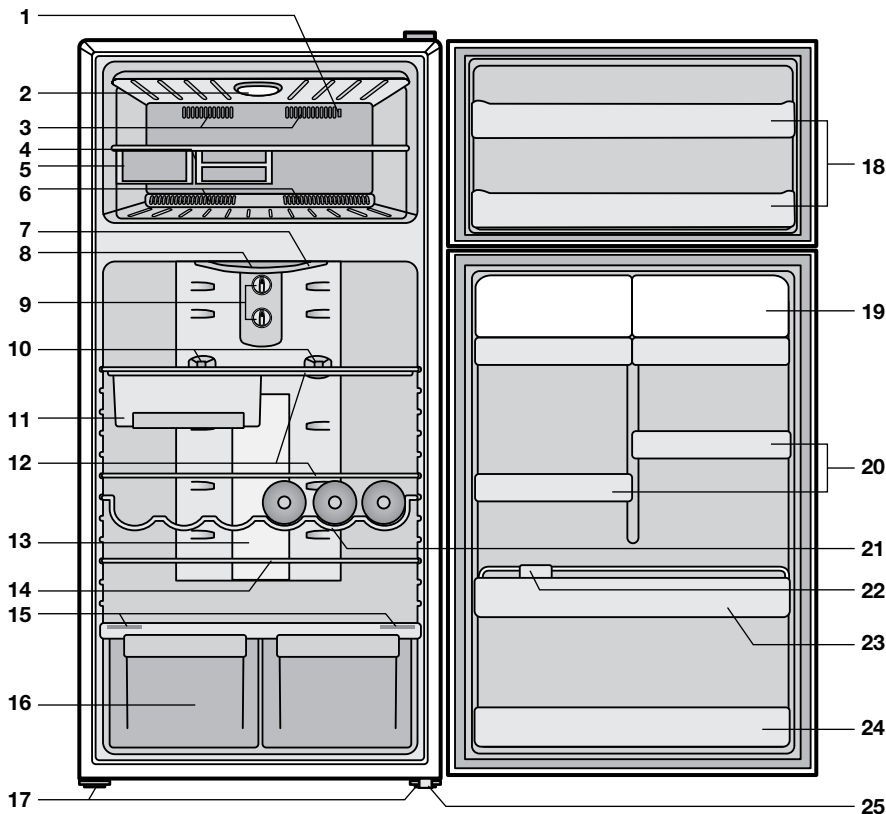

- 1 Sensor (electronic models only)
- 2 Freezer light (electronic models only)
- 3 Freezer air delivery vents
- 4 Adjustable wire shelf
- 5 Ice station with ice cube trays (where fitted)
- 6 Freezer air return vents
- 7 Sensor (electronic models only)
- 8 Deodoriser
- 9 Fridge and freezer temperature controls (manual control models)
- 10 Deli compartment temperature controls
- 11 Repositional deli compartment (where fitted, slideable on selected models)
- 12 Adjustable spill safe glass shelves
- 13 Fridge light
- 14 Spill safe slide away shelf (where fitted)
- 15 Crisper humidity controls
- 16 Crisper bins
- 17 Adjustable rollers
- 18 Freezer door bins
- 19 Dairy compartments
- 20 Adjustable door bins
- 21 Wine rack (where fitted)
- 22 Bottle twist holder (where fitted)
- 23 Full width door bin
- 24 Full width door bin (can bin on smaller models)
- 25 Stabilising foot

*Note: Product illustrations demonstrate various features but may not be completely in line with current products.*


Bottom mount freezer model (BM)

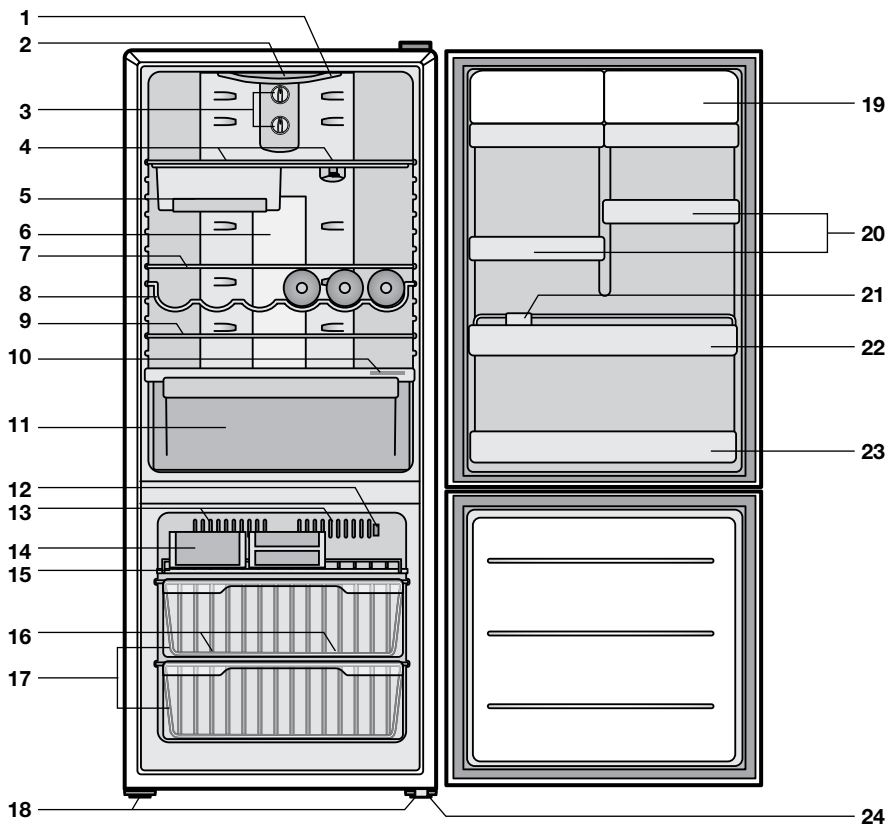

- 1 Sensor (electronic models only)
- 2 Deodoriser
- 3 Fridge and freezer temperature controls (manual control models)
- 4 Deli compartment temperature controls
- 5 Repositional deli compartment (where fitted, slideable on selected models)
- 6 Fridge light
- 7 Spill safe slide away shelf (where fitted)
- 8 Wine rack (where fitted)
- 9 Adjustable spill safe glass shelves
- 10 Crisper humidity control
- 11 Full width crisper bin (where fitted)
- 12 Sensor (electronic models only)
- 13 Freezer air delivery bins
- 14 Ice station with ice cube tray(s) and bin (where fitted)
- 15 Wire shelf
- 16 Freezer air return vents (hidden behind baskets)
- 17 Freezer baskets with clear fascia
- 18 Adjustable rollers
- 19 Dairy compartments
- 20 Adjustable door bins
- 21 Bottle twist holder (where fitted)
- 22 Full width bottle bin
- 23 Full width bottle bin (can bin on smaller models)
- 24 Stabilising foot


*Note: Product illustrations demonstrate various features but may not be completely in line with current products.*

## Single door all refrigerator model (AR)

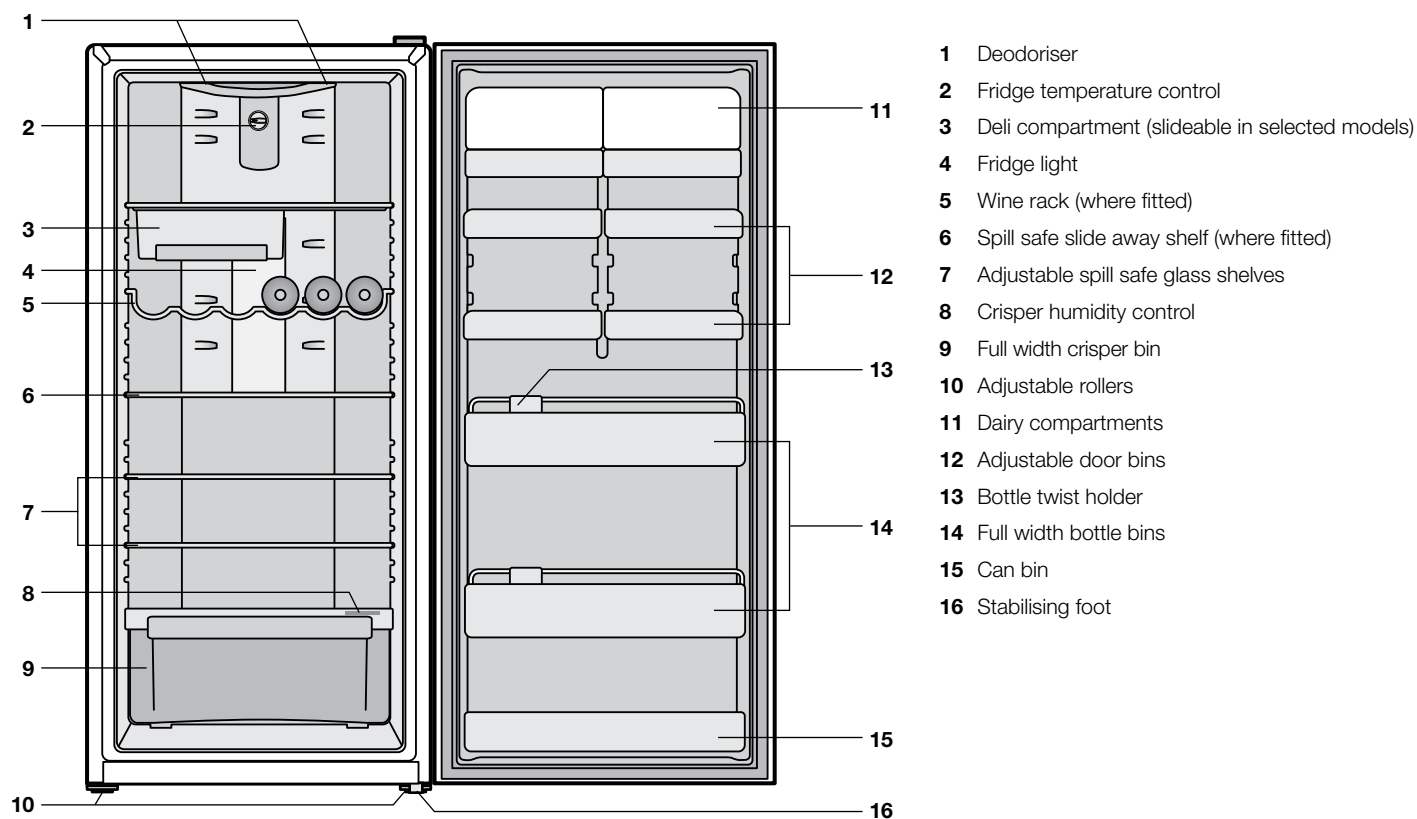

*Note: Product illustrations demonstrate various features but may not be completely in line with current products.*

## Single door all freezer model (AF)

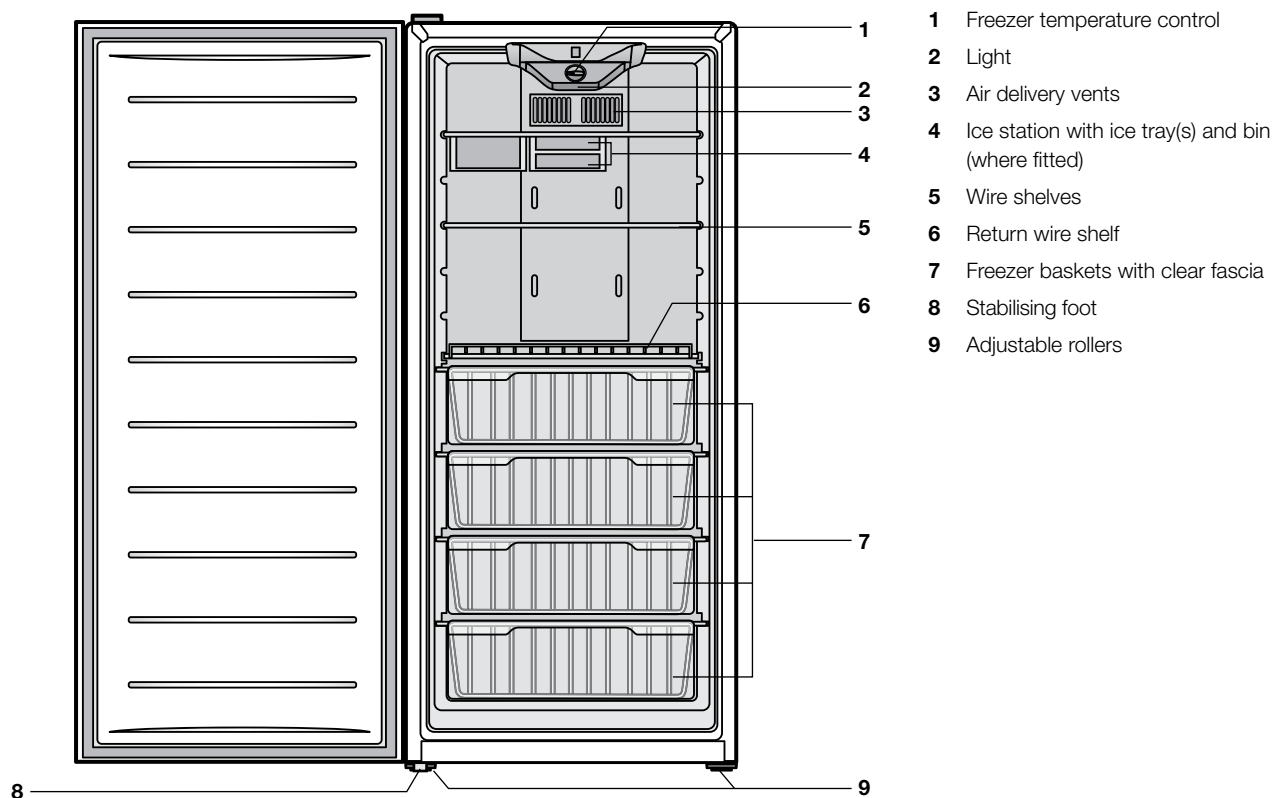

*Note: Product illustrations demonstrate various features but may not be completely in line with current products.*

## Important safety instructions

Please read the user manual carefully and store in a handy place for later reference.  
The symbols you will see in this booklet have these meanings:



### warning

This symbol indicates information concerning your personal safety



### caution

This symbol indicates information on how to avoid damaging the appliance



### tips and information

This symbol indicates tips and information about use of the appliance



### environmental tip

This symbol indicates tips and information about economical and ecological use of the appliance

Meanings of symbols used in this manual are shown below:



This symbol indicates never to do this



This symbol indicates always do this



### warning

- If pressurised aerosol containers bear the word 'flammable' and/or a small flame symbol, do not store them inside any refrigerator or freezer. If you do so you may cause an explosion.
- When you dispose of your old refrigerators and freezers, remove any doors. Children can suffocate if they get trapped inside.
- This appliance contains insulation formed with flammable blowing gases. Avoid safety hazards by carefully disposing of this appliance.



### warning

- ✓ The appliance must be plugged into its own dedicated 220-240V, 50Hz AC electrical outlet.
- ✓ Ensure that the electric outlet is properly earthed to ground. Consult a qualified electrician if you are unsure.
- ⊘ Do not use an extension cord or adapter plug.
- ✓ If the power cord is damaged, it should be replaced by a service technician or a qualified person.
- ✓ Unplug the appliance before cleaning and before changing the light bulb to avoid electric shock.
- ⊘ Never unplug the appliance by pulling on the power cord. Always grip the plug firmly, and pull straight out of the receptacle to prevent damaging the power cord.
- ✓ Choose a location that is not too cold - the temperature should be above 10°C.
- ✓ Put the appliance in a dry place, avoiding areas of high moisture or humidity.
- ⊘ Don't put the appliance in frosty or unprotected areas, for example in a garage or on a verandah.
- ⊘ Don't put the appliance in direct sunlight.
- ⊘ Don't put the appliance near stoves, fires or heaters.

When correctly installed, your appliance should:

- have adequate clearance to the back and sides for air circulation (refer to page 2).
- be aligned to the surrounding cupboards.
- have doors that will self-close from a partially open position.



### warning

- Have the stability foot in place (see diagram on page 2) to prevent the appliance falling forward when a door with heavy food load is opened.




**appliancesonline**  
.com.au

Australia's largest online appliance retailer

## Installing your new appliance

### Clearance around your appliance

If you do not have a cupboard with a rear gap, the recommended clearance area on top increases from 50mm to 90mm (x) and from 32mm to 72mm (y). When positioned in a corner area, spacing of at least 350mm (400mm for E:Line models) on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

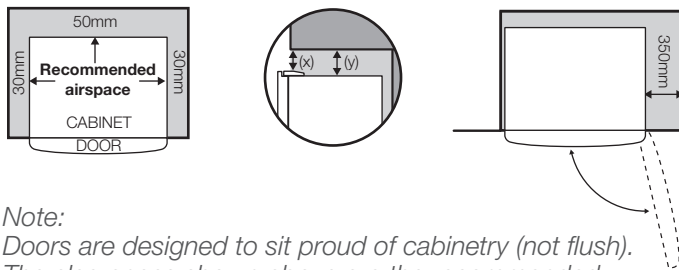


#### Note:


Doors are designed to sit proud of cabinetry (not flush). The clearances shown above are the recommended minimum clearances. The clearance at the rear must not exceed 75mm.

### Installing your appliance

The appliance should arrive with the front adjustable rollers wound down to tilt the top of the appliance backwards by about 10-15mm from upright.

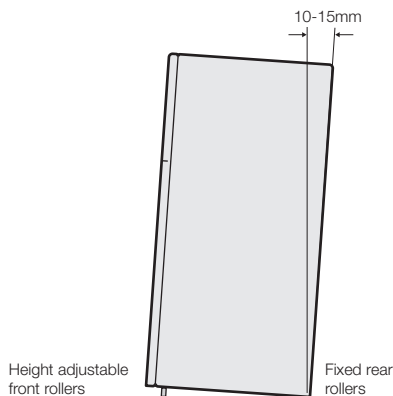

 
The stability foot should also be wound fully up so it will not interfere with the operation of the rollers (see diagram in Step 3).




**caution**

**The rollers are designed for forward or backward movement only. They are not castors. Moving the appliance sideways may damage your floor and the rollers.**


1. Roll the appliance into its final position.
2. The top of the appliance should be tilted back by approximately 10-15mm (see diagram above). This will allow the doors to self-close providing a consistent door seal.
3. If the appliance is not tilted back, you can adjust the two front rollers by turning the large, plastic roller nut (see diagram below). This will increase the height of the rollers. One turn of the nut will tilt the appliance back approximately 10mm. If you have difficulty turning the roller nut you can have someone tilt the appliance back, so that you have better access. Alternatively, you can access the rollers from the side, using a flat screwdriver to help you turn the nut (see diagram below).

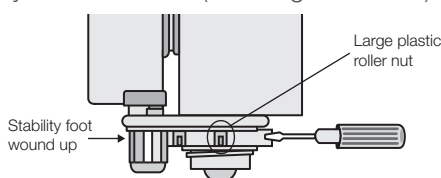


4. Check the alignment of the appliance to the surrounding cupboards. The top of the appliance should be level from side to side (see diagram below). If you need to adjust the level, use the adjustable rollers as discussed in Step 3.

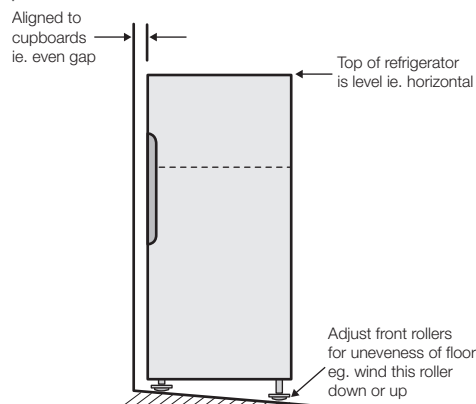

5. If the appliance now rocks from one corner to the opposite rear corner, this means that the floor is uneven; you will need to put some packing under one of the rear rollers. You could use thin pieces of solid material, such as thin board, vinyl floor tiles or laminate. Place the packing so that it will sit under one of the rear rollers when the appliance is rolled into position.
6. On certain floor surfaces the appliance may roll forward during operation. Where provided a "Roller Stop" can be placed under the front rollers.

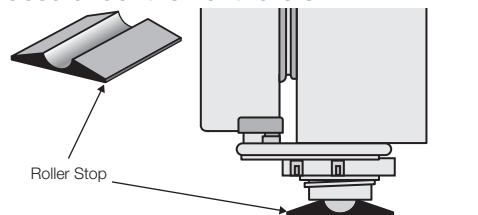

7. You may now need to fine-tune the installation by repeating Steps 3, 4 and 5.
8. When you have the appliance in final position, wind the stability foot down until it just makes contact with the floor. **Whenever you need to move the appliance, be sure to wind the foot back up so that the appliance can roll freely.**

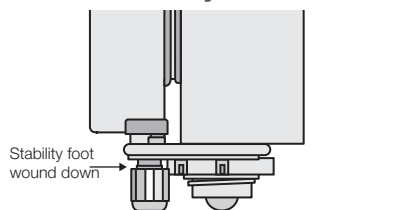

9. Clean your appliance thoroughly following the instructions on page 10 and wipe off any dust that has accumulated during shipping.
10. Plug the appliance into the power point. Don't use a double adaptor. **If you need to roll the appliance out to get at the power point, remember to raise the stability foot before you do so.**
11. We recommend that you let your appliance run for two to three hours before you put any food in it. This will allow you to check that it is operating properly.


**appliancesonline.com.au**

Australia's largest online appliance retailer


**Congratulations! You have successfully installed your new appliance.**




## Ice station assembly installation

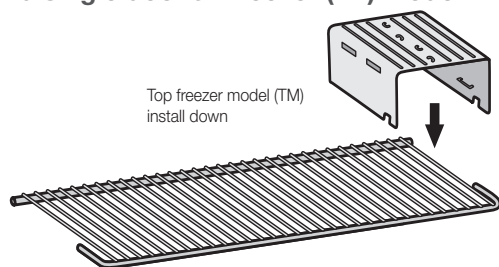**To fit the ice station assembly to a top mount freezer (TM) and single door all freezer (AF) model**


1. Fit the ice station carrier to the wire shelf by aligning the outside of the carrier to the wires as shown below.

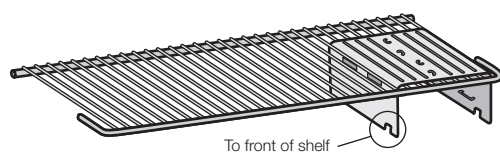


2. Then push down in the middle of the carrier until it clips into place.
3. Finally, slide the ice cube trays or storage bin into position as shown below.

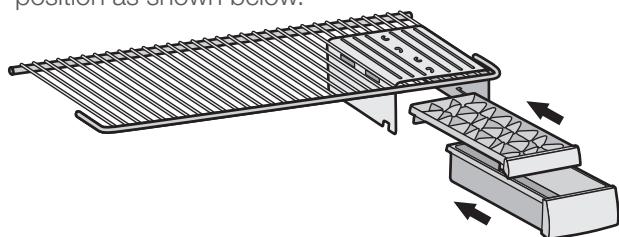


To remove, take out the ice cube trays and storage bin and simply lift the carrier off the wire shelf.

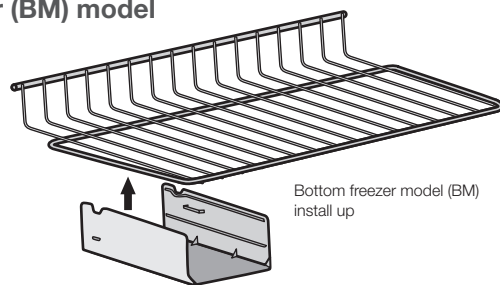**To fit the ice station assembly to a bottom mount freezer (BM) model**


1. Fit the ice station carrier to the wire shelf by aligning the outside of the carrier to the wires as shown below.

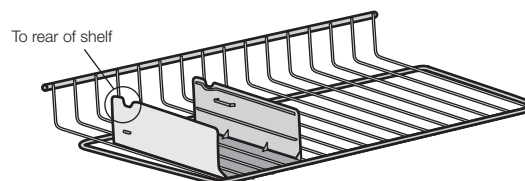

2. Make sure the four clips are engaged onto the central wire as shown below.

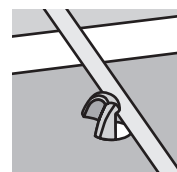

3. Then push up in the middle of the carrier until it clips into place.
4. Finally, slide the ice cube trays or storage bin into position as shown below.

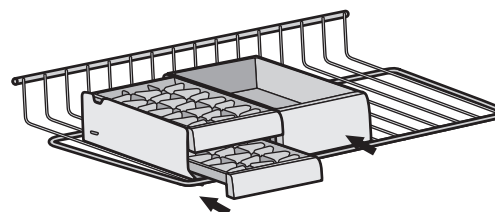

To remove, take out the ice cube trays and storage bin and simply pull the carrier off the wire shelf.

## Initial start up

The appliance transfers heat from food placed inside the appliance to the outside air.

**This process makes the rear, the sides and the area adjacent to the doors, particularly at initial start up, feel warm. This is normal.**

There is a cooling coil located behind the rear wall of the cabinet. This coil cools and removes moisture from the air. A fan then circulates cold, dry air throughout the cabinet. This air circulation means that foods are refrigerated far more quickly than in appliances where the air remains relatively static.

**Avoid placing food against air outlets as this will affect air circulation (see diagrams on inside cover).**

A light frosting will occasionally occur on the cold interior of the freezer when the door is opened frequently. This is normal and will disappear after a few days in most climates.

Make sure you fully close the freezer door after you load or remove food. If the door is left partly open, a heavy frost will coat the inside of the freezer. If a frost develops, remove it. Take care to properly close the door and the frost will not reoccur.


Your new energy efficient appliance uses a high-speed compressor and other energy efficient components that may produce different noises to your old appliance. These sounds are normal and include:

- compressor running noise.
  - air movement noise from the small fan motor.
  - occasional gurgling, similar to water boiling.
  - a popping noise, heard during automatic defrosting.
  - a clicking noise, just prior to the compressor starting up.
- These noises are normal and not cause for alarm.

Further details can be found on page 11.

### tips and information

- On a top mount freezer (TM) refrigerator (where the freezer is on top of the fresh food compartment): Do not place food forward of the ribs on the bottom of the freezer, it will keep the door open. So make sure food is stored behind the ribs.

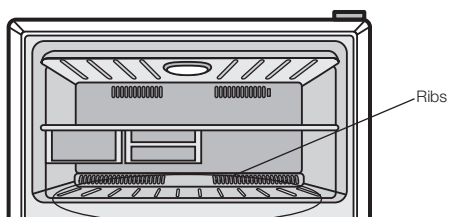


- On a bottom mount freezer (BM) refrigerator, single door all refrigerator (AR) and single door all freezer (AF): Ensure freezer baskets and shelves are pushed completely back to prevent them holding the door open.

## Electronic display controls – electronic models only

The electronic display panel consists of an LCD display with white backlighting and 6 push buttons. When the power is first turned on, you will see the default settings, with the white backlighting on.

If no buttons have been pressed and the fridge door is closed the backlighting will turn off after 30 seconds.

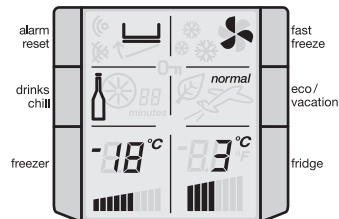

### tips and information

A good indication of optimal freezer temperature is ice cream that is frozen, but still soft enough for easy scooping. For the fridge compartment, we recommend using drinking water and simply adjusting the fridge controls until the water is at your ideal temperature.

### Controlling the temperature


The default temperature for the refrigerator is 3°C, with a default of -18°C for the freezer. If you want to change the temperatures, use the instructions below. You should make only small adjustments and wait 24 hours to see whether you need to make further changes.

*Note:*

*When you set a temperature, you set an average temperature for the whole appliance cabinet. Temperatures inside each compartment may vary, depending on how much food you store and where you place it. High or low room temperature may also affect the actual temperature inside the appliance.*


### Changing the freezer temperature

Press the freezer button to make the freezer colder in 1°C steps. Once -23°C is reached the display will return to -14°C with the next button press. You'll notice that the bar graph gets smaller with colder freezer settings.

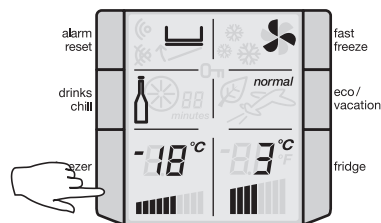

### Changing the refrigerator temperature

Press the fridge button to make the fridge colder in 1°C steps. Once 0°C is reached the display will return to 7°C with the next button press. The bar graph gets smaller with colder settings.

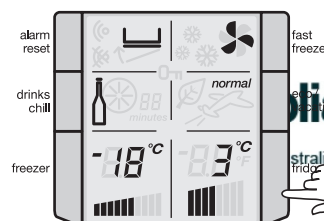




### Fast freeze function

Use the fast freeze function when you add a large amount of food to the freezer compartment. This freezes the food quickly but does not affect the temperature in the refrigerator compartment.


To use this function, press the fast freeze button once. An animated icon will light up. The fast freeze function will now operate for 90 minutes. If you want to turn the fast freeze function off before 90 minutes have passed, simply press the fast freeze button again. The icon will disappear and the freezer will return to normal operation.

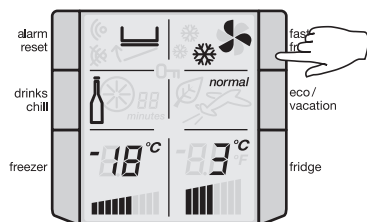

### Freezer temperature alarm

If the alarm is sounding for no apparent reason, check whether anything is holding the door open.

If the freezer becomes too warm due to the freezer door being left open or warm food being placed too close to the temperature sensor in the freezer (see diagrams on inside cover for the sensor location), a buzzer will sound; the icon adjacent to the alarm reset button, the freezer set temperature and bar graph will all flash until the alarm reset button is pressed. Once pressed the alarm disable icon adjacent to the alarm reset button will illuminate for 50 minutes, or until the temperature reaches an acceptable level.

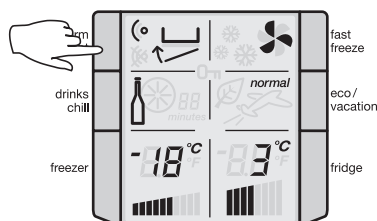

Make sure nothing is holding the freezer door open and move any warm food away from the temperature sensor (see diagrams on inside cover for the sensor location).

If the freezer is still too warm after 50 minutes the alarm will sound again, indicating that something may be wrong with your appliance.


*Note:*

*The freezer temperature alarm can be reset for 12 hours by pressing the alarm reset button continuously for 10 seconds.*

### Door alarm

If the refrigerator door is left open for longer than 2 minutes a buzzer will sound and an arrow pointing to an open door will flash. The refrigerator temperature settings and bar graph will also flash.


If you want to leave the door open while you load the fridge, you can turn the alarm off for 8 minutes by pressing the alarm reset button.

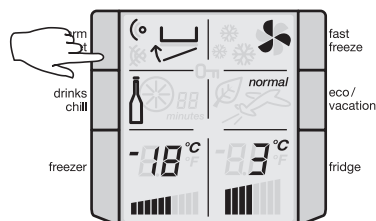

### Child lock


To activate the child lock, press the alarm reset and fast freeze buttons together. This will disable the display to prevent accidental changes to settings.

To turn off the child lock press and hold the alarm reset and fast freeze buttons together.

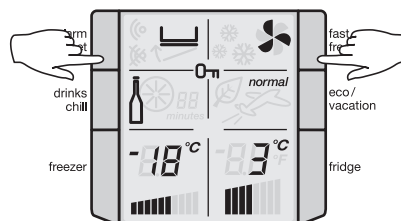

### Drinks chill timer

To use the timer, press the drinks chill button once to set a 10 minute time limit, twice for 20 minutes and three times for 30 minutes. Press four times to turn the timer off.

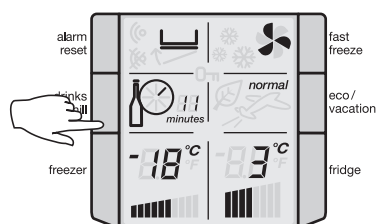

If you set the drinks chill timer it will sound an alarm to remind you that you have left drinks in your freezer for quick chilling. An animated icon appears beside the drinks chill button with a countdown timer.

The timer will count down in 1 minute increments; you can change the time or turn the timer off even after the countdown has started. When the countdown is finished a buzzer will sound and the icon beside the alarm will flash until the alarm reset button is pressed.

To stop the alarm and turn off the drinks chill timer, press the alarm reset button. If your drink is chilled, take it out of the freezer. If it is not cold enough, reset the drinks chill function (remembering that the drink is already partially chilled).

Suggested chilling times:

- 10 minutes for cans of drink
- 20 minutes for bottles of wine
- 30 minutes for bottles of soft drink

## Manual (rotary) controls – manual models

**Energy efficiency**


Your appliance has been designed with energy efficiency in mind and can operate in any of three modes (Normal, Eco, Vacation), depending on the level of efficiency sought.

- Normal mode**

This is the mode which is entered automatically when the appliance is first turned on. Normal Mode is the mode most suitable when the refrigerator door is opened often.

- Eco mode**


Eco mode is a more efficient mode than normal mode and can be entered in two ways. Either by manually pressing the eco / vacation button once when in normal mode, or automatically after 30 hours if the refrigerator door has not been opened. The leaf icon will appear on the electronic display when eco mode is activated. If eco mode is entered automatically, the appliance will revert to normal mode once the refrigerator door is opened. If eco mode is entered manually, door openings will not cause the display to revert to normal mode. To exit eco mode, press the eco / vacation button twice (or until there are no icons displayed).

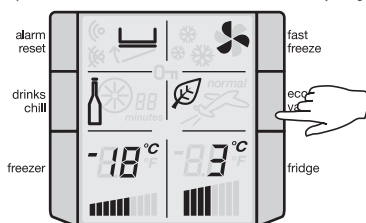**caution**

**Eco mode is designed to operate with minimum door opening (e.g. if used as a long term storage fridge). If turned on manually, it won't switch off automatically and frequent door opening in eco mode could lead to food spoilage. If frequent door opening is likely to occur, switch back to normal mode.**

- Vacation mode**

Vacation mode is suitable if you think that you will be away from your appliance for an extended period and would like to take advantage of maximum energy efficiency. Then, from Normal Mode, press the Eco / Vacation button twice in succession just before you leave and the appliance will enter Vacation Mode, as indicated by the aeroplane symbol. (If in Eco Mode a single button press is all that is required to enter Vacation Mode). Vacation Mode is exited automatically once the refrigerator door is opened and Normal Mode resumes.

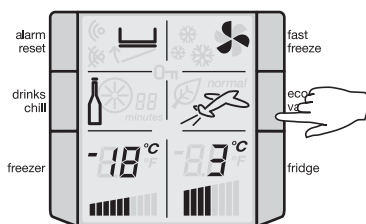**environmental tip**

Eco and Vacation Modes minimise defrosting to save energy, while maintaining your temperature settings.

Note:

Opening the freezer door has no effect on the operation of Eco and Vacation Modes.

**Controlling the temperature**

Set the temperature by using the main temperature controls at the rear of the refrigerator compartment. When you first start your refrigerator, set both refrigerator and freezer controls to MID. The refrigerator temperature control is affected by altitude and it is recommended that it be set warmer to compensate. e.g. At 1000 metres above sea level set the refrigerator temperature control to one setting warmer than MID.


**tips and information**

A good indication of optimal freezer temperature is ice cream that is frozen, but still soft enough for easy scooping. For the fridge compartment, we recommend using drinking water and simply adjusting the fridge controls until the water is at your ideal temperature.


**To change settings.** When you change temperature settings, make small adjustments and wait 24 hours before assessing whether you need to make any further changes.

**tips and information**

- Coldest freezer setting is not recommended in normal and very hot climates as this will limit the cooling to the refrigerator section.**
- In very cold climates (where temperatures are below 10°C) the freezer may need to be set colder.
- Adjusting the freezer temperature – top mount freezer (TM) model**
  - Select the freezer control (top knob).
  - Rotate the knob clockwise to set colder.
  - Rotate the knob anti-clockwise to set less cold.

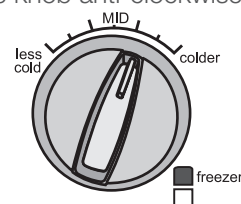

- Adjusting the refrigerator temperature – top mount freezer (TM) model**
  - Select the refrigerator control (bottom knob).
  - Rotate the knob clockwise to set colder.
  - Rotate the knob anti-clockwise to set less cold.

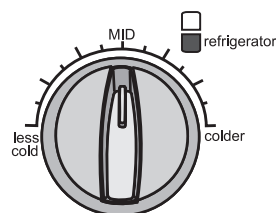


**appliancesonline**  
.com.au

Australia's largest online appliance retailer

## How to use the features of your appliance


- **Adjusting the refrigerator temperature – bottom mount freezer (BM) model**

1. Select the refrigerator control (top knob).
2. Rotate the knob clockwise to set colder.
3. Rotate the knob anti-clockwise to set less cold.

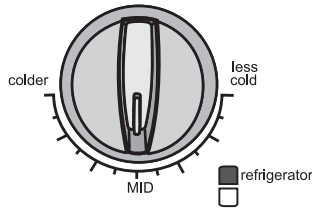


- **Adjusting the freezer temperature – bottom mount freezer (BM) model**

1. Select the freezer control (bottom knob).
2. Rotate the knob clockwise to set colder.
3. Rotate the knob anti-clockwise to set less cold.

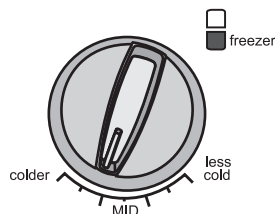


- **Adjusting the all refrigerator temperature – single door all refrigerator (AR) model**

1. Rotate the knob clockwise to set colder.
2. Rotate the knob anti-clockwise to set less cold.

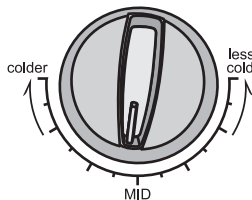

- **Adjusting the all freezer temperature – single door all freezer (AF) model**

1. Rotate the knob clockwise to set colder.
2. Rotate the knob anti-clockwise to set less cold.

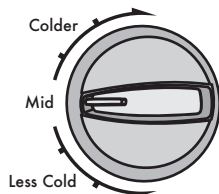

This section tells you how to make the most of the many useful features and how to clean them.

### Door storage bins


The top mount freezer model (TM), bottom mount freezer model (BM) and all refrigerator (AR) are fitted with door storage bins. You can adjust these bins to meet different storage needs. All the door bins are completely removable for cleaning. If you want to remove or adjust a bin, lift it over the support lugs on the inner door panel. To replace, push the bin down over the support lugs to lock it in place.

### Dairy compartment

You can use the dairy compartment to store foods such as butter, margarine and cheeses. The compartment is slightly warmer than the rest of the refrigerator compartment and the lid provides protection against odours.

### Crisper bin

You can use the crisper bin to store vegetables, fruit or smallgoods. You can change the humidity inside the bin by rotating the humidity control.

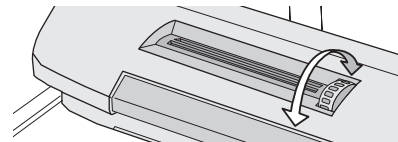

- **Storing vegetables**

You should store vegetables in the crisper bin remembering to set the humidity control to more humid (closed).

- **Storing fruit & smallgoods**

You can also store fruit & smallgoods in the crisper bin remembering to set the humidity control to less humid (open).

### Crisper bin and shelf removal

- Remove the crisper bin(s) by pulling forward, then up and forward.
- Remove the crisper shelf by lifting the catches on the underside of the shelf and pulling the shelf forward.

### Sliding deli compartment (where fitted)

The sliding deli compartment allows you to position the deli-bin in any position within the appliance. This allows you to conveniently locate it around stored food or to align it with the multi flow vents for direct cooling.

- **Usage instructions:**

In order to correctly use the deli compartment it should be located on the top shelf position. If fitted with a slideable deli compartment (selected models only), the compartment should be positioned fully on the left or right or in a central position. This will align the multiflow vents with the ducting surfaces at the rear of the deli bin. One or both of the vents can be opened to allow cooler air to pass over foodstuffs stored in the deli.


The air from these vents can be very cold, which is useful for the fast chilling of food and drinks. However, items may freeze if left near the vents. To prevent freezing, move items away from the vents after chilling.



- **Cleaning:**

The sliding deli compartment (twin deli compartment on selected models) can be removed for ease of cleaning. In order to do so a flexible locking mechanism has been incorporated into the rear shelf rail.

1. Remove deli bin.
2. Remove the shelf assembly by pulling it past the stops.
3. Place the full assembly up side down on a flat surface.
4. Slide the sub frame to the left until it engages with the locking mechanism.
5. Pull the thumb tag away from the rail to disengage it.

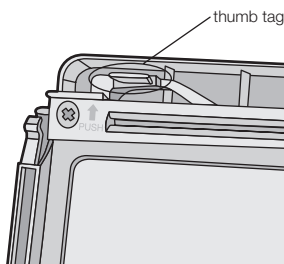


6. Slide the sub frame past this and allow it to flex back into position.

Clean the parts as required and allow to dry. To replace the sub frame repeat this procedure making sure to align the front lip on the front shelf recess.




**caution**

**All glass used is safety glass. However caution should be taken when removing the shelf for repositioning or for cleaning. As the assembly is relatively heavy and if held in the vertical position (as shown below) the runner assembly may drop down. Do not remove any screws!**

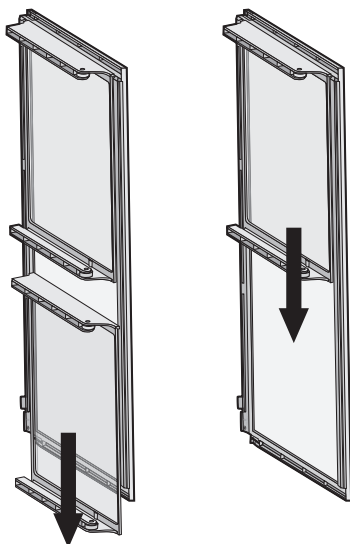

**Spill safe glass shelves (where fitted)**

Spill safe glass shelves keep spills on the shelf. A shelf retaining system minimizes accidental movement of shelves. The shelves can be adjusted to many different heights. Spill safe glass shelves are not to be used as slide out shelves.

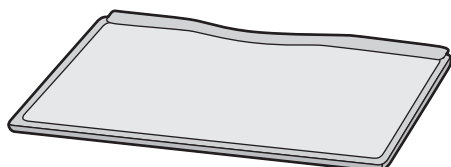


**Slide away glass shelf (where fitted)**


This shelf can be used either as a full depth shelf or when tall items need to be stored at the front of the appliance it can be collapsed to half its original depth.

- **To collapse the shelf:**


1. Pull the front half of the shelf forward.

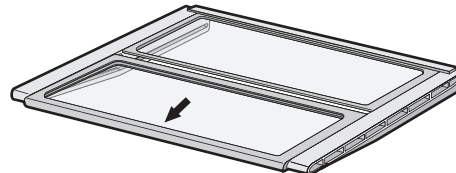


2. Then, from the underside, lift the front half of the shelf by raising the rear edge over the recessed hook detail.

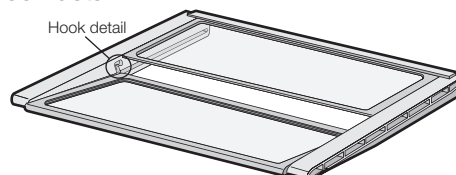

3. Pull the shelf forward and allow the rear to drop into the side channels.

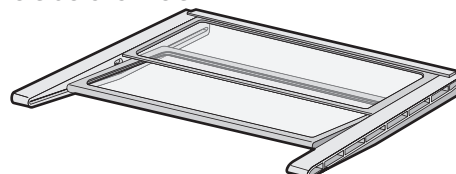

4. Push the front shelf backwards (3,4) until it reaches the rear stops.

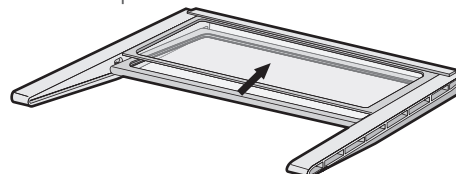


- **Repositioning:**

The shelf can be repositioned within the appliance unit by pulling the whole assembly out until the side panels are free to pivot down, then pivoting the rear of the shelf until the shelf is free from the liner runners. The shelf can then be positioned in any of the runners – this is a very useful feature if your appliance door happens to have limited access.

**Deodoriser (where fitted)**

Your appliance is fitted with a catalysing deodoriser to assist with the removal of food odours inside your appliance. Odours are removed by adsorption through the filter by the normal operation of the appliance. Keeping food covered and wrapping food with plastic wrap will also help to reduce the odours inside your appliance.

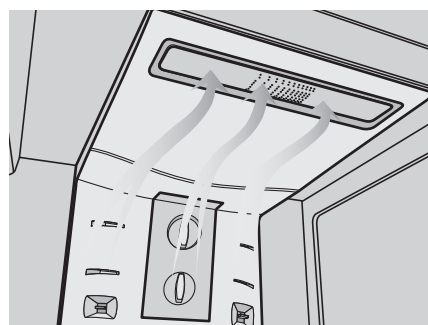




## Care and maintenance

### Bottle twist holder operation (where fitted)


The bottle twist holder is used to prevent bottles from falling over. The bottle twist holder consists of two parts, a sliding front, and a rotating retainer ring.

The bottle twist holder can be used in two positions:

- **Horizontal**  
When the bottle twist holder ring is horizontal, any item that fits within the ring can simply be placed inside it.

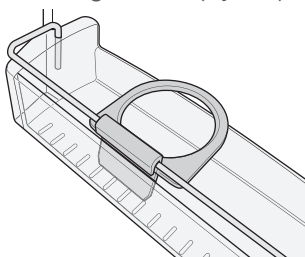

- **Vertical**  
When the bottle twist holder ring is vertical, it is possible to simply slide the bottle twist holder along the bottle retainer bar until it is pushed up against a bottle.

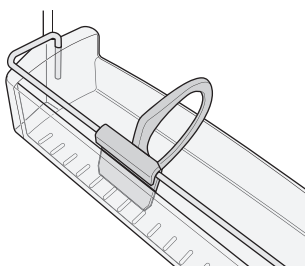


*Note:*

*The bottle should be constrained on the other side by either the end of the bin or other adjacent bottles.*

### Freezer baskets (where fitted)

Freezer baskets and a freezer shelf are fitted to bottom mount (BM) freezers and single door all freezers (AF). Wire baskets are used to provide easy visibility of the contents. Both the baskets and the shelf pull out for easy access and have a stop to prevent the basket and shelf being pulled out too far.

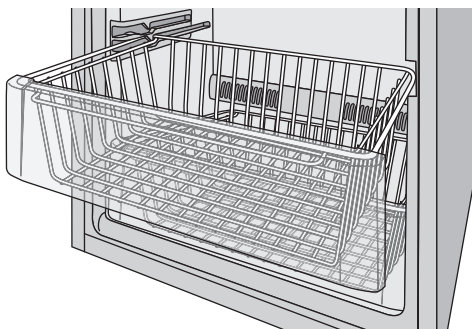


To remove the basket or shelf, pull it out until it hits the stop then lift the front to unhook the stop while continuing to pull forward.



### Changing the light bulb

#### • Refrigerator light


1. Switch off the power at the power point and remove the refrigerator's power cord from the power point.
2. Remove shelves.
3. Carefully unclip the light cover. You do this by pulling the upper part of the cover towards the front of the cabinet.

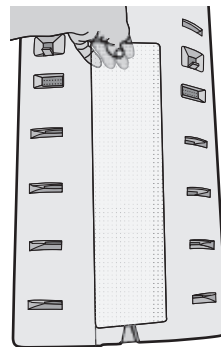


4. Unscrew the light bulb and replace it with a bulb that is the same as the original.
5. Replace the light cover by hooking the light cover lugs into the bottom of the housing and pressing the upper part of the cover until it clips in.
6. Replace shelves.
7. Wait 5 minutes to ensure pressures in the refrigeration system are equalized. Then reconnect and turn the refrigerator on at the power point.

#### • Freezer light (where fitted)

1. Switch off the power at the power point and remove the refrigerator's power cord from the power point.
2. Carefully unclip the light cover. You do this by pulling the light cover tab at the rear towards the front of the cabinet.

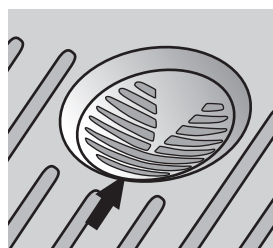

Top freezer model  
(electronic models only)

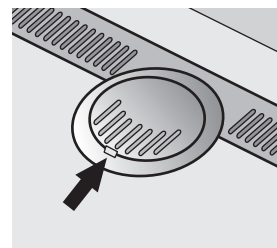

Single door all freezer model

3. Unscrew the light bulb and replace it with a bulb that is the same as the original.
4. Replace the light cover by hooking the light cover lugs into the front of the housing and pressing the rear of the cover up until it clips in.
5. Wait 5 minutes to ensure pressures in the refrigeration system are equalized. Then reconnect and turn the refrigerator on at the power point.

## General information

## Cleaning the appliance

**warning**

**BEFORE CLEANING: Turn appliance off at the power point, then remove power cord from socket. This will make sure there is no chance of getting an electric shock.**

- Doors and exterior – white**

You should only clean the doors with luke-warm soapy water and a soft cloth, rinsing with clean water and then wipe the surface with clean water and a soft clean cloth to remove soap residue.

- Doors and exterior – stainless steel**

Your stainless steel appliance is manufactured from a mark resistant stainless steel. This stainless steel has a special advanced protective coating that eases the removal of marks such as finger prints and water spots. To keep your stainless steel appliance looking at its best, you should clean it regularly. You should only clean the stainless steel doors with luke-warm soapy water and a soft cloth, rinsing with clean water and then wipe the surface with clean water and a soft clean cloth to remove soap residue.

It is important to wipe in the direction of the grain of the stainless steel to avoid undue marking of the surface.

**caution**

**Do not use stainless steel cleaners, abrasive pads or other cleaners as they are likely to scratch the surface. Damage to this product after delivery is not covered by your warranty**

- Interior**

You should clean the appliance interior regularly. It will be easiest to clean when the food supply is low. Wash the interior with a soft cloth and use an unscented mild soap with luke-warm water. Thoroughly dry all surfaces and removable parts. Avoid getting water on appliance controls. If you have taken out any removable parts, replace them and switch the power on before re-stocking the appliance with food. Naturally, you should keep the interior of your appliance hygienic by promptly and thoroughly wiping up any food spills.

- Door seals**

Take care to keep door seals clean. Sticky food and drink can cause seals to stick to the cabinet and tear when you open the door. Wash seal with a mild detergent and warm water. Rinse thoroughly and dry.

**caution**

**Never use hot water, solvents, commercial kitchen cleaners, aerosol cleaners, metal polishes, caustic or abrasive cleaners, or scourers to clean this appliance, as they will damage it. Many commercially available cleaning products and detergents contain solvents that will damage your refrigerator. When cleaning, use only a soft cloth with an unscented mild soap and luke warm water.**

**Safety**

It is important to use your appliance safely. This means you need to supervise young children and infirm persons when they use it. You need to make sure that young children do not play with the appliance. Follow the tips below.

**always do this**

- ❗ **Check the power point is properly grounded - if you are not sure get an electrician to check it.**
- ❗ **Switch off the appliance at the power point before you clean or move it.**
- ❗ **If the supply cord is damaged you should have it replaced by the manufacturer, it's service agent or similarly qualified person. This will prevent a safety hazard.**

**never do this**

- ⊘ **Never let children play with the appliance.**
- ⊘ **Never store spray cans, explosive liquids or flammable liquids in the refrigerator.**
- ⊘ **Never store fizzy drinks in the freezer compartment.**
- ⊘ **Never lick icy foods when they first come out of the freezer. This can freeze burn your lips and mouth.**
- ⊘ **Never try to repair the appliance yourself.**
- ⊘ **Never use electric heaters or dryers to defrost the freezer because you can receive an electric shock.**
- ⊘ **Never use electrical appliances inside the food storage areas.**
- ⊘ **This appliance contains insulation formed with flammable blowing gases. For safety reasons, take care when you dispose of it.**
- ⊘ **Do not damage the appliance circuit.**

**warning**

**When you dispose of your old refrigerator or freezer, remove any doors. Children can suffocate if they get trapped inside.**

**Switching off your appliance**

If the appliance needs to be switched off for an extended period, the following steps should be taken to reduce the symptoms of mould:

1. Remove all food.
2. Remove the power plug from the power point.
3. Clean and dry the interior thoroughly.
4. Ensure that all the doors are wedged open slightly for air circulation.



**appliancesonline**  
com.au

Australia's largest online appliance retailer



## Troubleshooting

If you think something may be wrong with your refrigerator, you can carry out some easy checks before calling for service. You may locate the problem, sparing yourself from inconvenience, saving time and money.

problem	solution
When your appliance is not operating	<ul style="list-style-type: none"> <li>Check that the power cord is plugged into the power outlet properly and that the outlet is switched 'ON'.</li> </ul>
	<ul style="list-style-type: none"> <li>Try running another appliance from the power outlet. If no power is coming from the outlet you may have blown a fuse or tripped a circuit of your household power supply.</li> </ul>
	<ul style="list-style-type: none"> <li>Try adjusting the temperature control to a slightly "colder" position.</li> </ul>
	<ul style="list-style-type: none"> <li>It is normal for the freezer fan NOT to operate during the automatic defrost cycle, or for a short time after the appliance is switched on.</li> </ul>
When there is refrigerator/freezer noise	<p>Modern refrigerators/freezers with increased storage capacity use high speed compressors. These can provide a seemingly high level of sound which is quite normal. Normal operational sounds include:</p> <ul style="list-style-type: none"> <li>Occasional gurgling, similar to water boiling.</li> <li>Air flow noise (air circulates because of a small fan).</li> <li>A popping noise heard during automatic defrost.</li> <li>A clicking noise heard just before the compressor starts (this is merely the automatic switching action of the temperature control, turning the compressor on or off).</li> </ul>
	<p>Other strange sounds may mean that you need to check and take action. For example, noises may mean that:</p> <ul style="list-style-type: none"> <li>The cabinet is not level.</li> <li>The floor is uneven or weak.</li> <li>Bottles are badly placed and rattling.</li> <li>There are vibrations from an object on top of or behind or beside the refrigerator.</li> <li>The back of the refrigerator cabinet is touching the wall.</li> </ul>
	<p>Remember it is quite normal for noise to seem louder just after the refrigerator starts operating.</p>
	<ul style="list-style-type: none"> <li>The interior may need cleaning.</li> <li>Some foods produce odours.</li> <li>Some containers and wrapping can cause odours.</li> <li>Ask yourself if the odour started about the same time you started storing something unusual.</li> </ul>

When the motor seems to run more than expected	<p>Your new appliance provides you with large capacities in both the refrigerator section and the separate freezer. It is normal for the motor to operate frequently. However, to keep operation to a minimum, check the following:</p> <ul style="list-style-type: none"> <li>Are doors kept open too long or too often?</li> <li>Are controls set too cold? Refer to page 6 "Controlling temperature".</li> <li>Have large amounts of warm food just recently been stored? Summer, festive seasons and holidays usually mean a lot more work for your appliance.</li> <li>If the day is hot or the room is very warm, the appliance will need to run more than normal.</li> <li>The appliance will run more than normal just after you install it or when it has been turned off for a long time.</li> </ul>
If the temperature in the refrigerator is too warm	<ul style="list-style-type: none"> <li>Check that the appliance has enough clearance at the sides, back and top. Refer to page 2 "Installing your new appliance".</li> <li>Refer to page 6 "Controlling temperature".</li> <li>You may have kept the door open too long or too frequently.</li> <li>Food containers or packaging may be holding a door open.</li> </ul>
If the temperature in the refrigerator is too cold	<ul style="list-style-type: none"> <li>Refer to page 6 "Controlling temperature".</li> <li>Increase the temperature to avoid high energy consumption.</li> </ul>
If heavy frosting occurs in the freezer	<p>Make sure you fully close the freezer and fridge doors. If the doors are left partly open a heavy frost will coat the inside of the freezer. If a frost develops, remove it. Take care to properly close the doors and the frost will not reoccur.</p>
If water drips on the floor	<p>The defrost water tray, (located on the compressor at the back of the cabinet), may not be properly positioned, or the drain tube may not be properly positioned to direct water into this tray. You may need to pull the refrigerator away from the wall to check the tray and tube.</p>

### If you still require service

If you have a problem, and the problem persists after you have made the checks mentioned above, contact your nearest Electrolux approved Service Centre or the dealer you bought the refrigerator from. Be ready to quote the model number, 9-digit PNC and 8-digit serial number, which is stated on the label inside the refrigerator compartment.

## **Electrolux** Warranty

FOR SALES IN AUSTRALIA AND NEW ZEALAND

APPLIANCE: ELECTROLUX TOP MOUNT FREEZER, BOTTOM MOUNT FREEZER,  
SINGLE DOOR ALL REFRIGERATOR, SINGLE DOOR ALL FREEZER

**This document sets out the terms and conditions of product warranties for Electrolux branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Electrolux appliance.**

### General Terms and Conditions

1. In this warranty
  - (a) 'Electrolux' means Electrolux Home Products Pty Ltd ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand;
  - (b) 'Appliance' means any Electrolux product purchased by you accompanied by this document;
  - (c) 'Warranty Period' means
    - (i) where you use the Appliance for personal, domestic or household purposes in Australia the period of '24' months and in New Zealand the period of '24' months;
    - (ii) where you use the Appliance for commercial purposes, in Australia the period of '3' months and in New Zealand the period of '3' months, (if the period stated is 0 months you are not covered by this product warranty) following the date of original purchase of the Appliance;
  - (d) 'you' means the purchaser of the Appliance not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. Electrolux warrants that, when dispatched from an Electrolux warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.
4. During the Warranty Period Electrolux or its Authorised Service Centre will, at no extra charge if your appliance is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
5. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
6. Where you are within an Electrolux service area, this warranty covers the cost of transport of the Appliance to and from Authorised Service Centres of Electrolux and travelling costs for representatives of the Authorised Service Centre to and from your home or business. If you are outside an Electrolux service area, you will bear these costs. For information about whether you are within an Electrolux service area, please phone 13 13 49 in Australia, or 0800 10 66 10 in New Zealand.
7. Proof of purchase is required before you can make a claim under this warranty.
8. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
  - (a) The Appliance is damaged by:
    - (i) accident
    - (ii) misuse or abuse, including failure to properly maintain or service
    - (iii) normal wear and tear
    - (iv) power surges, electrical storm damage or incorrect power supply
    - (v) incomplete or improper installation
    - (vi) incorrect, improper or inappropriate operation
    - (vii) insect or vermin infestation.
  - (b) The Appliance is modified without authority from Electrolux in writing.
  - (c) The Appliance's serial number or warranty seal has been removed or defaced.
  - (d) The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.
9. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the Australian State where the Appliance was purchased or the law applicable in New Zealand if the Appliance was purchased in New Zealand. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

### Limitation of Liability

10. To the extent permitted by law:
  - (a) Electrolux excludes all warranties other than as contained in this document;
  - (b) Electrolux shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.
11. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so):
  - (a) in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or
  - (b) in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied; and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

### Privacy

You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

### EXTENDED WARRANTIES AND INDEMNITY

#### Sealed Refrigeration System Warranty

For a further period of three years following the expiry of the Warranty period, Electrolux or its agent will supply replacements for, or at the sole option of Electrolux, repair, all parts it finds defective in the Sealed Refrigeration System which comprises: compressor, condenser, evaporator, dryer and tubing. During this three year period you will pay for the costs of labour (including any call out or service fees), and freight if necessary in replacing defective parts in the Sealed Refrigeration System. You will pay for the costs of transport of the Appliance if further service is required and the costs of parts or repairs to parts other than those included in the Sealed Refrigeration System

#### Frozen Food indemnity

Subject to the following exclusions, Electrolux will indemnify you for a period of 24 months from the date of purchase of the Appliance against any loss or damage to frozen foodstuffs due to a Sealed Refrigeration System breakdown. This indemnity will be limited to:

- (a) in the case of freezers with a capacity of less than 400 litres – AU\$150
- (b) in the case of freezers with a capacity of 400 litres or more – AU\$300

This indemnity does not cover loss or damage to frozen foodstuffs occasioned by:

- (a) failure to plug in the freezer to a properly connected power supply or failure to switch on the power point
- (b) accidental removal of the plug from the power point or switching off the power supply;
- (c) failure to keep the door or lid of the freezer closed
- (d) the introduction of abnormal heat loads to the freezer;
- (e) failure to observe the operating and installation instructions supplied with the freezer; and
- (f) failure to defrost the freezer at recommended intervals on chest freezers or non frost free models

### Important Notice

Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

<p><b>FOR SERVICE</b> or to find the address of your nearest state service centre in Australia <b>PLEASE CALL 13 13 49</b> For the cost of a local call (Australia only)</p>	<p><b>SERVICE AUSTRALIA</b>  ELECTROLUX HOME PRODUCTS www.electrolux.com.au</p>	<p><b>FOR SPARE PARTS</b> or to find the address of your nearest state spare parts centre in Australia <b>PLEASE CALL 13 13 50</b> For the cost of a local call (Australia only)</p>
<p><b>FOR SERVICE</b> or to find the address of your nearest authorised service centre in New Zealand <b>FREE CALL 0800 10 66 10</b> (New Zealand only)</p>	<p><b>SERVICE NEW ZEALAND</b>  ELECTROLUX HOME PRODUCTS www.electrolux.co.nz</p>	<p><b>FOR SPARE PARTS</b> or to find the address of your nearest state spare parts centre in New Zealand <b>FREE CALL 0800 10 66 20</b> (New Zealand only)</p>



## **Electrolux Home Products Australia**

telephone: 1300 363 640

fax: 1800 350 067

email: [customercare@electrolux.com.au](mailto:customercare@electrolux.com.au)

web: [www.electrolux.com.au](http://www.electrolux.com.au)

### **The Thoughtful Design Innovator.**

Do you remember the last time you opened a gift that made you say "Oh! How did you know? That's exactly what I wanted!" That's the kind of feeling that the designers at Electrolux seek to evoke in everyone who chooses or uses one of our products. We devote time, knowledge, and a great deal of thought to anticipating and creating the kind of appliances that our customers really need and want.

This kind of thoughtful care means innovating with insight. Not design for design's sake, but design for the user's sake. For us, thoughtful design means making appliances easier to use and tasks more enjoyable to perform, freeing our customers to experience that ultimate 21st century luxury, ease of mind. Our aim is to make this ease of mind more available to more people in more parts of their everyday lives, all over the world. So when we say we're thinking of you, you know we mean just that.

### **Electrolux. Thinking of you.**

Share more of our thinking at [www.electrolux.com.au](http://www.electrolux.com.au)

