


Refrigerator

User manual

Free Standing Appliance

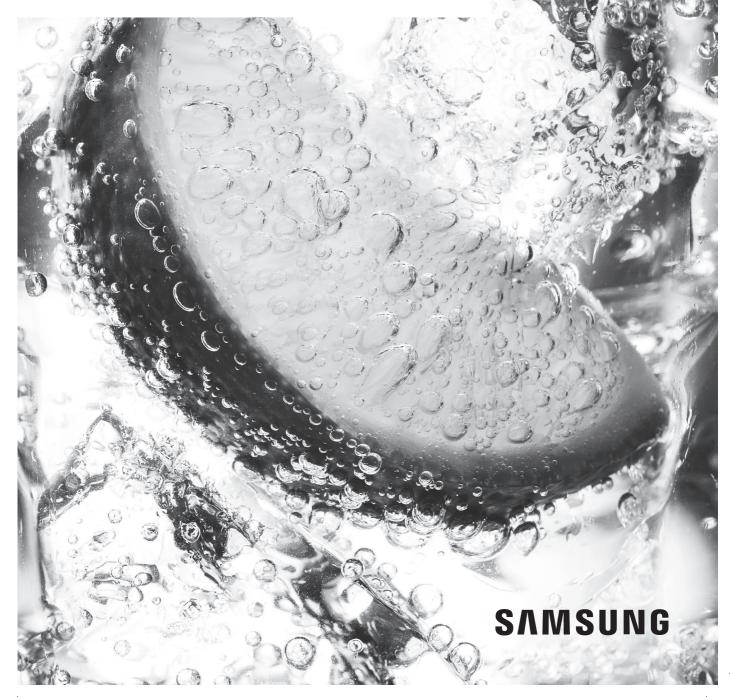





Contents

| Safety information | 3 |
|---|----------|
| mportant safety symbols and precautions: | 4 |
| Severe warning signs for transportation and site | 4 |
| Critical installation warnings | 4 |
| nstallation cautions | 7 |
| Critical usage warnings | 7 |
| Jsage cautions | 10 |
| Cleaning cautions | 11 |
| Critical disposal warnings | 12 13 |
| Additional tips for proper usage Saving Energy Tips | 14 |
| This appliance is intended to be used in household and similar applications such as | 14 |
| Instructions about the WEEE | 15 |
| instructions about the WELL | 13 |
| Installation | 16 |
| Refrigerator at a glance | |
| Door removal for entrance | 19 |
| Step-by-step installation | 26 |
| step by step instandion | 20 |
| Operations | 33 |
| Feature panel | 33 |
| Samsung Smart Home | 37 |
| Special features | 39 |
| | |
| Maintenance | 42 |
| Handle and care | 42 |
| Cleaning | 48 |
| Replacement | 49 |
| | |
| Troubleshooting | 50 |
| General | 50 |

2 Fnalish



Samsung Smart Home



52



- Before using your new Samsung Refrigerator, please read this manual thoroughly to ensure that you know how to operate the features and functions that your new appliance offers safely and efficiently.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or those who lack experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your refrigerator may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.
- R-600a or R-134a is used as a refrigerant. Check the compressor label on the rear of the appliance or the rating label inside the fridge to see which refrigerant is used for your refrigerator. When this product contains flammable gas (Refrigerant R-600a), contact your local authority in regard to safe disposal of this product.
- In order to avoid the creation of a flammable gas-air mixture if a leak in the refrigerating circuit occurs, the size of the room in which the appliance may be sited depends on the amount of refrigerant used.
- Never start up an appliance showing any signs of damage. If in doubt, consult your dealer. The room must be 1 m³ in size for every 8 g of R-600a refrigerant inside the appliance. The amount of refrigerant in your particular appliance is shown on the identification plate inside the appliance.
- Refrigerant squirting out of the pipes could ignite or cause an eye injury. When refrigerant leaks from the pipe, avoid any naked flames and move anything flammable away from the product and ventilate the room immediately.
 - Failing to do so may result in fire or explosion.
- It is hazardous for anyone other than an Authorised Service Person to service this appliance. In Queensland - the authorized Service Person MUST hold a Gas Work Authorisation or Licence for hydrocarbon refrigerants, to carry out Servicing or repairs which involve the removal of covers. (For Australia only)

 \bigcirc







Important safety symbols and precautions:

Please follow all safety instructions in this manual. This manual uses the following safety symbols.

⚠ WARNING

Hazards or unsafe practices that may result in **severe personal injury**, **property damage**, **and/or death**.

CAUTION

Hazards or unsafe practices that may result in **severe personal injury and/or property** damage.



Useful information that helps users understand or benefit from the refrigerator.

These warning signs are here to prevent injury to you and others.

Please follow them carefully.

After reading this section, keep it in a safe place for future reference.

Severe warning signs for transportation and site

♠ WARNING

- When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.
 - Refrigerant leaking from the pipe work could ignite or cause an eye injury. If a leak
 is detected, avoid any naked flames or potential sources of ignition and air the room
 in which the appliance is standing for several minutes.
 - This appliance contains a small amount of isobutane refrigerant (R-600a), a natural gas with high environmental compatibility that is, however, also combustible. When transporting and installing the appliance, care should be taken to ensure that no parts of the refrigerating circuit are damaged.

Critical installation warnings

♠ WARNING

- Do not install the refrigerator in a damp location or place where it may come in contact with water.
 - Deteriorated insulation on electrical parts may cause an electric shock or fire.
- Do not place this refrigerator in direct sunlight or expose it to the heat from stoves, room heaters, or other appliances.

4 English





- Do not plug several appliances into the same multiple power strip. The refrigerator should always be plugged into its own individual electrical outlet which has a voltage rating that matches the voltage listed on the refrigerator's rating plate.
 - This provides the best performance and also prevents overloading of house wiring circuits, which could cause a fire hazard from overheated wires.
- If the wall socket is loose, do not insert the power plug.
 - There is a risk of electric shock of fire.
- Do not use a power cord that has cracks or abrasion damage along its length or at either end.
- Do not bend the power cord excessively or place heavy objects on it.
- Do not pull or excessively bend the power cord.
- Do not twist or tie the power cord.
- Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.
- When moving the refrigerator, be careful not to roll over or damage the power cord.
 - This may result in an electric shock or fire.
- Never unplug your refrigerator by pulling on the power cord. Always grip the plug firmly and pull straight out from the outlet.
 - Damage to the cord may cause a short-circuit, fire, and/or electric shock.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Do not install this appliance near a heater or inflammable material.
- Do not install this appliance in a location where gas may leak.
 - This may result in an electric shock or fire.
- This refrigerator must be properly located and installed in accordance with the instructions in this manual before you use it.
- Connect the power plug in the proper position with the cord hanging down.
 - If you connect the power plug upside down, the wire can get cut off and cause a fire or electric shock.
- Make sure that the power plug is not crushed or damaged by the back of the refrigerator.
- Keep the packing materials out of reach of children.
 - There is a risk of death from suffocation if a child puts the packing materials on his or her head.
- The appliance must be positioned so that the plug is accessible after installation.
 - Failing to do so may result in an electric shock or fire due to electric leakage.





- Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).
 - Deteriorated insulation of electrical parts may cause an electric shock or fire.
- If any dust or water is in the refrigerator, pull out power plug and contact your Samsung Electronics service center.
 - Otherwise there is a risk of fire.
- Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
 - This may result in an electric shock, fire, problems with the product, or injury.
- You need to remove all the protective plastic film before you initially plug the product in
- Children should be supervised to ensure that they do not play with the snap rings used for door adjustment or the water tube clips.
 - There is risk of death by suffocation if a child swallows a snap ring or water tube clip. Keep the snap rings and water tube clips out of children's reach.
- The refrigerator must be safely grounded.
 - Always make sure that you have grounded the refrigerator before attempting to investigate or repair any part of the appliance. Power leakages can cause severe electric shock.
- Never use gas pipes, telephone lines, or other potential lightning attractors as an electrical ground.
 - You must ground the refrigerator to prevent any power leakages or electric shocks caused by current leakage from the refrigerator.
 - This may result in an electric shock, fire, explosion, or problems with the product.
- Plug the power plug into the wall socket firmly. Do not use a damaged power plug, damaged power cord, or loose wall socket.
 - This may result in an electric shock or fire.
- If the power cord is damaged, have it replaced immediately by the manufacturer or one of its service agents.
- The fuse on the refrigerator must be changed by a qualified technician or service company.
 - Failing to do so may result in an electric shock or personal injury.







English 7



Installation cautions

! CAUTION

- Allow sufficient space around the refrigerator and install it on a flat surface.
 - Keep the ventilation space in the appliance enclosure or mounting structure clear of obstructions.
- Allow the appliance to stand for 2 hours before loading foods after installation and turning on.
- We strongly recommend you have a qualified technician or service company install the refrigerator.
 - Failing to do so may result in an electric shock, fire, explosion, problems with the product, or injury.
- Overload on any one door may fell the refrigerator, causing physical injury.

Critical usage warnings

! WARNING

- Do not insert the power plug into a wall socket with wet hands.
 - This may result in an electric shock.
- Do not store articles on the top of the appliance.
 - When you open or close the door, the articles may fall and cause personal injury and/or material damage.
- Do not insert hands, feet or metal objects (such as chopsticks, etc.) into the bottom or the back of the refrigerator.
 - This may result in an electric shock or injury.
 - Any sharp edges may cause a personal injury.
- Do not touch the inside walls of the freezer or products stored in the freezer with wet hands.
 - This may cause frostbite.
- Do not put a container filled with water on the refrigerator.
 - If spilled, there is a risk of fire or electric shock.
- Do not keep volatile or flammable objects or substances (benzene, thinner, propane gas, alcohol, ether, LP gas, and other such products) in the refrigerator.
 - This refrigerator is for storing food only.
 - This may result in fire or explosion.
- Children should be supervised to ensure that they do not play with the appliance.
 - Keep fingers out of "pinch point" areas. Clearances between the doors and cabinet are necessarily small. Be careful when you open the doors if children are in the area.
- Do not let children hang on the door or door bins. A serious injury may occur.









- Do not let children go inside the refrigerator. They could become trapped.
- Do not insert your hands into the bottom area under the appliance.
 - Any sharp edges may cause personal injury.
- Do not store pharmaceutical products, scientific materials, or temperature sensitive products in the refrigerator.
 - Products that require strict temperature controls must not be stored in the refrigerator.
- Do not place or use electrical appliance inside the refrigerator/freezer, unless they are of a type recommended by the manufacturer.
- If you smell pharmaceutical or smoke, pull out power plug immediately and contact your Samsung Electronics service center.
- If any dust or water is in Refrigerator, pull out power plug and contact your Samsung Electronics service center.
 - Otherwise there is a risk of fire.
- Do not let children step on a drawer.
 - The drawer may break and cause them to slip.
- Do not leave the doors of the refrigerator open while the refrigerator is unattended and do not let children enter inside the refrigerator.
- Do not allow babies or children go inside the drawer.
 - It can cause death from suffocation by entrapment or personal injury.
- Do not overfill the refrigerator with food.
 - When you open the door, an item may fall out and cause personal injury or material damage.
- Do not spray volatile material such as insecticide onto the surface of the appliance.
 - As well as being harmful to humans, it may also result in an electric shock, fire, or problems with the product.
- Do not use or place any substances sensitive to temperature such as flammable sprays, flammable objects, dry ice, medicine, or chemicals near or inside of the refrigerator.
- Do not use a hair dryer to dry the inside of the refrigerator. Do not place a lighted candle in the refrigerator for removing bad odours.
 - This may result in an electric shock or fire.
- Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance. This may result in an electric shock, fire, problems with the product, or injury. Do not put a container filled with water on the appliance.
 - If spilled, there is a risk of fire or electric shock.
- Do not use mechanical devices or any other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.







- Never stare directly at the UV LED lamp for long periods of time.
 - This may result in eye strain due to the ultraviolet rays.
- Do not put fridge shelf in upside down. Shelf stopper could not work.
 - It may cause a personal injury because of glass shelf drop.
- Keep fingers out of "pinch point" areas. Clearances between the doors and cabinet are necessarily small. Be careful when you open the doors if children are in the area.
- If a gas leak is detected, avoid any naked flames or potential sources of ignition, and air the room in which the appliance is standing for several minutes.
 - Do not touch the appliance or power cord.
 - Do not use a ventilating fan.
 - A spark may result in explosion or fire.
- Use only the LED Lamps provided by the manufacturer or its service agents.
- Bottles should be stored tightly together so that they do not fall out.
- This product is intended only for the storage of food in a domestic environment.
- Do not attempt to repair, disassemble, or modify the refrigerator yourself.
- Unauthorized modifications can cause safety problems. To reverse an unauthorized modification, we will charge the full cost of parts and labor.
- Do not use any fuse (such as cooper, steel wire, etc.) other than a standard fuse.
- If your refrigerator needs to be repaired or reinstalled, contact your nearest service center
 - Failing to do so may result in an electric shock, fire, problems with the product, or injury.
- If the interior or exterior LED lamp has gone out, contact your nearest service center.
- If the refrigerator emits a burning smell or smoke, unplug the refrigerator immediately and contact your Samsung Electronics service center.
 - Failing to do so may result in an electric or fire hazards.
- Pull the power plug out of the socket before changing the interior lamps of the refrigerator
 - Otherwise, there is a risk of electric shock.
- If you experience difficulty changing a non-LED light, contact a Samsung service center.
- If the product is equipped with LED lamps, do not disassemble the Lamp Covers and LED lamps yourself.
 - Contact a Samsung service center.
- Plug the power plug into the wall socket firmly.
- Do not use a damaged power plug, damaged power cord or loose wall socket.
 - This may result in an electric shock or fire.







Usage cautions

A CAUTION

- Do not re-freeze frozen foods that have thawed completely. Do not place carbonated or fizzy drinks in the freezer compartment. Do not put bottles or glass containers in the freezer.
 - When the contents freeze, the glass may break and cause personal injury.
- To get the best performance from the product:
 - Do not place food too close to the vents at the rear of the refrigerator as this can obstruct free air circulation in the refrigerator compartment.
 - Wrap food up properly or place it in airtight containers before putting it into the refrigerator.
 - Do not place glass bottles or carbonated beverages into the freezer. They can freeze and break. Broken beverage containers can cause injury.
 - Please observe maximum storage times and expiration dates of frozen goods.
- Do not place glass or bottles or carbonated beverages into the freezer.
 - The container may freeze and break, and this may result in injury.
- Do not place carbonated or fizzy drinks in the freezer compartment. Do not put bottles or glass containers in the freezer.
 - When the contents freeze, the glass may break and cause personal injury and property damage.
- Service Warranty and Modification.
 - Any changes or modifications performed by a 3rd party on this finished appliance are not covered under Samsung warranty service, nor is Samsung responsible for safety issues that result from 3rd party modifications.
- Do not block the air vents inside the refrigerator.
 - If the air vents are blocked, especially with a plastic bag, the refrigerator can be over cooled. If a cooling period lasts too long, the water filter may break and cause water leakage.
- Wipe excess moisture from the inside and leave the doors open.
 - Otherwise, odor and mold may develop.
- If the refrigerator is disconnected from the power supply, you should wait for at least five minutes before plugging it back in.
- When the refrigerator got wet by water, pull out the power plug and contact your Samsung Electronics service center.
- Do not strike or apply excessive force to any glass surface.
 - Broken glass may result in a personal injury and/or property damage.
- If the refrigerator is flooded, make sure to contact your nearest service center.
 - There is a risk of electric shock or fire.









English 11



- Do not keep vegetable oil in your refrigerator's door bins. The oil can solidify, making it foul-tasting and difficult to use. In addition, the open container can leak and the leaked oil can cause the door bin to crack. After opening an oil container, it is best to keep the container in a cool and shaded place such as a cupboard or pantry.
 - Examples of vegetable oil: olive oil, corn oil, grape-seed oil, etc.

Cleaning cautions

! CAUTION

- Do not spray water directly on the inside or outside the refrigerator.
 - There is a risk of fire or electric shock.
- Do not use a hair dryer to dry the inside of the refrigerator.
- Do not place a lighted candle in the refrigerator to remove bad odors.
 - This may result in an electric shock or fire.
- Do not spray cleaning products directly on the display.
 - Printed letters on the display may come off.
- If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service center.
 - Failing to do so may result in an electric shock or fire.
- Use a clean, dry cloth to remove any foreign matter or dust from the power plug blades. Do not use a wet or damp cloth when cleaning the plug.
 - Otherwise, there is a risk of fire or electric shock.
- Do not clean the appliance by spraying water directly onto it.
- Do not use benzene, thinner, or Clorox, Chloride for cleaning.
 - They may damage the surface of the appliance and may cause a fire.
- Before cleaning or performing maintenance, unplug the appliance from the wall socket.
 - Failing to do so may result in an electric shock or fire.
- Use a clean sponge or soft cloth and a mild detergent in warm water to clean the refrigerator.
- Do not use abrasive or harsh cleansers such as window sprays, scouring cleansers, flammable fluids, muriatic acid, cleaning waxes, concentrated detergents, bleaches, or cleansers containing petroleum products on exterior surfaces (doors and cabinet), plastic parts, door and interior liners, and gaskets.
 - These can scratch or damage the material.
- Do not clean glass shelves or covers with warm water when they are cold. Glass shelves and covers may break if exposed to sudden temperature changes or impacts such as bumping or dropping.







Critical disposal warnings

⚠ WARNING

- Please dispose of the packaging material from this product in an environmentally friendly manner.
- Ensure that none of the pipes on the back of the refrigerator are damaged prior to disposal.
- R-600a or R-134a is used as a refrigerant. Check the compressor label on the rear of the appliance or the rating label inside the fridge to see which refrigerant is used for your refrigerator. If this refrigerator contains flammable gas (Refrigerant R-600a), contact your local authority in regard to safe disposal of this product.
- When disposing of this refrigerator, remove the door/door seals and door latch so that small children or animals cannot become trapped inside. Children should be supervised to ensure that they do not play with the appliance. If trapped inside, a child may get hurt or suffocate to death.
 - If trapped inside, the child may become injury and suffocate to death.
- Cyclopentane is used in the insulation. The gases in the insulation material require a special disposal procedure. Please contact your local authorities in regard to the environmentally safe disposal of this product.
- Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.
 - If a child places a bag over his or her head, the child could suffocate.







Additional tips for proper usage

- In the event of a power failure, call the local office of your electric company and ask how long the failure is going to last.
 - Most power failures that are corrected in an hour or two will not affect your refrigerator temperatures. However, you should minimize the number of door openings while the power is off.
 - Should the power failure last more than 24 hours, remove and discard all frozen food.
- The refrigerator might not operate consistently (frozen contents can thaw or temperatures can become too warm in the frozen food compartment) if sited for an extended period of time in a location where ambient air temperatures are constantly below the temperatures for which the appliance is designed.
- In case of particular foods, keeping it under refrigeration can have a bad effect on preservation due to its properties.
- Your appliance is frost free, which means there is no need to manually defrost your appliance. This will be carried out automatically.
- Temperature rise during defrosting complies with ISO requirements. If you want to prevent an undue rise in the temperature of frozen food while the appliance defrosts, wrap the frozen food in several layers of newspaper.
- Do not re-freeze frozen foods that have thawed completely.





English 13



Saving Energy Tips

- Install the appliance in a cool, dry room with adequate ventilation. Ensure that it is not exposed to direct sunlight and never put it near a direct source of heat (a radiator, for example).
- Not to block any vents and grilles is recommended for energy efficiency.
- Allow warm food to cool down before placing it in the appliance.
- Put frozen food in the refrigerator to thaw. You can then use the low temperatures of the frozen products to cool food in the refrigerator.
- Do not keep the door of the refrigerator open for too long when putting food in or taking food out. The shorter the time the door is open, the less frost build-up you'll have in the freezer.
- It is recommended to install the refrigerator with clearance to the back and sides. This will help reduce power consumption and keep your energy bills lower.
- For the most efficient use of energy, please keep the all inner fittings such as baskets, drawers, shelves on the position supplied by manufacturer.

This appliance is intended to be used in household and similar applications such as

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.







Instructions about the WEEE



Correct Disposal of This Product (Waste Electrical & Electronic Equipment)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.





English 15



Follow these instructions carefully to ensure a proper installation of this refrigerator and to prevent accidents before using it.

⚠ WARNING


- Use the refrigerator only for its intended purpose as described in this manual.
- Any servicing must be performed by a qualified technician.
- Dispose of the product packaging material in compliance with the local regulations.
- To prevent electric shock, unplug the power cord before servicing or replacements.

Refrigerator at a glance



The actual image and provided component parts of the refrigerator may differ, depending on the model and the country.

For more information, see the Layout section.

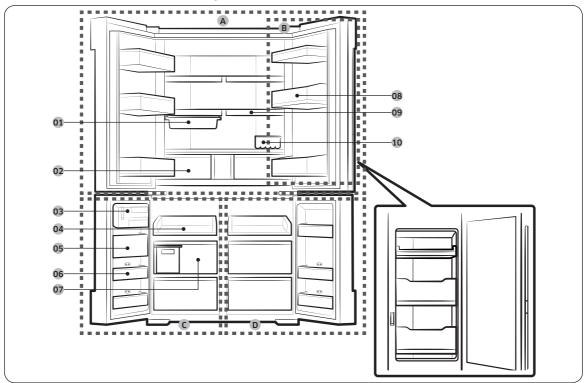







- **01** Take-out Tray
- **02** Vegetable & Fruit Drawers
- **03** Slim Ice Maker *
- **04** Sliding Shelf *
- 05 Ice bucket *
- **06** Freezer door bin
- **07** Dry Food & Meat Storage Drawers

pushed back and may be damaged.

- **08** Fridge Multi-Purpose door bin
- **09** Quick Space Shelf
- **10** Egg tray

A CAUTION

* applicable models only

- **A.** Fridge
- **B.** Showcase Door *
- **C.** Freezer
- **D.** Cool Select

the show case property, you will hear a clicking sound. (E) NOTE

• For best energy efficiency, make sure all shelves, drawers, and bins are placed in their original position.

• When the inner case is open, do not open the show case. The show case is likely to be

• When closing the show case, make sure the show case is closed property. If you close

- When closing the door, make sure the vertical hinged section is in the correct position to avoid scratching the other door.
- If the vertical hinged section is reversed, put it back into the correct position, and then close the door.
- Moisture may form at times on the vertical hinged section.
- If you close a door by force, the other door may open.
- If the internal or external LED lamp is out of order, contact a local Samsung service center.








Door bins

Your refrigerator ships with door bins of different types and sizes. If the door bins for your refrigerator were packaged separately, use the figure below to help you position the bins properly.

The number of door bins provided may differ with the model.

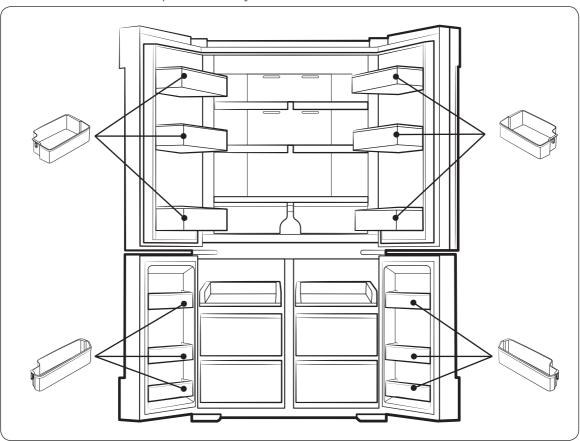









Door removal for entrance

If the refrigerator cannot pass through the entrance due to its size, follow these instructions:


Tools required (not provided)

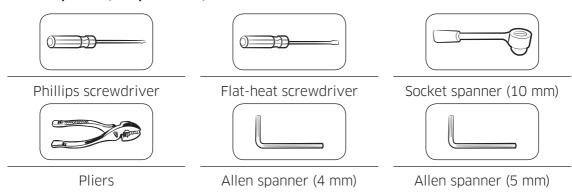

Detach the fridge doors

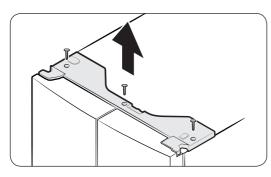

1. With the door closed, use a Phillips screwdriver to remove the screws (x3) from the top cover. Pull up and remove the top cover with the connectors.

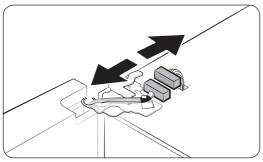

2. Disconnect the two connectors on the left door. The position of the connectors differs with the model.

! CAUTION


- Do not remove both doors simultaneously. Make sure to remove one door at a time. Otherwise, any of the doors may fall and cause physical injury.
- Make sure the refrigerator powers off before disconnecting the connectors.











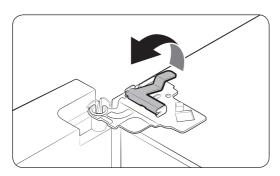

3. Gently draw up the clamp in several steps. To prevent finger injuries, do not apply a sudden force to the clamp.

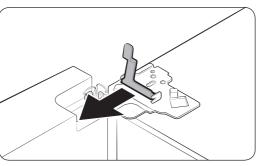

4. Pull up the clamp to remove.

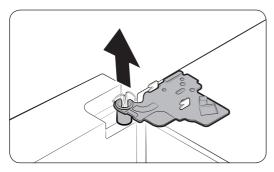


5. Open the door by 90 degrees. While holding the door, remove the top hinge.







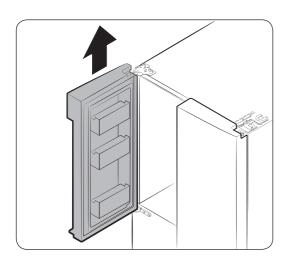


- **6.** Gently pull up the door vertically to remove. Do not apply excessive force to the door. The door may fall, causing physical injury.
- **7.** Lay the door down on a flat surface.
- **8.** Repeat the above steps for the other door.


Detach the freezer doors

A CAUTION

- Be sure to remove the fridge doors before removing the freezer doors.
- Use caution when disconnecting the bottom connectors.

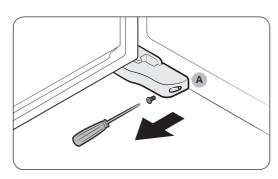

1. With the freezer door open, use a Phillips screwdriver to remove the screw holding the cover (A) of the adjustable leg.

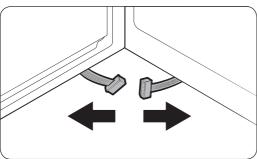


2. Then, disconnect the connectors.








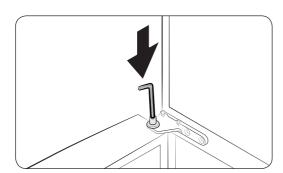

3. Locate the hinge shaft. While holding the door with one hand, use a flat-head screwdriver or wrench to press down the shaft. Make sure to hold the door to prevent the door from falling.

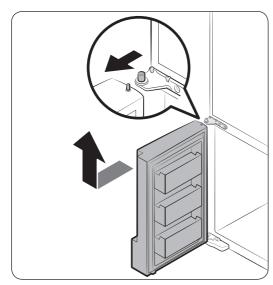

- **4.** To prevent contact with the middle hinge, slightly tilt the door to the front, and then lift it up to remove.
- **5.** Repeat the above steps for the other door.








Reattach the freezer doors

! CAUTION


- Before reattaching the doors, make sure all the electrical connectors are properly connected.
- The freezer door must be reattached before the fridge door.
- Be careful not to damage or step on the wires during this process.

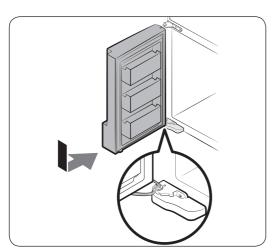


1. Insert the freezer door into the bottom hinge while pushing the freezer door in the arrow direction.

! CAUTION

• Be careful not to damage or step on the wires during this process.

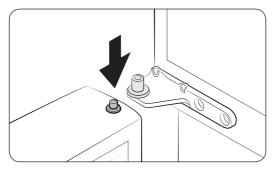


2. While pressing down the hinge shaft of the door, reinsert the door into the middle hinge.

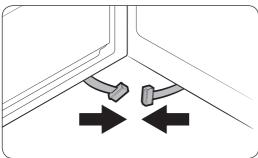

3. With the door open, connect the bottom connectors in the arrow directions.






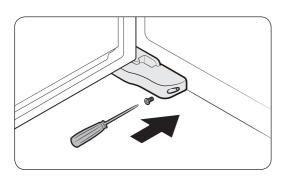


- **4.** Attach the levelling foot cover using a Phillips screwdriver. Use caution not to damage or step on the connectors.
- **5.** Repeat the above steps for the other door.


Reattach the fridge doors

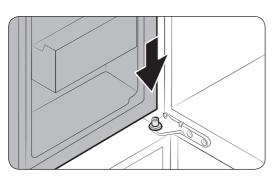

1. While holding the door open by more than 90 degrees, reinsert it into the middle hinge.

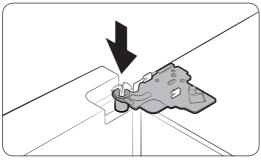


2. Put the top hinge into its position, and then insert into the top hole of the door.

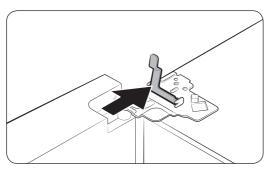


3. Insert the clamp in the arrow direction.

24 English



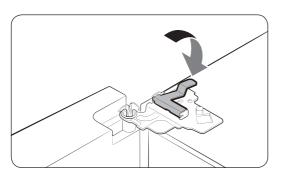


4. Draw back the clamp as shown.

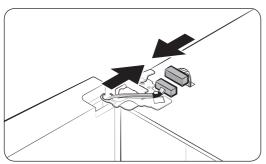

5. Connect the wire connectors.

CAUTION

 Make sure the wire connectors are connected properly. Otherwise, the display does not operate.

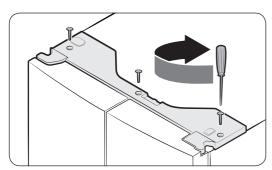

- **6.** Repeat the above steps for the other door.
- **7.** Attach the top cover with the front side first, and then press down on its back to fit into position. Then, tighten the screws (x3).





Step-by-step installation

STEP 1 Select a site

Site requirements:

- Solid, level surface without carpeting or flooring that may obstruct ventilation
- Away from direct sunlight
- Adequate room for opening and closing the door
- Away from a heat source
- Room for maintenance and servicing
- Temperature range: between 10 °C and 43 °C









Clearance

See the pictures and table below for space requirements for installation.

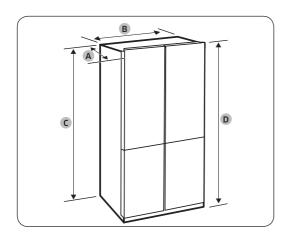

| Depth "A" | 733 |
|--------------------|------|
| Width "B" | 908 |
| Height "C" | 1797 |
| Overall Height "D" | 1825 |

(unit: mm)

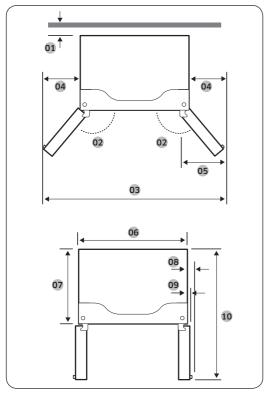

- 50 mm
- 125°
- 1515 mm
- 303 mm
- 305.5 mm
- 908 mm
- 610 mm
- 72.3 mm
- 43 mm
- 1075 mm

NOTE


The measurements in the above table may differ, depending on the measuring method.




STEP 2 WiFi connection

You can control the refrigerator remotely using the Smart Home Dongle that is sold separately. To purchase the Smart Home Dongle, visit www.samsung.com and follow the product information about the dongle.


- The Samsung Smart Home Dongle comes in two types: one that is dedicated to Samsung smart TVs, and the other one that is dedicated to Samsung home appliances.
- You must purchase the Samsung Smart Home Dongle dedicated to home appliances. Any other dongles may cause system failure.

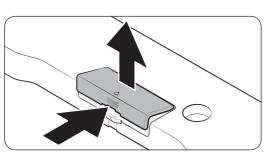

- 1. Press to unlock the arrow area of the dongle cover.
- 2. Open up the dongle cover.

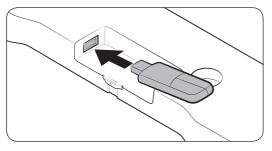

3. Insert the Smart Home Dongle into the dongle port in the correct direction.

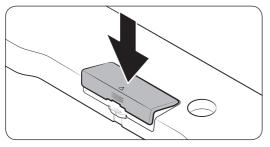


4. Insert the upper area of the dongle cover first, and then close to lock as shown.





STEP 3 Flooring

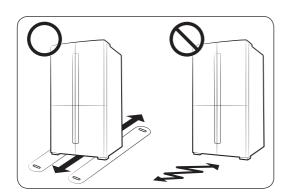

- The surface to install the refrigerator must support a fully loaded refrigerator.
- To protect the floor, put a large piece of cardboard on each leg of the refrigerator.
- Once the refrigerator is in its final position, do not move it unless necessary to protect the floor. If you have to, use a thick paper or cloth such as old carpets along the movement path.




If the refrigerator cannot pass through the entrance due to its size, see the Door removal for entrance section in the Installation chapter.

STEP 4 Adjust the levelling feet

! CAUTION

- The refrigerator must be levelled on a flat, solid floor. Failing to do so can cause damage to the refrigerator or physical injury.
- Levelling must be performed with an empty refrigerator. Make sure no food items remain inside the refrigerator.
- For safety reasons, adjust the front side a little higher than the rear side.

The refrigerator can be levelled using the front legs that have a special screw (leveller) for levelling purposes. Use a flat-head screwdriver for levelling.

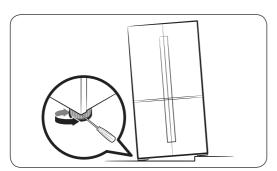


- To adjust the height of the left side: Insert a flat-head screwdriver into the leveller of the left side front leg. Turn the leveller clockwise to raise, or turn it counter clockwise to lower.
- To adjust the height of the right side:
 Insert a flat-head screwdriver into the leveller of the right side front leg. Turn the leveller clockwise to raise, or turn it counter clockwise to lower.








STEP 5 Adjust the door height as well as the door gap

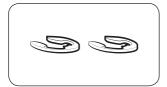


Snap ring

The height of a door can be adjusted using the provided snap rings, which come in 4 different sizes (1 mm, 1.5 mm, 2 mm, and 2.5 mm).

To adjust the height of a door

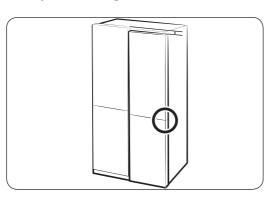

1. Check the height difference between the doors, and then raise and hold the lower door.

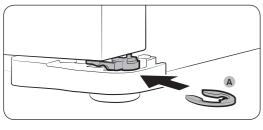

2. Insert a suitable-sized **snap ring (A)** between the door and the hinge as shown.

! CAUTION


- Insert only one snap ring for this purpose. Two or more snap rings may slip out or make a rubbing noise.
- Keep the snap rings out of children's reach, and keep them for future use.
- Do not raise the door too much. The door can contact and damage the top cover.









To correct the door gap

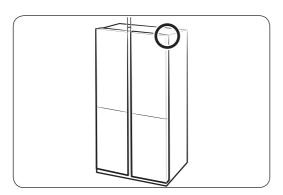

Door gaps can be corrected using the gap bolt on the top right corner of the refrigerator.

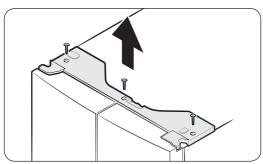

1. With the door closed, use a **Phillips** screwdriver to remove 3 screws on the top cover with the wire connectors.

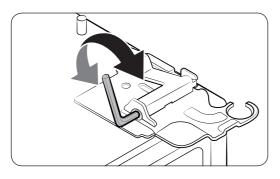

- **2.** Use a 4 mm Allen spanner (not provided) to correct the door gap between two doors.
 - To widen the gap, turn the gap bolt clockwise.
 - To narrow the gap, turn the gap bolt counter clockwise.
- **3.** When complete, reinsert the top cover.

A CAUTION

The electrical connectors must be intact during this process. Use caution not to tangle the connector wires or peel off the coating.







STEP 6 Initial settings

By completing the following steps, the refrigerator should be fully functioning.

- **1.** Plug the power cord into the wall socket to turn the refrigerator on.
- 2. Open the door, and check if the interior light lights up.
- **3.** Set the temperature to the coldest, and wait for about an hour. Then, the freezer will be slightly chilled, and the motor will run smoothly.
- **4.** Wait until the refrigerator reaches the set temperature. Now the refrigerator is ready for use.

STEP 7 Final check

When installation is complete, confirm that:

- The refrigerator is plugged into an electrical outlet and grounded properly.
- The refrigerator is installed on a flat, level surface with a reasonable clearance from the wall or the cabinet.
- The refrigerator is level and is sitting firmly on the floor.
- The door opens and closes freely, and the interior light turns on automatically when you open the door.








Operations

Feature panel

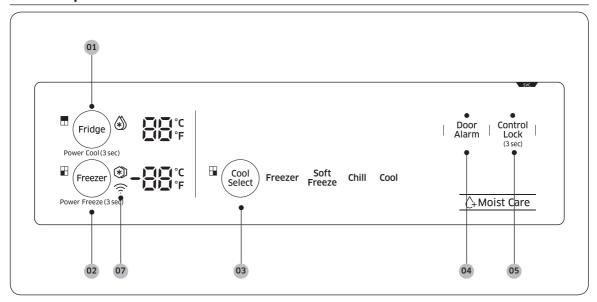

- **01** Fridge / Power Cool
- 03 Cool Select
- **05** Control Lock

- **02** Freezer / Power Freeze
- **04** Door Alarm
- **06** Network connection







Operations

01 Fridge / Power Cool (3 sec)

| | The Fridge button can be used to set the fridge temperature, or to activate/deactivate Power Cool. |
|------------|---|
| Fridge | You can manually adjust the cooling temperature for the fridge. The temperature indicator informs you of the currently set or selected temperature. Keep pressing Fridge to select a desired temperature between 1 °C and 7 °C. |
| Power Cool | Power Cool speeds up the cooling process at maximum fan speed. This is useful to quickly cool food that spoils quickly, or after the door is left open for some time. The fridge keeps running at full speed for several hours and then returns to the previous temperature. Press and hold Fridge for 3 seconds. |

02 Freezer / Power Freeze (3 sec)

| Freezer | The Freezer button can be used to set the freezer temperature, or to activate Power Freeze. Available temperatures are between -15 °C and -23 °C. |
|--------------|---|
| Power Freeze | Power Freeze speeds up the freezing process at maximum fan speed. The freezer keeps running at full speed for several hours and then returns to the previous temperature. To activate Power Freeze, press and hold Freezer for 3 seconds. The corresponding indicator (※) lights up, and the refrigerator speeds up the cooling process for you. To deactivate, press and hold Freezer for 3 seconds again. The freezer returns to the previous temperature setting. To freeze large amounts of food, activate Power Freeze for at least 20 hours before putting food in the freezer. ■ NOTE Using Power Freeze increases power consumption. Make sure you turn it off to return to the previous temperature if you do not intend to use it. |

NOTE

When you change the temperature on the panel, the panel displays the actual temperature inside the refrigerator until the temperature matches the temperature you set. Then, the panel displays the new set temperature. Note that it will take time for the refrigerator to reach the new temperature. This is normal. During this time, you need not set the temperature again.







03 Cool Select

With the Cool Select function, you can arrange food items in the Cool Select Room in an organized manner, which is located on the bottom right of the refrigerator. Press and hold **Cool Select** for 3 seconds, and then press to cycle through the modes. When a desired mode is selected, release the button. There are 4 modes available as below:

| Freezer | Select Freezer to set the Cool Select Room to the same temperature as the freezer. |
|---------------|--|
| | This is useful to keep frozen food fresh. |
| Soft Freezing | Select Soft Freezing to set the Cool Select Room to -5 °C. |
| | This is useful to keep meat and fish fresh for an extended time. |
| Chill | Select Chill to set the Cool Select Room to -1 °C. |
| | This is useful to keep deli like steak, fish, bacon and cheese. |
| Cool | Select Cool to set the Cool Select Room to 2 °C. |
| | This is useful to keep food for general purposes, such as keeping water, juice, soft drinks, and beer. |

! CAUTION

- When switching or turning off the function, meat blood or food moisture may come out due to temperature difference.
- Do not store meat or food in the Cool Select Room with the fridge settings. The meat or food may spoil.

NOTE

If the button does not activate, make sure the button is unlocked. Press and hold **Control Lock** for more than 3 seconds until the lock icon turns off. Then, press and hold **Cool Select** for more than 3 seconds to change the mode.

04 Door Alarm

| You can toggle to enable and disable the alarm by pressing Door Alarm. The alarm is enabled by factory default. | Door Alarm | |
|--|------------|--|
|--|------------|--|









Operations

05 Control Lock (3 sec)

| Control Lock | To prevent accidental manipulation, press and hold Control Lock for 3 seconds. All controls will be disabled with the indicator (♠) on. To deactivate, press and hold again for 3 seconds. The controls will be enabled as normal. |
|--------------------------|---|
| Device authentication | When connecting the refrigerator to Samsung Smart Home App or Samsung smart devices such as Samsung Smart TVs, follow the app's or device's onscreen instructions and press and hold Control Lock for 5 seconds. The temperature panel displays "on" for 5 seconds before proceeding with the authentication procedure. Note that the Control Lock function will be not affected by this authentication. |

06 Network connection

You can use the optional Smart Home Dongle (sold separately) to control and monitor your refrigerator through the Samsung Smart Home app. For more information, see the Samsung Smart Home section.

NOTE

- Recommended encryption systems include WPA/TKIP and WPA2/AES. Any newer or unstandardized Wi-Fi authentication protocols are not supported.
- Wireless networks may be affected by the surrounding wireless communication environment.
- If your Internet service provider has registered the MAC address of your PC or modem for identification, the Smart Home Dongle may fail to connect to the Internet. If this happens, contact your Internet service provider for technical assistance.
- To configure the wireless access point (AP) settings, see the user manual of the AP.
- The firewall settings of your network system may prevent Internet connection. Contact your Internet service provider for technical assistance. If this symptom continues, contact a local Samsung service center or retailer.
- The Smart Home Dongle supports Wi-Fi 2.4 GHz with IEEE 802.11 b/g/n and Soft-AP protocols.
- Unauthorized Wi-Fi wireless routers may fail to connect to applicable Smart Home Dongle.





English 37



Samsung Smart Home

Installation

Visit the Google Play Store, Galaxy Apps, or Apple App Store and search for "Samsung Smart Home". Download and install the Samsung Smart Home app provided by Samsung Electronics to your smart device.

♠ NOTE

- The Samsung Smart Home app is designed for Android 4.0 (ICS) or higher, or iOS 8.0 or higher, and is optimized for Samsung smartphones (Galaxy S and Galaxy Note series).
- For improved performance, the Samsung Smart Home app is subject to change without notice, or discontinued support according to the manufacturer's policy.

Samsung account

You are required to register your Samsung account to use the app. If you don't have a Samsung account, follow the app's onscreen instructions to create a free Samsung account.

Getting started

- **1.** Insert the Smart Home Dongle into the corresponding port of your refrigerator.
- **2.** Run the Samsung Smart Home app and log in with your Samsung account. iPhone users are required to provide the login information each time they access the app.
- **3.** Access **Add Device** and then tap **Refrigerator**.
- **4.** Follow the onscreen instructions to provide the necessary information about the router, and then tap **Next**.
- **5.** Press and hold **Fridge** for more than 5 seconds until the "AP" message appears on the display. Your refrigerator will be registered with the app.
- **6.** When the device registration is complete, the refrigerator icon will appear on the Samsung Smart Home app.
- **7.** Tap the refrigerator icon to open the refrigerator page.
- **8.** When a network connection is established, the Wi-Fi icon lights up on your refrigerator.

Refrigerator app

Integrated control

You can monitor and control your refrigerator at home as well as while on the move.

- Tap the refrigerator icon on the Samsung Smart Home to open the refrigerator page.
- Check the operation status or notification of your refrigerator, and change options or settings if necessary.

♠ NOTE

Some options or settings of the refrigerator may not be available for remote control.









Operations

| Category | Item | Description |
|------------|-------------------------------------|--|
| Monitoring | Fridge temperature | Displays the current temperature setting of the fridge. |
| | Freezer temperature | Displays the current temperature setting of the freezer. |
| | Cool Select+ (FlexZone) settings | Displays the settings of the Cool Select+ (FlexZone). |
| | Diagnosis | Detects abnormal operations of the refrigerator. |
| | Energy monitoring | Checks the accumulated power consumption of the refrigerator for the last 180 days. |
| Functions | Power Cool | You can turn Power Cool on or off, and check the current settings. |
| | Power Freeze | You can turn Power Freeze on or off, and check the current settings. |
| Alarms | Abnormally high temperature | This alarm is triggered when the fridge, the freezer, or the Cool Select+ (FlexZone) has abnormally high temperatures. |
| | Door opening | This alarm is triggered if the fridge or freezer door, or the Cool Select+ (FlexZone) door is left open for a specific time. |





English 39




Special features

The refrigerator has features convenient for you.

Multipurpose door bin (applicable models only)


This detachable bin has a divider that you use to store food items in separate sections.

Divider

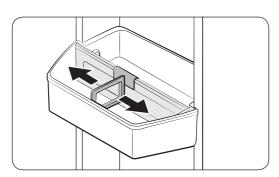

You can use the removable divider to divide the bin section.

Slide the divider to the left or right to divide the whole section in two, or slide it to either end to use the bin as a whole section.

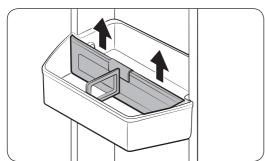








Operations


Slim Ice Maker (applicable models only)

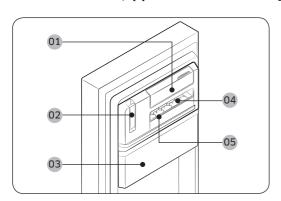

- **01** Water bin
- 02 Ice maker lever
- 03 Ice bucket
- **04** Ice template cover
- **05** Ice template (inside the cover)



If you do not intend to make ice, remove the slim ice maker to secure more room for storage. In this case, you can use the ice bucket as a multipurpose storage bin.

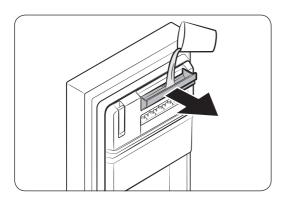

1. Pull up the handle of the water bin to open, and then fill the bin with water up to the max line. Gently close the bin so that water does not drop or leak.

! CAUTION

- Do not exceed the max line. Excessive water causes the ice to jam and not dispense well.
- Use only potable water. Other liquids, such as green tea or milk may not dispense well.


NOTE


- If you encounter a water leak, open the water bin and check if the ice bin's passage to the ice template is frozen. If this is the case, pour lukewarm water into the water bin up to the max line. Let the passage melt.
- It is recommended to clean the ice bin's passage to the ice template on a regular basis because the passage is likely to freeze.







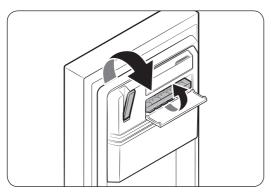

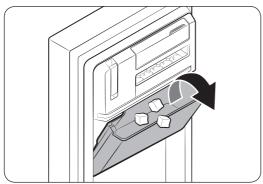

2. Check if the ice freezes completely. Only when the ice has frozen completely, pull up the lever. Then, the ice template rotates and dispenses ice to the ice bucket.

! CAUTION

- Do not pull up the lever until the ice has frozen completely. Half-frozen ice may jam and damage the ice bucket.
- **3.** To dispense ice, tilt the ice bucket to the front.

A CAUTION

- Do not pour water directly into the ice bucket for ice making. The ice bucket may
- Do not leave the freezer door open. The ice in the ice bucket melts and jams.
- In case of a power failure, make sure to empty the ice bucket before making ice.
- Use only potable water.









Handle and care


Tempered glass shelves (fridge)

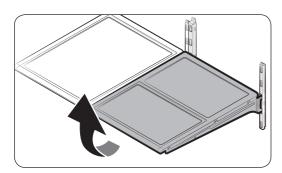

 To remove a shelf, fully open the corresponding door. Hold the front of the shelf, and then gently lift up and slide out.

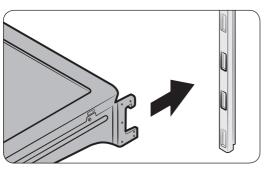

 To reinsert, lower the rear side of the shelf and insert into the shelf hooks.
 Then, lower the front side to slide in to the end.

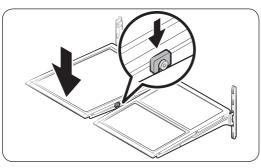


! CAUTION

- The tempered glass shelves are heavy. Use caution when removing them.
- The shelf must be inserted correctly. Do not insert upside down.
- Glass containers may scratch the surface of glass shelves.





Door bins

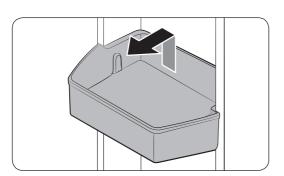


To remove the top door bin, hold the front sides of the bin, and then gently lift up to remove.

To reinsert, insert the door bin to the end of the marked line.

Hold the rear of the door bin with both hands, and then press down to fit into the marked line.


Vegetable & fruit drawers

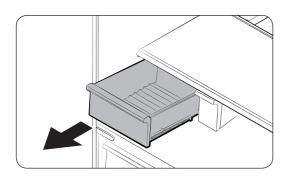

Gently lift up the front of the drawer and slide out.

It is recommended to remove the door bins before removing the drawer. This is to prevent damage to the door bins.

Vegetable shelf

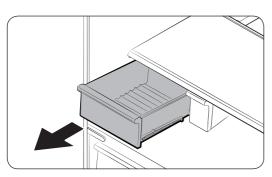


1. Slide out the left-sided vegetable drawer.








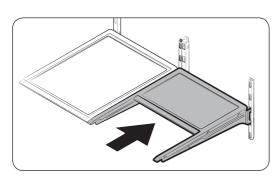

2. Slide in the right-sided foldable shelf.

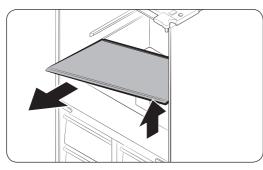

3. While supporting the vegetable shelf with one hand, slide out with the other hand.

■ NOTE

Using the space that is revealed after removing the foldable shelf, take out the vegetable shelf.


To reinsert, follow the steps above in the reverse order.

Slim ice maker (applicable models only)

NOTE

- Disassemble it into component parts such as the ice bin and ice template. Then, clean each component part and use a dry cloth to wipe up and dry well.
- If you have cleaned the ice maker as a whole, the ice maker lever may not operate properly. If this is the case, dry the slim ice maker well for 2-3 days.

To remove each component part

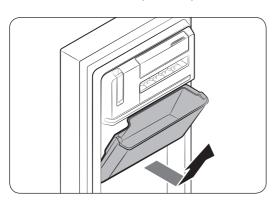


Ice bucket

Tilt the ice bin to the front, and then lift up to remove.








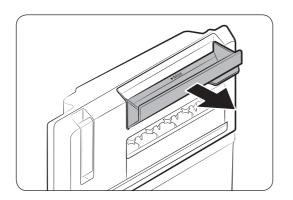


Water bin

Fully open the water bin, and then pull out.

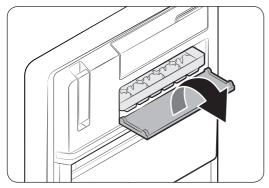

Ice template


1. Open the ice template cover to reveal the ice template.

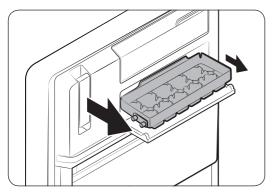

2. Slightly pull out the left side of the ice template, and then pull out the other side to remove.

English 45




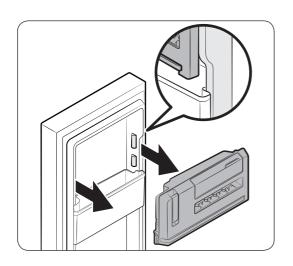

Slim ice maker


While holding the marked area on either side of the slim ice maker, pull out in the arrow directions.

Reinstallation

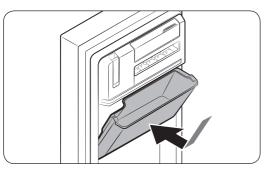

Ice bucket

Fit either side of the ice bucket into the corresponding hook on the bucket housing, and then push in to close.

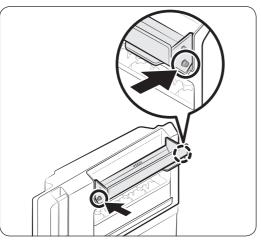


Water bin


Fit either side of the water bin into the corresponding hook on the water bin housing. Make sure to fit until you hear a clicking sound.








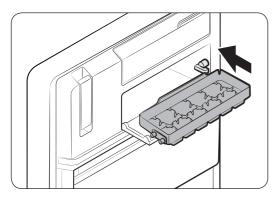

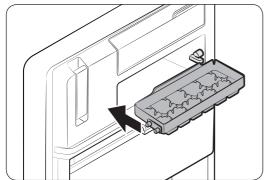

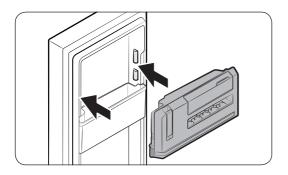

Ice template

Reinserting the ice template is in the reverse order of the removal. The ice template fits only in one direction so make sure to reinsert the ice template in the right direction.

- **1.** Fit the bottom right side of the ice template into the right hook on the ice template housing.
- 2. Fit the bottom left side of the ice template into 2 hooks on the left of the housing. Then, push in until you hear a clicking sound.

Slim ice maker

Fit either side of the slim ice maker into the corresponding hook on the ice maker housing, and then push in to the end.







Cleaning

Interior and exterior

MARNING

- Do not use benzene, thinner, or home/car detergent such as Clorox™ for cleaning purposes. They may damage the surface of the refrigerator and cause a fire.
- Do not spray water onto the refrigerator. This may cause electric shock.

Regularly use a dry cloth to remove all foreign substances such as dust or water from the power plug terminals and contact points.

- 1. Unplug the power cord.
- **2.** Use a moistened, soft, lint-free cloth or paper towel to clean the refrigerator's interior and exterior.
- 3. When done, use a dry cloth or paper towel to dry well.
- **4.** Plug in the power cord.







Replacement

LED Lamps

To replace the lamps of the refrigerator, contact a local Samsung service centre.


MARNING

The lamps are not user-serviceable. Do not attempt to replace a lamp yourself. This can cause electric shock.

Deodorizer (applicable models only)



The performance of the deodorizer is effective for 17 months in normal conditions.

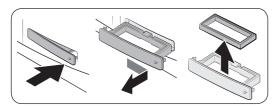

- Press the marked area of the deodorizer's cover to remove.
- Remove the deodorizer assembly from the cover, and replace it with a new deodorizer assembly. Then, put the cover back into position.







Troubleshooting

If you encounter a problem with the refrigerator, first check the tables starting below, and then try the suggested actions.

General

| Symptom | Action | |
|--|--|--|
| The refrigerator does not operate or cool. | Make sure the power cord is connected properly. Make sure the temperature control is set correctly. Try setting to a lower temperature. Make sure to keep the refrigerator away from direct sunlight or a heat source. Failing to do so may affect the cooling performance. Make sure the refrigerator has enough room from the rear and side walls or the cabinet. Failing to do so may affect the cooling performance. Too much food may block the ventilation of the refrigerator. To keep the refrigerator in normal operation, do not put too much food inside. | |
| Food in the fridge freezes. | Check if the temperature control is set to the lowest temperature. If so, change to a higher or the optimal temperature. This happens if the ambient temperature is too low. Set the temperature higher. Check if food containing a high portion of water is put in the coldest area of the fridge or near the cooling vent. If so, move the food to other shelves in the fridge. | |
| You hear unusual noises or sounds. | Make sure the refrigerator is installed on a stable, flat surface. Make sure the refrigerator has enough room from the rear and side walls or the cabinet. Make sure that there are no foreign objects (coins, keys, cutlery, etc.) inside or underneath the refrigerator. The refrigerator may produce a ticking sound from inside. This occurs when the various accessories contract or expand as the temperature inside changes. This is normal. | |







| Symptom | Action |
|---|---|
| The front corners and sides become warm and form condensation. | To prevent condensation from forming, the refrigerator has heat-proof piping in the front corners. If the ambient temperature rises, this equipment may not work effectively. This is not a system failure. Make sure the door is closed properly. Condensation may form if you leave the door open for some time. Condensation may form on the exterior surface of the refrigerator if humid air comes into contact with the cool surface of the refrigerator. |
| You hear a bubbling sound. | • This is normal. The bubbling sound comes from refrigerant circulating through the refrigerator. |
| A bad smell comes from inside the refrigerator. | Check for any spoiled food. We recommend cleaning the refrigerator on a regular basis and removing any spoiled or suspect food items. Make sure strong smelling food is wrapped up airtight. |
| Frost forms on the interior walls. | Make sure the air vents are not blocked by food or any other objects so that the air can circulate freely. For efficient air circulation, it is recommended to arrange food items evenly. Make sure the door is closed properly. |
| Condensation or water drops form on or around the vertical mullion. | While the refrigerator is operating, condensation or water drops may form on or around the vertical mullion if the surrounding humidity is too high. |







Troubleshooting

Samsung Smart Home

| Symptom | Action |
|---|--|
| Could not find "Samsung Smart Home" on the app market. | The Samsung Smart Home app is available on smartphones that run Android 4.0 (ICS) or higher, or iOS 8.0 or higher. |
| The Samsung Smart Home app fails to operate. | The Samsung Smart Home app is available on applicable models only. The old Samsung Smart Refrigerator app cannot connect with Samsung Smart Home models. |
| The Samsung Smart Home app is installed but is not connected to my refrigerator. | You must log into your Samsung account to use the app. Make sure that your router is operating normally. Make sure that the Smart Home Dongle is inserted properly. If the Wi-Fi icon on the refrigerator's display is off, this indicates that no network connection has been established yet. In this case, use the Samsung Smart Home app to connect and register your refrigerator to the access point (AP) of your house. |
| Could not log into the app. | You must log into your Samsung account to use the app. If you don't have a Samsung account, follow the app's onscreen instructions to create one. |
| An error message appears when I try to register my refrigerator. | Easy Connection may fail due to the distance from your access point (AP) or electrical interference from the surrounding environment. Wait a moment and try again. |
| The Samsung Smart Home app is successfully connected to my refrigerator but does not run. | Exit and restart the Samsung Smart Home app, or disconnect and reconnect the router. Remove the Smart Home Dongle, and reconnect it in a moment. |









Memo







Memo







Memo







SAMSUNG

Contact SAMSUNG WORLD WIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

| Country | Contact Center | Web Site |
|-------------|--|----------------------------|
| AUSTRALIA | 1300 362 603 | www.samsung.com/au/support |
| | 0800 726 786 | |
| NEW ZEALAND | 0800 6 726 786 (Support for Smart Mobile Devices) | www.samsung.com/nz/support |





