

DWAFI314

smeg fully-integrated dishwasher



30cm
maximum
plate
diameter

ORBITAL WASH SYSTEM

Smeg's orbital wash system has two spray arms which operate simultaneously in opposite directions to ensure water is evenly distributed throughout the inner cavity for a perfect wash.

DELAY START TIMER

Delay Start option allows for up to 24-hours delay start — allowing you to take advantage of off-peak energy usage times.


TOTAL ACQUASTOP

Acquastop is a water safety device that operates when the dishwasher is not in operation by restricting mains pressure at the tap, and not at the dishwasher.

FLEXIZONE


The new half-load FlexiZone allows you to wash a reduced load, saving energy, water and time, and there are no restrictions on where the items are placed. Traditional half loads allow only one of the baskets to be used.

EAN	8017709184056
size	598mmW x 888mmH maximum x 550mmD (excluding door)
capacity	14 placesettings
programs	five wash programs — soak, normal ECO, ECO, intensive 65°, super
baskets	grey cutlery tray upper: 3-level adjustment, EasyGlide lower: completely foldable rack with glass holder
wash system	orbital ceiling spray upper spray arm six spray directions
temperatures	45,50,65,70°C
water connection	single, cold/hot water max 60°C
timer	3-6-9 hour delay timer
filtration	5-stage water filtration system
drying	natural condenser
safety	TOTAL ACQUASTOP end-cycle acoustic indicator self-balancing hinges
noise	47 dBA (when installed)
water	9.6 litres
energy	1.9 kWh, 10 amps 230-240V, 50Hz

 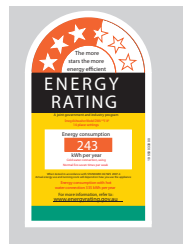



 


DWAFI314

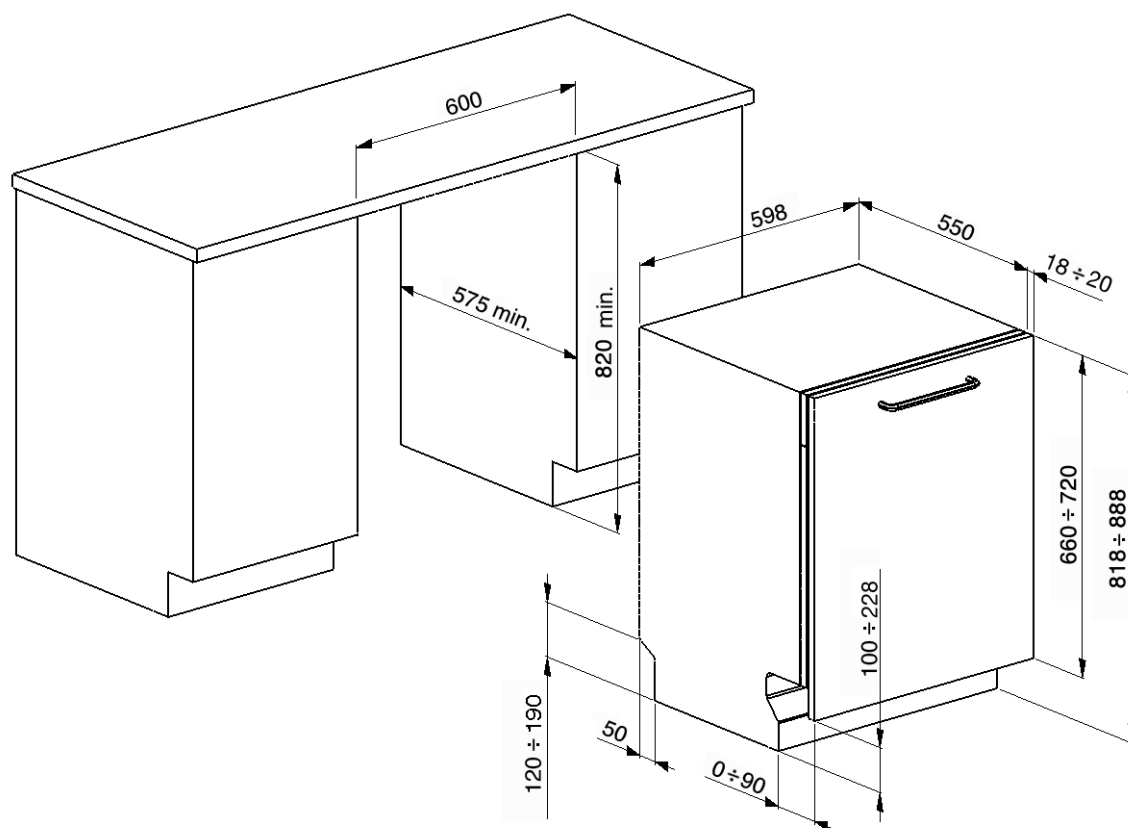smeg fully-integrated dishwasher



PLEASE NOTE: drawings are not to scale. They are to assist only.

PROGRAM	LOAD	PROGRAM PROGRESS	DURATION	CONSUMPTION		
			minutes	water litres	power kWh	
SOAK		pans and dishes awaiting completion of load	cold prewash	15	3.5	0.02
NORMAL ECO		crockery and cutlery normally soiled	cold prewash wash at 45°C rinse at 45°C dry	140	9.6	0.65
ECO		dishes with normal dirt, washed immediately after use	cold prewash wash at 55°C rinse at 70°C dry	100	11	1.3
INTENSIVE		dishes with normal dirt, with dried-on residue	cold prewash wash at 65°C code rinse rinse at 70°C dry	115	13.5	1.35
SUPER		very dirty pans and dishes, with dried-on residue	hot prewash wash at 70°C code rinse (2) rinse at 70°C dry	135	15.5	1.60