

SEIKI™

55" UHD LED LCD TV

SC-55AU300



INSTRUCTION MANUAL

Please read this manual carefully before using, and keep it for future reference.

CONTENTS

General Safety	4
Installation	8
Controls and Connections	10
Remote Control	12
Basic Operations	15
Media	16
Getting Started	17
Menus	
Channel Settings	18
Picture Settings	18
Sound Settings	19
Time Settings	19
Lock Settings	20
Setup Settings	20
Electronic Program Guide (EPG)	22
Recording	23
FAQs	24
Specifications	25

GENERAL SAFETY

Read this manual thoroughly before you start using the TV.

Store this manual, the completed warranty card, your receipt and the product packaging. The safety precautions instructions reduces the risk of fire, electric shock and injury when correctly complied to.

Please follow all instructions and take notice of all warnings.



The cover (or back) of the unit should not be removed to prevent risk of electric shock.

This unit must be serviced by a qualified service personnel only.



The lightning flash with symbol within the triangle is intended to warn you of a non-insulated dangerous voltage in the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.



The exclamation point within the triangle is intended to warn you to the presence of important operating and maintenance instructions in the documents included with the product.

IMPORTANT INFORMATION

The lightning flash symbol within the triangle is intended to warn you of non-insulated dangerous voltage the product's enclosure that could be of sufficient magnitude to generate a risk of electric shock to persons.

- Using Cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the Products.
- Ensure the Product is not overhanging the edge of the supporting furniture.
- Do not place the product on a high furniture without securing both the furniture and the product to a stable support.
- Do not place the product on cloth or other conductive materials.
- Warn children of the dangers of climbing on furniture to reach the television or its controls and to call for an adult to assist.

GENERAL SAFETY INSTRUCTIONS (Cont.)

IMPORTANT INFORMATION

- Do not expose this appliance to rain or moisture as it may result in fire or an electric shock hazard
- Do not temper or change or modify the product in any way.
- Only use Accessories outlined and recommended by the manufacturer.
- Please do not expose the product to splashing or water contact
- Please do not place any object on top of the product including objects filled with liquids such as vases.
- Danger of explosion if battery is incorrectly placed. Replace with same or equivalent type.

Installation

Please follow instruction when installing this product in accordance with the instruction manual. This product must be positioned in a sufficiently stable location, it can be potentially hazardous due to falling and can cause injury, particularly to children if it positioned incorrectly.

- Before installing this TV set, make sure your outlet voltage corresponds to the voltage stated on the product rating label
- Do not use a damaged power cord, plug or loose outlet. Doing so may cause an electric shock.
- Do not plug several devices into the same outlet. Doing so may cause the outlet to overheat and start a fire. Make sure the outlet is readily accessible during operation of the equipment.
- Do not bend, twist or kink the power cord excessively.
- Do not allow anything to rest on or roll over the power cord and antenna cable. Doing so may cause a fire or an electric shock.
- Do not run the power cord near heat-producing appliances such as radiators, stoves or irons. The excessive heat could melt the insulation and expose live wires, resulting in fire or electric shock.
- Unplug this TV during lightning storms or when unused for long periods of time. Not doing so may result in fire or electric shock.
- Do not cover the ventilation openings of the product with items such as newspapers, tablecloths, curtains etc or insert objects into the slots available on the products. As this could result in the product temperature rising and could cause a fire.
- If you notice any unusual odors or smoke around the unit, immediately disconnect the unit from the outlet and contact the service center. Failure to do so may result in fire or electric shock.
- When not using the unit for long periods of time or when you are moving the unit please ensure to disconnect the power cord from the wall socket.

GENERAL SAFETY INSTRUCTIONS (Cont.)

- Please beware that Dust could accumulate over time on the unit and cause it to generate heat and or deteriorate insulation, which in turn may result in an electrical fire.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or young children of any age, They must be supervised product by a person responsible for their safety.
- Batteries from the remote control must be only removed by an adult, the adult must ensure to keep them out of reach of infants and children. Seek medical attention immediately if a child has swallowed a battery.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- To maintain the product do not use any chemical or cleaning agent or wet cloth, please only ensure to utilize a dry cloth to wipe it down from marks or dust and only after unplugging the product from the power socket.
- Please ensure to contact our call center for any repair or service required for the products.

WARNING!

It is STRONGLY RECOMMENDED that you ANCHOR this product.

Toppling furniture and TV's can cause serious injury or death.

TO HELP AVOID ANY SERIOUS OR FATAL INJURY, WE STRONGLY RECOMMEND THAT THIS PRODUCT BE PERMANENTLY FIXED TO THE WALL OR OTHER SUITABLE SURFACE. FIXING DEVICES ARE NOT INCLUDED SINCE DIFFERENT SURFACE MATERIALS REQUIRE DIFFERENT ATTACHMENTS. PLEASE SEEK PROFESSIONAL ADVICE IF YOU ARE IN DOUBT WHAT FIXING DEVICE TO USE.

If a television is not positioned in a sufficiently stable location, it can be potentially hazardous due to falling. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television to a suitable support.
- Not standing the television on cloth or other materials placed between the television and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

GENERAL SAFETY INSTRUCTIONS (Cont.)

Please make sure upon positioning this product, the place is:

- Not wet or damp and Well ventilated
- Away from direct sunlight or heaters.
- Away from splashes or food.
- Protected from excessive dust or grease.
- Do not install this equipment in a confined space such as a bookcase or similar unit.
- Do not install the TV set near heat sources such as radiators, stoves or other audio visual equipment that produce heat.
- Do not place containers with liquids, if liquid falls inside the products it may result in short-circuit, fire or electric shock.
- Do not place small metallic objects on top of the unit. Metal object falls inside the product it may result in short-circuit, fire or electric shock.
- Do not use or store flammable or combustible materials near the unit. Doing so may result in fire or explosion. Do not place any naked flame sources, such as lit candles, cigarettes or incense sticks on top of the TV set.
- The antenna must be installed away from high-voltage power line,
- Please contact an antenna professional installer to install the antenna to avoid incorrect installation which could result in fire, electric shock or serious injury.
- Install the unit at a reasonable distance from the wall to ensure sufficient ventilation.
- If mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

INSTALLATION

Install the stand as described below, or if you want to mount it to a wall, please contact a professional installer.

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

 
Attaching the stand

Step 1

Place a soft cushioned material on top of a flat surface to prevent damaging the screen panel. Then place the TV screen flat on top, with the screen side facing down, as illustrated on the right.

Step 2

Align the stand leg to the installation point, as illustrated below

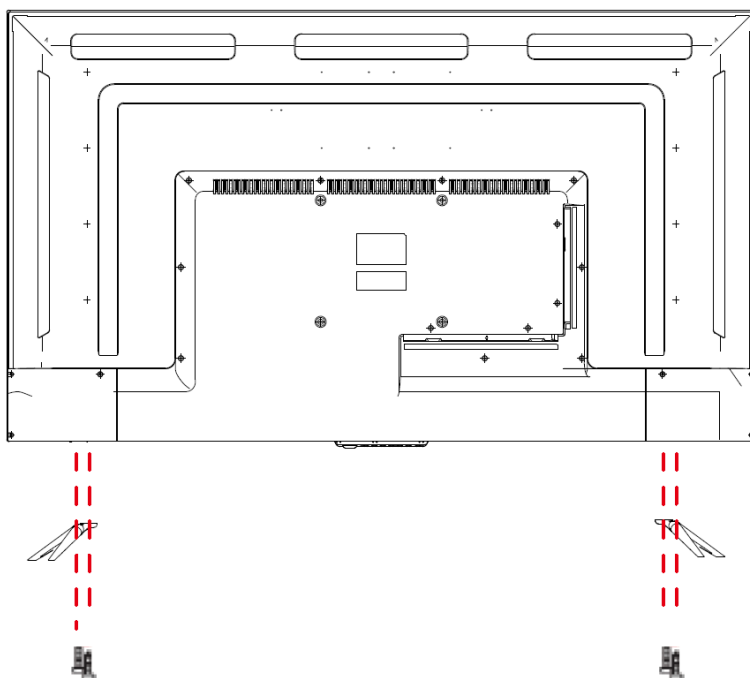

Step 3

Tighten the screws (supplied) with a screwdriver to affix the stand to the panel, as illustrated on the right.

CAUTION!

Do not apply excessive force as this may damage the screw holes.

INSTALLATION (Cont.)

 
Wall-Mounting Instructions

Please ensure the TV is not plugged into the wall socket and furthermore we recommend to get another person to assist in the following task.

- We recommend you use a professional installer as we assume no liability for any eventual damage to the product or injury to yourself if you mount the TV on your own.


BACK OF TV

VESA PATTERN: 200 x 200mm

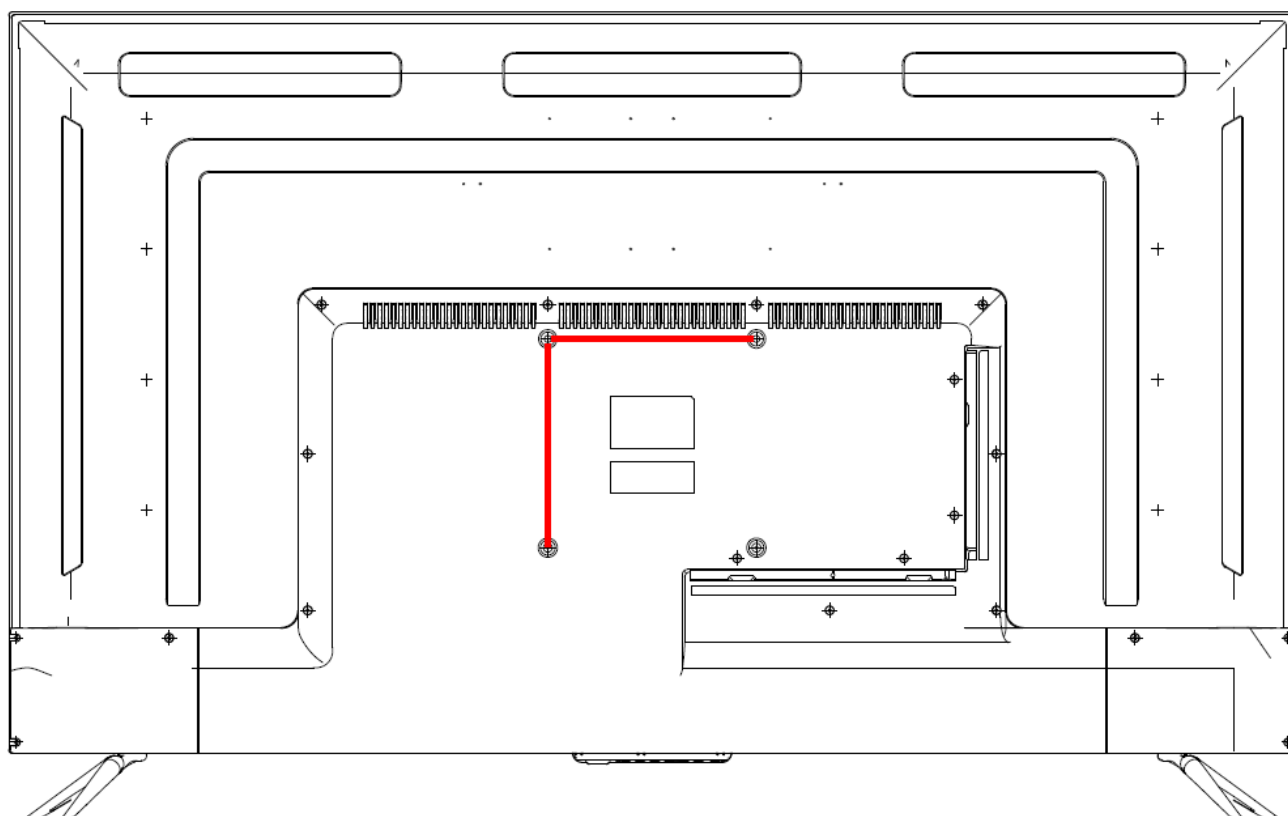


NOTE: If you are wall-mounting the TV, this should be done by a qualified installer.

 CONTROLS AND CONNECTIONS

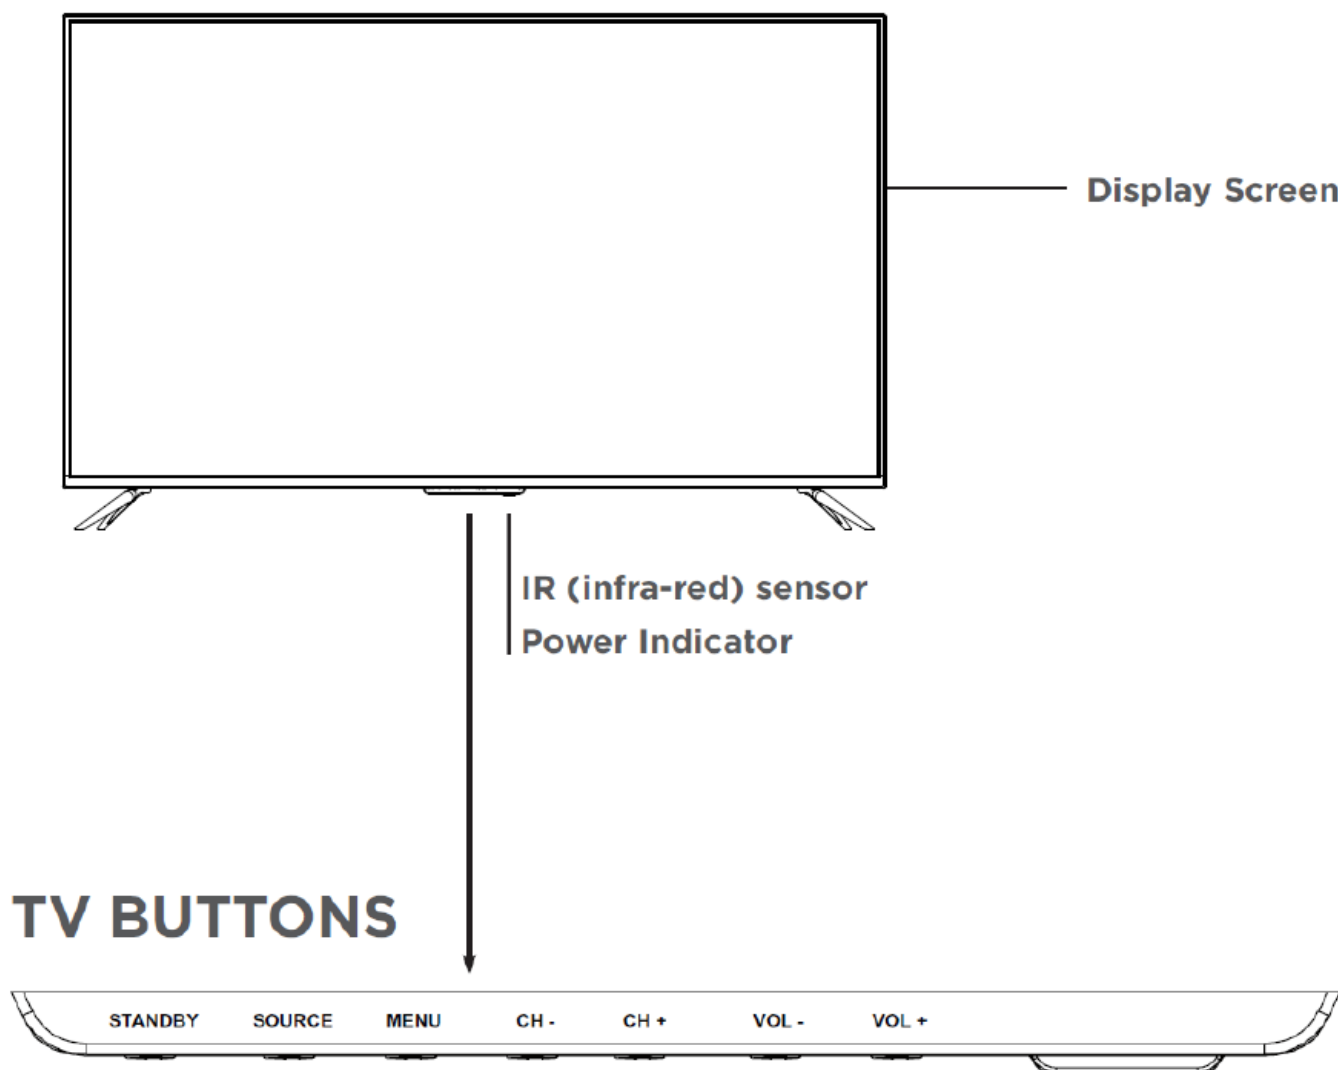

CONTROLS AND CONNECTIONS (Cont.)

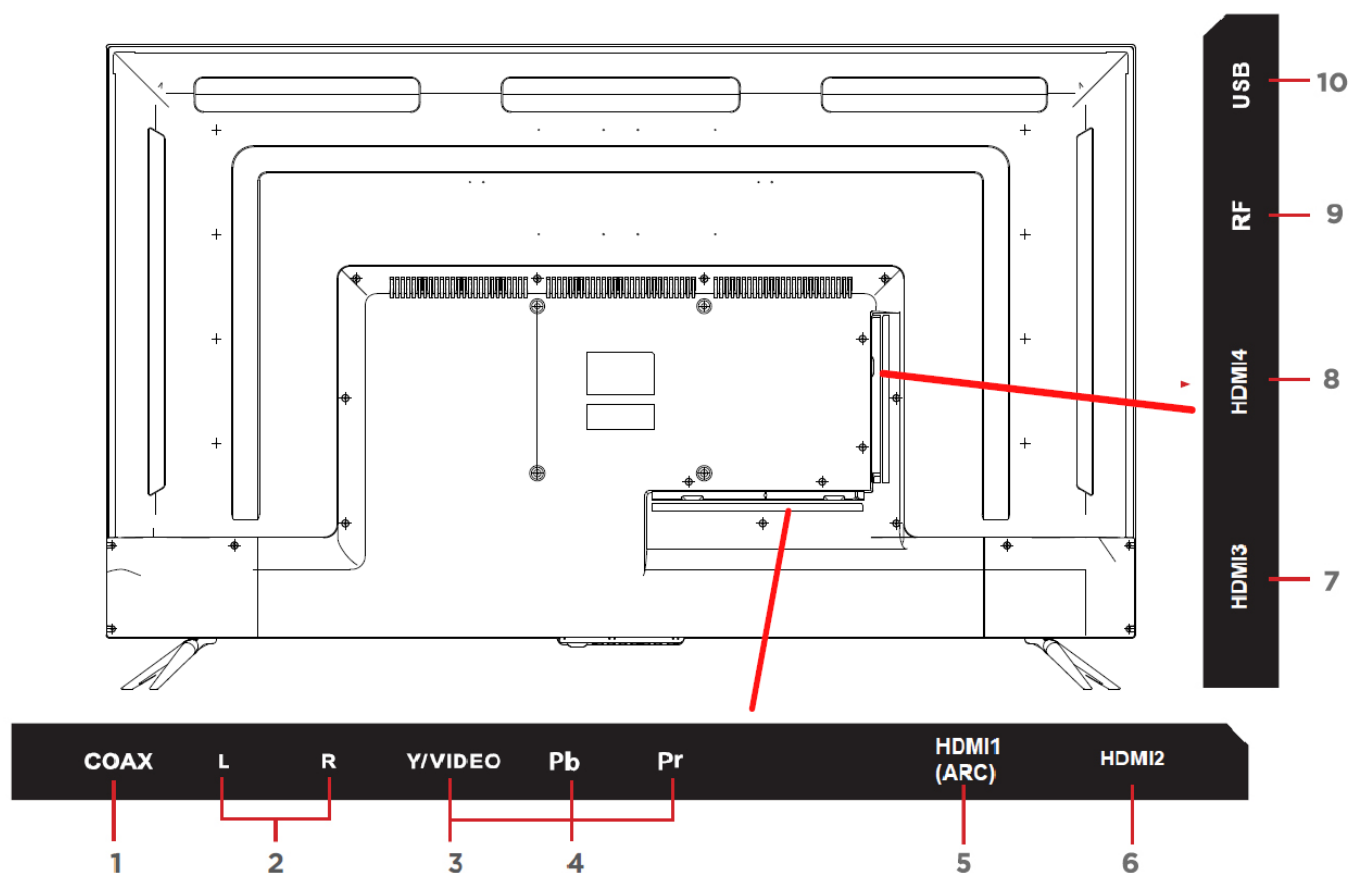 

1. COAXIAL
2. AUDIO L/R INPUT
3. VIDEO INPUT (COMPOSITE)
4. Y/Pb/Pr INPUT (COMPONENT)
5. HDMI 1 (ARC)
6. HDMI 2
7. HDMI 3
8. HDMI 4
9. RF (ANTENNA INPUT)
10. USB INPUT

USB connection

Insert a USB storage device into the USB port to record, playback of video/music/photo

REMOTE CONTROL

1. STANDBY button

Turns the television on from the stand-by mode.

2. SOURCE button

Press to select the desired input.

3. Numerical buttons 0-9

Press 0-9 to directly select a TV channel while watching the TV.

In teletext mode enter the page number, etc.

4. FAV button

Press in the TV mode to enter / exit the favourites menu.

5. C↻ button

Button for switching to the previously watched channel.

6. SMODE button

Repeatedly press to select a sound mode.

7. PMODE button

Repeatedly press to select a picture mode.

8. SLEEP button

Set the automatic shut off time for the television.

9. TV/RADIO button

Switching between the television and radio modes.

10. DISPLAY button

Button for displaying the source and information about channels.

11. ▲/▼/◀/▶/OK buttons

Used for navigating in a menu on the screen and for setting up the television according to your preferences.

12. MENU button

In TV mode it displays the LCD television's main menu.

13. EXIT button

Function for exiting a menu or a screen.

14. MUTE button

Press to mute the sound. Press it again to renew the sound or press VOL +.

15. EPG button

Press to show/hide the electronic program guide.

16. VOL +/- buttons

Press to increase/decrease the volume.

17. CH +/- buttons

 
Press to switch between individual channels.

18. MEDIA button

Press to switch to the Media (USB) mode.

19. T.SHIFT button

It is used to start recording with a time shift (i.e. time shift). Function is only available in the DTV mode.

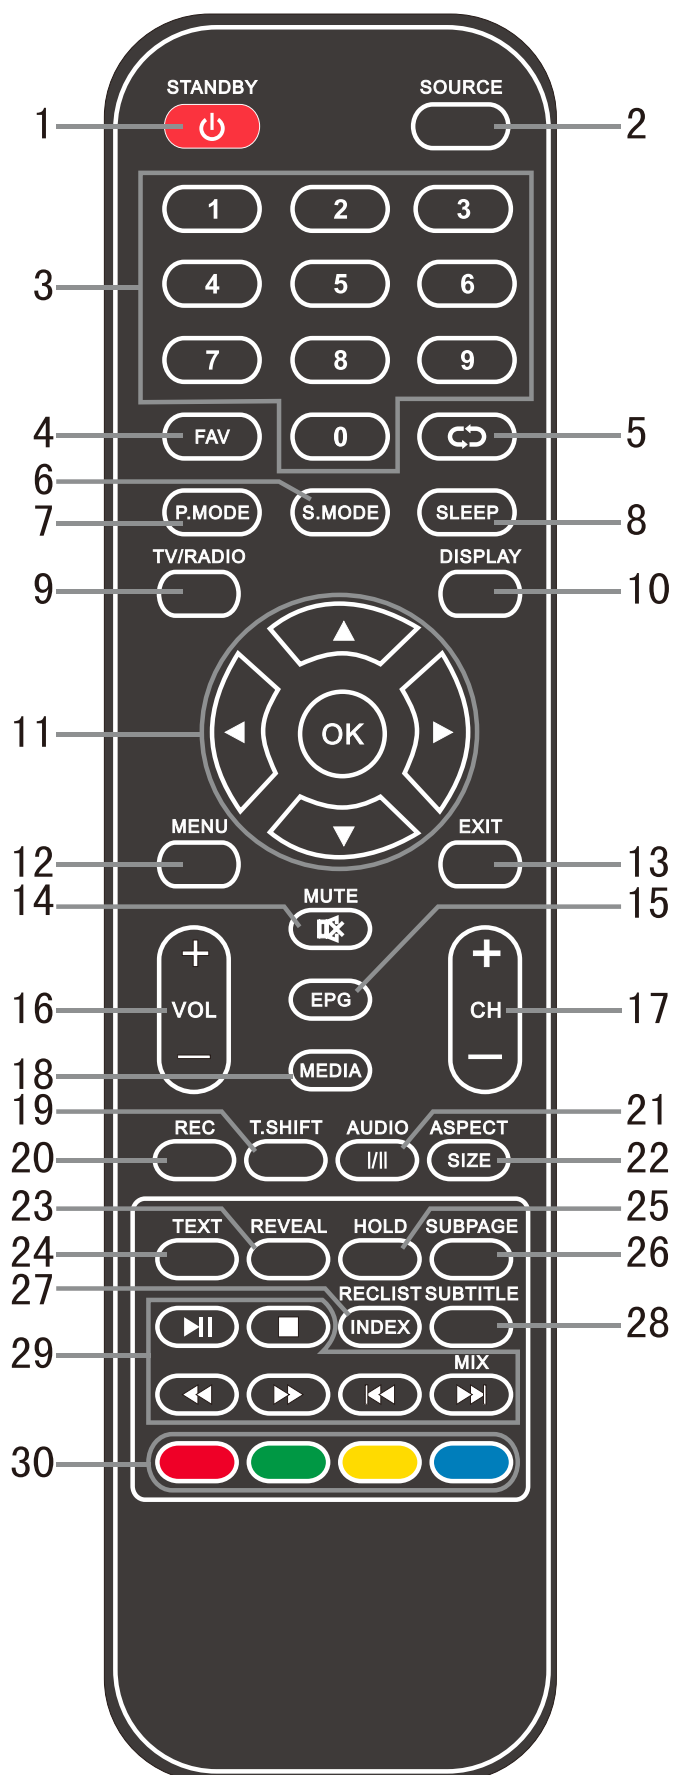

REMOTE CONTROL (Cont.)

20. REC button

Used to start recording (only in DTV mode).

21. AUDIO button

DTV/MEDIA mode: select a background sound, if available.

ATV mode: select a sound mode: Stereo/Dual I/II/Mono.

Other sources: select the left / right channel

22. SIZE button

Press SIZE to change the size of the screen in the Teletext.

23. REVEAL button

Press REVEAL to display or hide hidden teletext information (depends on the broadcast).

24. TEXT button

Turn teletext on or off.

Note: The teletext function is optional and the availability of buttons depends on the model. Teletext information fully depends on the operator of the channel.

25. HOLD button

Freezes the current picture in the Teletext.

26. SUBPAGE button

Press to enter a teletext subpage.

27. RECLIST button

Enter the list of recordings

28. SUBTITLE button

Button for showing / hiding subtitles in the bottom part of the screen, if they are available.

29. ►II/■/◀◀/▶▶/I◀◀/▶▶I/MIX buttons

►II: start / pause playback, start timeshift recording function.

■: Stop recording / playback.

◀◀: Fast rewind

▶▶: Fast forward

 
I◀◀: Skip to previous track

▶▶I: Skip to next track

MIX: TV picture and teletext content are simultaneously displayed on the screen.

30. RED, GREEN, YELLOW, BLUE button:

corresponds to various colour functions in the menu or teletext.

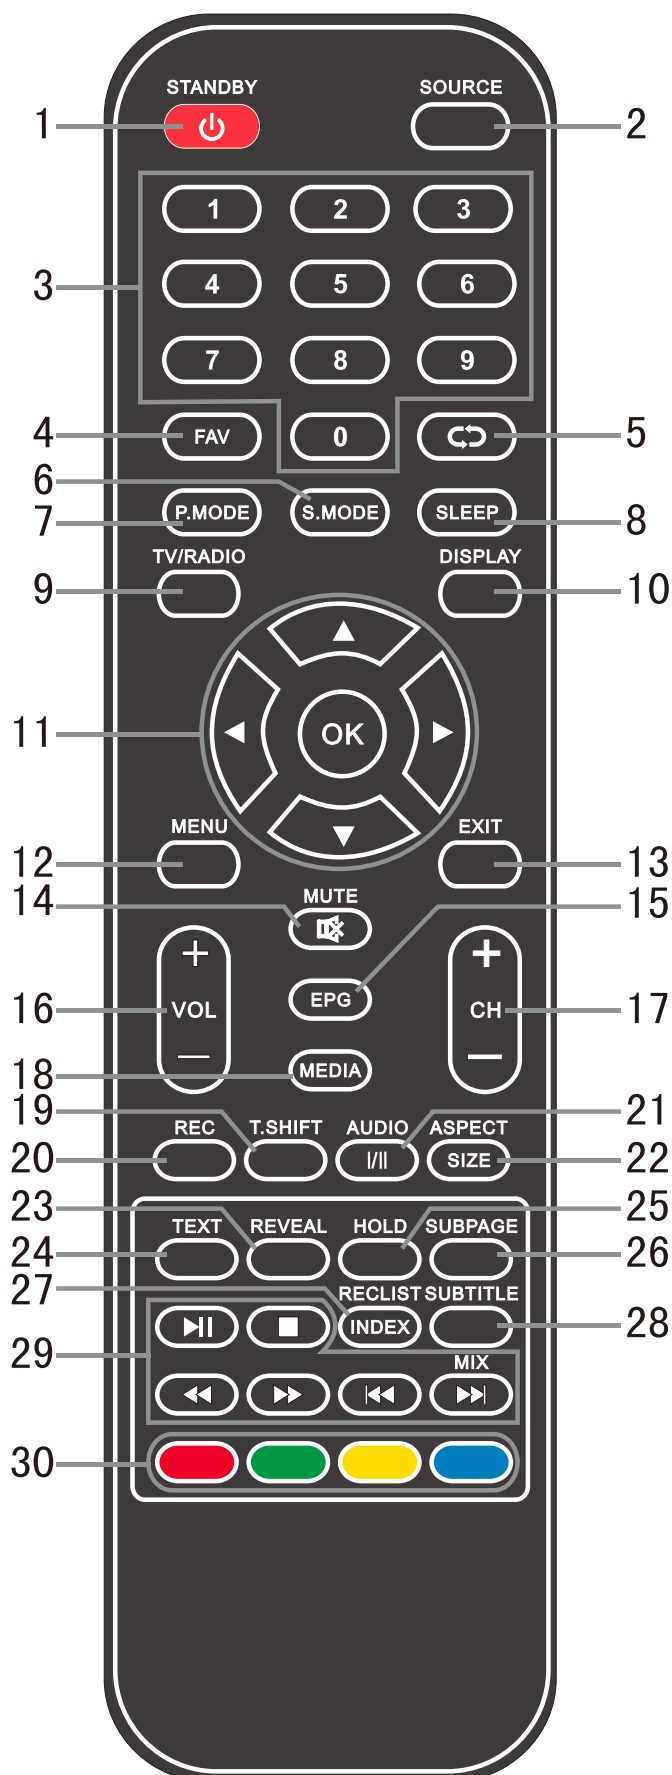

REMOTE CONTROL (Cont.)

Using the Remote Control

- Battery should normally last for about one year.
- Do not mix old and new batteries in the remote
- Do not use different types of battery
- If you do not intend to use the unit for a long time, please remove batteries from the remote to avoid accident.
- Keep batteries away from children and pets.
- Never throw batteries into a fire.
- Do not drop, or impact the remote control as it void warranty immediately.
- The remote control operate at a range of 5 to 6M effectively
- Do not expose the remote control sensor to a bright light.

BASIC OPERATIONS

- Press the **SOURCE** button to display the input source list.
- Press the **▲/▼** buttons to select the input source, and then press OK to confirm.
- You can access connected USB drives by selecting MEDIA.

 


- Press the **P-MODE** to select the picture mode: Standard, Mild, Personal, Dynamic.
- Press the **S-MODE** button to select the sound mode: Standard, Music, Movie, Sports, Personal
- Press the **SLEEP** button to select: Off, 15min, 30min, 45min, 60min, 90min, 120min, 240min.
- Press the **ASPECT** button to select: Auto, 4:3, 16:9, Zoom1, Zoom2
- Press the **AUDIO** button select audio language.
- Press the **DISPLAY** button to display information about the current program.

MEDIA

MEDIA PLAYBACK


- First insert a USB Device into the TV
- Press **"MEDIA"** on the remote control.
- Use the directional arrow keys to go through folders within your USB device to access Photo's or Movies.
- Press the EXIT button to return to previous page

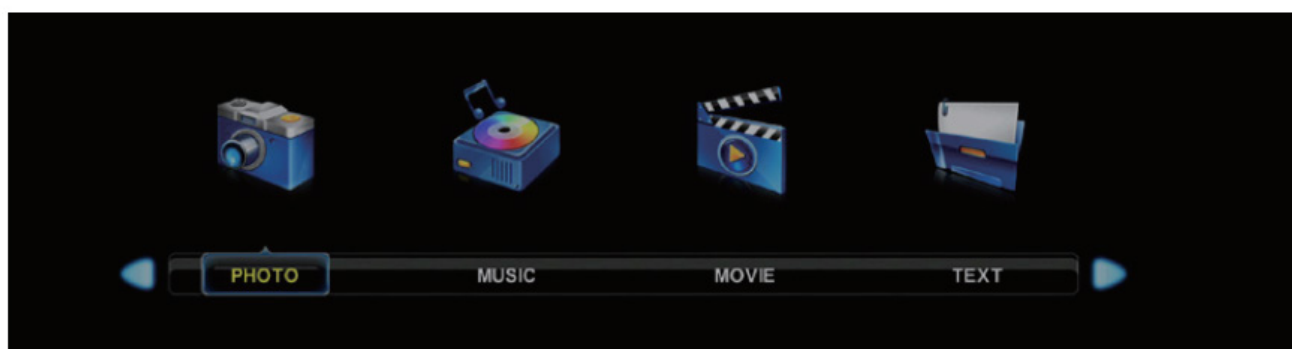

GETTING STARTED


To turn the power On Or Off:

 - Plug the power cord into a suitable power point,
- Turn on the power switch.
- Press the STANDBY/ON button
- When you switch on the TV for the first time, the First Time Setup menu will be displayed on the screen, as per the image below.

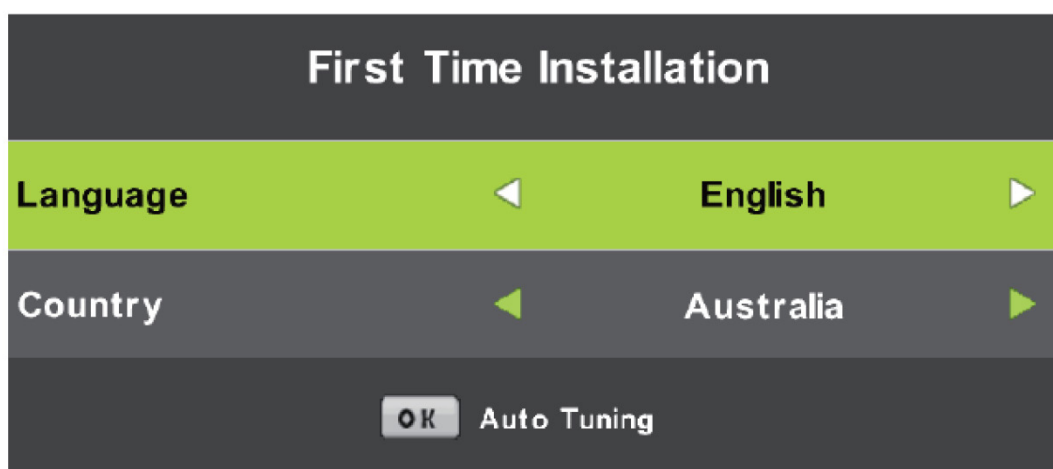


- Press the ◀/▶ buttons to select options for languages, country, time zone, tune type then use the ▼ button to change between them.
- Press the **OK** button to begin Auto tuning to scan for stations.
- To exit channel tuning, press the **MENU** or the **EXIT** button and use the ◀/▶ buttons to select YES, select NO to continue tuning.

 MENUS

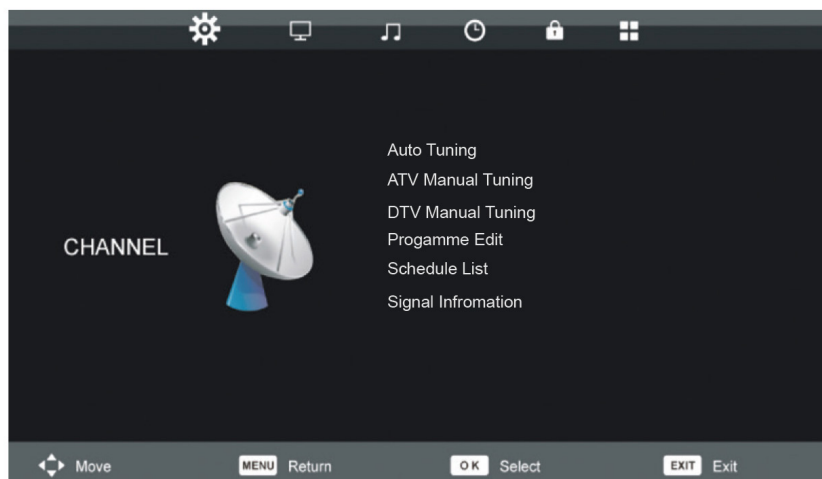


MENU NAVIGATION

 - Press the **MENU** button to display the main menu.
- Press the ◀/▶ buttons to select different sub menus.
- Press the **OK** button to enter the submenu.
- Press the ▲/▼ buttons to select option.
- Press the ◀/▶ buttons to adjust required level.
- Press the **MENU** button to return to the previous page.

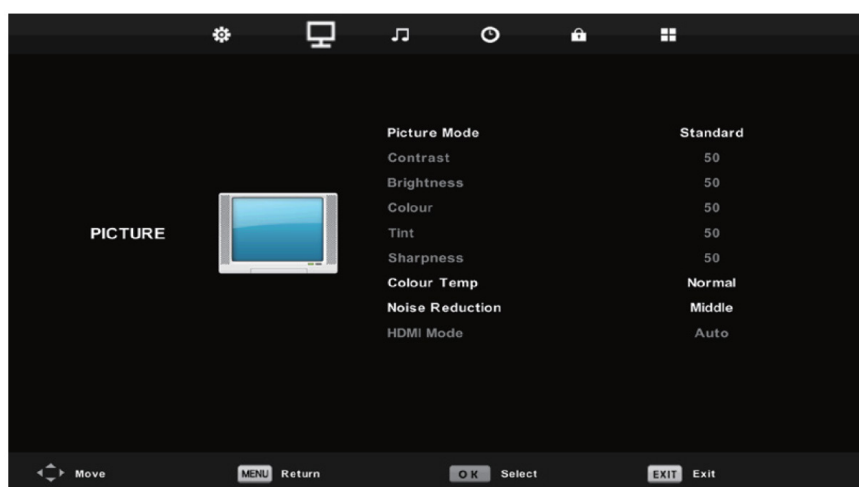

- **Picture Mode:** Standard, Mild, Personal, Dynamic.
- **Contrast / Brightness / Saturation / Sharpness / Tint:** In User Mode: Press the ◀/▶ buttons to decrease or increase the level. Press the ▲/▼ buttons to switch between them.
- **Color Temp:** Available options: Cool, Normal, Warm.
- **Noise Reduction:** Off, Low, Middle, High, Default.
- **HDMI Mode:** AUTO, Video, PC.
- Press the **EXIT** button to exit the menu.

 MENUS (Cont.)

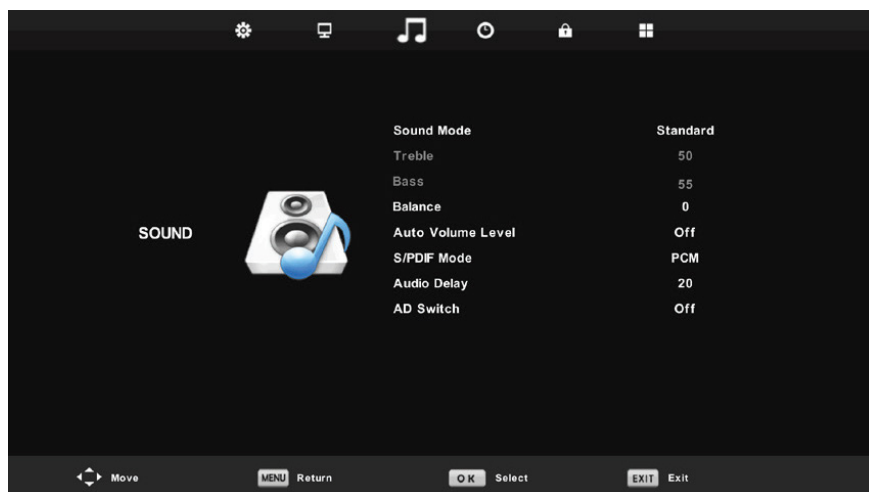

Sound Mode: Standard, Music, Movie, Sports, Personal.

Treble / Bass: When in Personal Mode Adjust higher-pitched sounds (Treble) and lower-pitched sounds (Bass) from 0 to 100.

Balance: Select the audio output between the left and right speaker from -50 to 50.

Auto Volume Level: turn On/Off Auto Volume level.

AD (Audio Description): Press the OK button then press the AD switch to ON or OFF.

S/PDIF Mode: Select S/PDIF audio output type. Available options: Off, Auto, PCM.

Audio Delay: Adjust this setting to synchronize audio video.



Clock: TV receives the data and time values from the TV broadcast signal.

Time Zone: Select time zone.

Sleep Timer: Select OFF, 15/30/45/60/90/120/240 minutes.

 
No Action Auto Sleep: On/OFF

Auto Standby: Select OFF/3H/4H/5H.

OSD Time: Select 10/15/20/30 seconds

MENUS (Cont.)

LOCK MENU (DTV MODE)

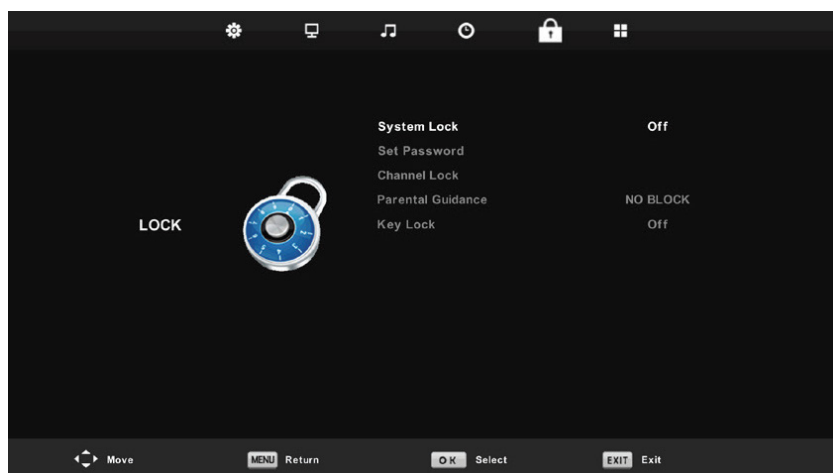

Parental Lock: No Block, Block All, Block G and above, Block PG and above, Block M and above, Block MA and above, Block AV and above, Block R and above.

Key Lock: On/Off

 
System Lock

- Factory default password “3758”
- The master password “6158”.
- Press the ◀/▶ button for On/Off

Channel Lock

- Press the **OK** button
- Press the ▲/▼ to select channel
- Press the ■ GREEN button repeatedly to lock/unlock Selected channel.

SYSTEM MENU

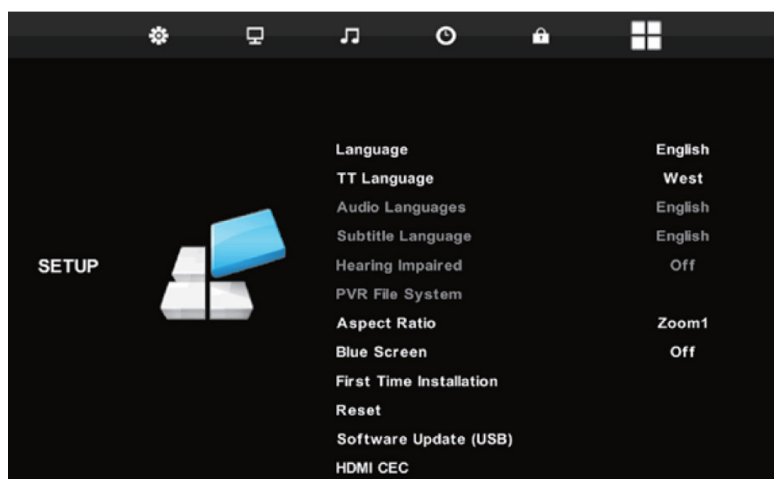

OSD Language: Select from options

TT Language : Not available in Australia

Audio Language

- Press the OK button then ▶ to enter. Subtitle Language
- Press the OK button then ▶ to enter.

PVR File System:

- Select the USB drive.
- Check PVR File System
- Format
- Time Shift Size
- Free Record Limit

MENUS (Cont.)

HDMI CEC

CEC Control: turn On/Off HDMI CEC (Consumer Electronic Control).

TV Auto Power On: Enables or disables turning on the TV when the HDMI connected device is turned on.

ARC: On/Off Audio Return Channel. When ARC is on

HDMI UHD: Enhanced' for 4K-UHD content or Standard for HD content.

Blue Screen: ON or OFF.

System Information: TV model number, software version

Reset to Defaults: Press the OK button and press ◀ to reset settings to factory defaults.

Shipping Condition: Press the OK button and press ▶ to reset to Factory default

Software Update (USB): To preform system updates via USB

ELECTRONIC PROGRAM GUIDE (EPG)

TV GUIDE			
14:00 - 15:00		21 Jun 2016	News
Ros Childs presents the latest from ABC News, following today's top stories and coverage of events as they unfold. Plus comprehensive analysis and original reporting from ABC reporters around Australia and the world.			
21 Jun 2016 14:53:32		21 Jun 2016	
23 ABC3	14:00-15:00	ABC News	Now
24 ABC News 24	15:00-16:00	ABC News Afternoons	Next
30 SBS HD	16:00-17:00	ABC News Afternoons with The Business	
32 SBS TWO	17:00-17:57	ABC News Afternoons with Grandstand	
33 Food Network	17:57-18:00	ABC Open	
34 NITV	18:00-18:30	ABC News Evenings	
50 ONE Wollongong	18:30-19:00	The Drum	
54 TVSN	19:00-20:00	ABC News Evenings with Grandstand	
Record Remind Prev Day Next Day Move View Display Details EXIT Exit			

- Press the EPG button to display the EPG interface (above).
- Use the ▲/▼ buttons to select a channel in the left column, then press the OK button.
- Press the ◀/▶ buttons to switch between the channels list on the left column and the programs list on the right side of the screen
- Press the ▲/▼ buttons to select a different channel/program.
- Press the ■ RED button or ● RECORD button to schedule a recording
- Press the ■ GREEN button to schedule a reminder
- Press the ■ YELLOW button to display the TV Guide for the previous day.
- Press the ■ BLUE button to display the TV Guide for the next day.
- Press EXIT to exit the EPG menu.

RECORDING

NOTE: Before you can record with this TV, make sure you have the USB you wish to use formatted as a FAT32 USB storage device. Then insert the device into your TV.

1. Insert your USB device into the USB Port
2. When watching Digital TV, Press the **RECORD** button on the remote control to start recording. Press record again to remove information bar.
3. Press **RECORD** again or the STOP button to display information about recording.
4. Select “Power Off” to stop recording and turn off the TV.
5. Press the EXIT button to cancel the dialog box and continue recording.

To Watch a Recorded Program:

Press the INDEX button on the remote control to see list of recorded programs

Use the ▲/▼ buttons to find and select a recorded file.

Time-Shift Function

The time-shift function allows you to pause the Live TV signal, then resuming at your own convenience. (Make sure you have a formatted FAT32 USB storage device in your TV for time-shift function to work).

FAQs

GENERAL PROBLEMS WITH TV SET

PROBLEM	SOLUTION
No Power.	Make sure power plug is inserted correctly into power outlet.
No Picture.	Make sure the following is connected correctly • Adjust the antenna • Move TV away from any products that may cause interference. • Autotune the unit again • Go to another channel
No sound or distorted sound	• Make sure everything is connected correctly • Check if input settings for TV is correct • Audio settings are properly set • Make sure volume is not muted. • If earphones are connected, unplug them. • Adjust the volume
No operation can be performed with the remote control	• Check the batteries are inserted correctly • Replace batteries if they have been used for awhile • Make sure to point remote control at the TV sensor and try again • Make sure you are not further then 6m away from TV. • Remote any obstacles that may be in the way of direct line of sight from remote control to the TV sensor.

SPECIFICATIONS

Display Device	55" UHD LED LCD TV
Resolution	3840 x 2160
Display Colours	16.7M
Contrast ratio:	1200 : 1
Aspect Ratio	16 : 9
Multimedia Playback Format under USB Mode	Movie: AVI, ,MPEG1/2, MPEG-4, TS, MKV, DIVX, MJPEG, H.264, H.263, AVS, AVS+, WMV3, HEVC
	Music: MP3, WMA, AAC
	Photo: JPEG, JPG
Power Source	100-240V/50-60Hz
Power Consumption	135W
Dimensions	With stand: 1233.7 × 226.3 × 771.9 mm (w x d x h)
	Without stand: 1233.7 x 90.4 x 720.9 mm (w x d x h)
Weight	Net: 13.8 kg
	Gross: 17.8 kg

SEIKI™

CUSTOMER HELPLINE:

1300 296 699

DISTRIBUTED BY:

Ayonz Pty Ltd

VERSION:

1.0