

# Breville

**ikon™**  
BMO200

## Microwave Oven Instructions



# Contents

	Page
Breville recommends safety first	4
Know your Breville ikon™ Microwave Oven	9
Operating your Breville ikon™ Microwave Oven	11
Cleaning and Cleaning	16

# Congratulations

on the purchase of your new Breville ikon™ Microwave Oven



# Breville recommends safety first

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following instructions:

## Important Safeguards for your Breville ikon™ Microwave Oven

- Carefully read all instructions before operating the Breville ikon™ Microwave Oven and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the Breville ikon™ Microwave Oven for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover that is fitted to the power plug of the Breville ikon™ Microwave Oven.
- Do not place the Breville ikon™ Microwave Oven near the edge of a bench or table during operation. Ensure all surfaces are level, clean and free of water or any other substances.
- Do not place the Breville ikon™ Microwave Oven on or near a hot gas or electric burner, or where it could touch a heated oven.
- When using the Breville ikon™ Microwave Oven, provide adequate air space above and on all sides for air circulation.
- Always operate the Breville ikon™ Microwave Oven on a heat-resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
- Do not use the Breville ikon™ Microwave Oven on a metal surface, for example a sink drain board.
- Always ensure the Breville ikon™ Microwave Oven is properly assembled before connecting to the power outlet and operating. Do not use the oven without the roller ring and glass turntable tray in place. Ensure the turntable tray is positioned correctly into the indents on the rotating shaft.
- The Breville ikon™ Microwave Oven is not intended to be operated by means of an external timer or separate remote control system.
- Never use the Breville ikon™ Microwave Oven without food or water in the oven cavity. Operating the microwave oven when empty could cause damage to the appliance.
- Do not leave the Breville ikon™ Microwave Oven unattended when in use.
- Do not touch hot surfaces. Allow the Breville ikon™ Microwave Oven to cool before moving or cleaning any parts.
- Do not place or store anything on top of the Breville ikon™ Microwave Oven.
- Always ensure the Breville ikon™ Microwave Oven is turned off at the power outlet and the cord is unplugged from the power outlet before attempting to move the appliance, when not in use, if left unattended and before disassembling, cleaning or storing.
- Keep the appliance clean. Follow the cleaning instructions provided in this book (page 17).

# Breville recommends safety first continued

## Important Safety Instructions – Read carefully and keep for future reference



**WARNING: DO NOT ATTEMPT TO OPERATE THE OVEN WITH THE DOOR OPEN SINCE OPEN-DOOR OPERATION CAN RESULT IN HARMFUL EXPOSURE TO MICROWAVE ENERGY. IT IS IMPORTANT NOT TO DEFEAT OR TAMPER WITH THE SAFETY INTERLOCKS.**



**WARNING: DO NOT PLACE ANY OBJECT BETWEEN THE OVEN FRONT FACE AND THE DOOR OR ALLOW SOIL OR CLEANER RESIDUE TO ACCUMULATE ON SEALING SURFACES.**



**WARNING: IF THE DOOR OR DOOR SEALS ARE DAMAGED, THE OVEN MUST NOT BE OPERATED UNTIL IT HAS BEEN REPAIRED BY A BREVILLE SERVICE CENTRE. IT IS PARTICULARLY IMPORTANT THAT THE OVEN DOOR CLOSES PROPERLY AND THAT THERE IS NO DAMAGE TO THE: (1) DOOR (BENT), (2) HINGES AND LATCHES (BROKEN OR LOOSENED), (3) DOOR SEALS AND SEALING SURFACES.**



**WARNING: IT IS HAZARDOUS FOR ANYONE OTHER THAN A BREVILLE SERVICE CENTRE TO CARRY OUT ANY SERVICE OR REPAIR OPERATION THAT INVOLVES THE REMOVAL OF A COVER WHICH GIVES PROTECTION AGAINST EXPOSURE TO MICROWAVE ENERGY.**



**WARNING: ONLY ALLOW CHILDREN TO USE THE OVEN WITHOUT SUPERVISION WHEN ADEQUATE INSTRUCTIONS HAVE BEEN GIVEN SO THAT THE CHILD IS ABLE TO USE THE OVEN IN A SAFE WAY AND UNDERSTANDS THE HAZARDS OF IMPROPER USE.**



**WARNING: DO NOT PUT ANY FOREIGN MATERIAL BETWEEN THE DOOR AND DOOR JAM OF THE BREVILLE MICROWAVE OVEN AS THIS COULD CAUSE EXCESSIVE LEAKAGE OF MICROWAVE ENERGY.**

### Specifications

Power Consumption: 230-240V, 50Hz, 1450W

Output: 900W

Outside Dimensions: 335mm (H) × 520mm (W)  
× 440mm (D)

Oven Capacity: 30 Litres

Cooking Uniformity: Turntable System {Ø315mm}

Net Weight: Approx. 15.23kg

These specifications may change without notice.

### Addendum

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the life span of the apparatus and lead to a dangerous situation.

# Breville recommends safety first continued

## Special safety instructions for your Breville ikon™ Microwave Oven

- Wipe the oven cavity with a soft, damp cloth after each use. Leaving food residue, grease or fat in the cavity could cause the oven cavity to overheat and may cause the Breville ikon™ Microwave Oven to smoke or catch fire.
- The Breville ikon™ Microwave Oven should be cleaned regularly and any food residue or splattering should be removed. Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface, adversely affecting the life of the appliance and possibly resulting in a hazardous situation
- If the door seals or any part of the Breville ikon™ Microwave Oven are damaged, the microwave oven must not be operated until it has been inspected and/or repaired at an authorised Breville Service Centre.
- Ensure all food containers and/or plates are suitable for use in the Breville ikon™ Microwave Oven. This should be done prior to preparing food for heating or cooking in the microwave oven. Monitor foods and liquids heating or cooking in the microwave oven at all times due to the possibility of containers igniting.
- Containers or plates suitable for use in the Breville ikon™ Microwave Oven should not exceed the width of the glass turntable tray as this may impede the rotation of the tray and result in food being unevenly cooked.
- Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- Some containers and/or plates may appear suitable for use in the Breville ikon™ Microwave Oven but may be coated in a glaze that will absorb the microwave energy, overheat and cause the container to crack. The glaze may also prevent the food from heating/cooking.
- Food and/or liquids should not be heated or cooked directly on the turntable tray. Food and/or liquids must be placed into a suitable microwave-proof container before placing onto the turntable tray.
- Food and/or liquids should not be heated or cooked in plastic or paper containers or bags, unless specified as suitable for use by the manufacturer, due to the possibility of containers exploding or igniting. Metal clips or twists should be removed from packaging as these could cause sparking and/or fire.
- Do not use recycled paper or kitchen paper towelling when cooking. Recycled paper may contain small metal or other impurities which could cause sparking and/or fire.
- Do not use metal containers or utensils in the Breville ikon™ Microwave Oven as these could cause sparking and/or fire.
- Food grade foil wrapping may be used in a single layer to mask portion of the food to be cooked and should not extend past the edge of the glass turntable tray. Food grade foil should not be used in layers or fully cover the food as this could cause sparking and/or fire. Food grade foil should not be used to cover any part of the glass turntable tray.
- Ensure that lids and caps covering containers are removed prior to placing liquids and/or foods into the Breville ikon™ Microwave Oven.
- Feeding bottles and baby food jars should have the lids and caps removed before warming or heating in the Breville ikon™ Microwave Oven. To avoid burns or scalding after heating, the contents should be stirred or shaken and the temperature checked before serving.

# Breville recommends safety first continued

- Always ensure the temperature of food or drink which has been heated or cooked in the Breville ikon™ Microwave Oven has been tested before eating, drinking or serving to others, especially children, disabled or elderly people.
- The heating of liquids and beverages in the Breville ikon™ Microwave Oven can result in delayed eruptive boiling. Care must be taken when handling any containers containing hot liquids or beverages.
- Do not heat popcorn in the Breville ikon™ Microwave Oven unless it has been commercially packaged for microwave use. There may be a number of un-popped kernels that may overcook and burn when popping popcorn. Do not use oil unless recommended by the manufacturer. Do not pop popcorn longer than the manufacturer's instructions (popping time should not exceed 3 minutes). Longer cooking could cause scorching or fire.
- Do not cook any food surrounded by a membrane (such as potatoes, chicken liver, egg yolks, oysters, etc) without first piercing the membrane several times with a fork.
- Fresh eggs in the shell and whole hard-boiled eggs should not be cooked or heated in the Breville ikon™ Microwave Oven as they may explode during cooking, at the end of cooking or after removing from the microwave oven.
- Do not heat oil or fat for shallow or deep frying in the Breville ikon™ Microwave Oven. Doing so may cause the microwave oven and/or the oil to overheat and/or ignite.
- If any smoke is observed, switch off and unplug the Breville ikon™ Microwave Oven at the power outlet. Keep the door closed to stifle any flames.
- Do not attempt to operate the Breville ikon™ Microwave Oven by any method other than those described in this book.
- Do not disconnect the Breville ikon™ Microwave Oven from the power supply by pulling on the cord to unplug from the power outlet.
- When storing the Breville ikon™ Microwave Oven, loosely wind the cord. Do not wrap the cord around the microwave oven.

## Important safeguards for all electrical appliances

- Unwind the cord fully before use.
- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- Do not let the cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.



**CAUTION: SURFACES MAY BE HOT DURING AND AFTER USE.**

# Breville recommends safety first continued

- It is recommended to regularly inspect the appliance. Do not use the appliance if power supply cord, plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorized Breville Service Centre for examination and/or repair.
- Any maintenance, other than cleaning, should be performed at an authorized Breville Service Centre.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

## Before first use

Remove and safely discard any packaging material and labels before using the Breville ikon™ Microwave Oven for the first time.

Carefully unpack the Breville ikon™ Microwave Oven and keep all the packing material until all the parts of the microwave oven have been found and the appliance has been assembled. It is recommended to keep all the packing material in a safe place in case you wish to re-pack the product for shipping purposes.

To remove any dust that may have accumulated during packing, wash the roller ring and glass turntable tray in warm soapy water, rinse in clean water then dry thoroughly. Wipe the interior and exterior of the microwave oven with a soft, damp cloth then dry thoroughly.



**WARNING: CHECK THE OVEN FOR ANY DAMAGE, SUCH AS MISALIGNED OR BENT DOOR, DAMAGED DOOR SEALS AND SEALING SURFACE, BROKEN OR LOOSE DOOR HINGES AND LATCHES AND DENTS INSIDE THE CAVITY OR ON THE DOOR. IF THERE IS ANY DAMAGE, DO NOT OPERATE THE OVEN AND CONTACT A BREVILLE SERVICE CENTRE.**



# Know your Breville ikon™ Microwave Oven




1. Microwave oven window – allows the user to see through the door while food is cooking
2. Oven air vent – allows air to move freely through the microwave oven
3. Microwave oven cavity – where food is placed inside the microwave oven
4. Control panel – user access panel for programming the microwave oven
5. Door seal – keeps microwave energy within the microwave oven cavity and prevents microwave leakage
6. Indented Shaft – supports and rotates the glass turntable tray
7. Roller ring – supports the glass turntable tray during rotation
8. Glass turntable tray – made of heat resistant glass. The turntable tray must always be in

- position prior to use and food should not be cooked directly on the tray
9. Door latch – prevents the microwave oven from operating when the door is open
10. Control dial – user access for programming the microwave oven

#### Not shown:

- Door release handle – opens the door and stops the microwave oven from operating
- Door safety lock – prevents unsupervised operation by young children
- Oven cavity light – to observe food when heating or cooking
- Spatter shield – protects the microwave energy outlet from splattering foods

# Know your Breville ikon™ Microwave Oven continued

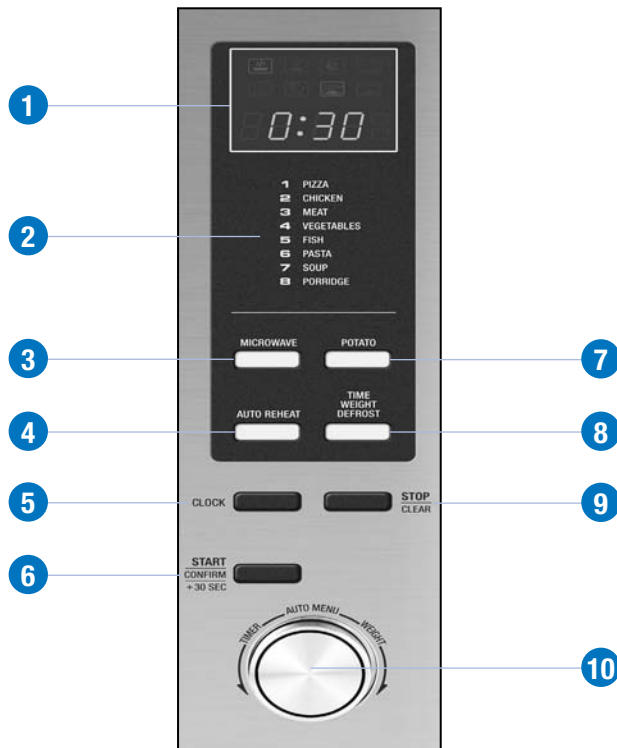

1. LED DISPLAY SCREEN – shows selected cooking time, power, symbols and time-of-day
2. NUMBERS (1-8) – programs for the Auto Menu settings
3. MICROWAVE – use to set the power level. To check selected power level during time cooking press 'MICROWAVE' buttons
4. AUTO REHEAT – use to reheat food by weight
5. CLOCK – press button to set the time-of-day or recall the time-of-day display. The time-of-day will be displayed at all times except when the oven is operating. In the event of a power failure or if the microwave oven is unplugged, the clock will have to be reset
6. START/CONFIRM/+30 SEC – press button to start the cooking or defrosting functions. The cooking symbol will appear on the display and the interior oven light will turn on, the interior fan will operate and the turntable will rotate
7. POTATO – use to cook potato by weight
8. TIME/WEIGHT DEFROST – use to defrost frozen meat, poultry and seafood by weight. The defrosting time and power level are automatically set once the food category and the weight are programmed
9. STOP/CLEAR – press button to cancel the selected power level, cook or defrost times that previously programmed. The time-of-day clock cannot be cancelled by pressing the STOP/CLEAR button
10. TIMER/AUTO MENU/WEIGHT – turn dial to select timer, auto menu or weight options for individual settings

# Operating your Breville ikon™ Microwave Oven

## Installation

1. Make sure that all the packing materials are removed from the inside of the door.
2. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
3. Do not place the oven where heat, moisture or high humidity are generated, or near combustible materials.
4. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven, 10cm at back and 5cm at both sides. Do not cover or block any openings on the appliance. Do not remove feet. This microwave oven must not be placed in a cabinet.
5. Do not operate the oven without glass tray, roller support, and shaft in their proper positions.
6. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
7. The power outlet must be readily accessible so that the oven can be easily unplugged in an emergency.
8. Do not use the oven outdoors

## Assembling the glass turntable tray

1. Place the Roller Ring into position in the indented space in the oven cavity base.
2. Insert the Glass Turntable Tray into position, matching the indents on the base of the Turntable Tray with the indents in the shaft located in the centre of the oven cavity base.



**WARNING: DO NOT IMMERSE THE MICROWAVE OVEN, POWER CORD OR PLUG IN WATER OR ANY OTHER LIQUID.**

## Setting the clock

When power is activated, the LED will display '0:00 and the buzzer will beep once.

1. Press 'CLOCK', the hour figures will flash.
2. Turn dial to adjust the hour figures, the input time should be within 0-23.
3. Press 'CLOCK', the minute figure will flash.
4. Turn dial to adjust the minutes figures, the input time should be within 0-59.
5. Press 'CLOCK' to finish clock setting. ':' will flash, and the time will illuminate.

If the clock is not set, it will not function when powered.

During the process of clock setting, if you press 'STOP/CLEAR', the oven will go back to the previous status automatically.

Note

# Operating your Breville ikon™ Microwave Oven

continued

## Microwave cooking

1. Press 'MICROWAVE' the LED will display 'P100'.
2. Press 'MICROWAVE' four times or turn dial to choose the power you want, and 'P100', 'P80', 'P50', 'P30' or 'P10' will display for each added press.
3. Then press 'START/+30Sec./CONFIRM' to confirm, and turn dial to set cooking time from 0:05 to 95:00.
4. Press 'START/+30Sec./CONFIRM' again to start cooking.

Example: If you want to use 80% microwave power to cook for 20 minutes, you can operate the oven as the following steps.

1. Press 'MICROWAVE' once, the screen display 'P100'.
2. Press 'MICROWAVE' once again or turn dial to choose 80% microwave power.
3. Press 'START/+30Sec./CONFIRM' to confirm, and the screen displays 'P80'.
4. Turn dial to adjust the cooking time until the oven displays '20:00'.
5. Press 'START/+30Sec./CONFIRM' to start cooking.

## Microwave power levels

PRESS 'MICROWAVE'	MICROWAVE POWER	DISPLAY
1 time	100%	P 100
2 times	80%	P 80
3 times	50%	P 50
4 times	30%	P 30
5 times	10%	P 10

## Quick start

1. In waiting state, press 'START/+30 Sec/CONFIRM' to start cooking with 100% power, then each added press will increase 30 seconds cooking time up to 95 minutes.
2. In microwave or time defrost state, each press of 'START/+30 Sec/CONFIRM' can increase 30 seconds of cooking time.
3. In waiting state, turn dial anti-clockwise to set cooking time with 100% microwave power, then press 'START/+30 Sec/CONFIRM' to start cooking.

Auto menu and weight defrost cannot be set from here.

Note

## Defrost by weight

1. Press 'TIME/WEIGHT DEFROST' once, and the oven will display 'deF1'.
2. Turn dial to select the weight of food from 100 to 2000g.
3. Press 'START/+30 Sec/CONFIRM' to start defrosting.

# Operating your Breville ikon™ Microwave Oven

## continued

### Defrost by time

1. Press 'TIME/WEIGHT DEFROST' twice, and the oven will display 'deF2'.
2. Turn dial to select the defrost time.
3. Press 'START/+30 Sec/CONFIRM' to start defrosting.

### Auto reheat

1. Press 'AUTO REHEAT' once and the LED will display '200'.
2. Press 'AUTO REHEAT' several times or turn dial to choose the weight of food, and '400' or '600' g will be selected.
3. Press 'START/+30 Sec/CONFIRM' to start cooking.

### Potato

1. Press 'POTATO' once and the LED will display '200'.
2. Press 'POTATO' several times or turn dial to choose the weight of food, and '400' or '600' g will be selected.
3. Press 'START/+30 Sec/CONFIRM' to start cooking.

### Auto menu cooking

1. Turn dial right to choose the menu, and 'A-1' to 'A-8' will display, which means pizza, chicken pieces, meat, vegetable, fish, pasta, soup and porridge.
2. Press 'START/+30 Sec/CONFIRM' to confirm.
3. Turn dial to choose the default weight as the menu chart.
4. Press 'START/+30 Sec/CONFIRM' to start cooking.

Example: If you want to use 'AUTO MENU' to cook fish weighing 350g.

1. Turn dial clockwise till 'A-5' is displayed.
2. Press 'START/+30 Sec/CONFIRM' to confirm.
3. Turn dial to select the weight of fish until '350' is displayed.
4. Press 'START/+30 Sec/CONFIRM' to start cooking.

### Auto menu chart

MENU	WEIGHT (g)	DISPLAY (g)
A-1 Pizza	200	200
	400	400
A-2 Chicken Pieces	200	200
	400	400
	600	600
	800	800
A-3 Meat	250	250
	350	350
	450	450
A-4 Vegetables	200	200
	300	300
	400	400
A-5 Fish	250	250
	350	350
	450	450
A-6 Pasta	50 (with 450 cold water)	50
	100 (with 800 cold water)	100
A-7 Soup	200ml	200ml
	400ml	400ml
A-8 Porridge	550	550
	1100	1100

# Operating your Breville ikon™ Microwave Oven

## continued

### Inquiring function

1. In states of microwave cooking, press 'MICROWAVE', and the current microwave power will be displayed for 3 seconds. After three seconds, the oven will turn back to the former state.
2. In cooking state, press 'CLOCK' to display the current time. Then it will flash in the LED for 3 seconds.

### Multi-section cooking

At most 2 sections can be selected for cooking. In multi-section cooking, if one section is defrosting, then defrosting shall be placed in the first section.

Example: If you want to defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes, do the following:

1. Press 'TIME/WEIGHT DEFROST' twice and the oven will display 'deF2'.
2. Turn dial to select the defrost time until '5:00' is displayed.
3. Press 'MICROWAVE' once, and screen will display 'P100'.
4. Press 'MICROWAVE' once again or turn dial to choose 80% microwave power.
5. Press 'START/+30 Sec/CONFIRM' to confirm, and the screen will display 'P80'.
6. Turn dial to adjust the cooking time until the oven displays '7:00'.
7. Press 'START/+30 Sec/CONFIRM' to start cooking, and buzzer will sound once for the first section, defrosting time counts down; buzzer will sound once again entering the second cooking. When cooking is finished, buzzer will sound five times.

### Setting the door safety lock

The safety lock prevents unsupervised operation by young children. While in lock mode, the door can be opened, however the microwave cannot be turned on.

1. To set, press and hold 'STOP/CLEAR' pad for 3 seconds. There will be a long beep denoting unit is entering the children-lock state, and a 'LOCK' symbol will be displayed.
2. To unlock, press and hold 'STOP/CLEAR' pad for 3 seconds, and there will be a long beep denoting that the lock is released.

### Cooking end reminding function

When cooking ends, there will be 5 beeps which denotes completion of cooking.

### Display specification

1. In waiting state, LED will display clock and ':' will flash.
2. In function setting state, LED will display the related setting.
3. In the operation and suspending state, LED will display the residual cooking time.

# Operating your Breville ikon™ Microwave Oven

continued

## Hints and tips for microwave cooking

- Foods that are high in liquid, fat and sugar cook well in the Breville ikon™ Microwave Oven.
- Drier foods require shorter cooking time.
- Always arrange food carefully. Place the thickest areas towards the outside of the dish.
- Place smaller items, such as 1-cup drinks, towards the outer edge of the glass turntable tray.
- Place larger items, such as chicken or cake, in the centre of the glass turntable tray.
- Larger items, such as chicken or cake, should be raised on a microwave-safe rack for more even cooking.
- Pay close attention to the cooking time. Cook for the shortest amount of time indicated and add more time as needed. Food that is severely overcooked can smoke or ignite.
- Cover foods loosely with vented lids or microwave safe plastic wrap while heating or cooking. Covering foods prevent splattering and helps foods cook evenly.
- Turn foods over once during microwaving to speed cooking of such foods as chicken and hamburgers. Large items like roasts must be turned over at least once.
- Rearrange foods such as meatballs halfway through cooking both from top to bottom and from the centre of the dish to the outside.

## Microwave utensils

- Containers, plates, dishes, etc. used in the Breville ikon™ Microwave Oven should always be microwave-safe. Check if stated on the underside of the utensil or contact the manufacturer.
- To test if a container, plate or dish is microwave-safe, place it into the microwave oven with 1 cup of cold water (in a microwave-safe cup) and heat on High (100%) Power for 1 minute. If the container is hot and the water is cold, the container is not suitable for microwave oven use. If the container is cold and the water is hot, then the container is suitable for microwave oven use.
- Metal containers and utensils should not be used in the Breville ikon™ Microwave Oven.

# Care and Cleaning

- Switch off the microwave oven at the power outlet and remove the plug from the power outlet before cleaning.
- Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if the oven gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
- The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides of the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use abrasive cleaner.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
- If steam accumulates inside or around the outside of the oven door, wipe with a soft dry cloth. This may occur when cooking foods high in moisture or if the microwave oven is operated under high humidity conditions, this is normal.
- It is occasionally necessary to remove the glass turntable tray for cleaning. Wash the tray in warm sudsy water, rinse in clean water and dry thoroughly.
- The roller ring and oven floor should be cleaned regularly to ensure the turntable tray rotates correctly and avoid excessive noise. Simply wipe the bottom surface of the oven with a soft damp cloth. The roller ring may be washed in mild sudsy water, rinse in clean water and dry thoroughly. When removing the

roller ring from cavity floor for cleaning, be sure to replace in the proper position.

- Remove odours from your oven by combining a cup of water with the juice of one lemon in a deep microwave-safe bowl, microwave on High (100%) for 5 minutes. Wipe the oven cavity thoroughly and dry with a soft cloth.
- When it becomes necessary to replace the oven light, please consult your Breville Service Centre to have it replaced.
- Please do not dispose this appliance with domestic rubbish; it should be taken to the appropriate disposal centre provided by the local council municipalities.

## Before you call for service

- Check to ensure that the oven is plugged in securely. If it is not, remove the plug from the power outlet, wait 10 seconds and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the power outlet with another appliance.
- Check to ensure that the control panel is programmed correctly and the timer is set.
- Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the oven.

If non of the above rectify the situation, then contact your Breville Service Centre. Do NOT try to adjust or repair the oven yourself.

Note



# Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

# Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---



# Breville

## Breville Customer Service Centre

### Australian Customers

✉ Breville Customer Service Centre  
PO Box 22  
Botany NSW 2019  
AUSTRALIA

☎ Customer Service: 1300 139 798  
Fax (02) 9384 9601  
Email Customer Service:  
askus@breville.com.au

### New Zealand Customers

✉ Breville Customer Service Centre  
Private Bag 94411  
Greenmount  
Auckland, New Zealand

☎ Customer Service: 0800 273 845  
Fax 0800 288 513  
Email Customer Service:  
askus@breville.com.au



[www.breville.com.au](http://www.breville.com.au)

Breville is a registered trademark of Breville Pty. Ltd  
ABN 98 000 092 928

© Copyright. Breville Pty. Ltd. 2008

ikon™ is a trademark of Breville Pty. Ltd.

Due to continual improvements in design or otherwise,  
the product you purchase may differ slightly from the one  
illustrated in this booklet.

Model BMO200 Issue 1/08

