

*Thinking of you*

 **Electrolux**



wash n dry system  
**front load washer-dryer**  
(EWW14791W)




## Congratulations

Congratulations and thank you for choosing our appliance. We are sure you will find your new appliance a pleasure to use. Before you use the appliance, we recommend that you read through the entire user manual, which provides the description of the washer dryer and its functions.

To avoid the risks that are always present when you use an electric appliance, it is important that the appliance is installed correctly and that you read the safety instructions carefully to avoid misuse and hazards.

We recommend that you keep this instruction booklet for future reference and pass it on to any future owners.

After unpacking the appliance please check it is not damaged. If in doubt, do not use the appliance but contact your local Electrolux Customer Care Centre.

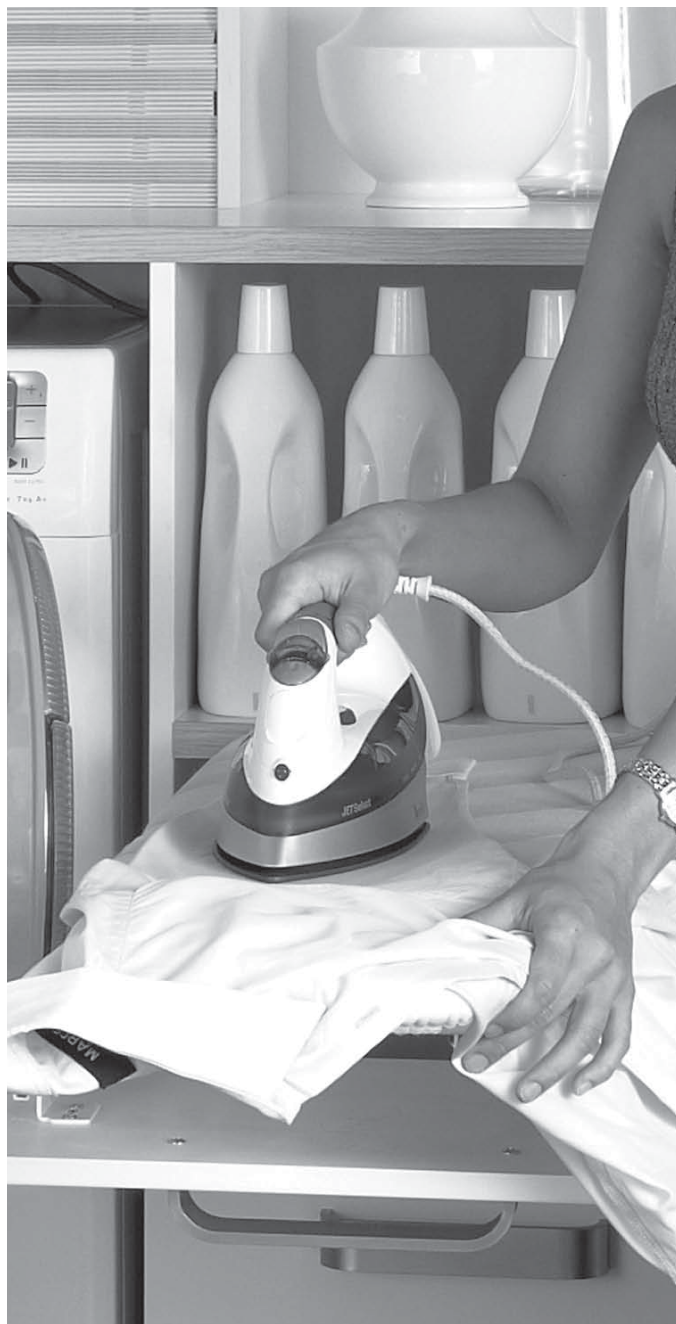

## Contents

• <b>Important safety instructions</b>	<b>1</b>
• <b>General safety</b>	<b>1</b>
• <b>Installation</b>	<b>1</b>
• <b>Use</b>	<b>2</b>
• <b>Child safety</b>	<b>2</b>
• <b>Product information</b>	<b>2</b>
• <b>Control panel</b>	<b>3</b>
• <b>Display</b>	<b>4</b>
• <b>First use</b>	<b>5</b>
• <b>Personalisation</b>	<b>5</b>
• <b>Daily use</b>	<b>5</b>
• <b>Use – drying</b>	<b>8</b>
• <b>Washing hints and tips</b>	<b>9</b>
• <b>Drying hints and tips</b>	<b>10</b>
• <b>Washing and drying programs</b>	<b>11</b>
• <b>Drying Programs</b>	<b>13</b>
• <b>A guide to stain removal</b>	<b>14</b>
• <b>Care and cleaning</b>	<b>15</b>
– Descaling	15
– After each wash	15
– Maintenance wash	15
– External cleaning	15
– Cleaning the dispenser drawer	15
– Washing drum	16
– Door seal	16
– Drain pump	16
– Cleaning the water inlet filter	17
– Emergency emptying out	17
– Frost precautions	17
• <b>Troubleshooting</b>	<b>18</b>
• <b>Technical data</b>	<b>19</b>
• <b>Installation instructions</b>	<b>20</b>
– Unpacking	20
– Positioning	21
– Water inlet	21
– Water drainage	22
• <b>Electrical connection</b>	<b>22</b>
• <b>Environmental concerns</b>	<b>23</b>
• <b>Warranty</b>	<b>24</b>




### environmental tip


## Information on disposal for users


- Most of the packing materials are recyclable. Please dispose of those materials through your local recycling depot or by placing them in appropriate collection containers.
- If you wish to discard this product, please contact your local authorities and ask for the correct method of disposal.


## Appliance description

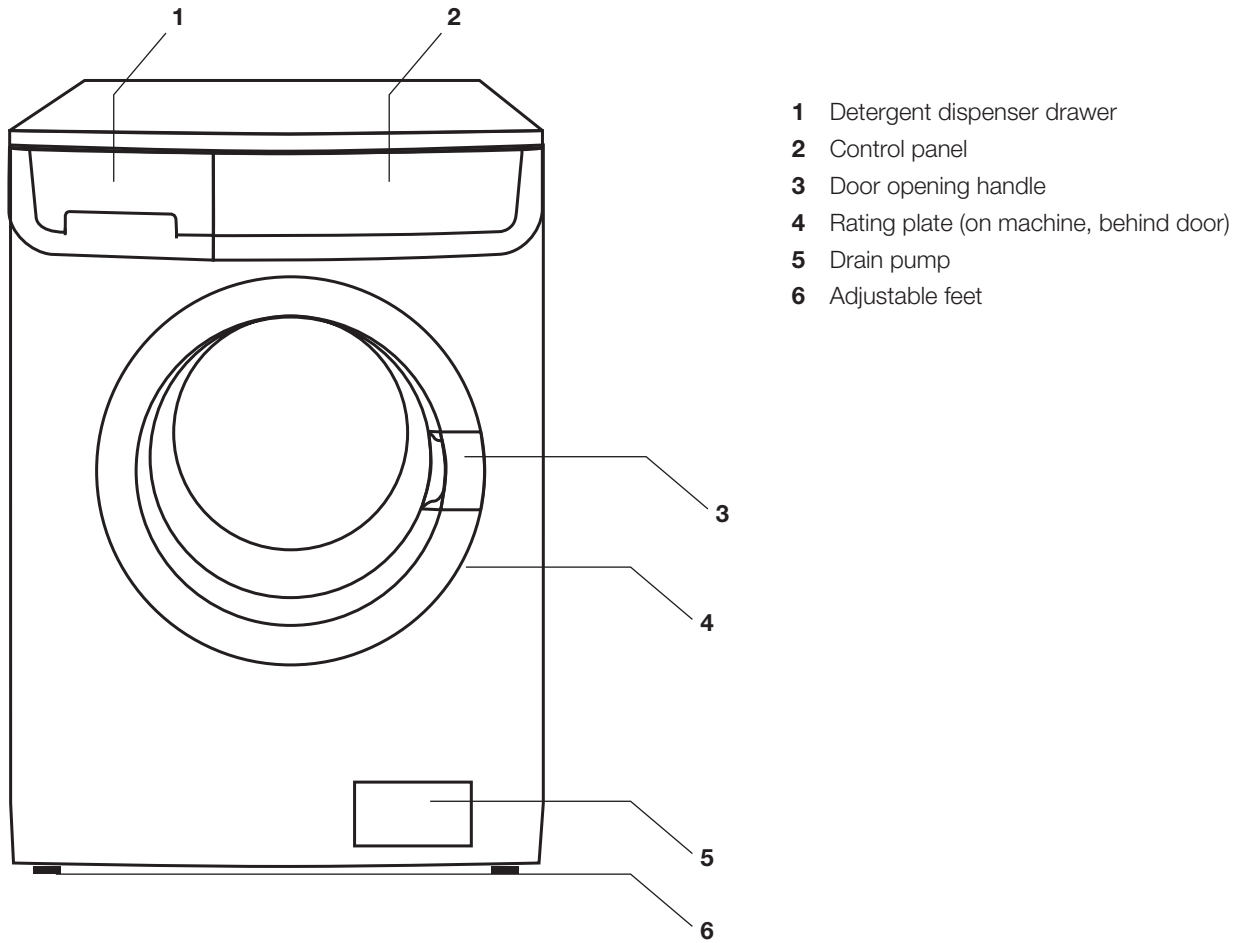


## Detergent dispenser drawer

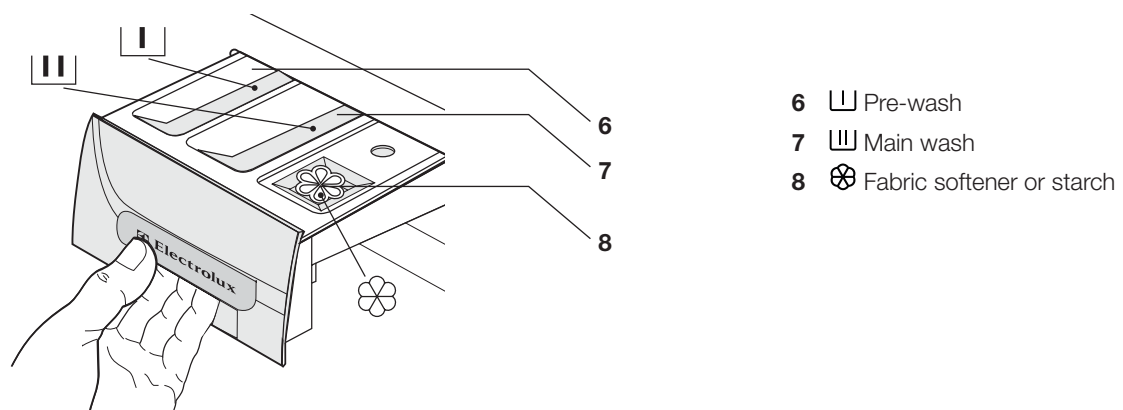


 Compartment for detergent used for prewash and soak phase or for stain remover used during the stain action phase (if available). The prewash and soak detergent is added at the beginning of the wash program. The stain remover is added during the stain action phase.

 Compartment for powder or liquid detergent used for main wash. If using liquid detergent pour it **just before** starting the program.

 Compartment for liquid additives (fabric softener, starch).


Follow the product manufacturer's recommendations on quantities to use and do not exceed the "MAX" mark in the detergent dispenser drawer. Any fabric softener or starching additives must be poured into the compartment before starting the wash program.

## Control panel description

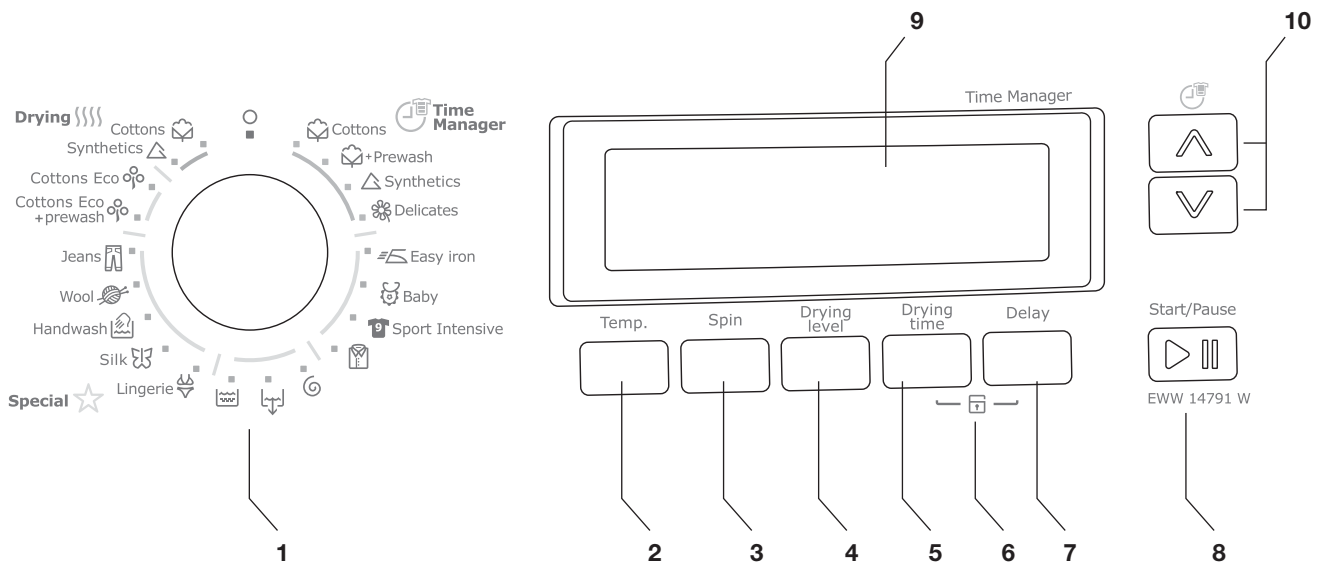

- 1 Program selector dial
- 2 Temperature button
- 3 Spin speed button
- 4 Drying level button
- 5 Drying time button
- 6 Child lock (see page 3 for detail)
- 7 Delay start button
- 8 Start/Pause button
- 9 Display
- 10 Time Manager buttons

## Child safety device

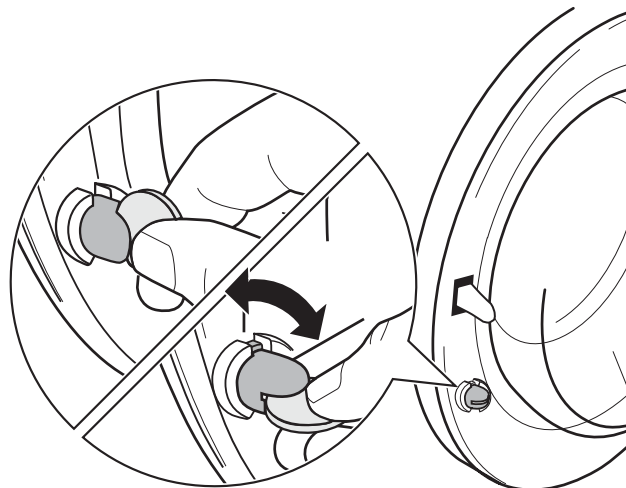

To prevent children and pets becoming trapped inside the drum the machine incorporates a special feature. To activate this device, rotate the button (without pressing it) inside the door clockwise until the groove is horizontal. If necessary use a coin.

To disable this device and restore the possibility of closing the door, rotate the button counterclockwise until the groove is vertical.

## Important safety instructions

Please read the user manual carefully and store in a handy place for later reference. Pass the user manual on to possible new owners of the appliance.

The symbols you will see in this booklet have these meanings:



**warning**

**This symbol indicates information concerning your personal safety**



**caution**

**This symbol indicates information on how to avoid damaging the appliance**



**tips and information**

**This symbol indicates tips and information about use of the appliance**



**environmental tip**

**This symbol indicates tips and information about economical and ecological use of the appliance**

Meanings of symbols used in this manual are shown below:



**This symbol indicates never to do this**



**This symbol indicates always do this**

In the interest of your safety and to ensure the correct use, before installing and first using the appliance, read this user manual carefully, including its hints and warnings.

To avoid unnecessary mistakes and accidents, it is important to ensure that all people using the appliance are thoroughly familiar with its operation and safety features. Save these instructions and make sure that they remain with the appliance if it is moved or sold, so that everyone using it through its life will be properly informed on appliance use and safety.

## General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- During high temperature wash programs the door glass may get hot. Do not touch it!
- Make sure that small pets do not climb into the drum. To avoid this, please check the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.
- Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum.
- Do not use your appliance to wash articles with whalebones, material without hems or torn material.
- To avoid damaging the appliance and personal injury, DO NOT hang on or lean against the appliance door.
- Do not place detergent, bleach or fabric softener containers on top of the appliance. They can damage the finish or controls.
- Always unplug the appliance and turn off the water supply after use, cleaning and maintenance.
- Under no circumstances you should attempt to repair the appliance yourself. Repairs carried out by inexperienced people may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

## Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See page 20 in this user manual.
- After having installed the appliance, check that it is not standing on the inlet and drain hose and the worktop is not pressing the electrical supply cable against the wall.
- If the appliance is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely.
- Always be sure that there is no water leakage from hoses and their connections after the installation.
- If the machine is installed in a location subject to frost, please read the "dangers of freezing" chapter.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber.
- Any electrical work required to install this appliance should be carried out by a qualified electrician.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance in such a way that a full opening of the appliance door is restricted.

## Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash and dry fabrics which are designed to be machine washed or dried. Follow the instructions on each garment label
- Do not overload the appliance. See the “Washing and drying programs” table on pages 11-13.
- Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.



### warning

**Risk of fire!** Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil-affected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent - this will reduce, but not eliminate, the hazard.

- Please make sure that no gas lighters or matches have accidentally been left in pockets of garments to be loaded into the appliance.
- In order to avoid danger of fires caused by excessive drying, do not use appliance to dry the following items: cushions, quilts and the like (these items accumulate heat).
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance.
- If you have washed your laundry with stain remover you must execute an extra rinse cycle before drying.
- Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- As some duvets/duonas and eiderdowns should be washed/dried in large commercial machines because of their bulk, please check with the manufacturer of the item before washing in a domestic machine.
- Never tumble dry items that have had contact with chemicals such as dry cleaning fluid. These are of a volatile nature and could cause an explosion. Only tumble dry items which have been washed in water or require airing.
- Plastic detergent dispensers should not remain in the drum during the drying cycle, as the plastic used is not designed to withstand the heat. If you wish to wash through-to-dry you should use the conventional detergent dispenser drawer.
- Do not use tumble dryer if industrial chemicals have been used for cleaning.

- Do not dry unwashed items in the tumble dryer.
- Items which have been soiled with substances such as cooking oil, alcohol, petrol, kerosine, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before drying in the tumble dryer.
- Fabric softeners, or similar products should be used as specified by the fabric softener instructions.
- The final part of a tumble dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at the temperature that ensures that the items will not be damaged.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use your new appliance if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the appliance is accessible.



### warning

- **Hot surface!** Do not touch the back of the appliance while it is operating.
- Once the drying cycle program has been interrupted, the laundry and drum may be hot.
- **Risk of burns!** Take care when removing the laundry.
- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.


## Child safety


- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children – danger of suffocation! Keep them out of children’s reach.
- Keep all detergents in a safe place out of children’s reach.
- See page iii “Child safety device” on how to prevent the drum door closing.
- See page 3 “Child lock”.

## Product information


Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. Its new washing system allows total use of detergent and reduces water consumption so saving energy.

# Control panel

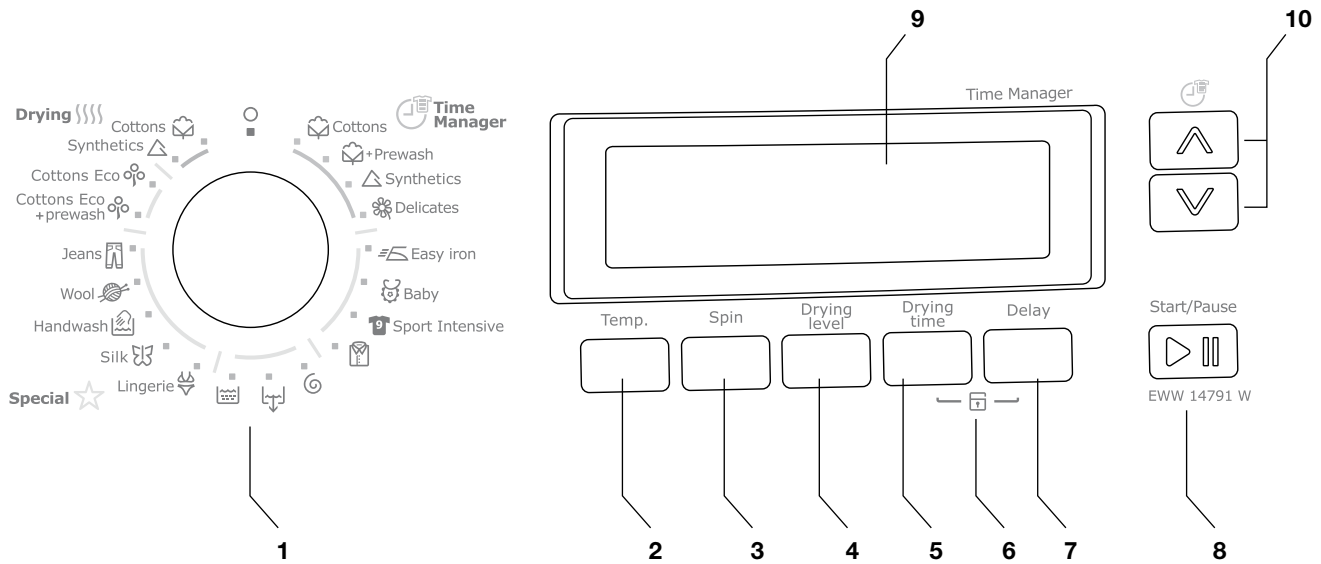

1	Program selector dial	The program selector dial allows a wash program to be selected. It can be turned either clockwise or anti-clockwise. (See “Program Table” for more details about the wash programs).
2	Temperature button	This button allows you to increase or decrease the washing temperature.
3	Spin speed button	By pressing this button you can change the spin speed of the selected program.
4	Drying level button	By pressing this button you can choose the required degree of drying for cottons and synthetics: <ul style="list-style-type: none"> <li>• Extra dry (Cottons)</li> <li>• Store dry (Cottons and Synthetics)</li> <li>• Iron dry (Cottons)</li> </ul> The icon of the selected drying level will be marked with a line above and below the selected degree of drying level.
5	Drying time button	If you wish to carry out a timed drying program, press this button until the drying time you want appears on the display according to the fabrics (cottons or synthetics) you have to dry. For Cottons you can select a drying time from 10 minutes to 250 minutes (4. 10). For Synthetics you can select a drying time from 10 minutes to 130 minutes (2. 10). Every time you press this button the drying time increases by 5 minutes.
6	Child lock	This device permits you to leave the appliance unattended and not to worry that children might be injured by or cause damage to the appliance. This function remains enabled also when the washing machine is not working. There are two different ways to set this option: <ol style="list-style-type: none"> <li>1. Before pressing the Start/Pause button: it will be impossible to start the machine.</li> <li>2. After pressing the Start/Pause button: it will be impossible to change any other program or option.</li> </ol> To enable or disable this option press the Drying time and Delay buttons simultaneously for about 6 seconds until the  icon appears or disappears on the display.
7	Delay start button	Pressing this button allows the program to be delayed by 30 min, 60 min, 90 min, 2 hours and then by 1 hour intervals up to a maximum of 20 hours.
8	Start/Pause button	Press this button to start, pause or restart a wash program.
9	Display	See page 4 for details.
10	Time manager buttons	These buttons allows you to modify the program duration automatically proposed by the appliance.

## Display

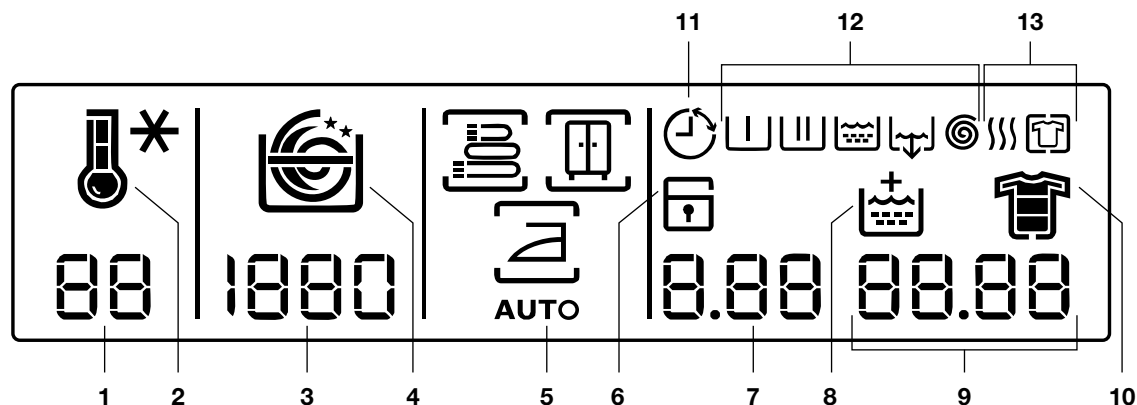**1 Temperature in degrees****2 Temperature icons** , \*

During the washing cycle the display shows the temperature icon animated to indicate that the appliance has started the heating phase of the water in the drum.

**3 Spin speed****4 Spin speed icons**

- No spin
- Rinse hold
- Night cycle

During the spinning phase the spiral is animated.

**No spin option** eliminates all the spin phases and increases the number of rinses for some programs.

**Rinse Hold:** by selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing. When the program has finished the display shows three blinking , the light of the Start/Pause button is off and the door is locked to indicate that the water must be emptied out. To empty out the water, please read the paragraph "At the end of the program".

**Night Cycle:** by selecting this option, the machine will not drain the water of the last rinse, so as not to wrinkle the laundry. As all spinning phases are suppressed, this washing cycle is very quiet and it can be selected at night or in times with a more economical power rate.

On some programs the rinses will be performed with more water. When the program has finished, the display shows three blinking , the light of the Start/Pause button is off and the door is locked to indicate that the water must be emptied out. To empty out the water, please read the paragraph "At the end of the program".

**5 Automatic Dry Icons**

By pressing the Drying Level button you can choose one of the required degree of drying for cottons and synthetics:

- Extra dry (for Cottons)
- Store dry (for Cottons and Synthetics)
- Iron dry (for Cottons)

**6 Child safety lock**

See page 3 "Child lock".

**7 Selected drying time value**

After selecting a drying program, the drying time is displayed in minutes or in hours and minutes (max 250 mins). After the program has started the time remaining is updated every minute.

**8 Extra Rinse icon** **9 • Duration of the selected program**

After selecting a program, the duration is displayed in

hours and minutes (for example **2.05**). The duration is calculated automatically on the basis of the maximum recommended load for each type of fabric. After the program has started, the time remaining is updated every minute.

**• End of program**

When the program has finished three flashing zeros is displayed and the door can be opened.

**• Incorrect option selection**

If an option which is not compatible with the set wash program is selected, the message **E - -** is displayed at the bottom of the display for a few seconds and the red light of the Start/Pause button starts flashing.

**• Alarm codes**

In the event of operating problems, some alarm codes can be displayed, for example **E 20** (see "Troubleshooting" on page 18).

**• Delay Time value****10 Soil degree icons**

- Intensive
- Normal/Daily
- Light/Quick
- Super Quick

**11 Delay icon**

Select delay period by repeatedly pressing the delay start button until the required time is shown, then the duration of the previously selected program is displayed. The relevant icon will be lit. The delay time value decreases by one unit every hour and then, when 1 hour remains, the time decreases every minute.

**12 Washing program phase icons**

- Prewash
- Wash
- Rinses
- Drain
- Spin

By selecting the wash program, the washing program phase icons corresponding to the various phases making up the program are shown in the upper part of the display. After having pressed the Start/Pause button only the icon of the running phase stays on.

**13 Drying program phase icons**

- Drying
- Anti-crease

By selecting the drying program, the drying program phase icons corresponding to the phases making up the program are shown in the upper part of the display. After having pressed the Start/Pause button only the icon of the running phase stays on.



## First use

- Ensure that the electrical and water connections comply with the installation instructions.
- Remove the polystyrene block and any material from the drum.
- Before the first wash, run a cotton cycle at the highest temperature without any laundry in the machine, to remove any manufacturing residue from the drum and tub. Pour 1/2 a measure of detergent into the main wash compartment and start the machine.

## Personalisation

### Acoustic signals

The machine is provided with an acoustic device, which sounds in the following cases:

- at the end of the cycle
- if there is a fault.

By pressing the Drying level and Drying time buttons simultaneously for about 6 seconds, the acoustic signal is deactivated (except if there is a fault).

By pressing these 2 buttons again, the acoustic signal is reactivated.

## Daily use


### Load the laundry


Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door.




### Measure out the detergent and the fabric softener


Pull out the dispenser drawer until it stops.

Measure out the amount of detergent required, pour it into the main wash compartment  or in the appropriate compartment if the selected program/option it requires (see more details in "Detergent dispenser drawer" on page ii).

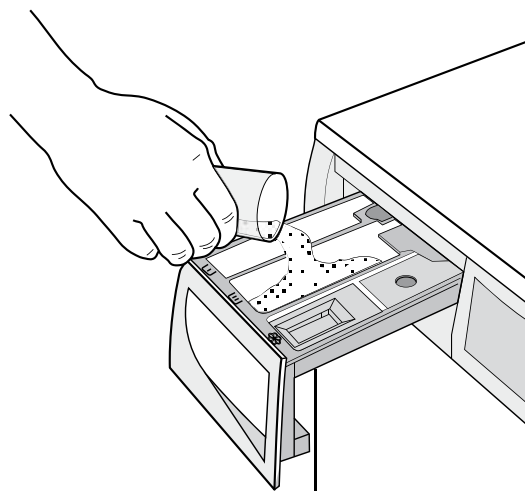



If required, pour fabric softener into the compartment marked  (the amount used must not exceed the "MAX" mark in the drawer).

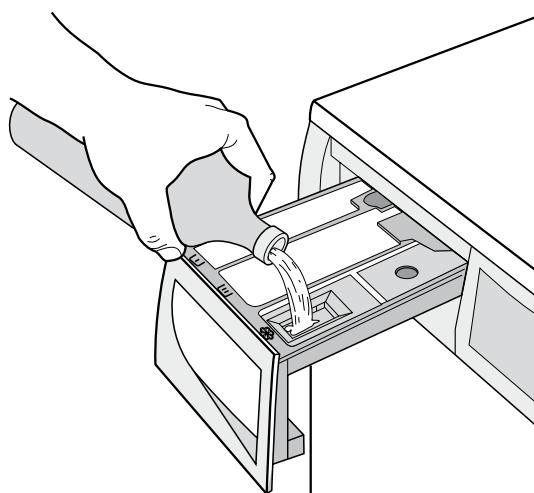Close the drawer gently.



Daily use (*cont.*)**Select the required program by turning the program selector dial**

Turn the program selector dial to the required program. The washing machine will propose a temperature and automatically select the maximum spin value provided for the program you have chosen. You can change these values by operating the corresponding buttons. The **green** pilot light of the Start/Pause button starts to flash. The selector dial can be turned either clockwise or counterclockwise. Turn to position  to reset program or switch the machine off.

At the end of the program the selector dial must be turned to position , to switch the machine off.

**caution**

If you turn the program selector dial to another program when the machine is working, the red pilot light of the Start/Pause button will blink 3 times and the message **Err** is displayed to indicate a wrong selection. The machine will not perform the new selected program.

**Program Option buttons**

Depending on the program, different functions can be combined. These must be selected after choosing the desired program and before pressing the Start/Pause button.



**Select the temperature by pressing the Temp. button**

By selecting a program, the appliance proposes automatically a default temperature. Press this button repeatedly to increase or decrease the temperature, if you want your laundry to be washed at a different temperature.


**Reduce the spin speed by pressing the Spin button**

By selecting a program, the appliance proposes automatically the maximum spin speed provided for that program. Press the Spin button repeatedly to change the spin speed, if you want your laundry to be spun at a different speed.

**Select an additional rinse**

This appliance is designed for saving water. However, for people with a very delicate skin (allergic to detergents) it may be necessary to rinse the laundry using an extra quantity of water (Extra Rinse). To activate this option press simultaneously the Drying level and Delay buttons for a few seconds. The Extra Rinse icon  will appear on the display. This function stays permanently on. To remove it press the Drying level and Delay buttons again until the Extra Rinse icon  disappears.


**Select the Delay Start by pressing the Delay button**

Before you start the program, if you wish to delay the start, press the Delay button repeatedly, to select the desired delay. The corresponding icon  will appear on the display in the upper part of the display.

The selected delay time value (up to 20 hours) will appear on the display for a few seconds, then the duration of the program will appear again.

You must select this option after you have set the program and before you press the Start/Pause button.

You can cancel or modify the delay time at any moment, before you press the Start/Pause button.


- Selecting the delayed start:
  1. Select the program and the required options.
  2. Select the delay start by pressing the Delay button.
  3. Press the Start/Pause button:
    - the machine starts its hourly countdown.
    - The program will start after the selected delay has expired.
- Cancelling the delayed start after having pressed the Start/Pause button:
  1. Set the washing machine to PAUSE by pressing the Start/Pause button.
  2. Press the Delay button once until the symbol  is displayed.
  3. Press the Start/Pause button again to start the program.

**important**

The selected delay can be changed only after selecting the washing program again.

The Delay Start can not be selected with DRAIN program.

**Select the Time Manager option by pressing the Time Manager buttons**

By pressing these buttons repeatedly, the duration of the washing cycle can be increased or decreased. The icon  will appear on the display to indicate the chosen degree of soil. This option is available only with Cotton, Synthetic and Delicate programs.

Soil Level	Icon	Type of fabric
Intensive		For heavily soiled items
Normal		For normal soiled items
Daily		For daily soiled items
Light		For slightly soiled items
Quick		For very slightly soiled items
Super Quick <sup>1)</sup>		For items used or worn for a short time

<sup>1)</sup> We recommend you to reduce the load sizes (see Washing programs table).

## Daily use (cont.)

**important**

The Time Manager cannot be selected with the Economy programs. The availability of these soil level icons change according to the type of fabric as shown in the following chart.

Fabric	Soil Level					
<b>Cottons</b>						
95°C/90°C	■	■	■	■	■	■
60°C/50°C	■	■	■	■	■	■
40°C	■	■	■	■	■	■
30°C	■	■	■	■	■	■
Cold	■	■	■	■	■	■
<b>Synthetics</b>						
60°C/50°C		■	■	■		■
40°C		■	■	■		■
30°C		■	■	■		■
Cold		■	■	■		■
<b>Delicates</b>		■	■	■		■
40°C		■	■	■		■
30°C		■	■	■		■
Cold		■	■	■		■

**Start the program by pressing the Start/Pause button**

To start the selected program, press the Start/Pause button, the green pilot light of the Start/Pause button stops blinking.

To interrupt a program which is running, press the Start/Pause button: the green pilot light starts blinking.

To restart the program from the point at which it was interrupted, press the Start/Pause button again. If you have chosen a delayed start, the machine will begin the countdown. If an incorrect option is selected, the red pilot light of the Start/Pause button blinks for 3 times and the message **E r r** is displayed for a few seconds.

**Altering an option or a running program**

It is possible to change some options before the program carries them out. Before you make any change, you must PAUSE the appliance by pressing the Start/Pause button (if you wish to change the Time Manager option, you must cancel the running program and make your selection again). Changing a running program is possible only by resetting it. Turn the program selector dial to and then to the new program position. Start the new program by pressing the Start/Pause button again. The washing water in the tub will be not emptied out.

**Interrupting a program**

Press the Start/Pause button to interrupt a program which is running and the corresponding green pilot light will start blinking.

Press the button again to restart the program.

**Cancelling a program**

Turn the selector dial to to cancel a program which is running.

You can select now a new program.

**Opening the door**

After the program has started (or during the delay time) the door is locked and if you need to open it, set first the machine to PAUSE by pressing the Start/Pause button. If the door cannot be opened, this means that the machine is already heating or that the water level is too high.

**DO NOT TRY TO FORCE THE DOOR!**

During drying phase the door can be opened only during the first 10 minutes and at the end of drying (after Anti-Crease phase).

If you cannot open the door but you need to open it you have to switch the machine off by turning the selector dial to . After a few minutes the door can be opened (pay attention to the water level and temperature!).

After closing the door, it is necessary to select the program and options again and to press the Start/Pause button.

**At the end of the program**

The machine stops automatically. Three blinking 0.00 appear on the display and the pilot light of the Start/Pause button goes off. Some acoustic signals sound for a few minutes.

If a program or an option that ends with water left in the tub has been selected, the door remains locked to indicate that the water must be emptied out before opening the door.

Follow the below instructions to empty out the water:

1. Turn the program selector dial to .
2. Select the draining or spinning program.
3. Reduce the spin speed if needed, by pressing the relevant button.
4. Press the Start/Pause button.

At the end of the program, turn the program selector dial to to switch the machine off.

Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap. Leave the door open to prevent the formation of mildew and unpleasant smells.

**Stand By**

If your laundry is not removed within 10 minutes after the program is finished, the back light of the display switches off and the energy saving system will be enabled.

Only the pilot light of the Start/Pause button is blinking to indicate that the appliance has to be switched off. By pressing any button the appliance will come out from the energy saving status and you can set another program or switch the appliance off.

## Use – drying

### Drying only



#### caution

**The water tap must be open and the drain hose must be positioned in the sink or connected to the drain pipe.**

1. Load the laundry.
2. Select a spin cycle at the maximum spin speed allowed for the type of laundry in order to obtain the best drying performances.
3. Select the drying program for Cottons or Synthetics in the Drying sector of the program selector dial.
4. If you wish to select a drying program, depress the Drying level button until the icon corresponding to the required dryness degree appears on the display, marked with the icon
5. If you wish to select timed drying, press the Drying time button until the time you want appears on the display (see the “Drying Program” table). Every time you press this button the drying time increases by 5 minutes.  
*NOTE: The program time will automatically increase by some minutes.*
6. Press the Start/Pause button to start the program. After the program has started, the time remaining is updated every minute.  
*NOTE: The different type of cottons (towelling, sheets, shirts, and so on) or any laundry items rolling up during the spinning phase may result in partial dryness. In the exceptional case that at the end of the cycle the laundry remains slightly wet, we suggest that you unfold the rolled up items, redistribute them evenly in the drum and select an additional drying cycle of 20-30 minutes.*
7. At the end of the program, the buzzer sounds and three blinking appear on the display and the door is locked. The last 10 minutes of the drying cycle correspond to an anti-crease phase. During this time the door is locked and the display keeps showing three flashing zeros .



#### tips and information

If you wish to open the door before or during the anti-crease phase or to interrupt it, press any button or turn the program selector dial to any program position (except )

8. Turn the selector dial to the position to switch the machine off.
9. Remove the laundry.

### Automatic washing and drying (NON-STOP program)

For NON-STOP programs, the recommended load size is 4kg for cottons and 3kg for synthetics.



#### caution

Do not use a dosing device/ball when carrying out a washing and drying program.

1. Load the laundry.
2. Add detergent and fabric softener.
3. Switch the machine on by turning the selector dial to the selected washing program/fabric.
4. Select the required options by pressing the relevant buttons.  
If possible, do not select a spin speed lower than that proposed by the appliance to avoid too long a drying time therefore saving energy.  
In any case the reduction of the spin speed is only possible after selecting drying.  
The lowest values you can select are the following:  
– 900 rpm for cottons and synthetic with electronic drying;  
– 900 rpm for cottons and 700 rpm. for fabrics with timed drying.
5. Select the drying time by pressing the Drying time button or dryness degree by pressing the Drying level button. The display shows the entire duration of the washing and the selected drying cycle.
6. Start the program by pressing the Start/Pause button. After the program has started, the time remaining is updated every minute.
7. At the end of the program turn the selector dial to the position to switch the machine off.
8. Remove the laundry.

## Washing hints and tips

### Sorting out the laundry

Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

### Before loading the laundry

- Never wash whites and coloureds together.
- Whites may lose their "whiteness" in the wash.
- New coloured items may run in the first wash; they should therefore be washed separately the first time.
- Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.
- Remove persistent stains before washing.
- Rub particularly soiled areas with a special detergent or detergent paste.
- Treat curtains with special care. Remove hooks or tie them up in a bag or net.

### Detergents and additives

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment. Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.

The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.

All commonly available front loader washing machine detergents (labelled "Matic" or low suds) may be used in this appliance:

- powder detergents for all types of fabric
- powder detergents for delicate fabrics (60°C max) and woollens
- liquid detergents, preferably for low temperature wash programs (60°C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash program.

If using liquid detergents, a program **without** prewash must be selected.

Your appliance incorporates a recirculation system which allows an optimal use of the concentrated detergent. Follow the product manufacturer's recommendations on quantities to use and do not exceed the "MAX" mark in the detergent dispenser drawer .

### Quantity of detergent to be used

The type and quantity of detergent will depend on the type of fabric, load size, degree of soiling and hardness of the water used. Follow the product manufacturers' instructions on quantities to use.

Use less detergent if:

- you are washing a small load
- the laundry is lightly soiled
- large amounts of foam form during washing.

### Degrees of water hardness

Water hardness is classified in so-called "degrees" of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority. If the water hardness degree is medium or high we suggest you to add a water softener following always the manufacturer's instructions. When the degree of hardness is soft, re-adjust the quantity of the detergent.

## Drying hints and tips

### Preparing the drying cycle

As a dryer, the appliance works on the condensation principle.

**Therefore, the water tap must be open and the drain hose must drain water into a sink or into the drain pipe, even during the drying cycle.**



**caution**





Before starting the drying program, reduce the loads of washed laundry, in order to obtain good performances.

### Laundry not suitable for drying

- Particularly delicate items such as synthetic curtains, woollen and silk, garments with metal inserts, nylon stockings, bulky garments such as parkas, bed covers, quilts, sleeping bags and duvets/duonas must not be machine dried.
- Avoid drying dark clothes with light coloured fluffy items such as towels as these can attract the fluff.
- Remove the laundry when the appliance has finished drying.
- To avoid a static charge when drying is completed, use either a fabric softener when you are washing the laundry or a fabric conditioner specifically for tumble dryers.
- Garments padded with foam-rubber or materials similar to foam-rubber must not be machine dried; they represent a fire hazard.
- Also, fabrics containing residue of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.

### Garment labels

For drying, follow the indications given on the manufacturer's labels:

-  May be tumble dried
-  Drying at high temperature
-  Drying at reduced temperature
-  Do not tumble dry.

### Drying cycle duration

The drying time may vary depending on:

- speed of the final spin
- dryness level required (iron dry, store dry)
- type of laundry
- weight of the load size .

The average drying time for a timed drying are indicated in the "Drying programs" chapter. The experience will help you to dry your laundry in a more suitable way, according to the different fabrics. Take note of the duration drying time of the already performed cycles.

### Additional drying



















 


 

 




















 

 





 

 









If the laundry is still damp at the end of the drying program, select a short drying cycle again.






**caution**

 **Do not over dry the laundry in order to avoid creasing of fabrics or garment's shrinking.**

## Washing and drying programs




 











Program / Maximum and Minimum Temperature / Cycle Description / Maximum Spin Speed / Maximum Fabrics Load / Type of Laundry	Options	Detergent compartment
<b>COTTONS</b>  90°- Cold Main wash - Rinses Maximum spin speed 1400 rpm Max. load 8 kg - Red. load 4 kg <sup>1)</sup> For white and coloured cottons (normally soiled items).	 Spin  Rinse hold  No spin  Night cycle  Extra rinse  Time manager	 Main wash  Fabric softener/starch
<b>COTTONS WITH PREWASH</b>  90°- Cold Prewash - Main wash - Rinses Maximum spin speed 1400 rpm Max. load 8 kg - Red. load 4 kg <sup>1)</sup> For white or coloured cottons with prewash phase (heavily soiled items).	 Spin  Rinse hold  No spin  Night cycle  Extra rinse  Time manager	 Pre-wash <sup>2)</sup>  Main wash  Fabric softener/starch
<b>SYNTHETICS</b>  60°- Cold Main wash - Rinses Maximum spin speed 900 rpm Max. load 4 kg - Red. load 2 kg <sup>1)</sup> Synthetic or mixed fabrics: underwear, coloured garments, non-shrink shirts, blouses.	 Spin  Rinse hold  No spin  Night cycle  Extra rinse  Time manager	 Main wash  Fabric softener/starch
<b>DELICATES</b>  40°- Cold Main wash - Rinses Maximum spin speed 700 rpm Max. load 4 kg - Red. load 2 kg <sup>1)</sup> Delicate fabrics: acrylics, viscose, polyester.	 Spin  Rinse hold  No spin  Night cycle  Extra rinse  Time manager	 Main wash  Fabric softener/starch
<b>EASY IRON</b>  60°- Cold Main wash - Rinses Maximum spin speed 900 rpm Max. load 4 kg Selecting this program the laundry is gently washed and spun to avoid any creasing. In this way ironing is easier. Furthermore the machine will perform additional rinses.	 Spin  Rinse hold  No spin  Extra rinse	 Main wash  Fabric softener/starch
<b>BABY</b>  40°- Cold Main wash - Rinses Maximum spin speed 700 rpm Max. load 2 kg Extra delicate cycle for multi coloured or special knit baby clothes.	 Spin  Rinse hold  No spin  Night cycle  Extra rinse	 Main wash  Fabric softener/starch
<b>SPORT INTENSIVE</b>  40°- Cold Prewash-Main wash - Rinses Maximum spin speed 900 rpm Max. load 3 kg This program is suitable for washing heavily soiled sport items. The machine will add automatically a prewash phase before the main wash to eliminate mud stains.	 Spin  Rinse hold  No spin  Night cycle  Extra rinse	 Pre-wash  Main wash  Fabric softener/starch
<b>5 SHIRTS</b>  30° Main wash - Rinses Maximum spin speed 900 rpm Max. load 1 kg This program is suitable for 5 - 6 shirts lightly soiled.	 Spin  No spin	 Main wash  Fabric softener/starch
<b>SPIN</b>  Drain and long spin Maximum spin speed 1400 rpm Max. load 8 kg Separate spin for hand washed garments and after programs with the Rinse Hold and Night Cycle option selected. You can choose the spin speed by pressing the relevant button to adapt it to the fabrics to be spun.	 Spin	

## Washing and drying programs (cont.)

 Program / Maximum and Minimum Temperature / Cycle Description / Maximum Spin Speed / Maximum Fabrics Load / Type of Laundry	Options	Detergent compartment
<b>DRAIN</b>  Draining of water Max. load 8 kg For emptying out the water of the last rinse in programs with the Rinse Hold and Night Cycle option selected.		
<b>RINSES</b>  Rinses Maximum spin speed 1400 rpm Max. load 8 kg With this program it is possible to rinse and spin cotton garments which have been washed by hand. The machine performs 3 rinses, followed by a final long spin. The spin speed can be reduced.	 Spin  Rinse hold  No spin  Night cycle  Extra rinse	 Fabric softener/starch
<b>LINGERIE</b>  30°- Cold Main wash - Rinses Maximum spin speed 900 rpm Max. load 1 kg This program is suitable for very delicate items, such as lingerie, bras and underwear etc.	 Spin  Rinse hold  No spin  Night cycle	 Main wash  Fabric softener/starch
<b>SILK</b>  30°- Cold Main wash - Rinses Maximum spin speed 700 rpm Max. load 1 kg Delicate washing program suitable for silk and mixed synthetic items.	 Spin  Rinse hold  No spin  Night cycle	 Main wash  Fabric softener/starch
<b>HANDWASH</b>  40°- Cold Main wash - Rinses Maximum spin speed 1000 rpm Max. load 2 kg Special program for delicate fabrics with "hand washing" care symbol.	 Spin  Rinse hold  No spin  Night cycle	 Main wash  Fabric softener/starch
<b>WOOL</b>  40°- Cold Main wash - Rinses Maximum spin speed 1000 rpm Max. load 2 kg Washing program for machine washable wool as well as for hand washable woollens and delicate fabrics. A single or bulky item may cause imbalance. If the appliance doesn't perform the final spin phase, add more items, redistribute the load manually and then select the spinning program.	 Spin  Rinse hold  No spin  Night cycle	 Main wash  Fabric softener/starch
<b>JEANS</b>  60°- Cold Main wash - Rinses Maximum spin speed 1200 rpm Max. load 4 kg With this program it is possible to wash items like denim pants, shirts or jackets and also hi-tech jersey fabrics. (The Extra Rinse option will be activated automatically).	 Spin  Rinse hold  No spin  Night cycle	 Main wash  Fabric softener/starch
<b>COTTONS ECONOMY WITH PREWASH</b>  90°C - 40°C Prewash - Main wash - Rinses Maximum spin speed 1400 rpm Max. load 8 kg For white or coloured cottons with prewash phase. This program can be selected for normally soiled cotton items with stains. The temperature will decrease and the washing time will be extended.	 Spin  Rinse hold  No spin  Night cycle  Extra rinse	 Pre-wash <sup>2)</sup>  Main wash  Fabric softener/starch



## Washing and drying programs (cont.)

Program / Maximum and Minimum Temperature / Cycle Description / Maximum Spin Speed / Maximum Fabrics Load / Type of Laundry	Options	Detergent compartment
<b>COTTONS ECONOMY</b>  90°C - 40°C Main wash - Rinses Maximum spin speed 1400 rpm Max. load 8 kg White and colour-fast cotton. This program can be selected for slightly or normally soiled cotton items. The temperature will decrease and the washing time will be extended. This allows to obtain a good washing efficiency so saving energy.	 Spin  Rinse hold  No spin  Night cycle  Extra rinse	 Main wash  Fabric softener/starch
<b>SYNTHETICS DRYING</b>  Synthetics drying program. It can be used with timed drying or with automatic drying (dryness degree: cupboard dry  ).		
<b>COTTONS DRYING</b>  Drying cottons program. It can be used with timed drying or with automatic drying (dryness degree: extra dry  , store dry  , iron dry  ).		
<b>OFF</b>  For cancelling the program which is running or to switch the machine off.		





<sup>1)</sup> If you select the Super Quick option by pressing the Time Manager buttons, we recommend that you reduce the maximum load as indicated. (Red. load = reduced load). Full loading is possible however with somewhat reduced cleaning results.

<sup>2)</sup> If using liquid detergents, a program without PREWASH must be selected.


Cottons Eco with 60°C option is recommended for a full load of normally soiled cotton load and is the water and energy rating label program in accordance with AS/NZS2040 and AS/NZS6400.

## Drying Programs

### Automatic Programs

Degree of drying	Type of fabric	Max. load
<b>EXTRA DRY</b>  Suitable for items to put away without ironing	Cottons and linen (bathrobes, bath towels, etc)	5 kg
<b>STORE DRY</b>  Suitable for items to put away without ironing	Cottons and linen (bathrobes, bath towels, etc)	4 kg
<b>STORE DRY</b>  Suitable for items to put away without ironing	Synthetics and mixed fabrics (jumpers, blouses, underwear, household linen)	3 kg
<b>IRON DRY</b>  Suitable for ironing	Cottons and linen (sheets, tablecloths, shirts, etc.)	4 kg

### Timed Programs

Degree of drying	Type of fabric	Drying load	Spin speed	Suggested drying time in minutes
<b>EXTRA DRY</b>  Suitable for items to put away without ironing	Cottons and linen (bathrobes, bath towels, etc)	5 kg 4 kg 2 kg	1400	185-205 125-135 75-85
<b>STORE DRY</b>  Suitable for items to put away without ironing	Cottons and linen (bathrobes, bath towels, etc)	5 kg 4 kg 2 kg	1400	175-195 115-125 65-75
<b>STORE DRY</b>  Suitable for items to put away without ironing	Synthetics and mixed fabrics (jumpers, blouses, underwear, household linen)	3 kg 1.5 kg	900	115-125 40-50
<b>IRON DRY</b>  Suitable for ironing	Cottons and linen (sheets, tablecloths, shirts, etc.)	5 kg 4 kg 2 kg	1400	145-165 95-105 55-65

## A guide to stain removal

	White cottons and linens	Washable coloured fabrics
<b>Ball point pen ink</b>	Sponge with methylated spirit. Bleach if required.	Same as for whites - use oxygen type bleach.
<b>Beetroot</b>	Rinse as soon as possible under cold water. Bleach if necessary.	Same as for whites - use oxygen type bleach.
<b>Blood, meat juice, egg (dry stain)</b>	Cover area with meat tenderiser (msg). Apply warm water to make a paste. Wait 15-20 minutes. Sponge with cool water or with diluted bleach.	Same as for whites but select water temperature suitable to fabric - use oxygen type bleach.
<b>Blood, meat juice, egg (fresh stain)</b>	Rinse in cold water. If stain remains, sprinkle with meat tenderiser (msg). Let stand for 15-20 minutes. If stain still remains, then sponge with diluted bleach. Wash using hot water.	Same as for whites but select water temperature suitable to fabric - use oxygen type bleach.
<b>Candle wax</b>	Scrape off excess, place stain between clean white blotter or several layers of facial tissue. Sponge with dry cleaning fluid. If spot remains, bleach. Alternatively, place a brown paper bag on the area then use a warm iron over the bag. As the wax is lifted from the garment it leaves an oily residue on the paper. You need to repeat this step until all the wax is removed. If spot remains, bleach.	Same as for whites - use oxygen type bleach.
<b>Chewing gum</b>	Rub with ice to harden. Scrape off excess with blunt knife. Sponge with dry cleaning fluid.	Same as for whites.
<b>Chocolate</b>	Soak in warm water with pre-soak product, and wash in lukewarm water. Use dry cleaning fluid (white spirits) to remove any grease spots.	Soak in warm water with pre-soak or detergent solution. Treat any remaining stain with oxygen bleach.
<b>Coffee/tea (milk or cream)</b>	Rinse or soak in cold water. Work detergent into stain. Thoroughly rinse and dry. If a stain remains, sponge with dry cleaning fluid. If stain remains, bleach.	Same as for whites - use oxygen type bleach.
<b>Coffee/tea (black), fruit juice, white wine</b>	Pour boiling water through stain. Bleach if necessary.	Soak or rinse in cold water or sponge with warm water and detergent. Use oxygen type bleach.
<b>Correcting fluid</b>	Scrape off as much as possible. Rub clean with paint thinner or white spirits.	Same as for whites.
<b>Cosmetics</b>	Sponge with prewash stain remover, liquid detergent or rub with soap. If greasy stain persists, soak in enzyme product then wash.	Same as for whites.
<b>Curries</b>	Soak/rinse in lukewarm water until a majority of the colour is removed. Sponge with solvent to break down any remaining fats and oils then wash.	Same as for whites. Check for colour fastness before applying solvent.
<b>Fat/grease/oil</b>	Sponge with dry cleaning fluid (white spirits).	Same as for whites.
<b>Fruit</b>	Pour boiling water through stain. Bleach remaining stain.	Sponge with warm water and wash. Bleach remaining stain with oxygen bleach.
<b>Grass, green vegetables</b>	Sponge with methylated spirit. Wash using warm water.	Same as for whites. Check colourfastness before applying methylated spirit. For acetate, sponge with dry cleaning fluid.
<b>Ice cream, cream milk</b>	Rinse or soak in cold water then wash. If ice cream contains fruit or chocolate treat as such.	Same as for whites.
<b>Iodine</b>	Wash using hot water.	Wash using warm water.
<b>Iron rust</b>	Apply oxalic acid and place in sun.	Apply lemon juice and place in sun.
<b>Lipstick</b>	Rub with lard and wash using hot water. Bleach if necessary.	Rub with lard and wash using warm water.
<b>Mildew</b>	Wash using hot water. Moisten with lemon juice and let dry in sun. If stain persists, bleach. Old stains are hard to remove.	Same as for whites but select water temperature to suit fabric.
<b>Mustard</b>	Wash using hot water and bleach.	Wash using warm water and use oxygen bleach.
<b>Nail polish</b>	Sponge with dry cleaning fluid or nail polish remover. Bleach to remove dye.	Sponge with dry cleaning fluid.
<b>Paint (oil based)</b>	Scrape off fresh paint. Soften dry paint with lard or oil, then sponge with turpentine (turps).	Same as for whites.
<b>Red wine</b>	Rub salt into the stain. Pour boiling water through stain. Bleach if necessary.	Same as for whites.
<b>Scorch</b>	Moisten and place in sunlight. Bleach if necessary.	Usually a permanent stain. Brush wools lightly with sandpaper.
<b>Tomato sauce</b>	Soak in cool water for 10 minutes. Rub in liquid detergent then wash. If stain persists, try dry cleaning fluid or bleach.	Same as for whites - use oxygen type bleach.

## Care and cleaning



### warning

**You must disconnect the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.**

### Descaling

The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits.

### After each wash

Leave the door open for a while. This helps to prevent mould and stagnant smells forming inside the appliance. Keeping the door open after a wash will also help to preserve the door seal.

### Maintenance wash

With the use of low temperature washes it is possible to get a build up of residues inside the drum. We recommend that a maintenance wash be performed on a regular basis.

To run a maintenance wash:

- The drum should be empty of laundry.
- Select the hottest cotton wash program.
- Use a normal measure of detergent, must be a powder with biological properties.

### External cleaning

Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.




### important

Do not use methylated spirits, solvents or similar products to clean the cabinet.


### Cleaning the dispenser drawer

The detergent dispenser drawer should be cleaned regularly. The washing powder and additive dispenser drawer should be cleaned regularly. Remove the drawer by pressing the catch downwards and by pulling it out.

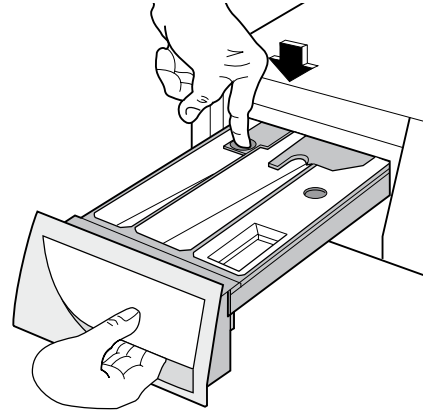


Flush it out under a tap, to remove any traces of accumulated powder.

To aid cleaning, the top part of the additive compartment should be removed. Clean all parts with water.

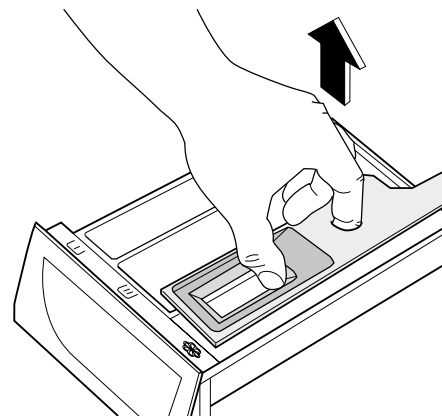

Clean the chamber of dispenser drawer with a brush.

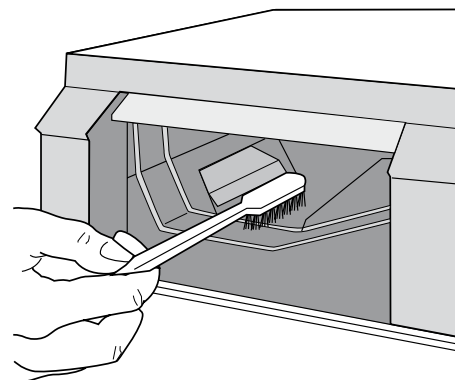

## Care and cleaning (cont.)

### Washing drum

Rust deposits in the drum may occur due to rusting foreign bodies in the washing or tap water containing iron.



#### important


Do not clean the drum with acidic descaling agents, scouring agents containing chlorine or iron or steel wool.

1. Remove any rust deposits on the drum with a cleaning agent for stainless steel.
2. Run a washing cycle without any washing to clean off any cleaning agent residues.

Program: Short Cotton Program at maximum temperature and add approx. 1/4 measuring cup of detergent.

### Door seal

Check the door seal regularly to eliminate any objects that may be trapped in the fold.

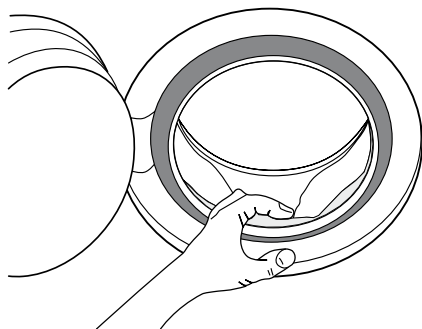


### Drain pump

The pump should be inspected regularly and particularly if:


- the machine does not empty and/or spin
- the machine makes an unusual noise during draining due to objects such as safety pins, coins etc. blocking the pump.

Proceed as follows:


1. Disconnect the appliance.
2. If necessary wait until the water has cooled down.
3. Open the pump door.

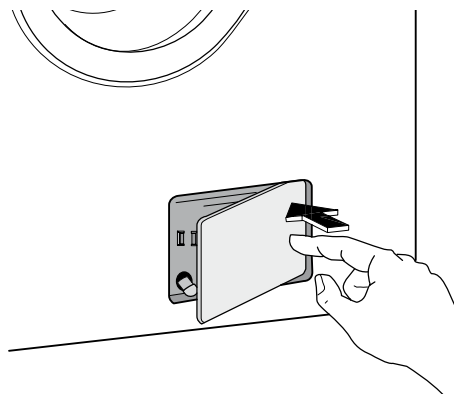


4. Place a container close to the pump to collect any spillage.
5. Release the emergency emptying hose, place it in the container and remove its cap cover.

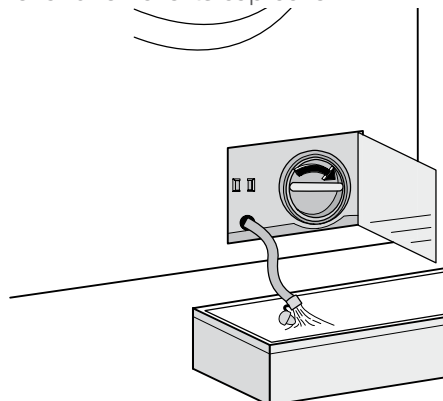

6. When no more water comes out, unscrew the pump and remove it. Always keep a rag nearby to dry up spillage of water when removing the pump.
7. Remove any objects from the pump impeller by rotating it.

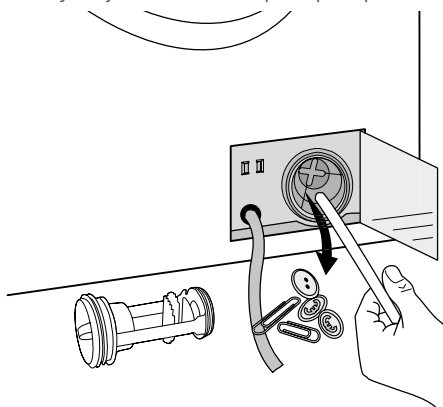

8. Refit the cap on the emergency emptying hose and place the latter back in its seat.
9. Screw the pump fully in.
10. Close the pump door.

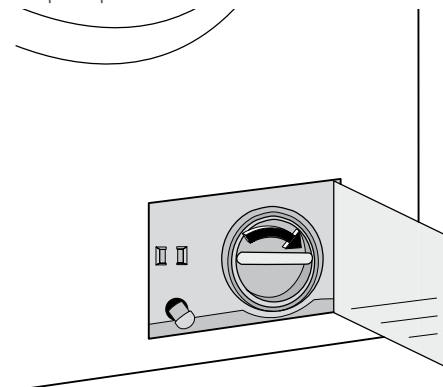

#### warning


When the appliance is in use and depending on the program selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely retightened so as to stop leaks and prevent young children from being able to remove it.

## Care and cleaning (*cont.*)

### Cleaning the water inlet filter

If you notice that the machine is taking longer to fill, check that the filter in the water inlet hose is not blocked.

1. Turn off the water tap.
2. Unscrew the hose from the tap.
3. Clean the filter in the hose with a stiff brush.
4. Screw the hose back onto the tap.

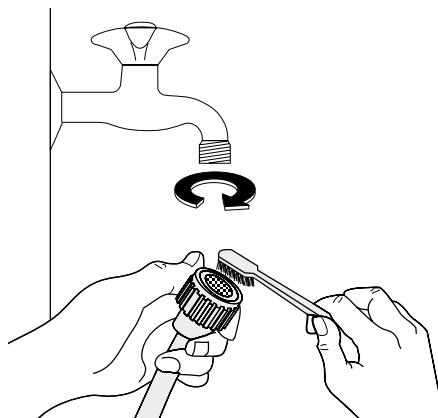

### Emergency emptying out

If the water is not discharged, proceed as follows to empty out the machine:

1. Pull out the plug from the power socket;
2. Close the water tap;
3. If necessary, wait until the water has cooled down;
4. Open the pump door;
5. Place a bowl on the floor and place the end of the emergency emptying hose into the bowl. Remove its cap. The water should drain by gravity into the bowl. When the bowl is full, put the cap back on the hose. Empty the bowl. Repeat the procedure until water stops flowing out;
6. Clean the pump if necessary as previously described;
7. Replace the emergency emptying hose in its seat after having plugged it;
8. Screw the pump again and close the door.

### Frost precautions

If the machine is installed in a place where the temperature could drop below 0°C, proceed as follows:

1. Turn off the water tap.
2. Unscrew the inlet hose.
3. Place the end of the emergency emptying hose and that of the inlet hose in a bowl placed on the floor and let water drain out.
4. Screw the water inlet hose back on and reposition the emergency emptying hose after having put the cap on again.
5. When you intend to start the machine up again, make sure that the room temperature is above 0°C.

## Troubleshooting

Do not call for service until you have checked the points listed below.

If you call for service and there is nothing wrong with your washing machine, you will have to pay for the service call.

You will have to pay even when your washing machine is under warranty.

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

During machine operation it is possible that the red pilot light of the Start/Pause button blinks, one of the following alarm codes appears on the display and some acoustic signals sound every 20 seconds to indicate that the machine is not working:

- **E 10**: problem with the water supply.
- **E 20**: problem with the water draining.
- **E 40**: door open.


Once the problem has been eliminated, press the button 8 to restart the program. If after all checks, the problem persists, contact your local Service Centre.

Problem	Possible causes	What to do
<b>The appliance does not start.</b>	The door has not been closed. <b>E 40</b> is displayed.	Close the door firmly.
	The plug is not properly inserted in the power socket.	Insert the plug into the power socket.
	There is no power at the socket.	Please check your domestic electrical installation
	The main fuse has blown.	Replace the fuse.
	The selector dial is not correctly positioned and the Start/Pause button has not been pressed.	Turn the selector dial to the correct position and press the Start/Pause button.
	The child safety lock has been activated.	Deactivate the child safety lock.
	Delay start has been selected.	If the laundry is to be washed immediately, cancel the delay start.
<b>The appliance does not fill.</b>	The water tap is closed. <b>E 10</b>	Open the water taps.
	The inlet hose is squashed or kinked. <b>E 10</b>	Check the inlet hose connection.
	The filter in the inlet hose is blocked. <b>E 10</b>	Clean the water inlet hose filter.
	The door is not properly closed. <b>E 40</b>	Close the door firmly.
<b>The appliance fills then empties immediately.</b>	The end of the drain hose is too low.	Refer to relevant paragraph in "Water drainage" section on page 22.
<b>The appliance does not empty and/or does not spin.</b>	The drain hose is squashed or kinked. <b>E 20</b>	Check the drain hose connection.
	The drain filter is clogged. <b>E 20</b>	Clean the drain filter.
	An option or a program that ends with the water still in the tub or that eliminates all the spinning phases has been selected.	Select the draining or spinning program.
	The laundry is not evenly distributed in the drum.	Redistribute the laundry.
<b>There is water on the floor.</b>	Too much detergent or unsuitable detergent (creates too much foam) has been used.	Reduce the detergent quantity or use another one.
	Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose – check to see if it is damp.	Check the water inlet hose connection.
	The drain or inlet hose is damaged.	Replace it with a new one.
	The emergency emptying cap has not been replaced into the filter or the filter has not been properly screwed in after cleaning action.	Refit the emergency emptying cap into the filter or screw the filter fully in.
<b>Unsatisfactory washing results.</b>	Too little detergent or unsuitable detergent has been used.	Increase the detergent quantity or use another one.
	Stubborn stains have not been treated prior to washing.	Use commercial products to treat the stubborn stains.
	The correct temperature was not selected.	Check if you have selected the correct temperature.
	Excessive laundry load.	Introduce into the drum less laundry
<b>The door will not open.</b>	The program is still running.	Wait the end of the wash cycle.
	The door lock has not been released.	Wait for some minutes until the door lock is released.
	There is water in the drum.	Select the spinning program to empty out the water.

## Troubleshooting (cont.)

Problem	Possible causes	What to do
<b>The appliance vibrates or is noisy.</b>	The transit bolts and packing have not been removed.	Check the correct installation of the appliance.
	The support feet have not been adjusted.	Check the correct levelling of the appliance.
	The laundry is not evenly distributed in the drum.	Redistribute the laundry manually.
	Maybe there is very little laundry in the drum.	Load more laundry
<b>Spinning starts late or the appliance does not spin.</b>	The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the appliance will not spin. In this case, redistribute the load manually and select the spin program.	Redistribute the laundry.
	The load is too small.	Add more items, redistribute the load manually and then select the spinning program.
<b>The machine makes an unusual noise.</b>	The machine is fitted with a type of motor which makes an unusual noise compared with other traditional motors. This new motor ensures a softer start and more even distribution of the laundry in the drum when spinning, as well as increased stability of the machine.	
<b>No water is visible in the drum.</b>	Appliances based on modern technology operate very economically using very little water without affecting performance.	
<b>The machine does not dry or does not dry properly</b>	The drying time or the dryness degree has not been selected.	Select the drying time or the dryness degree.
	The water tap is not turned on. <b>E 10</b>	Open the water tap.
	The drain filter is clogged. <b>E 20</b>	Clean the drain filter.
	The machine is overloaded.	Reduce the laundry load in the drum.
	The selected drying program, time or dryness degree was not suitable for the laundry.	Select the suitable drying program, time or dryness degree for the laundry.

If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your appliance: the Service Centre will require this information.

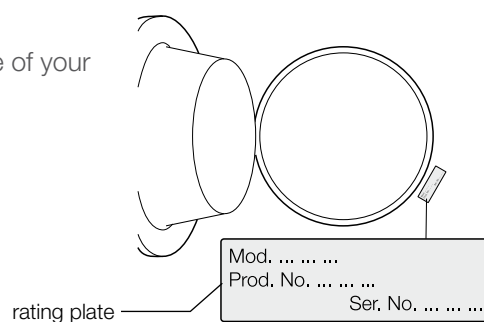

## Technical data

Dimensions (height x width x depth) mm	850 x 600 x 630	
Electrical connection Voltage – Overall power – Fuse	Information on the electrical connection is given on the rating plate on the inner edge of the appliance door.	
Water supply pressure	Minimum	0.05 MPa
	Maximum	0.8 MPa
Maximum Load	Cottons	8kg
Maximum Dry Load	Cottons	5 kg
	Synthetics	3 kg
Spin Speed	Maximum	1400 rpm


## Installation instructions

### Unpacking


All transit bolts and packing must be removed before using the appliance.

You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again.


1. After removing all the packaging, carefully lay machine on it's back to remove the polystyrene base from the bottom.

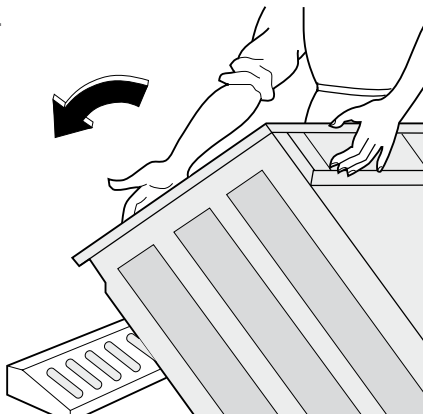


2. Remove the power supply cable and the draining and inlet hose from the hose holders on the rear of the appliance.

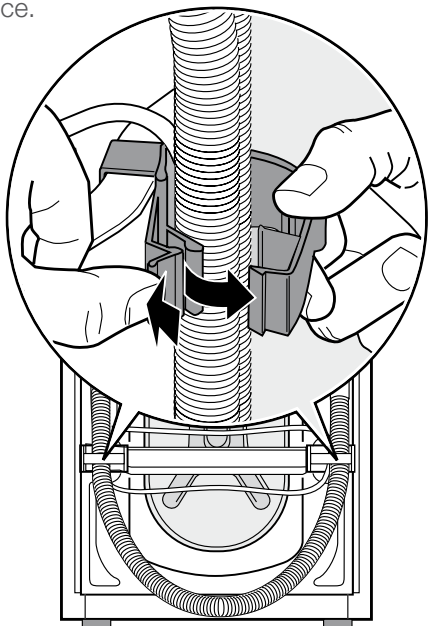



3. With a suitable spanner unscrew and remove the central rear bolt **A**. Slide out the relevant plastic spacer.

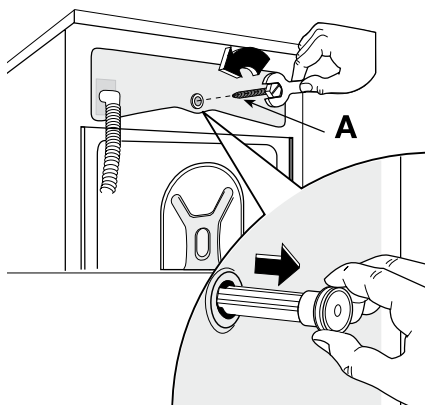


4. Unscrew and remove the two large rear bolts **B** and the six smaller bolts **C**.

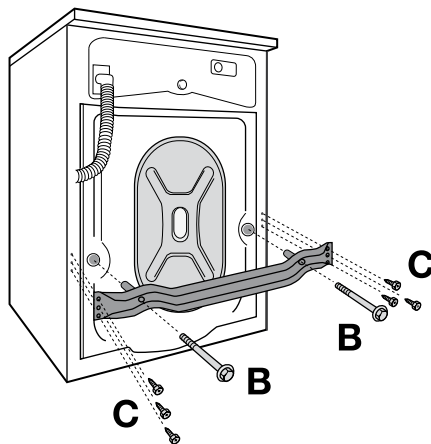

5. Remove the bracket **D** and tighten up the six smaller bolts **C**.

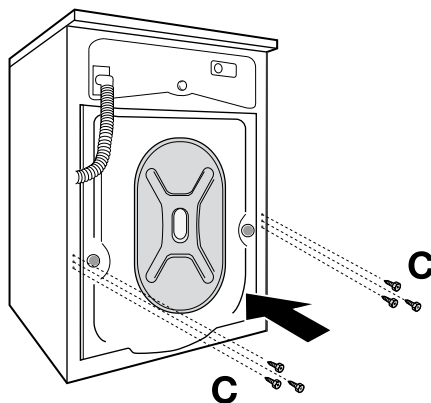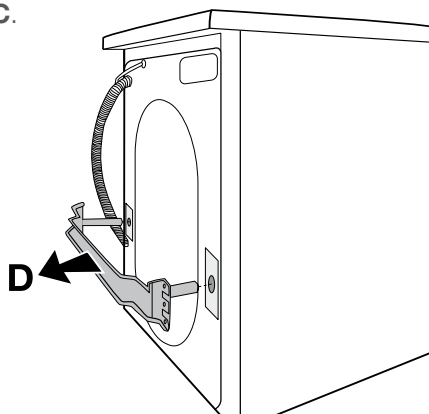

6. Fill the smaller upper hole and the two large ones with the corresponding plastic plug caps supplied in the bag containing the instruction booklet.

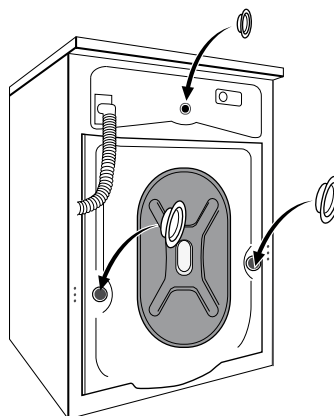




## Installation instructions (cont.)

### Positioning

Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or other kitchen units. Level the washing machine by raising or lowering the feet. The feet may be tight to adjust as they incorporate a self locking nut, but the machine **MUST** be level and stable. If necessary, check the setting with a spirit level. Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation.

### caution

Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor.

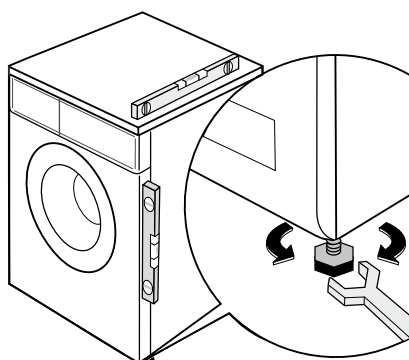


### Water inlet

### warning

**This appliance must be connected to a cold water supply.**


1. Connect the water inlet hose supplied with the machine to a tap with a 3/4" thread. Always use the hose supplied with the appliance.

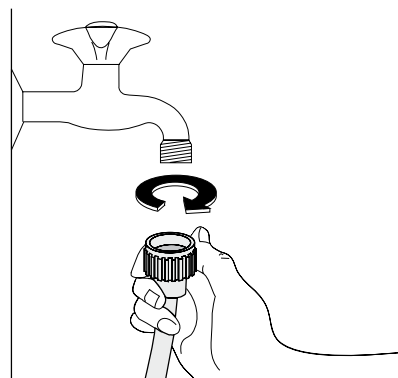

### important

Do not use the hose from your previous machine to connect to the water supply.

2. The other end of the inlet hose which connects to the machine can be turned as showed in the picture. Do not place the inlet hose downwards. Angle the hose to the left or right depending on the position of your water tap.

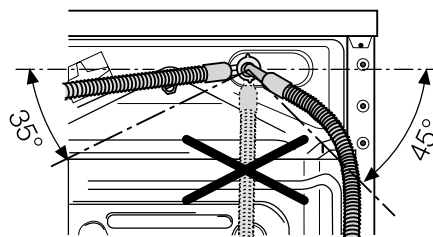

3. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.

The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use.

### important

Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes.


Installation instructions (*cont.*)

## Electrical connection


**Water drainage**

The end of the drain hose can be positioned in three ways.

- Hooked over the edge of a sink using the plastic hose guide supplied with the machine. In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or attaching it to the wall.

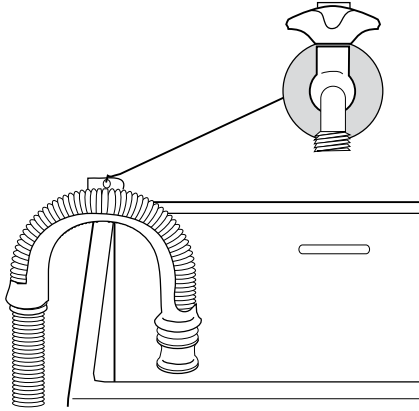

- In a sink drain pipe branch. This branch must be above the trap so that the bend is at least 60cm above the ground.
- Directly into a drain pipe at a height of not less than 60cm and not more than 90cm. The end of the drain hose must always be ventilated, i.e. the inside diameter of the drain pipe must be larger than the outside diameter of the drain hose.

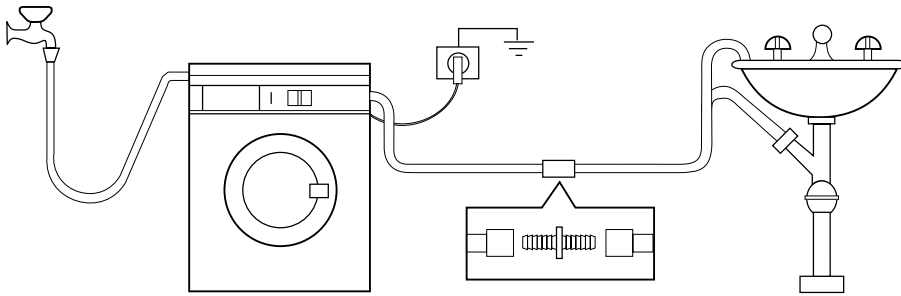**The drain hose must not be kinked.**

The drain hose may be extended to a maximum of 4 metres. An additional drain hose and joining piece is available from your local Service Centre.

Information on the electrical connection is given on the rating plate on the inner edge of the appliance door.

Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances in use.

Connect the machine to an earthed socket. The manufacturer does not accept any responsibility for damage or injury through failure to comply with the above safety precaution.

The power supply cable must be easily accessible after installing the machine.

 **caution**

If this appliance is supplied from a cord extension set or electrical portable outlet device, the cord extension set or electrical portable outlet device must be positioned so that it is not subject to splashing or ingress of moisture.

 **warning**

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.



## **Electrolux Warranty**

FOR SALES IN AUSTRALIA AND NEW ZEALAND  
APPLIANCE: ELECTROLUX FRONT LOAD WASHER-DRYER

**This document sets out the terms and conditions of product warranties for Electrolux branded appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Electrolux appliance.**

### General Terms and Conditions

1. In this warranty
  - (a) 'Electrolux' means Electrolux Home Products Pty Ltd ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited in respect of Appliances purchased in New Zealand;
  - (b) 'Appliance' means any Electrolux product purchased by you accompanied by this document;
  - (c) 'Warranty Period' means
    - (i) where you use the Appliance for personal, domestic or household purposes in Australia the period of '24' months and in New Zealand the period of '24' months;
    - (ii) where you use the Appliance for commercial purposes, in Australia the period of '3' months and in New Zealand the period of '3' months, (if the period stated is 0 months you are not covered by this product warranty) following the date of original purchase of the Appliance;
  - (d) 'you' means the purchaser of the Appliance not having purchased the appliance for re-sale, and 'your' has a corresponding meaning.
2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. Electrolux warrants that, when dispatched from an Electrolux warehouse, the Appliance is free from defects in materials and workmanship for the Warranty Period.
4. During the Warranty Period Electrolux or its Authorised Service Centre will, at no extra charge if your appliance is readily accessible without special equipment, and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use reconditioned parts to repair your appliance. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
5. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
6. Where you are within an Electrolux service area, this warranty covers the cost of transport of the Appliance to and from Authorised Service Centres of Electrolux and travelling costs for representatives of the Authorised Service Centre to and from your home or business. If you are outside an Electrolux service area, you will bear these costs. For information about whether you are within an Electrolux service area, please phone 13 13 49 in Australia, or 0800 10 66 10 in New Zealand.
7. Proof of purchase is required before you can make a claim under this warranty.
8. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
  - (a) The Appliance is damaged by:
    - (i) accident

- (ii) misuse or abuse, including failure to properly maintain or service
    - (iii) normal wear and tear
    - (iv) power surges, electrical storm damage or incorrect power supply
    - (v) incomplete or improper installation
    - (vi) incorrect, improper or inappropriate operation
    - (vii) insect or vermin infestation.
  - (b) The Appliance is modified without authority from Electrolux in writing.
  - (c) The Appliance's serial number or warranty seal has been removed or defaced.
  - (d) The Appliance was serviced or repaired by anyone other than Electrolux or its Authorised Service Centres.
9. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable in the Australian State where the Appliance was purchased or the law applicable in New Zealand if the Appliance was purchased in New Zealand. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.

### Limitation of Liability

10. To the extent permitted by law:
  - (a) Electrolux excludes all warranties other than as contained in this document;
  - (b) Electrolux shall not be liable for any loss or damage whether direct or indirect or consequential arising from your purchase, use or non-use of the Appliance.
11. Provisions of the Trade Practices Act and State consumer legislation in Australia, and the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act in New Zealand, imply warranties or conditions, or impose obligations, upon Electrolux which cannot be excluded, restricted or modified. To the extent permitted by law, the liability of Electrolux (if any) arising out of or in relation to the Appliance or any services supplied by Electrolux shall be limited (where it is fair and reasonable to do so):
  - (a) in the case of Appliances, at its option, to the replacement or repair of the Appliances or the supply of equivalent products or the payment of the cost of replacing the Appliances or having the Appliances repaired or of acquiring equivalent Appliances. Upon being replaced, parts and Appliances become the property of Electrolux; or
  - (b) in the case of services, at its option, to the supply of the services again or the payment of the cost of having the services re-supplied; and in the case of Appliances or services supplied in New Zealand, loss or damage whether direct or indirect or consequential that is reasonably foreseeable.

### Privacy


You acknowledge that in the event that you make a warranty claim it will be necessary for Electrolux and its Authorised Service Centres to exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

### Important Notice

Before Calling a Service Technician please check carefully the operating instructions, service booklet and the warranty terms and conditions.

<p><b>FOR SERVICE</b> or to find the address of your nearest state service centre in Australia <b>PLEASE CALL 13 13 49</b> For the cost of a local call (Australia only)</p>	<p><b>SERVICE AUSTRALIA</b>  ELECTROLUX HOME PRODUCTS www.electrolux.com.au</p>	<p><b>FOR SPARE PARTS</b> or to find the address of your nearest state spare parts centre in Australia <b>PLEASE CALL 13 13 50</b> For the cost of a local call (Australia only)</p>
<p><b>FOR SERVICE</b> or to find the address of your nearest authorised service centre in New Zealand <b>FREE CALL 0800 10 66 10</b> (New Zealand only)</p>	<p><b>SERVICE NEW ZEALAND</b>  ELECTROLUX HOME PRODUCTS www.electrolux.co.nz</p>	<p><b>FOR SPARE PARTS</b> or to find the address of your nearest state spare parts centre in New Zealand <b>FREE CALL 0800 10 66 20</b> (New Zealand only)</p>





**Electrolux Home Products Australia**

telephone: 1300 363 640  
fax: 1800 350 067  
email: [customercare@electrolux.com.au](mailto:customercare@electrolux.com.au)  
web: [www.electrolux.com.au](http://www.electrolux.com.au)

**Electrolux Home Products New Zealand**

phone: 09 573 2384  
fax: 09 573 2211  
email: [customer\\_care@electrolux.co.nz](mailto:customer_care@electrolux.co.nz)  
web: [www.electrolux.co.nz](http://www.electrolux.co.nz)

**The Thoughtful Design Innovator.**

Do you remember the last time you opened a gift that made you say "Oh! How did you know? That's exactly what I wanted!" That's the kind of feeling that the designers at Electrolux seek to evoke in everyone who chooses or uses one of our products. We devote time, knowledge, and a great deal of thought to anticipating and creating the kind of appliances that our customers really need and want.

This kind of thoughtful care means innovating with insight. Not design for design's sake, but design for the user's sake. For us, thoughtful design means making appliances easier to use and tasks more enjoyable to perform, freeing our customers to experience that ultimate 21st century luxury, ease of mind. Our aim is to make this ease of mind more available to more people in more parts of their everyday lives, all over the world. So when we say we're thinking of you, you know we mean just that.

**Electrolux. Thinking of you.**

Share more of our thinking at [www.electrolux.com.au](http://www.electrolux.com.au) or [www.electrolux.co.nz](http://www.electrolux.co.nz)