


Operating instructions

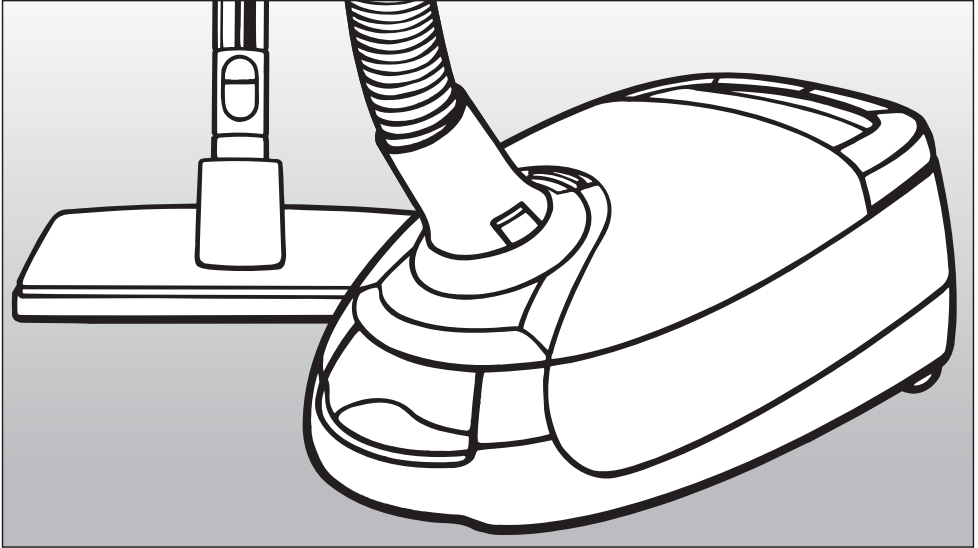

Vacuum cleaner S 5981

To avoid the risk of accidents or damage to the appliance, it is **essential** to read these instructions before using it for the first time.

These operating instructions apply to standard model S 5981 and to Special Edition models which are distinguished by names rather than models.

en - AU, NZ

M.-Nr. 07 175 840

Contents

Caring for the environment	3
Description of the appliance	4
Warning and Safety instructions	6
Preparing for use	10
Accessories supplied	14
Using the accessories supplied	15
Use	17
Mains cable	17
Switching on and off	18
Adjusting the suction power	19
Switching the Electrobrush on and off	20
Setting down, transportation and storage	21
Maintenance and care	23
Purchasing new dustbags and filters	23
Ordering the correct dustbags and filters	23
When to change the dustbag	24
Replacing the dustbag	25
When to change the dust compartment filter (for motor protection)	26
How to change the dust compartment filter	26
When to change the exhaust filter	26
Replacing the Active HEPA filter	27
Replacing one type of exhaust filter with another	28
When to change the thread lifters	29
To replace the thread lifters	29
Cleaning and care / Electrical connection	30
Problem solving guide / After sales service	31
Optional accessories	32

Disposal of packing material

The transport and protective packing has been selected from materials which are environmentally friendly for disposal and can normally be recycled.

Ensure that any plastic, wrappings, bags etc. are disposed of safely and kept out of the reach of babies and young children. Danger of suffocation.


Rather than just throwing these materials away, please recycle them.

Disposing of the dustbag and filters

These are made from environmentally friendly materials, and can be disposed of with the normal household waste, as long as they have been used exclusively for general household dust.



Disposal of your old appliance

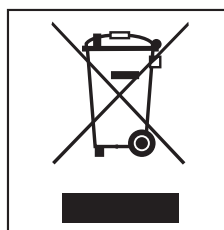Electrical and electronic appliances often contain materials which, if handled or disposed of incorrectly, could be potentially hazardous to human health and to the environment. They are, however, essential for the correct functioning of your appliance. Please do not therefore dispose of it with your household waste.



Please dispose of it at your local community waste collection / recycling centre and ensure that it presents no danger to children while being stored for disposal.

Description of the appliance

- ① Handle
- ② Suction power selector + / -
- ③ On/Off control for Electrobrush with LED
- ④ Stand-by button for pauses in vacuuming with LED
- ⑤ Display for power settings
- ⑥ Release button
- ⑦ Electro telescopic tube
- ⑧ Electro telescopic tube release button
- ⑨ Connection socket
- ⑩ Dust compartment release button
- ⑪ Dust compartment filter (for motor protection)
- ⑫ HyClean dustbag
- ⑬ Electrobrush (either SEB 217 or SEB 236, depending on model)
- ⑭ Carrying handle
- ⑮ Parking attachment (on both sides of vacuum cleaner)
- ⑯ Active HEPA filter
- ⑰ Foot switch for automatic cable rewind
- ⑱ Mains cable
- ⑲ Exhaust filter change indicator and re-set button
- ⑳ Overheating warning light 
- ㉑ Parking system
- ㉒ Stand-by indicator
- ㉓ On/Off foot control 
- ㉔ Release button for accessories compartment
- ㉕ Dustbag change indicator

Warning and Safety instructions

This vacuum cleaner meets statutory safety requirements. Improper use can, however, lead to personal injury and material damage.

To avoid the risk of accidents and damage to the vacuum cleaner, read these instructions carefully before using it for the first time. They contain important notes on its safety, operation and maintenance.

Keep these instructions in a safe place and ensure new users are familiar with the content. Pass them on to any future owner.

Always disconnect the vacuum cleaner from the mains supply when you have finished using it, as well as for maintenance work and cleaning. Switch it off at the wall socket and unplug it.

Correct application

► This vacuum cleaner must only be used for domestic household purposes to vacuum dry floor surfaces. Do not use on people or animals.

Any other usage, modification or alteration is at the owner's risk and could be dangerous.

The manufacturer cannot be held liable for damage resulting from improper or incorrect use of the appliance.

► This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

Safety with children

► This vacuum cleaner is not a toy! To avoid the risk of injury, keep children well away, and do not allow them to play with it or to use the controls. Supervise children whilst you are using it.

► Older children may only use the vacuum cleaner if its operation has been clearly explained to them, and they are able to use it safely, recognising the dangers of incorrect use.

Technical safety

► Ensure that the connection data on the data plate (voltage and frequency) match the mains electricity supply. It is essential that they match to avoid damage to the appliance.

► Before using the vacuum cleaner, check for any signs of damage. Do not use a damaged appliance: It could be dangerous.

► The electro suction hose and the electro telescopic tube contain electrical wires. Do not use the vacuum cleaner if these parts show any sign of damage. Danger of electric shock.

Warning and Safety instructions

▶ The Miele Electrobrush is a motor driven accessory for use only with Miele vacuum cleaners. The cleaner must not be used with an electrobrush produced by another manufacturer.

▶ The socket on the vacuum cleaner must only be used for the Miele Electrobrush specified for use with this appliance.

▶ There is a metal inlay underneath the handle which is designed to avoid the unpleasant effects of electrostatic discharges. Please make sure that you keep your hand in constant contact with this metal strip during vacuuming.

▶ Do not pull or carry the vacuum cleaner by the cable and be careful not to damage the cable when withdrawing the plug from the socket.

- Keep the cable away from sharp edges and do not let it be squashed, for example, under a door.
- Avoid running the vacuum cleaner over the cable.

This could damage the cable, plug or socket and pose as a safety hazard. The appliance must not be used if any of these have suffered damage.

▶ If the cable is damaged it must be replaced together with a complete cable rewind. For safety reasons this must only be done by the Miele Service Department or a Miele authorised service technician.

▶ While the vacuum cleaner is under guarantee, repairs should only be undertaken by a service technician authorised by Miele. Otherwise the guarantee will be invalidated.

▶ Repairs should only be carried out by a Miele authorised service technician. Repairs and other work by unqualified persons could be dangerous. The manufacturer cannot be held liable for unauthorised work.

▶ It is important to switch the vacuum cleaner off before changing over accessories and floorheads, especially an Electro- or Turbobrush.

▶ Do not let the vacuum cleaner get wet. Clean only with a dry cloth or slightly damp cloth when disconnected from the mains supply. If moisture gets into the appliance, there is a risk of electric shock.

▶ Do not immerse the hose in water for cleaning. The vacuum cleaner hose should be checked regularly and must not be used if damaged.

▶ The electro suction hose and the electro telescopic tube contain electrical wires. The plug connectors must not come in contact with water. Danger of electric shock. They should only be cleaned with a dry cloth.

Warning and Safety instructions

Correct use

▶ To avoid the risk of injury when vacuuming with a Miele Electrobrush or Turbobrush, do not touch the rotating roller brush.

▶ To avoid the risk of damage, do not use the vacuum cleaner without the dustbag, dust compartment filter and exhaust filter in place.

▶ If a dustbag is not inserted, the dust compartment cover does not normally close. Do not force it.

▶ Do not vacuum up anything which has been burning or is still glowing e.g. cigarettes, ashes or coal, whether glowing or apparently extinguished. The cleaner might catch fire.

▶ Do not vacuum up any water, liquid or damp dirt. This will cause major faults and could seriously impair the functioning and electrical safety of the appliance. Wait until any freshly cleaned or shampooed carpets or floor coverings are completely dry before attempting to vacuum.

▶ Do not vacuum toner dust. Toner, such as that used in printers and photocopiers, can conduct electricity. The filter system in the vacuum cleaner may not filter it completely, causing the toner to be blown back into the room by the fan.

▶ Do not vacuum up any inflammable or combustible liquids or gases and do not vacuum in areas where such substances are stored. The cleaner might explode.

▶ Do not vacuum up items which are heavy, hard or have sharp edges. The vacuum cleaner and electro suction hose can become blocked and damaged.

▶ Floor attachments, accessories and tubes must not be used at head level to avoid the risk of injury, e.g. to eyes and ears.

▶ Monitor the change dustbag indicator and change the dustbag if necessary. Check the exhaust and dust compartment filters at the same time and change them too if necessary. A full bag or blocked filter will reduce the suction power of the cleaner. A temperature limiter switches the vacuum cleaner off automatically if it gets too hot. See "Problem solving guide".

Accessories

Miele accessories including floorheads, filters and dustbags are available to order from your Chartered Agent or the Miele Spare Parts Department.


- ▶ It is not advisable to vacuum directly with the handle, i.e. without an accessory attached, as the rim could get damaged and you could hurt yourself on sharp edges.
- ▶ Miele vacuum cleaner bags are disposable and intended to be used only once. Do not attempt to re-use. Blocked pores reduce the efficiency of the cleaner.
- ▶ To ensure safety only use genuine Miele dustbags, filters and accessories. This will ensure optimum performance of the appliance throughout its life.

The manufacturer cannot be held liable for damage caused by non-compliance with these Warning and Safety instructions.

Preparing for use


Attaching the electro suction hose

- Insert the hose connector into the socket until it clicks into position.

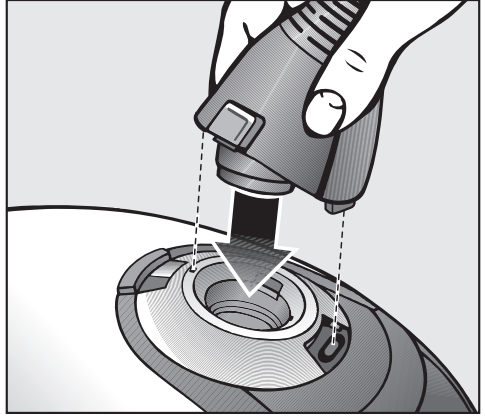


Removing the electro suction hose from the cleaner

- Press the release buttons at the side of the hose connector, and lift the hose from the socket.

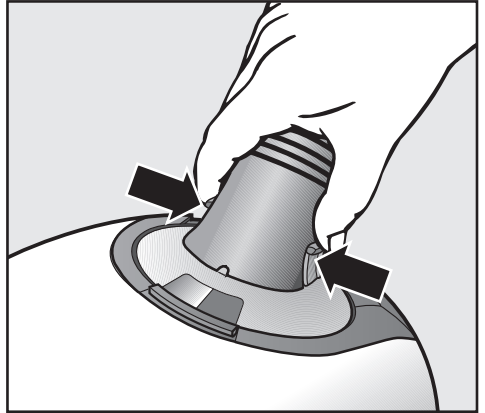

Connecting the handle to the electro telescopic suction tube


- Insert the handle into the electro telescopic suction tube until it clicks into position.
- To release the handle from the suction tube, press the locking button (see arrow) and pull the handle away from the suction tube.

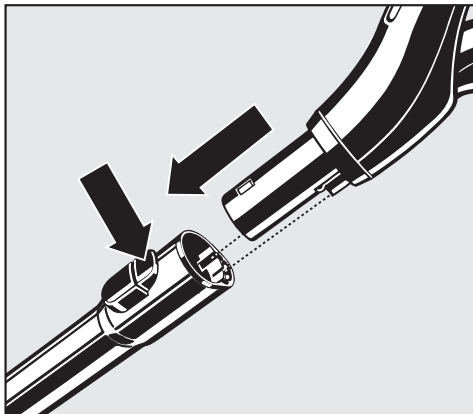

Adjusting the electro telescopic suction tube

One part of the electro-telescopic tube is packed inside the other and can be adjusted to suit your height for comfortable vacuum cleaning.

- Press the telescopic tube release button (see arrow) to release the tubes and adjust to the required height. Then release the button to lock the tube in position.

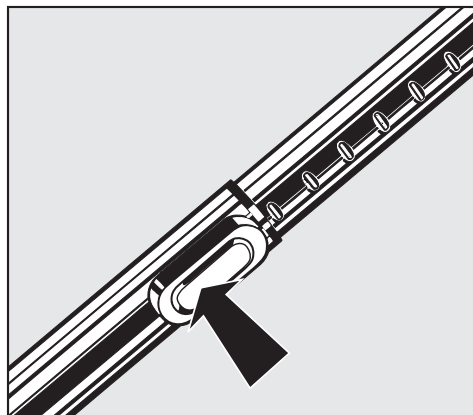



Preparing for use

Using the Electrobrush

Important: please observe the flooring manufacturer's cleaning and care instructions.

The Electrobrush is particularly suitable for intensive vacuuming of carpets which are subject to hard wear. It is very effective at removing deep seated dirt and preventing areas of frequent use being trodden into a path.


 Please note that the Electrobrush should not be used for vacuuming deep-pile rugs and carpets or valuable hand-knotted rugs and carpets, e.g. Persian and oriental rugs etc. There is a danger of the threads being pulled out. If in doubt, contact the carpet manufacturer/retailer.

 Do not use the SEB 217 Electrobrush to clean highly variable or uneven floors. The brush might come into contact with the floor and cause damage.

Connecting the electro telescopic suction tube and the Electrobrush

- Insert the electro telescopic suction tube into the Electrobrush until it clicks into position.

For further information on use and maintenance please refer to the separate instructions supplied with the Electrobrush.

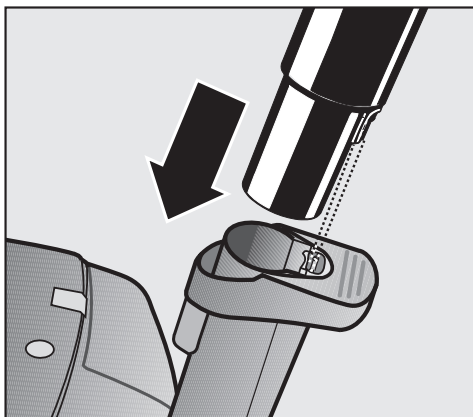


Using the standard floorhead

Important: please observe the flooring manufacturer's cleaning and care instructions.

The floorhead can be used for all normal cleaning of carpets and rugs. It can also be used with the brush protruding to vacuum hard flooring. For hard flooring, such as stone and parquet, we recommend using the special Miele floor brush (see "Optional accessories").


Connecting the electro telescopic suction tube and the standard floorhead

- Fit the electro telescopic suction hose into the standard floorhead, and turn clockwise or anti-clockwise until they lock together with a click.
- To release the floorhead from the suction tube, press the locking button (see arrow in top illustration) and pull the suction tube away from the floorhead.

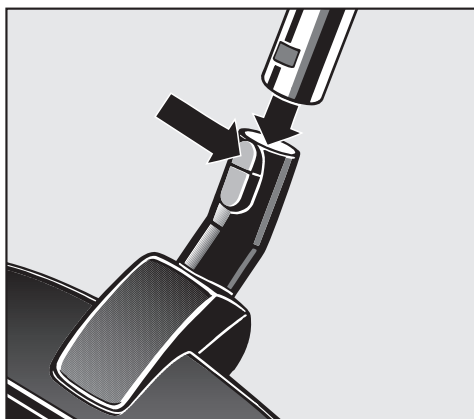


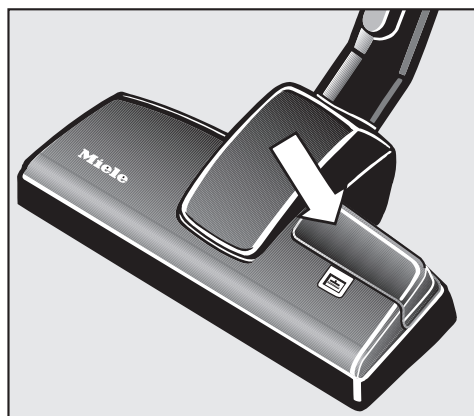
Adjusting the standard floorhead

Vacuum carpets and rugs with the brush retracted:

- Press the foot control until the  symbol appears in the display.

Clean hard flooring which is not susceptible to scratching with the brush protruding:

- Press the foot control until the  symbol appears in the display.



Accessories supplied


The following accessories are supplied:

- ① Crevice nozzle
- ② Dusting brush
- ③ Upholstery nozzle




To open the accessories compartment

- Press the release button to open the accessories compartment lid.

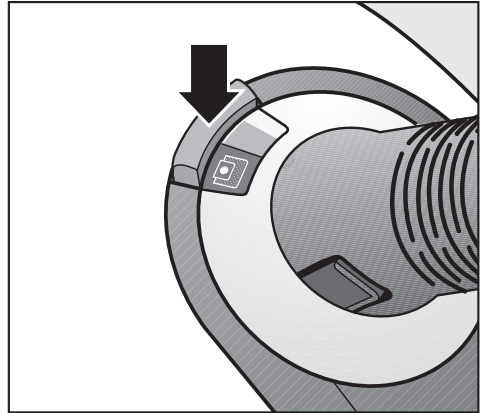


- Take out the accessory you require.
- Press down firmly on the lid to close it.

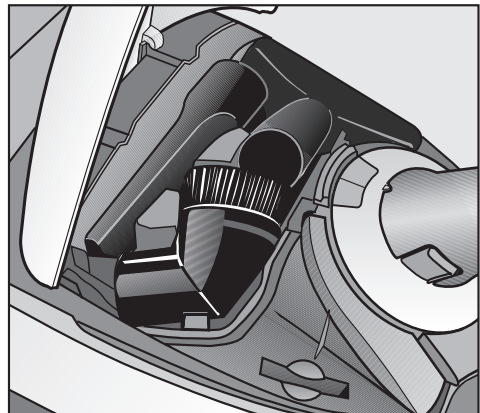

Using the accessories supplied

Crevice nozzle

For cleaning in folds, crevices or corners.

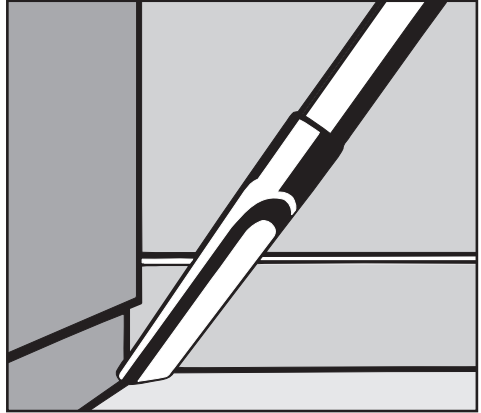

Dusting brush

For cleaning skirting boards, ornate or carved articles, etc.

The head of the dusting brush can be swivelled to attain the best cleaning position.



Using the accessories supplied

Upholstery nozzle


For cleaning upholstery, mattresses, cushions, curtains, covers etc.



Floorhead

For general use and also for vacuuming the stairs.


For safety reasons when vacuuming stairs it is best to start at the bottom of the stairs and move upwards.

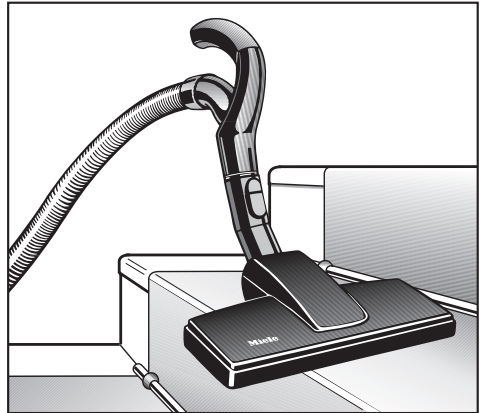


Mains cable

Unwinding the cable


- Pull out the mains cable to the required length (max. approximately 6.5 m).

 If vacuuming for longer than 30 minutes, the mains cable must be pulled out to its fullest extent. Otherwise there is a danger of overheating and damage.

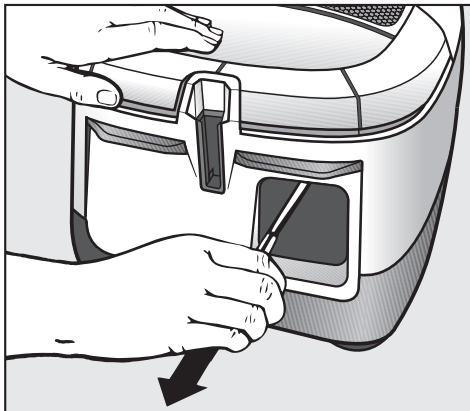

Rewinding the cable

- Switch off at the wall socket and remove the plug.
- Press the rewind foot switch. The cable will rewind automatically.

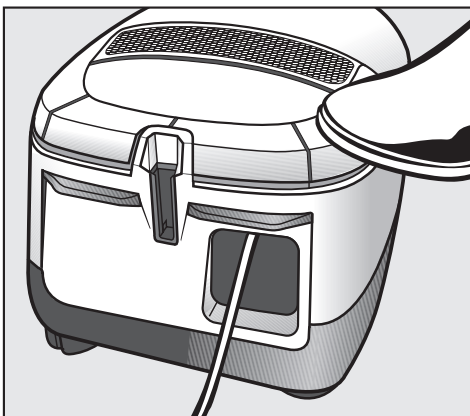


Use

Switching on and off

- Step on the On/Off foot control ①.

The Stand-by indicator light on the cleaner and the LED on the handle will light up.

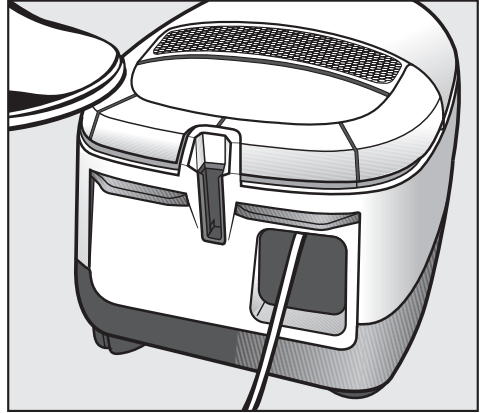

- Press the stand-by button on the handle.


The LED will go out, and the cleaner will switch itself on again at the last selected power level. The corresponding symbol in the handle will light up green.


The lowest power level (Min.) can be directly selected by pressing -, and the highest power level (Max.) by pressing +.

To pause the appliance during operation:

- Press the Stand-by button on the handle.

The LED on the handle will light up.

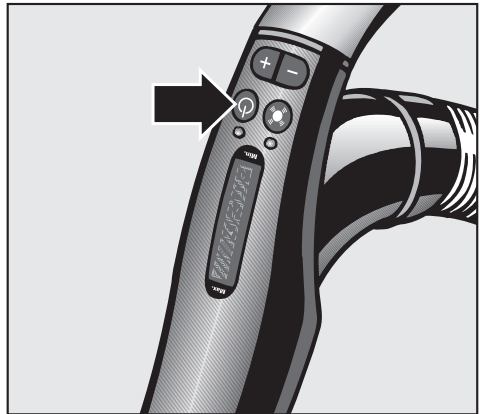



 The stand-by button is designed to pause the vacuum cleaner for short periods of time whilst vacuuming. There is a risk of overheating or damage if left in stand-by mode for too long.

Adjusting the suction power

Use the + and - on the handle to regulate the suction to suit the type of flooring. The higher the wattage, the more powerful the suction. Reducing the suction power reduces the amount of effort required to manoeuvre the floorhead.

The power settings are denoted by symbols on the handle which indicate the type of use the settings are suitable for.

-  - curtains, lightweight fabrics
-  - upholstery, cushions
-  - carpets, rugs and runners
-  - for daily energy-saving vacuuming
-  - lightly soiled rugs and fitted carpets
-  - heavily soiled hard flooring, and for intensive cleaning of carpets

Press and hold the appropriate button until the symbol for the setting you require lights up green.


- Press the + button to select a higher setting.
- Press the - button to select a lower setting.




Use

Vacuuming


- When vacuuming, pull the cleaner behind you on its wheels. You can stand it upright for vacuuming stairs and curtains etc.

 When vacuuming especially fine dust, e.g. sawdust, sand, plaster, flour, talcum powder etc., electrostatic charges build up naturally. Under certain conditions these charges will be released. To avoid the unpleasant effects of these discharges, a metal inlay has been incorporated into the underside of the handle. Make sure that you keep your hand in constant contact with this metal strip during vacuuming.

Switching the Electrobrush on and off

The Electrobrush is switched on separately from the vacuum cleaner by pressing the  button on the handle.

This means that you can switch the Electrobrush off during vacuuming and the vacuum cleaner will continue to operate using suction only. This is useful when moving from vacuuming a fitted carpet to a rug, for example.

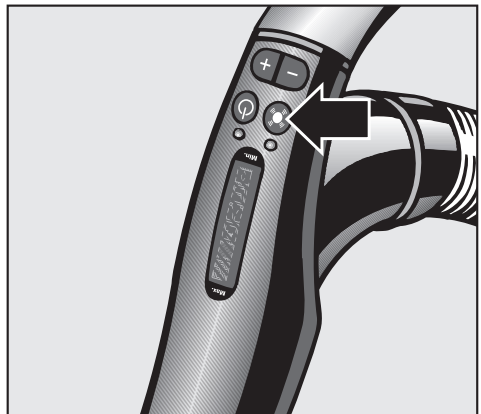

Setting down, transportation and storage

Parking system


(cannot be used with the SEB 236 Electrobrush)

A Park system has been designed for conveniently parking the suction tube and floorhead during pauses.

- Slot the floorhead into the parking attachment at the back of the vacuum cleaner.

Switching on and off with the parking system

The cleaner is automatically switched off when the floorhead is placed in the parking attachment. Lifting the floorhead out of the Park system switches the cleaner on again.

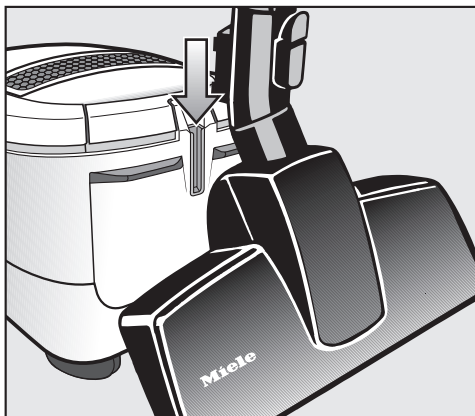

Setting down, transportation and storage


Transportation and storage


- Stand the vacuum cleaner upright when it is not being used and during storage.
- Slot the floorhead downwards into one of the parking attachments on either side of the vacuum cleaner (the parking attachments cannot be used with the SEB 236 Electrobrush).
- Retract the electro telescopic tube fully.

This makes the cleaner easier to carry or store.

When using one of the following floorheads, the adapter supplied **A** must be fitted between the floorhead and the electro telescopic tube.


- Standard floorhead
- Turbobrush
- Hard floor brush

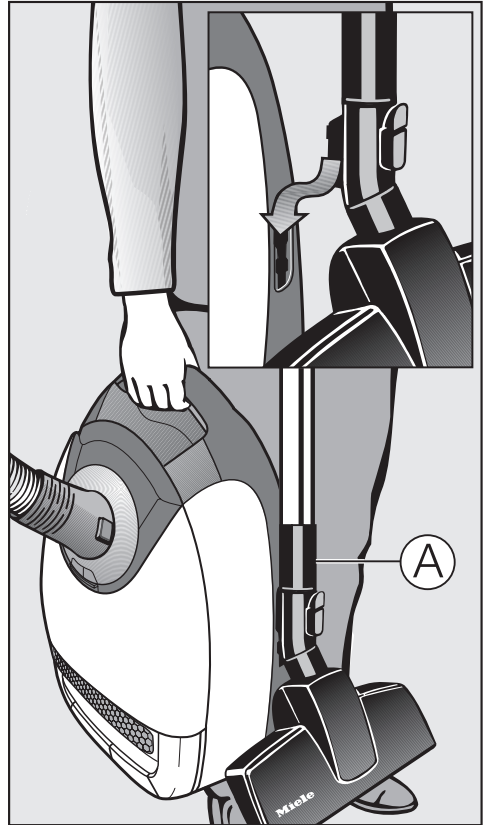

 Always disconnect the vacuum cleaner from the electrical supply for maintenance work and for cleaning. Switch off at the wall socket and remove the plug.

The Miele filter system consists of three filters which must be replaced from time to time to ensure that your vacuum cleaner performs efficiently.

- Dustbag
- Dust compartment filter (for motor protection)
- Exhaust filter

 To ensure that your vacuum cleaner functions correctly, cleans hygienically and gives you many years of trouble-free operation, please only use genuine Miele approved dustbags and filters. The use of non-Miele approved dustbags and accessories could invalidate your warranty and cause damage to your product.

Purchasing new dustbags and filters

Replacement dustbags and filters can be obtained from your local Miele Chartered Agent or directly from the Miele Spare Parts Department (see back cover for contact details) or via the internet on www.miele-shop.com.

Ordering the correct dustbags and filters

When ordering dustbags for this cleaner, ask for Miele HyClean dustbags with blue holders, and the code **G/N**.

ORIGINAL
Miele

A dust compartment filter and a Super Air Clean exhaust filter are supplied with every packet of Miele dustbags. If you wish to purchase dust compartment filters or exhaust filters separately, please quote the model number of your appliance when ordering to ensure you get the correct items. Always quote the model number given on the data plate located underneath the appliance.

You can replace the Active HEPA exhaust filter fitted in the vacuum cleaner with one of the other Miele exhaust filters if you wish (see "Optional accessories").


Maintenance and care


When to change the dustbag

Change the dustbag when the colour marker in the dustbag change indicator fills the display, or sooner if it is no longer effective (see possible reasons for this below).

Miele dustbags are disposable, and designed for single use only. Do not attempt to re-use them as suction would be reduced.

Checking the dustbag change indicator

- Attach the standard floorhead to the suction tube. Do not use any of the other floorheads or attachments as they will cause the dustbag change indicator to give a false reading.
- Switch on the vacuum cleaner using the On/Off foot control , and select the highest power setting on the handle.
- Lift the floorhead off the floor a little. If the marker completely fills the dustbag change indicator, you should replace the dustbag with a new one.

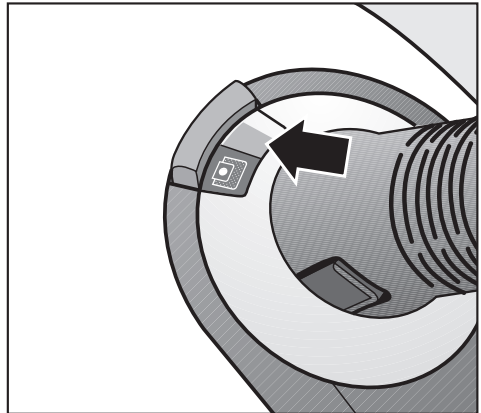

How the dustbag change indicator works

The dustbag change indicator is set for normal household dust. Normal household dust would contain a mixture of dust, hair, carpet fluff, threads, grit etc.

However, if the vacuum cleaner has been used to suck up fine dust, the pores of the dustbag will become blocked very quickly. This affects the air permeability of the bag, and the marker will indicate that the bag is "full" even when it is not. If this happens you must still change the dustbag because suction power will be greatly reduced by blocked pores in the dustbag.


If, on the other hand, you have vacuumed up a large amount of hair and carpet fluff which typically contains a lot of air, the indicator may fail to react even though the bag is full. You should still change it!

Both these extremes can occur.


Replacing the dustbag

- Press the release button for the dust compartment lid and raise the lid as far as it will go.


The dustbag has a closing flap which closes automatically when the dust compartment lid is raised to prevent any dust escaping.

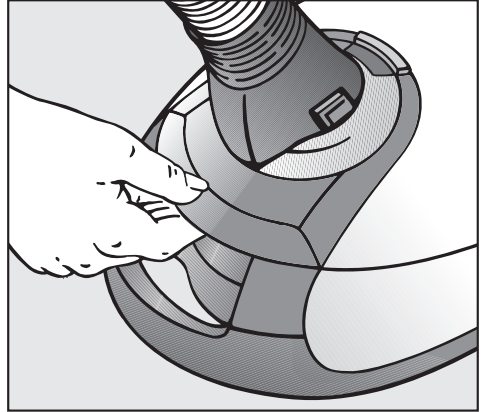


- Pull the dustbag out by the grip next to the self-closing flap on the collar.

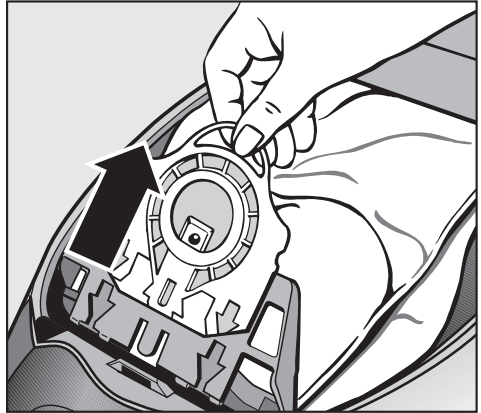

- Fit the new dustbag into the holder as far as it will go. Leave it folded up when you take it out of the box.
- Close the dust compartment lid securely, making sure it clicks into position. Take care not to trap the dustbag when doing so.

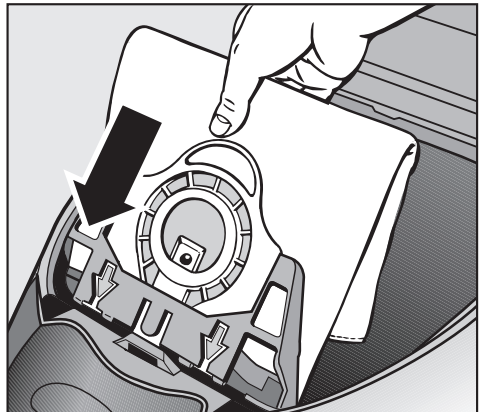

 The lid will not close without a dustbag in place, or if the dustbag is incorrectly fitted. Do not force it!


Maintenance and care

When to change the dust compartment filter (for motor protection)

Replace this filter every time you start a new packet of dustbags. A dust compartment filter is supplied with every packet of Miele dustbags.

How to change the dust compartment filter


- Open the dust compartment lid.
- Unclip the filter frame and remove the old filter. Hold by the clean, unsoiled section to remove it.
- Replace with a new dust compartment filter.
- Close the filter frame.
- Close the dust compartment lid firmly. It should click into place.

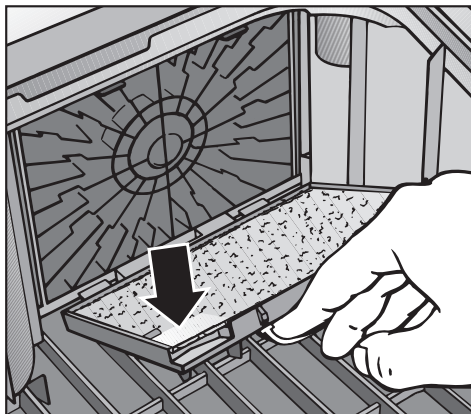

When to change the exhaust filter

Always change the Active HEPA filter when the exhaust filter indicator lights up. It is designed to light up after approx. 50 hours of operation which is the equivalent to about a year of average use. It should be replaced sooner if it is obviously soiled or no longer effective. The vacuum cleaner can still be used with the exhaust filter indicator lit up. However, the suction power will be reduced as will the effectiveness of the filter if it is not replaced in good time.


You can replace the Active HEPA filter supplied with the vacuum cleaner with one of the other Miele exhaust filters if you wish (see "Replacing one type of exhaust filter with another").

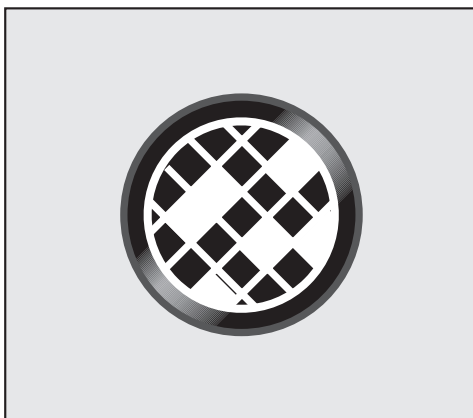

Replacing the Active HEPA filter

Do not use more than one exhaust filter at a time.

- Open the dust compartment lid.
- Raise the filter and remove it.

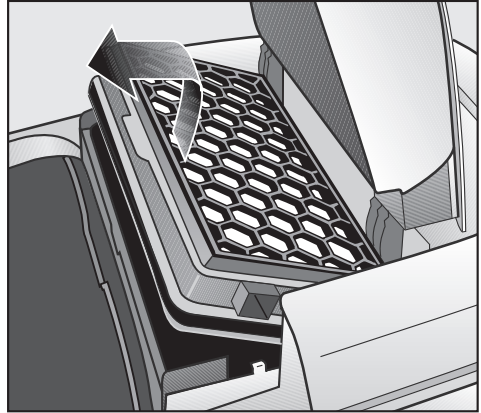

- Replace with a new filter, and push it down into place.

If you wish to replace the Active HEPA filter with a Super Air Clean filter see "Replacing one type of exhaust filter with another".

- Close the dust compartment lid firmly. It should click into place.




Resetting the exhaust filter change indicator

The filter change indicator needs to be reset each time the filter is replaced. To do this the vacuum cleaner must be switched on.

- Press the reset button.

The exhaust filter change indicator goes out and resets to zero.

The filter change indicator can only be reset by pressing the reset button after the light has come on. Pressing the button at any other time will have no effect.

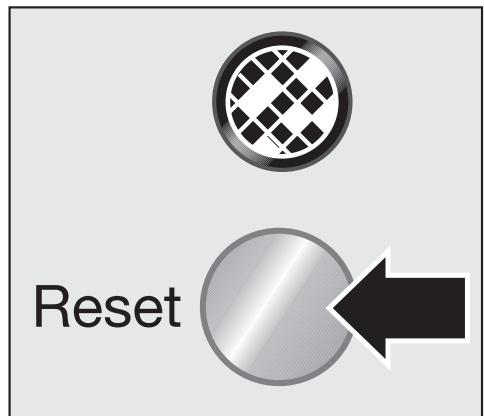


Maintenance and care

Replacing one type of exhaust filter with another

You can replace the Active HEPA filter **c** supplied with your vacuum cleaner with one of the following exhaust filters:

- a** a Super Air Clean filter,
- b** an Active Air Clean filter.


The Active Air Clean filter is fitted in the same way as the Active HEPA filter.

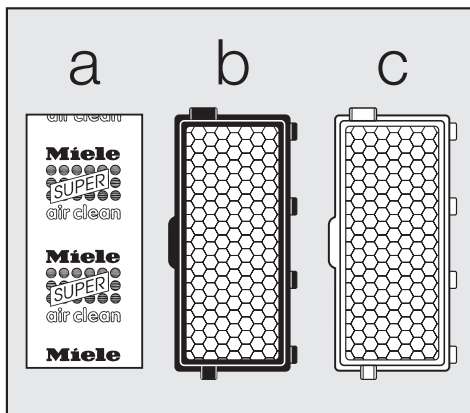

When replacing an Active HEPA filter with a Super Air Clean filter, please note:


If you wish to replace the Active HEPA filter **c** with a Super Air Clean filter **a**, then it is essential that you also fit a filter grille *

* Filter grille - see "Optional accessories".

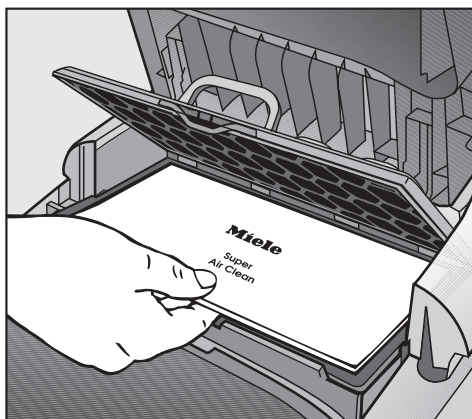

Do not use more than one exhaust filter at a time.

The exhaust filter indicator light (with reset button) is designed to come on when the Active HEPA or Active Air Clean filter needs to be changed. The filter change indicator light is irrelevant if a Super Air Clean filter is being used, as long as it is replaced every time a new packet of Miele dustbags is started. The exhaust filter change indicator will go out when the reset button has been pressed.

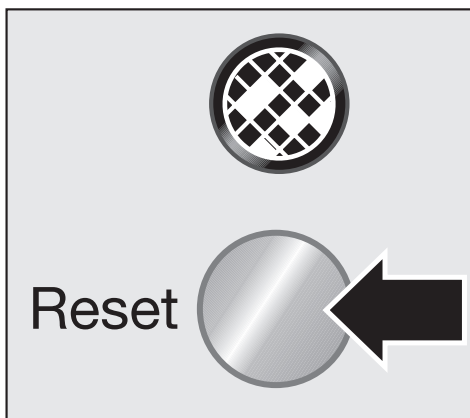


When to change the thread lifters

The thread lifters on the suction inlet to the floorhead and the upholstery nozzle can be replaced.

Check them from time to time and replace them if the pile has worn down.

To replace the thread lifters

- Use a suitable tool to remove them from the slots.
- Fit new thread lifters.

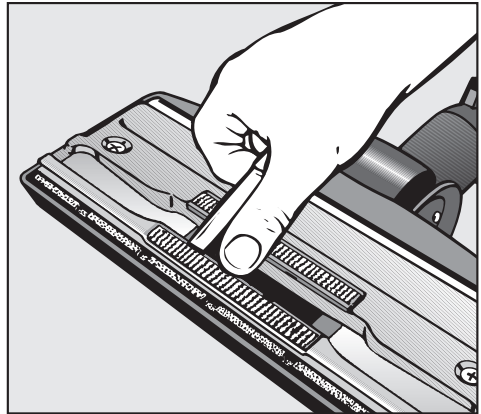


If threads or hair have wound round the bearing on the floorhead roller


- ① Release the bearing (with bayonet fitting) using a coin.
- ② Press the bearing out, and remove.
- ③ Take out the roller.

Remove any threads and hair, replace the roller and refit the bearing.

Spare parts are available from your Miele Chartered Agent or from the Miele Spare Parts Department (see back cover for contact details).

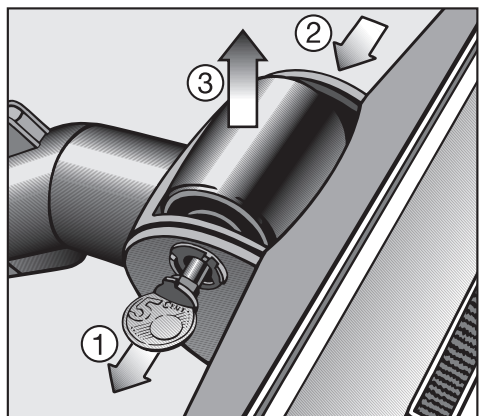


Cleaning and care / Electrical connection

 Always disconnect the vacuum cleaner from the electricity supply for maintenance work and for cleaning. Switch off at the wall socket and remove the plug.


Vacuum cleaner and accessories

External surfaces of the vacuum cleaner and of the accessories can be cleaned with a dry or a slightly damp cloth, or with a proprietary cleaner suitable for plastic.

 Do not use abrasive cleaners, glass cleaners or all-purpose cleaners. Because of their chemical composition they could cause serious damage to plastic components.

Dust compartment

The dust compartment can, if necessary, be cleaned using a **dry** duster, brush or, if available, a second vacuum cleaner to vacuum the dust out.

 Do not let the vacuum cleaner get wet. If moisture gets into the appliance, there is a risk of electric shock.

Electrical connection

All work should be carried out by a suitably qualified and competent person in strict accordance with national and local safety regulations.

The voltage connected load are given on the data plate located underneath the vacuum cleaner. Please ensure that these match the household mains supply. The fuse rating is quoted on the plug.


The appliance is supplied with a cable and moulded plug ready for connection to a 230V/50Hz a.c. single phase supply.

Test Marks.....Electrical safety
.....C-Tick Mark

Electrically suppressed
according to.....AS/NZS 1044

The vacuum cleaner switches off automatically, and the overheating warning light comes on.

A temperature limiter switches the vacuum cleaner off automatically if it gets too hot. The overheating warning light will then come on to indicate that it has overheated.

This can occur if, for instance, large articles block the suction tube or when the filter bag is full or contains particles of fine dust. A heavily soiled exhaust or dust compartment filter can also be the cause of overheating. Switch the vacuum cleaner off immediately using the On/Off foot control . Disconnect from the electricity supply. Switch off at the wall socket and remove the plug.

After removing the cause, wait for approximately 20 - 30 minutes to allow the vacuum cleaner to cool down. It can then be switched on again.

After sales service

In the event of a fault that you cannot easily remedy, please contact

- your Miele Chartered Agent, or
- the nearest Miele Service Department (see address on back page).

Please note that telephone calls may be monitored and recorded for training purposes.




Optional accessories

Miele accessories including floorheads, filters and dustbags are available to order from your Chartered Agent, the Miele Spare Parts Department or via the internet on www.miele-shop.com.

Certain models are supplied as standard with one or more of the following accessories:

Important: please observe the flooring manufacturer's cleaning and care instructions.

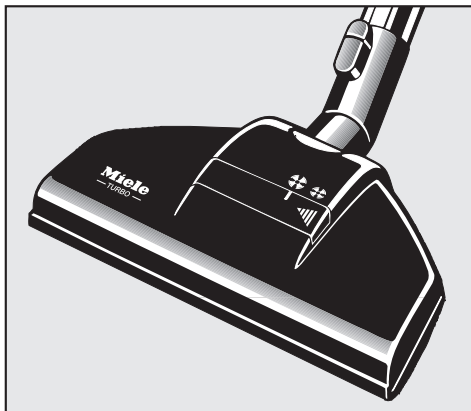


Turbobrush STB 205-3

The Turbobrush is particularly suitable for vacuuming cut-pile carpeting, and is operated by the suction power of the vacuum cleaner. It has a rotating brush and is very effective at picking up thread, hairs and fluff.

Hand-held Turbobrush

The hand-held Turbobrush is intended for vacuuming upholstery, mattresses, car seats, carpeted stairs and other areas inaccessible to the standard Turbobrush.

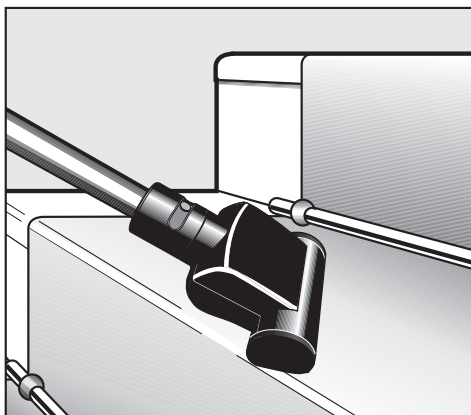

ALLERGOTEC 3 floorhead

The level of cleanliness of the floor shows in a colour "traffic light" display when vacuuming. The ALLERGOTEC floorhead is designed specially for the daily hygienic cleaning of all floor surfaces.



SBB 235-3 Hard floor brush

Special brush for cleaning hard floors (parquet, stone, PVC), and flooring which might be scratched, (e. g. with a high shine).



Universal brush

For dusting books, shelves, etc.



Mattress nozzle

For cleaning upholstery, mattresses, cushions, curtains, covers etc.




Optional accessories

Radiator brush


(Can only be used if attached to the crevice nozzle).

For cleaning radiators, narrow shelves and crevices.

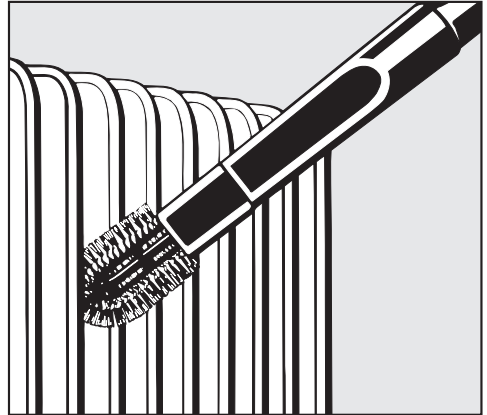

Crevice nozzle (300 mm)

For cleaning in folds, crevices or corners.

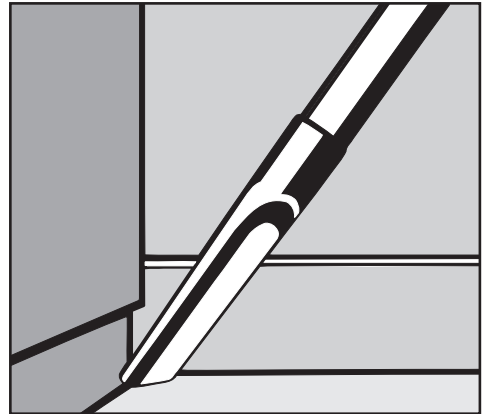


Micro Set

This set is specially designed for cleaning small objects and difficult to reach areas (such as PC keyboards, stereo equipment, intricately carved furniture and ornaments, models etc).

It consists of:

- Micro-hose with combination nozzle (crevice nozzle and dusting brush)
- Micro dusting brush
- Micro crevice nozzle
- Angled extension

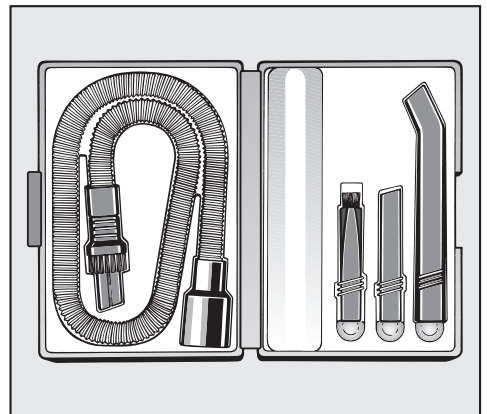

Upholstery nozzle, 190 mm

Extra wide upholstery nozzle, ideal for cleaning upholstery, mattresses and pillows quickly.




Hygiene seal with active charcoal

This prevents dust and odours from escaping when the electro suction hose is removed for transportation or storage.

It can be secured to the electro suction hose during vacuuming.

Active Air Clean filter

A special active charcoal filter, which removes odours coming from the dirt in the dustbag, keeping unpleasant smells to a minimum. The Active Air Clean filter replaces the filter fitted in the vacuum cleaner.

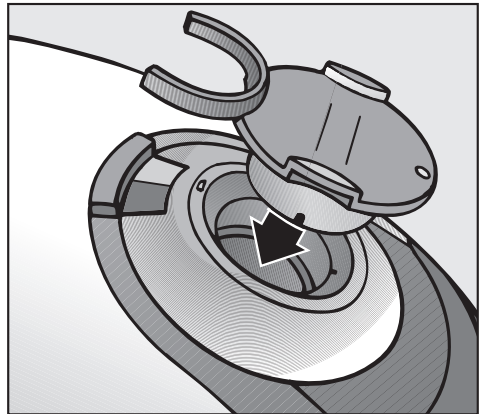

Do not use aroma capsules in your cleaner if you use either of these filters. The charcoal in them will absorb their aroma, rendering them ineffective.

Filter grille

The filter grille is required if you wish to fit a Super Air Clean filter instead of the Active HEPA filter (see "Maintenance and care - Replacing one type of exhaust filter with another").



Miele Australia Pty. Ltd.

A.C.N. 005 635 398

Melbourne:

1 Gilbert Park Drive

Knoxfield, VIC 3180

Telephone: (03) 9764 7130

Fax: (03) 9764 7149

Sydney:

3 Skyline Place

French Forest, NSW 2086

Telephone: (02) 8977 4230

Fax: (02) 8977 4249

Brisbane:

39 Harvey Street

Eagle Farm, QLD 4009

Telephone: 1800 798 578

Fax: 1800 799 578

Adelaide:

79-81 Sir Donald Bradman Drive

Hilton, SA 5033

Telephone: 1800 018 770

Fax: 1800 799 578

Perth:

205-207 Stirling Highway

Claremont, WA 6010

Telephone: 1800 094 872

Fax: 1800 799578

www.miele.com.au

Miele New Zealand Limited

Unit L, 10-20 Sylvia Park Road

Mt. Wellington, 1060, Auckland

New Zealand

Telephone: 0800 264 353

Fax: 0800 463453

www.miele.co.nz

Germany

Miele & Cie. KG

Carl-Miele-Straße 29

33332 Gütersloh