

my
machine



KitchenAid®

NESPRESSO®

TABLE OF CONTENTS

ESPRESSO MACHINE SAFETY	
Important safeguards.....	4
PARTS AND FEATURES	
Parts and accessories.....	11
ASSEMBLING THE ESPRESSO MACHINE	
Preparing the Espresso Machine for first use.....	12
OPERATING THE ESPRESSO MACHINE	
Preheating.....	14
Brewing espresso.....	14
Automatic standby mode.....	16
CARE AND CLEANING	
Cleaning the Espresso Machine.....	18
Emptying the Espresso Machine.....	19
Descaling.....	20
TROUBLESHOOTING.....	22
WARRANTY AND SERVICE.....	23

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word “DANGER” or “WARNING.” These words mean:

 **DANGER**

You can be killed or seriously injured if you don't immediately follow instructions.

 **WARNING**

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions. Misuse of appliance may result in personal injury.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and personal injury do not immerse cord, plugs, or appliance in water or other liquids.
4. Unplug from outlet when not in use, before cleaning and before servicing. Allow to cool before putting on or taking off parts, and before cleaning.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.

- 6.** Do not operate any appliance with a damaged cord or plug, or after appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorised service centre for examination, repair or adjustment, in order to avoid a hazard.
- 7.** The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- 8.** Do not use outdoors.
- 9.** Do not place on or near a radiator, hot gas or electric burner, in a heated oven, open flame, or similar.
- 10.** The safety precautions are part of the appliance. Read them carefully before using your new appliance for the first time. Keep them in a place where you can find and refer to them later on.
- 11.** The appliance is intended to prepare beverages according to these instructions.
- 12.** Do not use the appliance for any use other than the intended use.
- 13.** This appliance has been designed for indoor and non-extreme temperature conditions use only.
- 14.** Protect the appliance from direct sunlight effect, prolonged water splash and humidity.
- 15.** This appliance is designed for domestic use only. It is not intended to be used in the following environments and the guarantee will not apply for:
 - Staff kitchen areas in shops, offices and other working environments,
 - farmhouses,
 - by clients in hotels, motels and other residential-type environments,
 - bed and breakfast-type environments.

ESPRESSO MACHINE SAFETY

- 16.** This appliance may be used by children of at least 8 years of age, as long as they are supervised and have been given instructions about using the appliance safely and are fully aware of the dangers involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and they are supervised by an adult.
- 17.** Keep the appliance and its cord out of reach of children under 8 years of age.
- 18.** This appliance may be used by persons with reduced physical, sensory or mental capabilities, or whose experience or knowledge is not sufficient, provided they are supervised or have received instruction to use the device safely and understand the dangers.
- 19.** Children should not use the device as a toy.
- 20.** The manufacturer accepts no responsibility and the warranty will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purposes, faulty operation, non-professional repair or failure to comply with the instructions.

Avoid risk of fatal electric shock and fire

- 21.** In case of an emergency: immediately remove the plug from the power socket.
- 22.** Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as that specified on the rating plate. The use of an incorrect connection voids the guarantee.
- 23.** The appliance must only be connected after installation.

- 24.** Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- 25.** Keep the cord away from heat and damp.
- 26.** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.
- 27.** If the cord is damaged, do not operate the appliance. Return the appliance to the *Nespresso* Club or to a *Nespresso* authorised representative.
- 28.** To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- 29.** Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water, coffee, descaler or similar.
- 30.** Disconnect the appliance from the mains when not in use for a long period. Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.
- 31.** Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
- 32.** Never touch the cord with wet hands.
- 33.** Never immerse the appliance or part of it in water or other liquid.
- 34.** Never put the appliance or part of it in a dishwasher.
- 35.** Electricity and water together is dangerous and can lead to fatal electrical shocks.
- 36.** Do not open the appliance. Hazardous voltage inside!
- 37.** Do not put anything into any openings. Doing so may cause fire or electrical shock!

38. Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

Avoid possible harm when operating the appliance

39. Never leave the appliance unattended during operation.
40. Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the plug from the power socket. Contact the *Nespresso* Club or *Nespresso* authorised representative for examination, repair or adjustment. A damaged appliance can cause electrical shocks, burns and fire.
41. Always completely close the lever and never lift it during operation. Scalding may occur.
42. Do not put fingers under coffee outlet, risk of scalding.
43. Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
44. Water could flow around a capsule when not perforated by the blades and damage the appliance.
45. Never use a damaged or deformed capsule. If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation. Call the *Nespresso* Club or *Nespresso* authorised representative.
46. Always fill the water tank with cold, fresh drinking water.
47. Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
48. Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.

49. Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
50. Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
51. To clean machine, use only clean cleaning tools.
52. When unpacking the machine, remove the plastic film and dispose.
53. This appliance is designed for *Nespresso* coffee capsules available exclusively through the *Nespresso* Club or your *Nespresso* authorised representative.
54. All KitchenAid appliances pass stringent controls. Reliability tests under practical conditions are randomly performed on selected units. Some units can therefore show traces of previous use.
55. KitchenAid reserves the right to change instructions without prior notice.

Descaling

56. *Nespresso* descaling agent, when used correctly, helps to ensure the proper functioning of your machine over its lifetime and that your coffee experience is as perfect as on the first day. For the safety instructions, correct amount and procedure to follow, consult the user manual included in the *Nespresso* descaling kit. For any additional questions you may have regarding descaling, please contact your *Nespresso* Club.

SAVE THESE INSTRUCTIONS

Pass them on to any subsequent user.

This Instruction Manual is also available as a PDF at nespresso.com and kitchenaid.com.au or kitchenaid.co.nz.

Electrical Requirements

WARNING



Fire Hazard

Do not use an extension cord.

**Doing so can result in death
or fire.**

Volts: 220-240 VAC

Hertz: 50-60 Hz

NOTE: If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way. Do not use an adapter.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

PARTS AND FEATURES

Parts and accessories

Capsule door
(use handle to open)

Brewing
button/ Selection dial
(see details below)

Maintenance unit:
Capsule disposal container
(not shown)


Drip grid

Handle

Espresso spout


Water tank

Cup holder

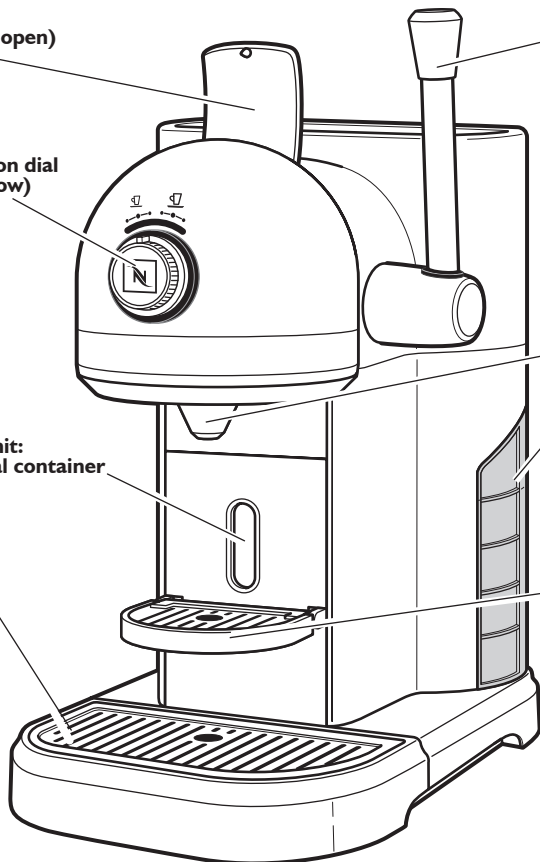

SELECTION DIAL Settings

- 1: 25 ml / 0.8 oz (ristretto)
- 2: 40 ml / 1.35 oz (espresso)
- 3: 60 ml / 2 oz
- 4: 90 ml / 3 oz
- 5: 110 ml / 3.7 oz (lungo)
- 6: 130 ml / 4.4 oz

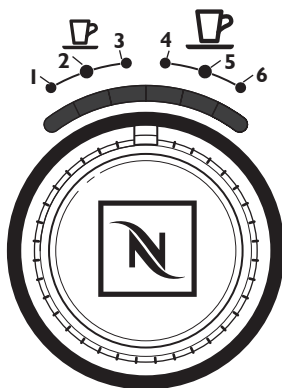

SPECIAL FUNCTION Settings

- 1: Automatic standby: 15 min.
- 2: Automatic standby: 20 min.
- 3: Automatic standby: 30 min.
- 4: Descaling function
- 5: Emptying function
- 6: Return to factory settings

NOTE: For coffee capsule and Aeroccino (5KES0504A only) questions, or for weekend calls, please contact Nespresso at nespresso.com

ASSEMBLING THE ESPRESSO MACHINE

Preparing the Espresso Machine for first use

⚠ WARNING




Electrical Shock Hazard

Plug into a grounded outlet.


Do not use with an adaptor or T.

Do not use with an extension cord.

Failure to follow these instructions could result in death, fire, or electric shock.

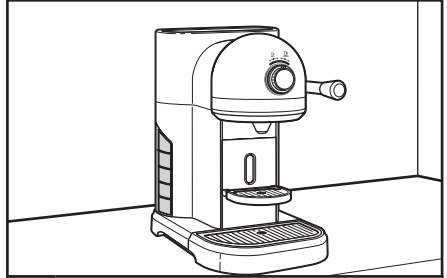


1 Place the Espresso Machine on a clean, dry, level surface. Plug the cord into a grounded outlet.

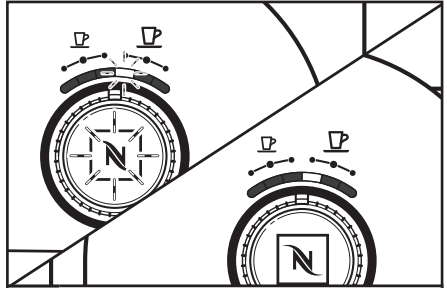


2 When the Espresso Machine is turned on, the LED will flash as it warms up. When the machine is ready, the LED will glow continuously.


ASSEMBLING THE ESPRESSO MACHINE

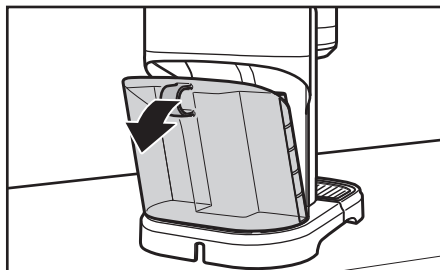


3 Tip the water tank slightly, then remove by pulling the water tank out from the Espresso Machine.

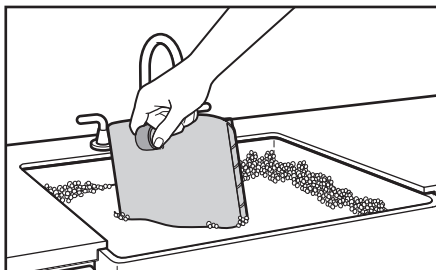

4 Wash the water tank in hot, soapy water and rinse with clean water. Dry with a soft cloth. The water tank cannot be washed in the dishwasher.

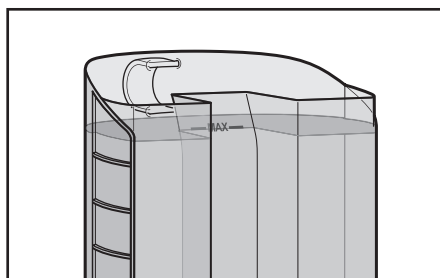


5 Fill the water tank with fresh, cold, drinking water (the water level should be at or below the "max" fill line).

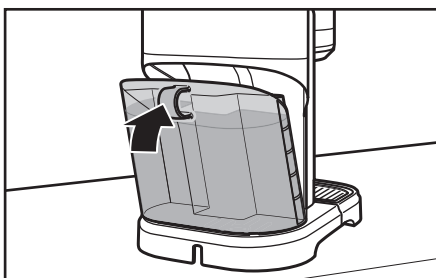

6 Place the water tank back on the Espresso Machine.


NOTE: Press water tank in until it snaps completely into place to assure proper function.

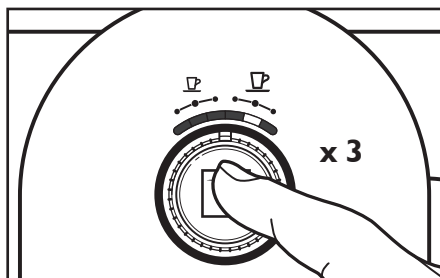

7 Before brewing espresso for the first time, make sure to run plain water through the Espresso Machine, on the "lungo" setting three times.

OPERATING THE ESPRESSO MACHINE


Preheating

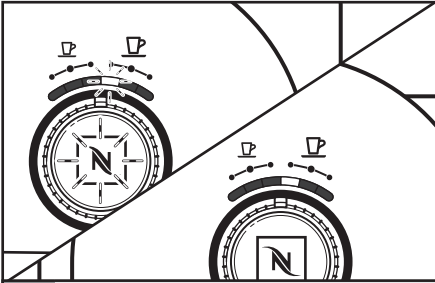


1 When the Espresso Machine is turned on, the LED will flash as it warms up. When the machine is ready, the LED will glow continuously.

NOTE: You can change your desired volume selection while the Espresso Machine is heating up. When you do this, the LED bar will no longer flash, but remains lit over the selected portion size and the brew button continues to flash while the Espresso Machine heats up. Press the brew button. Once the correct temperature is reached, the brew cycle will start on its own.

Brewing espresso

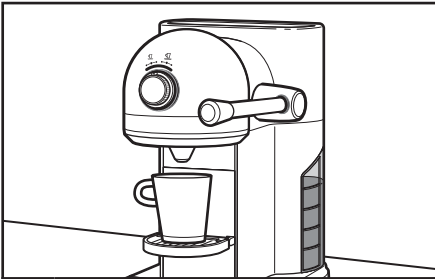


1 Place your cup on the cup holder.

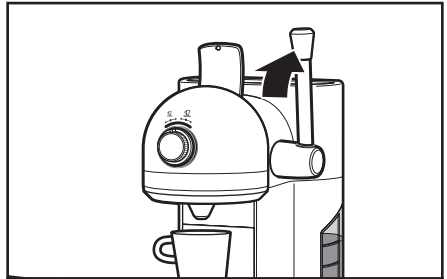


2 Lift the handle to raise the lid on the capsule loading compartment to its fully upright position.

NOTE: To avoid damage and injury due to hot vapour when brewing, open the capsule door **ONLY** by the handle 3 seconds after the brewing cycle has completed. Never try to pull up the capsule door with your fingers.


OPERATING THE ESPRESSO MACHINE

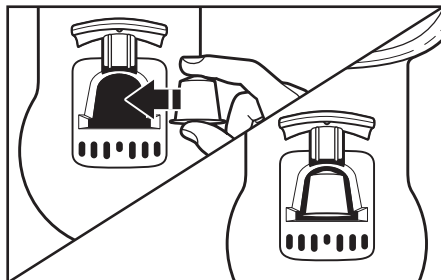


- 3** Select the capsule you want to use. Hold the capsule as shown, with the foil cap facing towards you, and drop into the capsule loading compartment on top of the machine.

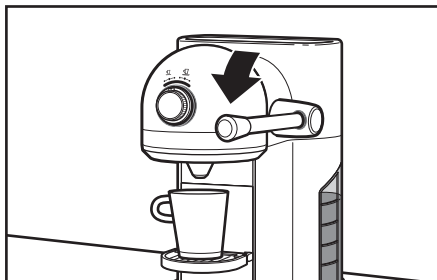

- 4** Lower the handle to close the capsule compartment. Make sure the handle is rotated to a horizontal position. The capsule loading compartment should be fully closed.

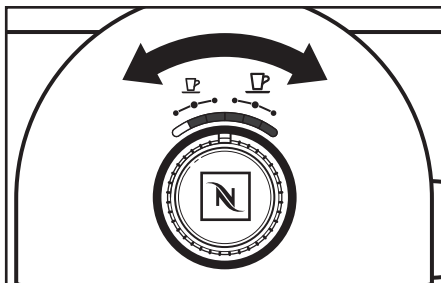


- 5** Turn the selection dial to your desired volume setting (from left to right):
1: 25 ml (ristretto), 2: 40 ml (espresso),
3: 60 ml, 4: 90 ml, 5: 110 ml (lungo),
or 6: 130 ml.

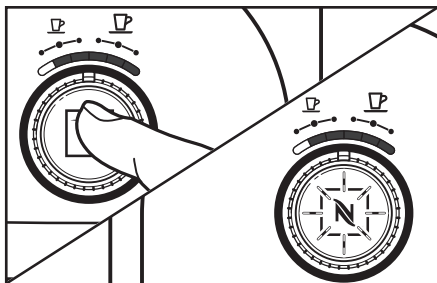


- 6** Press the brew button. The espresso will begin to brew. Press the brew button a second time if you want to top off the cup, or if you want to stop the brewing cycle early.

NOTE: When the Espresso Machine is turned on, it will automatically come on at the setting that was selected most in the last 11 uses.

OPERATING THE ESPRESSO MACHINE

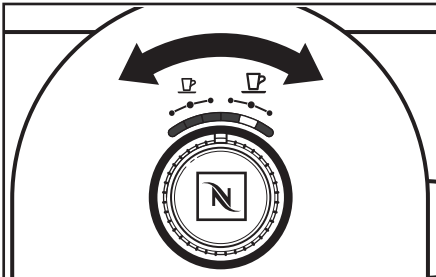

- 7** You can change your selection mid-brew by turning the selection dial to a new selection before brewing ends.

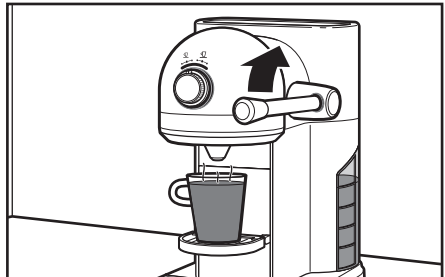


- 8** After your espresso is finished brewing, lift the handle to its fully upright position to drop the used capsule into the disposal container.


NOTE: Eject the capsule after each coffee or before turning off the machine. The capsule disposal container holds up to 14 used capsules. See the “Care and cleaning” section for more information.

Automatic standby mode

When the Espresso Machine is plugged in, it automatically goes into stand-by mode. You must either press the brew button or rotate the dial to wake up the Espresso Machine. After 9 minutes of non-use, it turns to a low-consumption mode, and the heater powers off. If you prefer to change this standby time, you can set it for 15 minutes, 20 minutes, or 30 minutes, using the following directions:

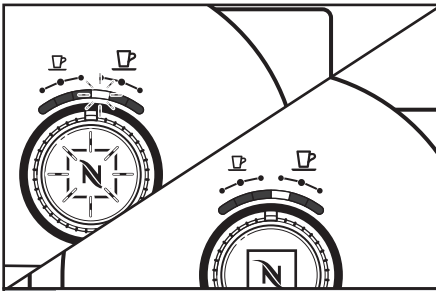


- 1** When the Espresso Machine is turned on, the LED will flash as it warms up. When the machine is ready, the LED will glow continuously.

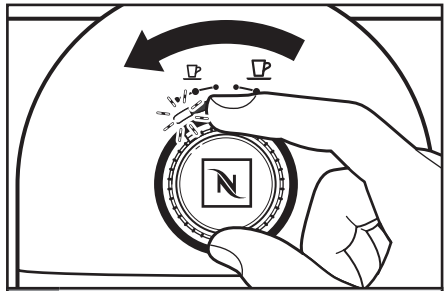


- 2** Rotate the selection dial until the light is over the left most position and hold for 6 seconds. The light will hold steady before changing to 2 blinks per second. The Espresso Machine is now ready to reset the standby time.

OPERATING THE ESPRESSO MACHINE

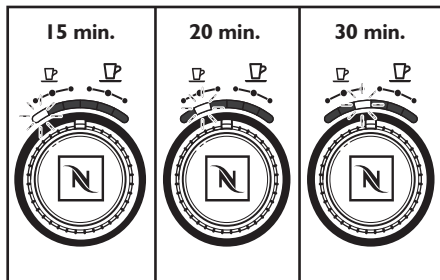

- 3** Turn the selection dial to the left most position to reset the standby time to 15 minutes; turn to the second left position to reset the standby time to 20 minutes; or turn to the third left position to reset the standby time to 30 minutes.

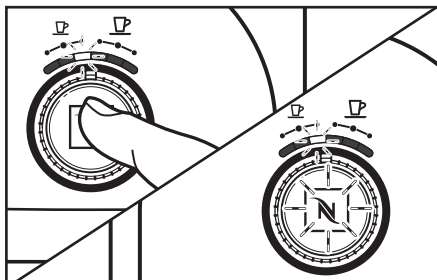

- 4** Press the brew button again. The Espresso Machine will blink 3 times to confirm that you have exited the programming mode.


NOTE: To get back to the factory preset of 9 minutes if you have reset to another standby time, turn the selection dial to the first left position and hold for 6 seconds (the blinking LED will change to 2 blinks per second). Then, rotate the selection dial to the far right position and press the brew button. The Espresso Machine will return to factory settings and automatically go into ready mode.

CARE AND CLEANING


Cleaning the Espresso Machine

Keeping the Espresso Machine clean is vital to brewing the best espresso possible. Stale coffee oils will ruin the flavour of even the most expertly prepared coffee.


NOTE: Do not clean Espresso Machine with abrasive cleaners, steel wool, or other abrasive materials.

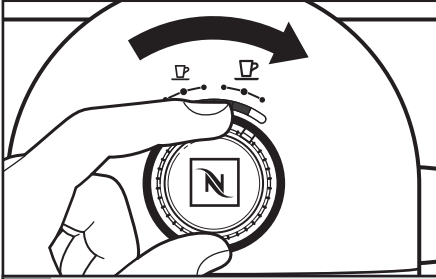

- 1 Turn off the Espresso Machine by turning the dial all the way to right and holding it for 6 seconds. Unplug from the wall outlet, or disconnect power. Let the Espresso Machine, and any attached parts or accessories, cool.

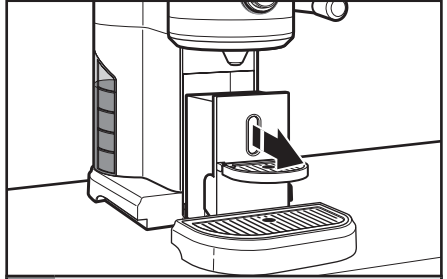

- 2 Slide the maintenance unit out from the base by pulling it towards you.

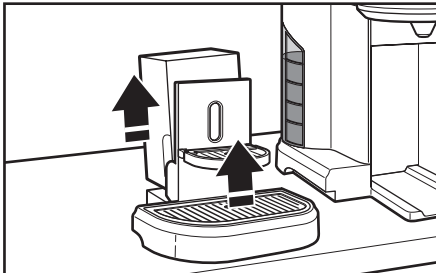


- 3 Remove and empty the capsule disposal container. Then remove the drip grid from the drip tray.




- 4 Wipe the Espresso Machine housing with a clean damp cloth and dry with a soft cloth. Do not use abrasive cleansers or scouring pads when cleaning the housing, or any part or accessory.

CARE AND CLEANING

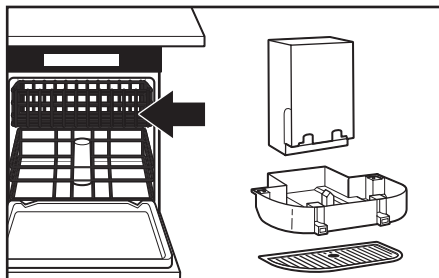


- 5** Wash the capsule disposal container, drip grid, and drip tray in the top rack of a dishwasher, or by hand in warm, soapy water. If washing by hand, be sure to rinse with clean water and dry with a soft cloth.

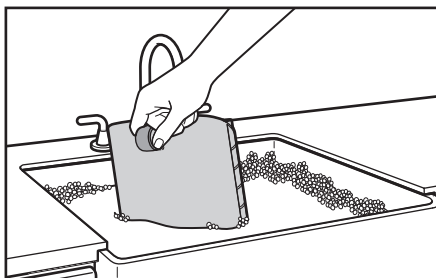


- 6** Wash the water tank in hot, soapy water and rinse with clean water. Dry with a soft cloth. The water tank cannot be washed in the dishwasher.

English

Emptying the Espresso Machine

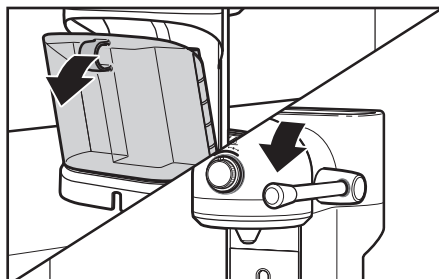


- 1** Tip the water tank slightly, then remove by pulling the water tank out from the Espresso Machine. Empty the water out of the tank and place it back on the Espresso Machine. Make sure the capsule compartment is fully closed by lowering the handle to a horizontal position.

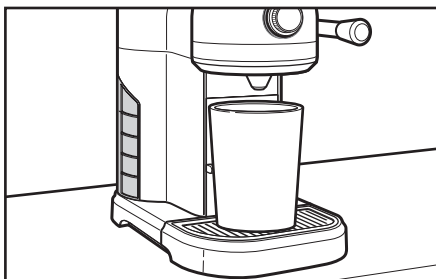


- 2** Place an empty container under the coffee outlet.


CARE AND CLEANING

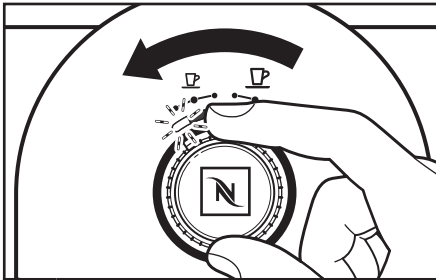

- 3** Enter the emptying mode by turning the brew button to the left most position and holding it for 6 seconds until the light starts to blink.

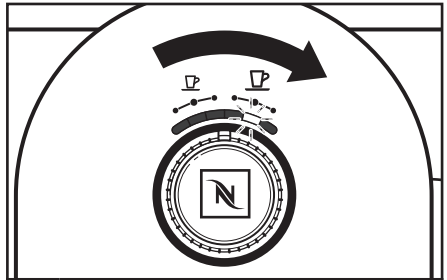

- 4** Then rotate the selection dial until the blinking light is above the middle right position and press the brew button. The emptying cycle will run until the tank is empty.

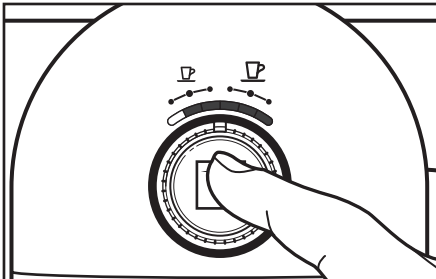


- 5** Press the brew button.


NOTE: Once Espresso Machine has emptied, allow it to cool down for 10 minutes before using.

Descaling

Calcium deposits (“scale”) from water will build up in the Espresso Machine over time and may impair espresso quality. Scale should be removed every month; local hard-water conditions may require more frequent descalings. Use the Nespresso brand packaged descaling agent available online to remove scale. Follow the directions on the package. KitchenAid does not recommend using home remedies or water and vinegar solutions to descale the Espresso Machine.

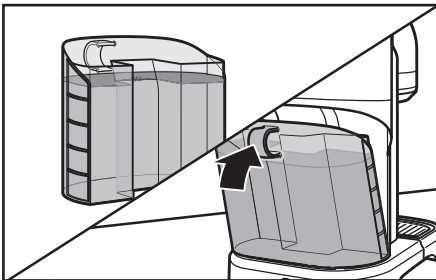


- 1** Add two descaling agent packets to the tank per package directions then fill the water tank with water to the “max” fill line. Replace tank on espresso machine.

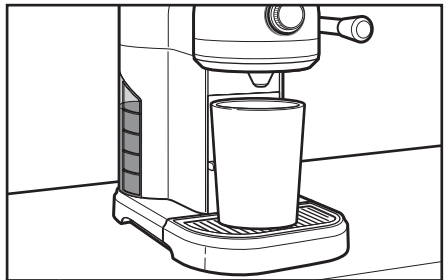


- 2** Place an empty container (at least 1.5L) under the coffee outlet.


CARE AND CLEANING

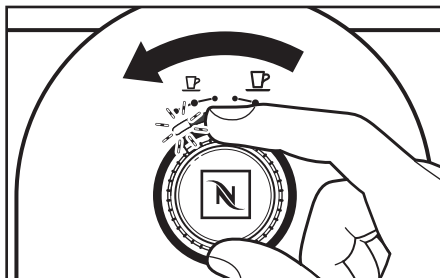


3 Enter descaling mode by turning the brew button to the left most position and holding it for 6 seconds until the light starts to blink.

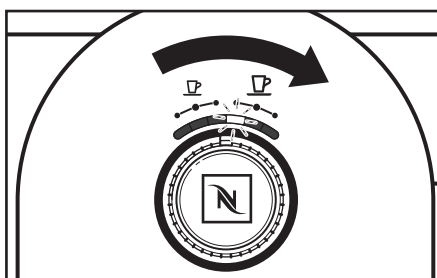

4 Then rotate the selection dial until the blinking light is above the first right position.

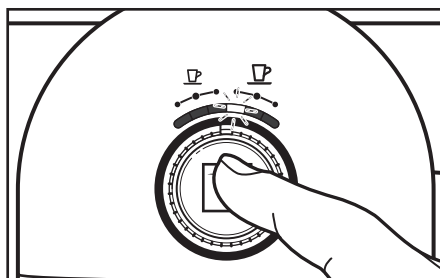

5 Press the brew button to start descaling and run until the water tank is empty.

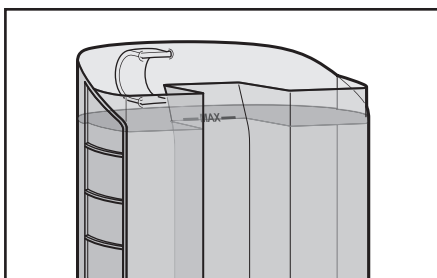


6 Fill the water tank with water to the "max" fill line a second time and repeat the cycle with water only to rinse. The Espresso Machine will automatically proceed to ready mode when finished.

TROUBLESHOOTING

- 1. If the power on indicator remains off and the Espresso Machine fails to heat when the Brewing button is pressed:**

⚠ WARNING



Electrical Shock Hazard
Plug into a grounded outlet.
Do not use with an adaptor or T.
Do not use with an extension cord.
Failure to follow these instructions could result in death, fire, or electric shock.

- Check to see if the Espresso Machine is plugged into a grounded outlet; if it is, unplug, plug it back in, and press the Brewing button again. If the Espresso Machine still does not operate, check the fuse or circuit breaker on the electrical circuit the machine is connected to and make certain the circuit is closed.

- 2. If coffee does not flow from the spout...**

- Water tank may be empty.
- Espresso Machine may need to be descaled.
- Capsule container may need to be emptied:
 - Check to see that there is not a capsule blocked inside the Espresso Machine.
 - Check to see that the capsule was inserted in the correct orientation.
 - Check to see that the handle is completely closed, see “Brewing espresso” section.

NOTE: If not cleared the brew water will flow into the capsule container to the maintenance unit. (Lift drip grid and check if unbrewed water is present).

- 3. If coffee grounds found in cup:**

The handle/capsule door was opened too soon. Wait 3 seconds after the brewing cycle has completed before opening the capsule door.

- 4. If the LEDs in position 1 and 6 blink alternately at 2 blinks per second:**

- This indicates the “overheating” error code. The lights will continue to flash until the Espresso Machine is ready, or it enters standby mode.

- 5. If the LEDs in position 1 and 6 blink 3 times alternately every 2 seconds at two blinks per second:**

- This indicates the “electronic” error code. Allow the Espresso Machine to go into standby mode, then check to see if the error is still there after reactivating.

If the problem cannot be fixed with the steps above, see the “Warranty and service” section.*

*DO NOT return the Espresso Machine to the retailer – they do not provide service. Please see the “Warranty and service” section for more information.

KitchenAid Espresso Machine warranty

KITCHENAID warrants this product against defects in materials and workmanship for a period of two years from the date of purchase. During this period, **KITCHENAID**, at the **NESPRESSO** after sales centers, will either repair or replace, at its discretion, any defective product at no charge to the owner. Replacement products will be warranted for 2 years. Repaired units will be guaranteed for only the unexpired portion of the original warranty or six months, whichever is greater. This limited warranty does not apply to any defect resulting from accident, misuse, improper maintenance, or normal wear and tear. The benefits provided by this **KITCHENAID** warranty shall not preclude application of more favourable local statutory rights. If you believe your product is defective, contact the Nespresso Club or Nespresso authorised representative for examination, repair or adjustment.

Customer service

Contact the Nespresso Club

For any additional information, in case of problems or simply to seek advise, call the Nespresso Club.

Country	Nespresso Club Contact Number
Australia	1800 623 033
New Zealand	0800 234 579

E-mail: auclub@nespresso.com

KitchenAid

© 2015. All rights reserved.

KITCHENAID is a trademark of KitchenAid, U.S.A.

NESPRESSO and the N Design are trademarks of Societe Des Produits Nestle SA.
Used under license.