

IMPORTANT SAFETY INSTRUCTIONS

When using an electric appliance, basic safety precautions should always be followed, including the following:

Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

1. Do not reach for a corded shaver that has fallen into water. Unplug immediately.
2. Power plug and the accessories connected to it are not for immersion or for use in shower.
3. Do not use an extension cord with this appliance.
4. Always unplug the shaver from the electrical outlet immediately after use, except when shaver is (re)charging.
5. Unplug and remove power supply cord from shaver before cleaning.
6. Do not place or store appliance where it is able to fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
7. The batteries used in this device may present a fire or chemical burn hazard if mistreated. Do not disassemble, heat above 100°C (212°F) or incinerate.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

1. Close supervision is necessary when this shaver is used by, on, or near children or invalids.
2. Use this shaver for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
3. Never operate this shaver if it has a damaged cord or charging plug, if it is not working properly, if it has been dropped or damaged, or dropped into water while plugged in. For assistance call 1-800-243-7884.
4. Keep the shaver, cord, charging plug and any attachments away from heated surfaces.
5. Never drop or insert any object into any opening.
6. Do not use the adapter in or near a power outlet that contains an electric air freshener to prevent damage to the adapter.
7. Do not charge or plug in shaver outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Always check cutter block and foils before using the shaver. Do not use the shaver if foils or cutters are damaged, as injury may occur.
9. Always attach plug to shaver first, then plug into outlet. Be certain plug is inserted firmly into shaver, up to mark indicated on plug. To disconnect, remove charging plug from outlet.
10. Never put the shaver in direct sunlight or store at a temperature above 140°F (60°C). Never clean the appliance with water above 104°F (40°C).
11. Keep the cord dry at all times. Do not handle with wet hands.
12. Only use the cord provided. To prevent possible damage to the cord, do not wrap cord around the shaver.
13. Never insert any type material into the socket of the appliance plug.
14. Only use the power plug and the accessories supplied with the appliance.

SAVE THESE INSTRUCTIONS


IMPORTANT: The power plug contains a transformer. Do not cut off the power plug to replace it with another plug as this will cause a hazardous condition.

Put It To The Test


Like many new products, your Philips SatinShave shaver may take a little getting used to. If you are using an electric shaver for the first time, or if you've been using a different brand, take time to acquaint yourself with your new electric shaver.

Your SatinShave shaver features an advanced shaving system with flexing curved blades under a dual flex protective foil that stays next to your skin for a close shave. We guarantee smooth results or Philips will refund you the full purchase price as long as the request is received within 45 days of purchase.

Features

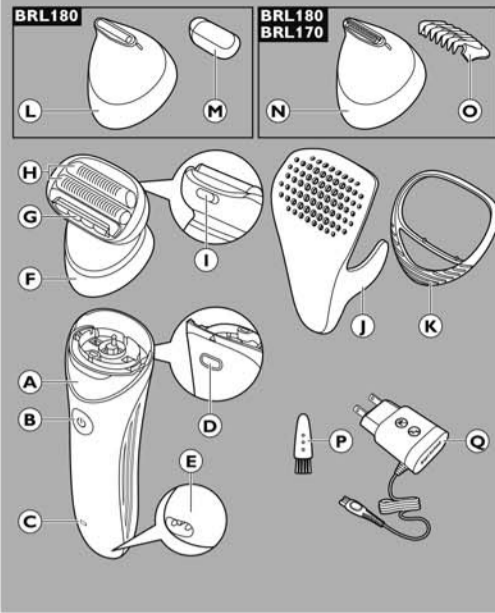

- A Handle
 - B On/Off Button
 - C Battery Indicator
 - D Release Button
 - E Socket for Small Plug
 - F Shaving Head
 - G Trimmer
 - H Foils
 - I Foil Holder Release Slide
 - J Travel Cap with Lock
 - K Efficiency Cap
 - L Small Shaving Head (BRL180)
 - M Small Shaving Head Protective Cap (BRL180)
 - N Bikini Trimmer Head
 - O Bikini Trimmer Comb
 - P Cleaning Brush
 - Q Adapter
- Pouch (not shown)
Full Two-Year Warranty
45-Day Money-Back Guarantee

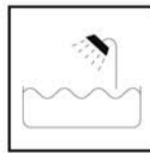

This symbol indicates that the Shaver can be used in the bath or shower.

To Charge/Recharge

- Fully charge shaver before using for the first time or after non-use for a long period of time.
- Charging, recharging or using the shaver at temperatures below 50°F (10°C) or higher than 95°F (35°C) adversely affects lifespan of the battery.

1. Be certain shaver is OFF.
 2. Insert the appliance plug directly into the shaver and plug the charging plug into any 120V AC outlet. Use only the cord provided.
 3. The battery indicator on the appliance will blink white to indicate the shaver is charging (Fig. 1).
- It will take approximately 1 hour to fully charge the shaver for a cordless operating time of 60 minutes.

4. After the shaver is fully charged, the battery indicator will light up white continuously (Fig. 2).

After 30 minutes the battery indicator goes out.

5. If the batteries run low while using, the battery indicator will blink orange.

6. Disconnect the cord and unplug from electrical outlet.

NOTE: If the shaver is fully charged and connected to the electrical outlet, the battery indicator blinks a few times when you press the on/off button. This reminds you to disconnect the shaver from the electrical outlet before using.

Quick Charge

- When the battery is completely empty, the battery indicator will blink white quickly when charging.
- After approximately 5 minutes, the battery indicator will begin to blink white slowly.
- At this time, the battery contains enough energy to finish your shave.

How to Shave

- Use this shaver for its intended household use as described in this manual.
- For hygienic reasons, the shaver and attachments should only be used by one person.
- Make sure shaver is fully charged before using. This shaver will not operate while cord is connected to an electrical outlet.
- For dry shaving, be certain your skin is clean and dry before shaving.



- For wet shaving, if desired, lather your skin with soap or shaving cream before shaving.
- Do not use deodorant or alcohol-based lotions immediately before or after shaving. However, you may want to use talcum powder.

1. Press the shaving head onto the handle (click) (Fig. 3).

Use the shaving head to shave legs, arms, underarms, stomach and bikini line.

2. If desired, attach the efficiency cap onto the shaving head (Fig. 4).

The efficiency cap makes hairs stand upright while shaving so hairs are easier to remove.

Note: The attachment will only fit onto the appliance in one direction.

3. Press the on/off button to switch on the shaver (Fig. 5).

4. Hold the shaver so that the shaver head or efficiency cap is in full contact with your skin (Fig. 6). Move the shaver slowly against the direction of hair growth, while pressing lightly (Fig. 7).

Tip: When shaving sensitive areas, stretch the skin with your free hand. For shaving underarms, put your hand on the back of your head to stretch the skin (Fig. 8).

Using the Small Shaving Head (BRL180)

- Use the small shaving head for precision shaving with greater maneuverability of small areas of your body such as the bikini area and underarms.
- If hairs in the area to be shaved are longer than 1/8 in./3mm, pre-trim them with the bikini trimmer head.

1. Be certain shaver is OFF.
2. Press the release button and lift the shaver head off the handle (Fig. 9).

3. Attach the small shaving head onto the handle (Fig. 10).

4. Press the on/off button to switch on the shaver (Fig. 5).

5. Stretch skin taut with one hand and move the appliance slowly making sure the head is placed flat onto your skin (Fig. 11).

6. Put the protective cap on the small shaving head to protect the head.

Trimming Your Bikini Area

- Use the bikini trimmer head to trim hard-to-reach areas in the bikini zone.
- For best results, trim your bikini area when your skin and the appliance are dry.

Trimming with a Comb

- The bikini trimmer head with the bikini trimmer comb trims hairs to a length of 1/8 in./3mm.

1 Be certain shaver is OFF.

2 Press the release button and lift the shaver head off the handle (Fig. 9).

3 Attach the bikini trimmer head onto the handle (Fig. 12).

4 Press the bikini trimmer comb onto the trimmer head (Fig. 13).

5 Press the on/off button to switch on the shaver (Fig. 5).

6 Stretch skin taut with one hand and place the comb on the skin making sure the flat part of the comb is in full contact with your skin. Move the comb slowly against the direction of hair growth.

Tip: Since not all hairs grow in the same direction, move the appliance in different directions (upwards, downwards and across).

7 Regularly remove cut hair from the comb.

8 Clean the trimmer head and comb after each use.

Trimming without a Comb

Remove comb if you are:

- ▶ Defining and styling your bikini line
- ▶ Removing single, unwanted hairs

1 Be certain shaver is OFF.

2 Remove the comb from the bikini trimmer head (Fig. 14).

3 Press the on/off button to switch on the shaver (Fig. 5).

4 For styling, place the appliance perpendicular on the skin to make a sharp and precise line.

5 Make well-controlled movements. Touch the hair/skin lightly with the appliance.

Be careful when using the bikini trimmer without a comb as it removes every hair it touches.

Cleaning

- ▶ Always clean your shaver and attachments after each use.
- ▶ Always switch shaver OFF, unplug and remove power cord before cleaning.
- ▶ Never clean, remove or replace shaving head while motor is on.
- ▶ Do not apply pressure to shaving head. Do not touch foils with hard objects as this may dent or damage foils or cutters.
- ▶ Do not use shaver if foils are damaged or broken. Skin injury may occur.
- ▶ Always put the travel cap on the shaving head to prevent damage to the foils.
- ▶ Do not use compressed air, abrasives, scourers or aggressive liquids such as gasoline or acetone to clean the shaver.

Cleaning the Shaving Head

1 Be certain shaver is OFF.

2 Press the release button and pull the shaving head off the handle (Fig. 9).

3 Push the foil holder release slide (1) on the back of the shaving head to release the foil holder (2) (Fig. 15).

4 Clean the foil holder and inside of the shaving head with the cleaning brush. Also brush away any hairs that have collected under the trimmers.

To avoid damage, never use a brush to clean the shaving foils.

5 You can also rinse the foil holder, comb and inside the shaving head under warm tap water.

6 Allow all parts to air dry thoroughly.

7 Place the foil holder back onto the shaver head.

8 For best shaving performance, it is suggested to lightly oil shaving head every six weeks by spreading a drop of mineral oil over the foils and trimmer.

Cleaning the Small Shaving Head (BRL180)

1 Be certain shaver is OFF.

2 Press the release button and pull the small shaving head off the handle.

3 Hold the sides of the top part and pull it off the bottom part (Fig. 16).

4 Brush the inside of the top part and the cutter of the bottom part with the cleaning brush (Fig. 17).

5 Rinse both parts of the small shaving head under warm tap water.

6 Allow both parts to air dry thoroughly.

7 Hold the sides of the top part and push it onto the bottom part.

8 Place the protective cap on the small shaving head to protect the head.

Cleaning the Bikini Trimmer Head

1 Be certain shaver is OFF.

2 If a comb is attached to the bikini trimmer head, remove the comb (Fig. 14).

3 Press the release button and pull the bikini trimmer head off the handle.

4 Use the cleaning brush to remove hairs off the bikini trimmer head and comb.

5 You can also rinse the bikini trimmer head and comb under warm tap water.

6 Allow all parts to air dry thoroughly.

Replacing the Foils and Cutters

- ▶ If the foils and cutters are worn or damaged, do not continue to use the shaver.
- ▶ Worn or damaged foils and cutters should only be replaced with original Philips foils and cutters which are available at www.philips.com/store or call 1-800-243-7884 for assistance.
- ▶ The foils and cutters are precision parts. Handle with care.

1 Always switch shaver OFF, remove the power cord from the outlet and shaver before replacing the foils and cutters.

2 Push the foil holder release slide (1) on the back of the shaving head to release the foil holder (2) (Fig. 15).

3 Push on one edge of each foil to release from the foil holder and pull each cutter off the base.

4 Place new foils into the foil holder and insert cutters onto the base.

5 Attach the foil holder back onto the base (click).

After replacing the foils and cutters, check to make sure the foils and cutters and shaving head are firmly attached before using shaver.

This shaver has no other user-serviceable parts. For assistance, call 1-800-243-7884.

Storage

- ▶ Be sure shaver is turned OFF. Remove cord from outlet and shaver before storing in a safe, dry location where it will not be crushed, banged, or subject to damage.
- ▶ Do not wrap cord around shaver when storing.
- ▶ Store cord in a safe location where it will not be cut or damaged.
- ▶ Do not place or store shaver where it can fall or be pulled into a tub or sink, water or other liquid while plugged in.
- ▶ Store the shaver and attachments in the pouch provided.

Accessories

- ▶ For maximum shaver performance replace the foils and cutters once a year.
- ▶ Replacement Foils and Cutters Model BRL385-Philips Replacement Foils and Cutters
- ▶ Replacement Parts may be purchased on our website www.philips.com/store

Assistance

For assistance, visit our website:

www.philips.com/support or call toll free 1-800-243-7884

Online information is available 24 hours a day, 7 days a week.

Disposal

- ▶ This Philips shaver contains a lithium-ion battery which must be disposed of properly (Fig. 18).
- ▶ Contact your local town or city officials for battery disposal information or call 1-800-8-BATTERY or www.rbr.com for battery drop-off locations.
- ▶ For assistance, visit our website, www.philips.com/support or call: 1-800-243-7884.

PHILIPS

SatinShave



BRL180

BRL170

Rechargeable Cordless Electric Shaver

BC

Always here to help you

Register your product and get support at www.philips.com/welcome



4222 003 0129 2

Full Two-Year Warranty

Philips Electronics North America Corporation warrants each new Philips product, Models BRL180/BRL170 (except foils and cutters) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.*

NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com or call 1-800-243-7884 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

*Read enclosed instructions carefully.

Manufactured for:
Philips Consumer Lifestyle
A division of Philips Electronics North America Corporation
P.O. Box 10313, Stamford, CT 06904

This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

PHILIPS is a registered trademark of Koninklijke Philips Electronics N.V.

© 2016 Philips Electronics North America Corporation. All Rights Reserved.

PHILIPS 45-DAY MONEY- BACK GUARANTEE

If you are not fully satisfied with your Philips Shaver send the product back and we'll refund you the full purchase price.

The Shaver must be shipped prepaid by insured mail, insurance prepaid, have the original sales receipt, indicating purchase price and date of purchase, and the money-back guarantee return authorization form enclosed. We cannot be responsible for lost mail.

The Shaver must be postmarked no later than 45 days after the date of purchase. Philips reserves the right to verify the purchase price of the product and limit refunds not to exceed suggested retail price.

To obtain money-back guarantee return authorization form, call 1-800-243-7884 for assistance.

Delivery of refund check will occur 6-8 weeks AFTER receipt of returned product.