

2 year warranty

Gator Pet 18V

Let's get started



Let's talk safety



Basic safety precautions

This handheld is intended for household use only and NOT for commercial or industrial use.

- · This handheld is for indoor use only.
- For dry debris use, not to be used on wet surfaces.
- Keep fingers, hair and loose clothing from moving parts and openings whilst using the handheld.
- Only Vax recommend charger, tools and accessories should be used with this handheld.

 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Please keep instructions for further use.



Don'ts

- X Don't charge the handheld outdoors
- Don't use this handheld if it has been dropped, damaged, immersed in water or left outdoors.
- Don't run over the charger cord or use handheld if the charger cord or plug is damaged. Please contact AU: 1300 361 505 / NZ: 0800 800 900
- ✗ Don't handle the plug or use the handheld with wet hands.
- Don't throw the handheld into fire or expose to high temperatures, as the handheld contains a rechargeable nickel cadmium battery which may cause damage or burst.
- Don't vacuum flammable or combustible materials (lighter fluid, petrol, kerosene, etc) or use in the presence of explosive liquids or vapours.

- ✗ Don't vacuum harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.)
- Don't pull or carry this handheld by the charger cord. Don't use the charger cord as a handle, pull the charger cord around corners or sharp edges or close a door over the charger cord. Don't unplug handheld by pulling on the charger cord.
- ✗ Don't attempt to remove blockages with sharp objects as this may cause damage to your handheld.
- Don't use the handheld charger with incorrect voltage as this may result in damage or injury to the user. The correct voltage is listed on the rating label.
- Don't vacuum up hot coals, cigarette butts, matches or smoking hot burning items or use in an area where there may be harmful fluids (chlorine, bleach, and ammonia drain cleaner).



Do's

- ✓ Always make sure filter and dirt container are fitted correctly before using your handheld.
- Always turn off the Gator handheld vacuum and disconnect the charger before carrying out any maintenance.
- ✓ Turn off all controls on the handheld before disconnecting or connecting the charger.
- ✓ Take extra care when cleaning on the stairs.

- Always protect the charger cable from heated surfaces or near open flames.
- ✓ Use only SAA approved 10amp extension cords, nonapproved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.
- ✓ Always carry the handheld by the handle.
- ✓ Store your handheld in a cool, dry area.

Please keep instructions for further use.

Thank you for buying this Gator.

Taking care of small cleaning tasks

The Gator Pet 18V hand vac is designed to make cleaning as quick and convenient as possible and this user guide will help you get the most out of your machine.

The Gator Pet 18V hand vac is perfect for small cleaning tasks on surfaces and upholstery.

Taking care of your Gator

Also inside this guide are instructions on maintaining your new machine, so that it's always ready when you need to tackle those small jobs.

Taking care of you

We're here if you need us. For trouble shooting, simply call or visit:




Australia: 1300 361 505 vax.com.au

New Zealand: 0800 800 900 vax.co.nz

Monday-Friday 8.30am to 5.00pm

Calls are charged at the standard local rate. Please make a note of the serial number and model number of the product before calling.

Contents

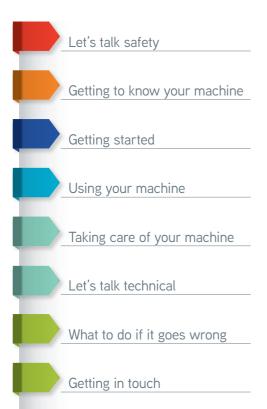

Gator Pet

Included with your machine



Filter




Charger



Turbohead

Getting to know your machine



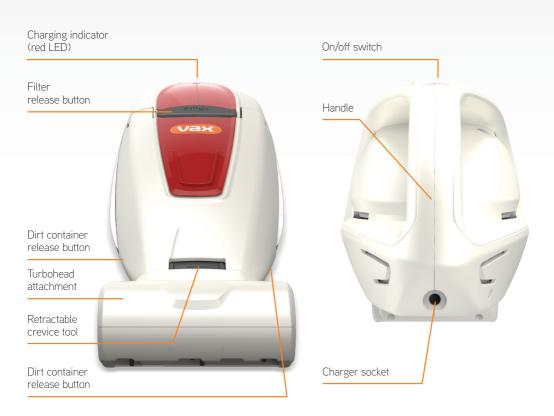

Technical Specification

Name Gator Pet
Voltage 18V
Weight 1.8kg
Capacity 0.3L
Cleaning Time 17 mins
Charging Time 12 hrs

Charger Specification


Model No. HK-AE-240A015-AU Input Voltage 100-240V ~ 50Hz




PLEASE READ 'LET'S TALK SAFETY' AT THE BEGINNING BEFORE USE



Plug charger into the mains and insert lead into back of machine. Initial charging time is 24 hours.

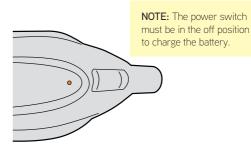

The charging light will illuminate continuously whilst the charger is connected.

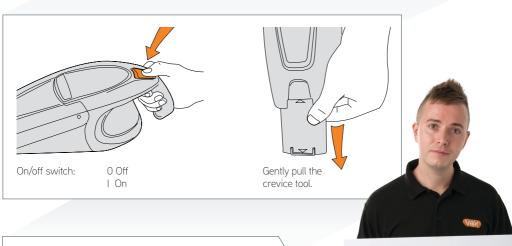




Push the crevice tool to retract.





WARNING

Failure to initially charge the battery for 24 hours, may result in poor battery performance.

 Using your machine

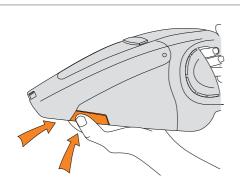



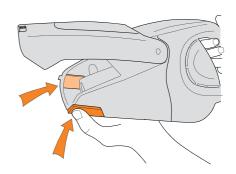




Empty dirt and debris over a bin.



We recommend to empty the dirt container after each use.



Taking care of your machine

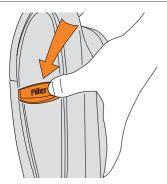

Press the filter removal button and pull dirt container from machine.



Whilst holding the dirt container over a bin, grasp the filter gently and pull out.



Shake any excess dirt or debris from the dirt container.



Tap filter against bin.





Wash the filter under running water and leave to fully dry for a least 24 hours before placing it back in the hand vac.

NOTE: Discoloured or damaged filters need to be replaced. For replacement filters call AU: 1300 361 505 / NZ: 0800 800 900 or visit vax.com.au /vax.co.nz





WARNING

Do not use the hand vac with a clogged filter and without the filter in place.

Always unplug the charging lead from the machine before carrying out any maintenance.

Taking care of your machine

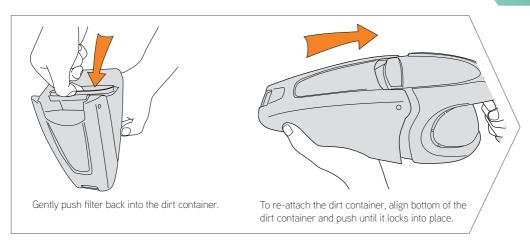

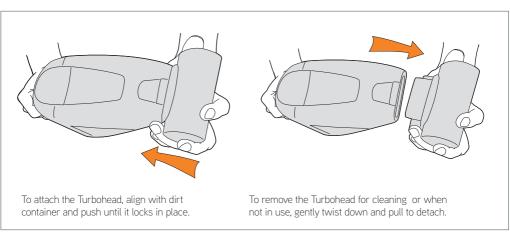

BATTERY MAINTENANCE

- Never short-circuit the battery, i.e. never touch both poles simultaneously, especially with metal objects.
- Never dismantle the battery.
- Never expose the battery to high temperatures.
- Improper handling can lead to liquid leaking from the battery.

 This can cause skin irritations. Avoid any contact with the fluid.
- Do not replace the battery with a battery of a different type.
- If it becomes necessary to replace the battery, contact the Vax Careline on AU: 1300 361 505 / NZ: 0800 800 900 to determine the location of your nearest authorised service agent.

What to do if it goes wrong

Problem

Why does my handheld have no power?

Solution

 Battery may not be fully charged. If using the hand vac for the first time the initial charge should be 24 hours.
 The charging light will illuminate continuously when charger is connected.

Why won't the handheld pick up?

- The nozzle or crevice tool may be blocked, check and clear any blockage.
- The filter may be clogged, clean the filter. Go to 'Taking care of your machine'.
- The dirt container may be full, empty the dirt container. Go to 'Using your machine'.
- The battery is getting weak, let the battery run until it stops and recharge.

Why won't the battery recharge?

• The charger may not be inserted correctly.

Taking care of you

We're here if you need us. For trouble shooting, simply call or visit:

Australia: 1300 361 505*

vax.com.au

New Zealand: 0800 800 900*

vax.co.nz

*Monday-Friday 8.30am to 5.00pm

^{*} Calls are charged at the standard local rate. Please make a note of the serial number and model number of the vacuum cleaner before calling.



Performance is everything."

Distributed by Techtronic Industries Australia Pty. Ltd. 31 Gilby Road, Mt Waverley, VIC 3149 Australia. Careline AU: 1300 361 505 www.vax.com.au Careline NZ: 0800 800 900 www.vax.co.nz