



WHIRLPOOL

REFRIGERATOR

6WRI 24 / 6WRI 27

OWNER'S INSTRUCTIONS

Before operating the unit, please read this manual thoroughly, and retain for future reference.

SAFETY PRECAUTIONS

Read Instructions

Please read all safety and operating instructions before operating this appliance.

Retain Instructions

Please keep this Owner's Manual for future reference.

Heed Warnings

All warnings, Cautions and Notes on this refrigerator are important; please pay attention to them.

Follow Instructions

For best results, follow all instructions given in this manual.

Model and Serial Numbers

Include both the model number and the serial number when corresponding with Whirlpool or your Dealer concerning this product.

SAFETY PRECAUTIONS

YOUR SAFETY AND THE SAFETY OF OTHERS IS VERY IMPORTANT

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to hazards that can kill or hurt you and others.

All safety messages will be preceded by the safety alert symbol and the word "DANGER" or "WARNING".

These words mean:



You will be killed or seriously injured if you don't follow instructions.



You can be killed or seriously injured if you don't follow instructions.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.


WARNING

Ensure that young children or infirm persons do not use the appliance without supervision.

Young children should be supervised to ensure that they do not play with the appliance.


CONTENTS

Installation	2	How to use	8
Cautions while using	5	Cleaning the refrigerator	9
Parts	6	Going on vacation	10
Temperature Zone	7	Moving the refrigerator	11
Storing food	7	Before calling service	12

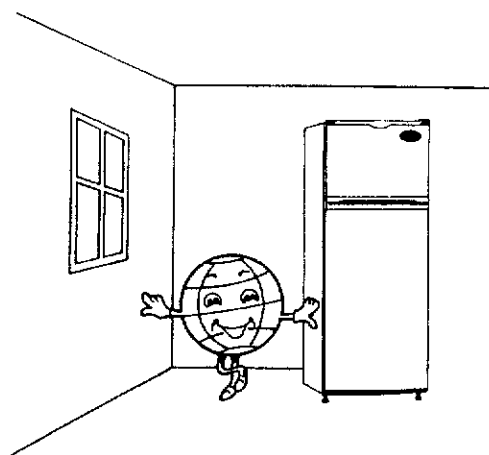


1. Select A Well-Ventilated Spot.

Give sufficient clearance around the refrigerator for dispersion of heat. Must be 100 mm at the back and 300 mm at the top. Since the doors in your Whirlpool No-Frost refrigerators are reversible, it can be accommodated in any corner of your home.

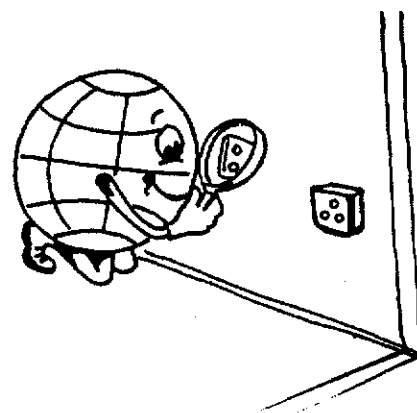


3. Identify Nearest Electrical Outlet.

- Choose a spot close to an electrical point. Ensure the point is properly earthed. Avoid extension leads, power boards or double adaptors.
- Before switching, be sure your supply voltage at home is the same as the one indicated on the identification rating label (at the back of the product) and on the power cord plug.

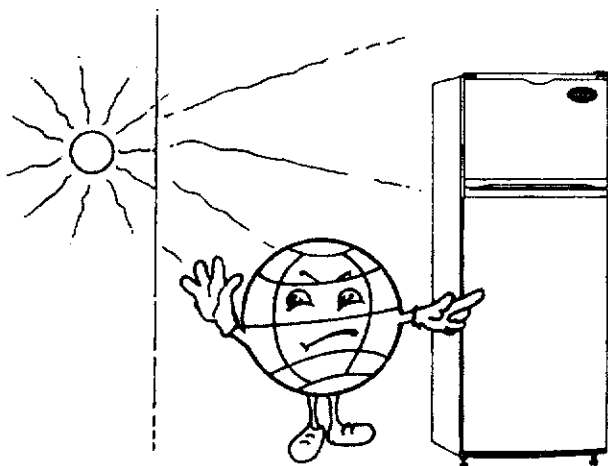

2. Avoid Extreme Heat Or Cold.

Place refrigerator away from heat sources like direct sunlight and cooking ranges. Avoid damp, exposed locations.

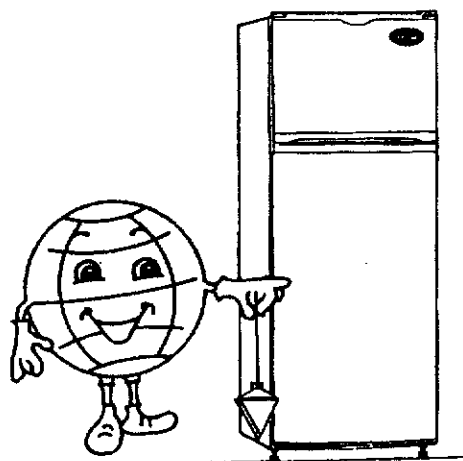


4. Place Refrigerator On level Floor.

Avoid carpeted areas. A stable installation minimizes noise and prevents tilting.




5. Slide Refrigerator Into Place. *

Your Whirlpool No-Frost refrigerator has castors at the rear to allow easy movement. To shift into the select spot, raise the refrigerator slightly from the front and slide it into place.

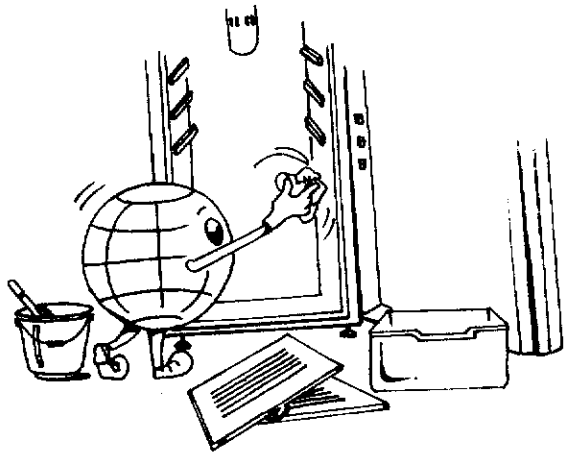


7. Clean Refrigerator.

Use a soft cloth with a mild detergent to clean the interior and exterior of the refrigerator.

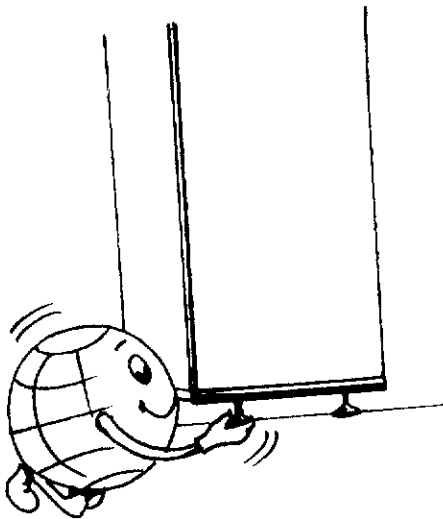

6. Adjust Glider Screws.


Two Glider screws are provided below your Whirlpool No-Frost refrigerator to allow easy levelling. Rotate the screws clockwise or anti-clockwise to raise the front slightly above the rear, so that the door shuts gently when left open.

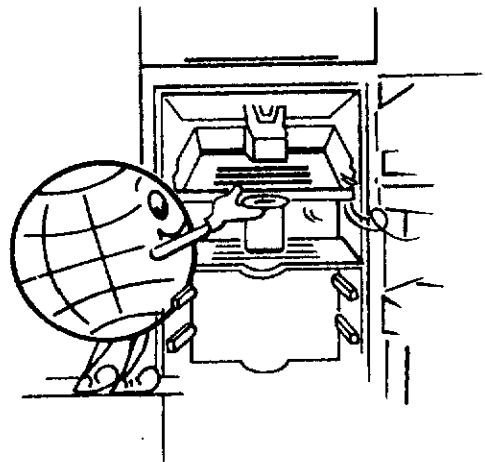

8. Install Snack Tray


Removes Snack Tray from packing and push it into place by tilting downwards slightly.

INSTALLATION

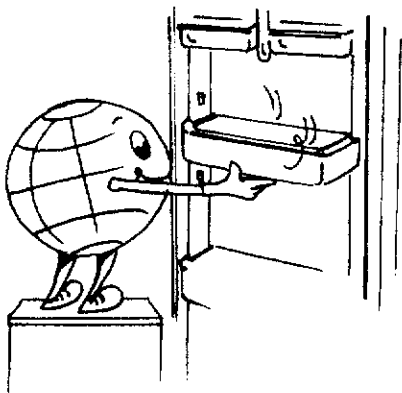

9. Install Door Bins.

Unpack Door Bins and lower them onto the selected notches from a slightly raised height.

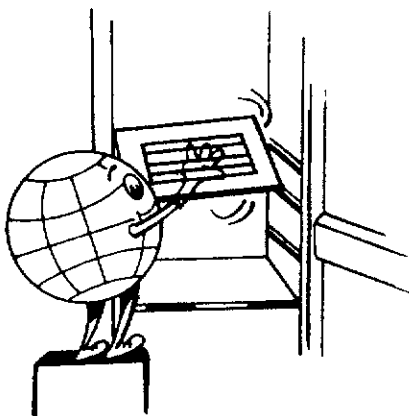

10. Install Refrigerator Shelves.

Select heights for shelves and slide them into place.

11. Plug into Electrical Outlet

12. Set Temperature Controls

Set the Temperature Controls in the refrigerator and freezer sections. (Refer section "Operating Your Refrigerator" for more details)

13. Run Refrigerator For 2-3 Hours Before use.


Allow the refrigerator to cool sufficiently before putting food.

Caution


1. Check for any transit damage. If any, inform the dealer prior to installing the refrigerator.
2. Keep ventilation openings in the appliance enclosure or in the built-in structure clear of obstruction.
3. The refrigerator must be positioned so that the plug is accessible.
4. The refrigerator shall not be exposed to rain.

CAUTIONS WHILE USING


1. - Do not allow water to splash onto the back of the refrigerator.
- Water impairs the insulation of electric parts and may cause an electrical short or a shock hazard.

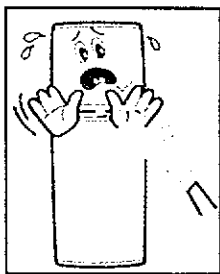


4. - For optimum operation, do not leave the door open for any longer than necessary.
- Leaving the door open allows warmer air to enter the refrigerator and causes the refrigeration unit to use more energy to maintain the cool temperature.

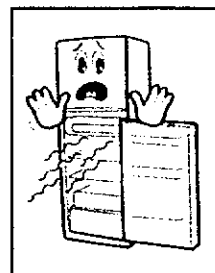


2. - Do not use flammable sprays such as lacquer and paint near the refrigerator.
- Heat from the refrigeration unit may ignite flammable aerosols.

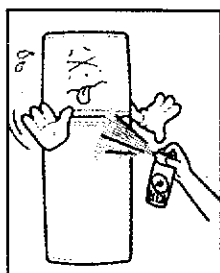


5. - Do not store volatile chemicals such as ether and benzene in the refrigerator.
- The fumes, besides damaging food, can build up and cause an explosion.

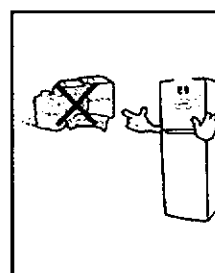


3. - The appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.

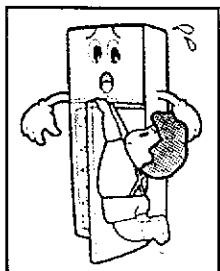

6. - Do not use the refrigerator if it is not operating correctly or has been damaged. Disconnect it from the power supply and call your local service center.
- If the power cord is damaged, avoid a hazard by replacing it through the manufacturer or its service agent or a similarly qualified person.

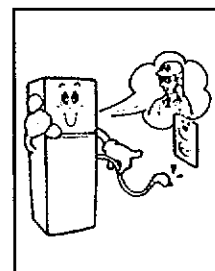


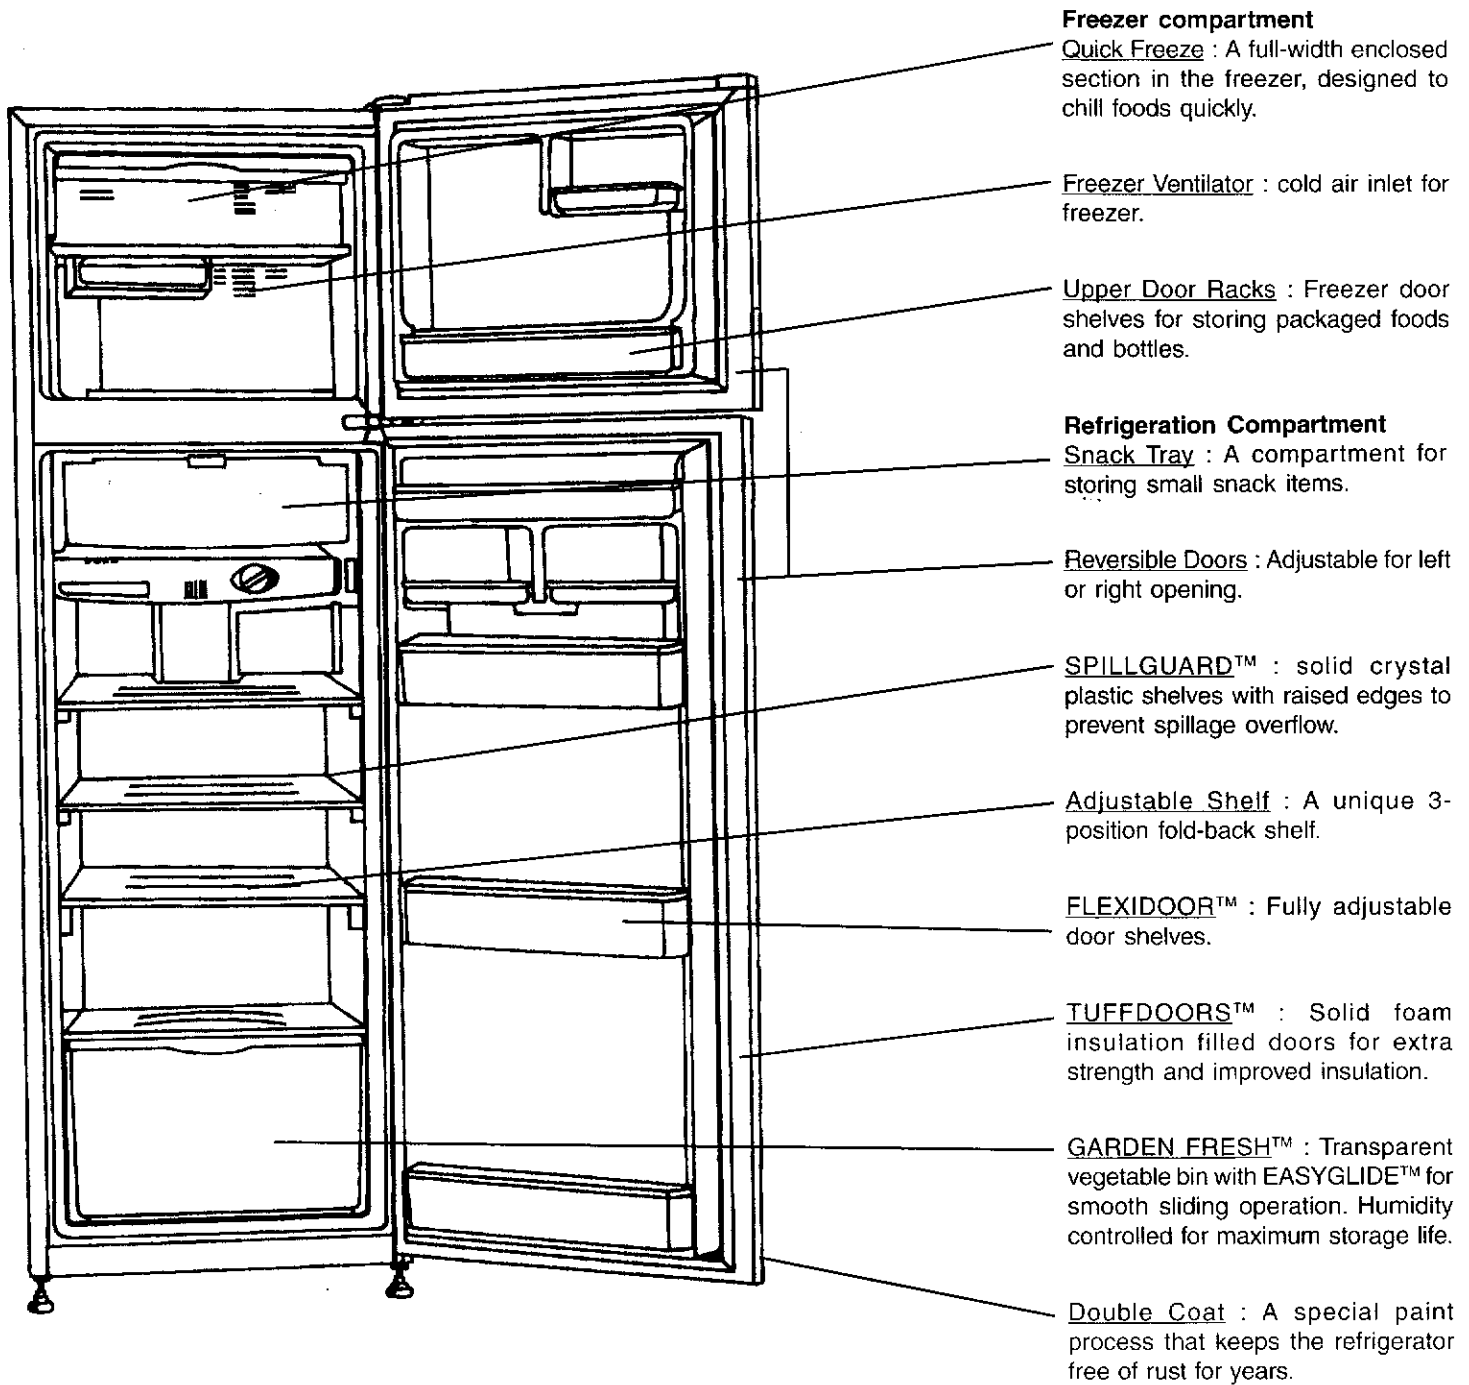

All trademarks are properties of Whirlpool Corporation, USA


TEMPERATURE ZONES IN YOUR QUICK-CHILL FROST-FREE

Your Whirlpool Quick-Chill Frost-Free refrigerator has 4 storage zones, each designed for a specific storage function:

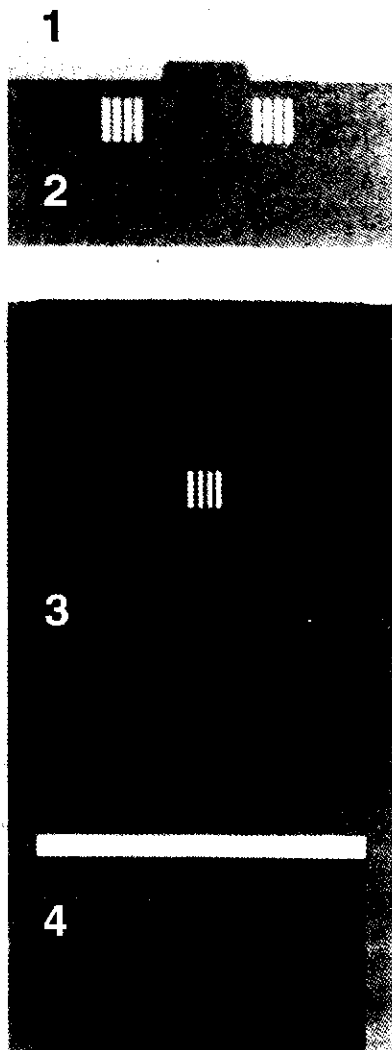

ZONE 1 : Quick Freezer

This is the coldest area of your refrigerator. The *quick freezer* quickly chills food to below freezing. It keeps ice-cream firm but creamy.

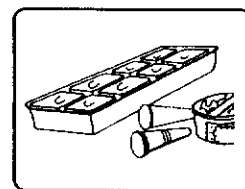


ZONE 2: Freezer

The freezer in your Whirlpool Quick-Chill Frost-Free chills foodstuff to below freezing. Because of its 4-star capability, it can keep meats fresh for as long as 3 months.




ZONE 3: Refrigerator Section.

The refrigerator section maintains a temperature ideal for many food items and preserves most foods including milk.

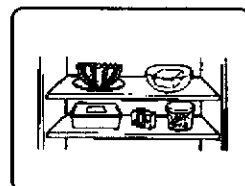

ZONE 4: GARDEN FRESH

The vegetable crisper has humidity settings to improve the storage life of fruits and vegetables.

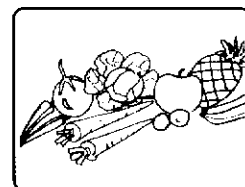


STORING FOOD

1. Store food in small portions.
2. Seal food in containers with lids, in plastic wrap or in plastic bags to prevent drying and the mingling of odors.
3. Allow hot food and drinks to cool to room temperature before placing them in the refrigerator or freezer.
4. Allow sufficient room between food to help the circulation of cool air.
5. Place liquid at the front of the refrigerator to avoid freezing.
6. Dry fruits and vegetables after washing before placing them in the refrigerator.


ADJUSTING TEMPERATURE CONTROL

Separate Temperature Control knobs are provided for the refrigerator and freezer compartments. Your Whirlpool No-Frost refrigerator has both controls factory preset to the optimum 'Mid' position.


The controls can be set according to the room temperature, frequency of door opening, and storage load.

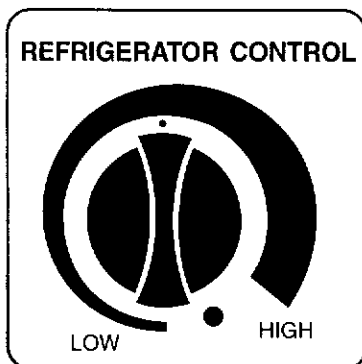


Factory Preset
(Optimum)

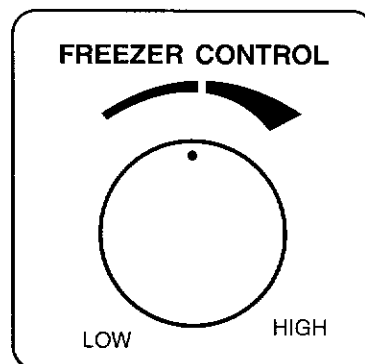


Factory Preset
(Optimum)

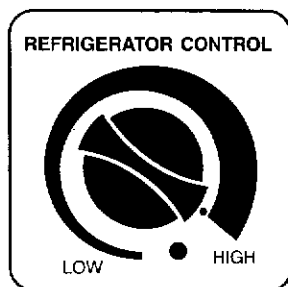


+

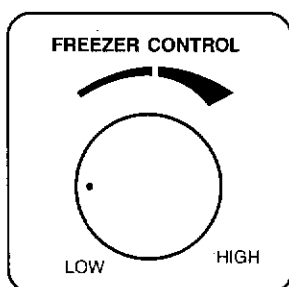

For Greater Cooling
in Refrigerator.

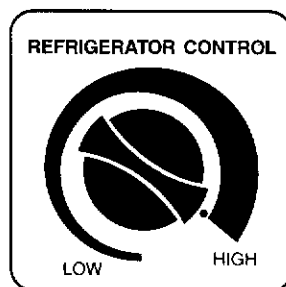


+

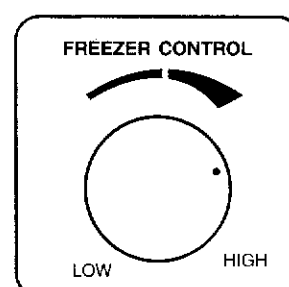

For Greater Cooling
in Freezer.

ADJUSTING HUMIDITY CONTROL

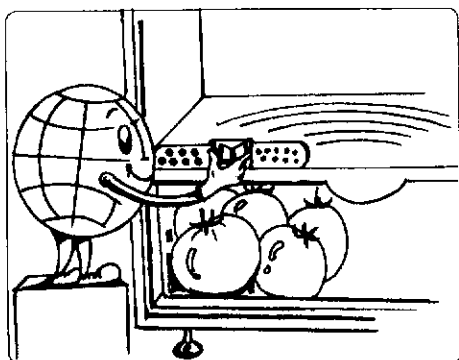


The GARDEN FRESH™ vegetable basket in your Whirlpool No-Frost refrigerator features a Humidity Control to maximise the storage life of fresh vegetables. For leafy vegetable, increase humidity by moving control to the 'high' position. For fruits and non-leafy vegetables, slide the knob to the 'low' position.

CLEANING THE REFRIGERATOR


1. Disconnect Refrigerator.

Switch off the power supply and remove the plug from the socket.

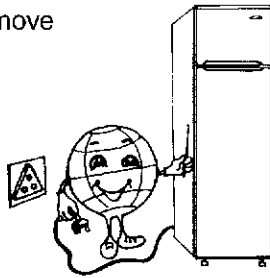


2. Unload Refrigerator.

Remove all food items from the refrigerator.

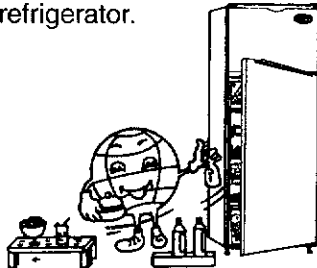


3. Pull-Out Refrigerator Shelves.

Remove all shelves and bins. To remove refrigerator shelves, push up gently from the rear of the shelf and then pull out.

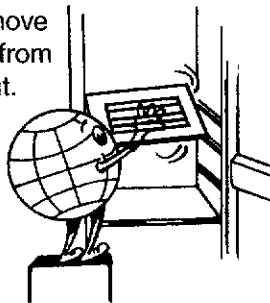


4. Remove Tray.

Angle the Tray downwards and pull out carefully.

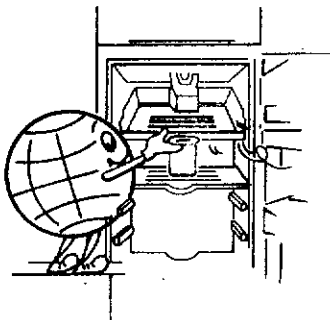


5. Remove Door Bins

Remove the bins in the refrigerator and freezer doors by lifting slightly and then pulling out.

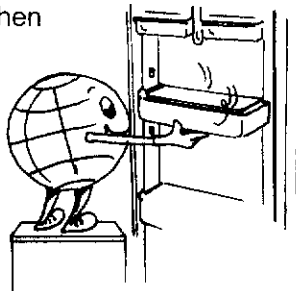


6. Wipe Refrigerator Clean.

Use a soft cloth and mild detergent to clean the refrigerator thoroughly. Take care not to damage the door seals.

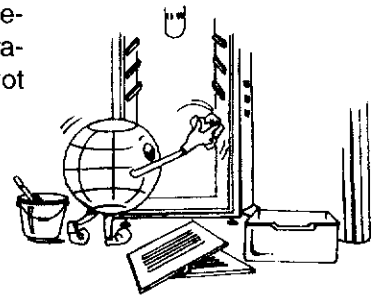

7. Leave Door Open.

Allow the refrigerator to dry by leaving the door open for some time.

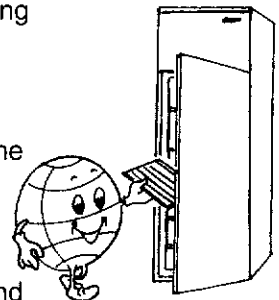

8. Replace Part.

Dry the parts and replace them in the refrigerator.

9. Restart.

Plug the power cord in the mains and switch on. Allow the refrigerator to cool for some time before placing food in it.

Caution

1. Do not splash water directly on the refrigerator.
2. Don't work with flammable sprays.
3. Be sure not to reinsert the power supply within 5 minutes of removing it from the socket.
4. Be sure to check the voltage before inserting the power supply cord into the socket.
5. Ensure that the water does not get into the light bulb socket or other electrical components of your refrigerator.
6. Don't allow water to collect at the bottom of the cabinet.

Tips

1. Apply a good polish to your refrigerator to keep it looking new for an extended period of time.
2. An open carton of baking soda kept in a corner on one of the shelves will work as an inexpensive air freshener.

GOING ON VACATION

SHORT VACATION

During an average length vacation (say, 1 week or less), it is usually best to leave the refrigerator and freezer in regular operation.

LONG VACATION

For an extended duration vacation, perform the following steps:

1. Unload Refrigerator

Remove all food items from the refrigerator and freezer sections.

3. Clean Refrigerator.



Use a soft, damp cloth and wipe the refrigerator clean from the inside and outside.

2. Unplug Power Cord

Switch off the mains and disconnect the power cord from the socket.

4. Leave Doors Open


Leave both the doors open to prevent formation of odour.

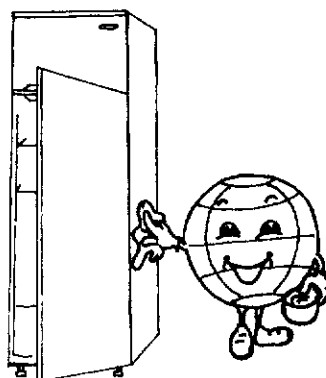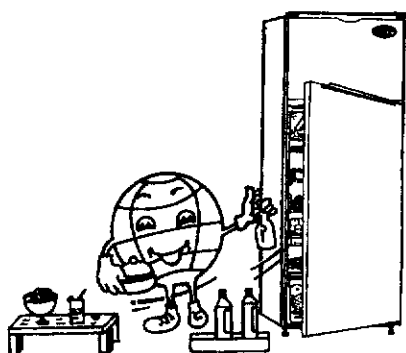

MOVING THE REFRIGERATOR


1. Unplug Power Cord

Switch off the mains and disconnect the power cord from the socket.

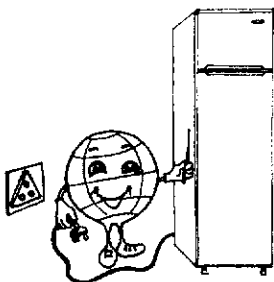


4. Fasten Components

Use tape to fasten the interior components and keep doors shut during transportation.

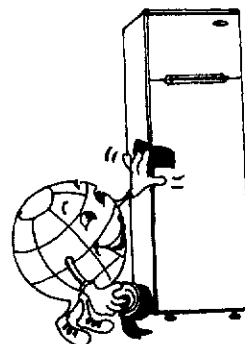


2. Unload Refrigerator

Remove all food items from the refrigerator and freezer sections.

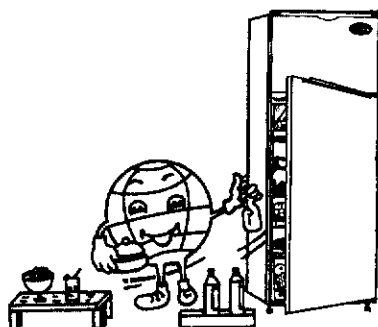

5. Move Refrigerator

Lift the refrigerator slightly from the front and slide easily using castors at the rear.

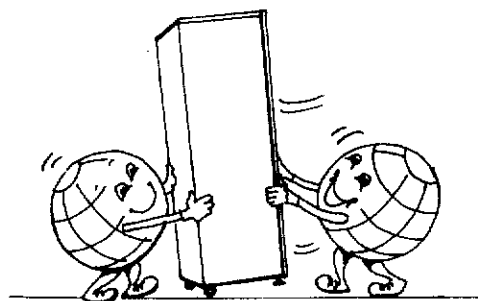

3. Clean Refrigerator.

Use a soft, damp cloth and wipe the refrigerator clean from the inside and outside.

BEFORE CALLING SERVICE

Having a problem with your Whirlpool No-Frost refrigerator. Make these simple self-checks before you call for service

assistance, if the problem persists, turn to the next to find out how you can get service assistance, promptly.

Problem	Self Check
Refrigerator does not work.	Is the power cord plugged into the socket? Is there a power breakdown? Has the circuit breaker tripped? is there a loose connection? Is the thermostat in off position? Is the bulb fused?
Refrigerator attempts to start but fails	Is the voltage low?
Ice formation is slow.	Is the Freezer Control in the "Hi-Cool" position?
Cooling in the refrigerator section is not enough.	Is the Refrigerator Control set to low? Is the air passage obstructed by food? Is the refrigerator compartment overcrowded? Is the refrigerator door fully closed? Are the doors being opened too frequently? Are you storing hot food in the refrigerator?
Refrigerator runs non-stop.	Are the Temperature Controls set too high? Is the door left open for long?
Refrigerator works but inside light does not.	Press down light cover to snap it open. To remove the bulb unscrew it anticlockwise. Check the filament against the light. Replace the bulb by screwing it clockwise. Fit the light cover by sliding forward and then snapping upwards.
Refrigerator gives mild shock.	Is the earthing done properly?
Refrigerator makes too much noise.	Is the refrigerator on level surface? Is the refrigerator too close to the wall?
Refrigerator compartment is smelly.	Has the refrigerator been cleaned recently? Is there an object with a strong smell, inside?

Warning

1. Do not attempt to modify any part of this appliance.
2. Do not connect this appliance to power sources other than specified.
3. If the power cord is damaged, have it replaced by your Whirlpool Service Centre.
4. Do not use mechanical devices or other means to accelerate the defrosting process.
5. Do not damage the refrigerant circuit.
6. Do not use electrical appliances inside the food storage compartments.



Whirlpool is the registered trademark of Whirlpool U.S.A.