

morphy richards®

Flavour Savour



Flavour Savour

Please read and keep these instructions

GB

Flavour Savour

Merci de bien vouloir lire et conserver ces instructions

F

Flavour Savour

Lesen Sie diese Bedienungsanleitung, und heben Sie sie gut auf

D

Flavour Savour

Lea estas instrucciones atentamente y guárdelas

E

Flavour Savour

Lees deze instructies en houd ze goed bij

NL

Flavour Savour

Leia e guarde estas instruções

P

Flavour Savour

Leggere e conservare le presenti istruzioni

I

Flavour Savour

Læs og gem venligst denne vejledning

DK

Flavour Savour

Läs och spara dessa anvisningar

S

Flavour Savour

Prosimy zapoznać się z niniejszą instrukcją obsługi i zachować ją do wykorzystania w przyszłości

PL

Flavour Savour

Внимательно изучите и сохраните данное руководство

RU

Flavour Savour

Přečtěte si prosím a uchovejte tyto pokyny

CZ

Flavour Savour








Lütfen bu talimatları okuyun ve saklayın




TR



www.morphyrichards.com

Australia's largest online appliance retailer

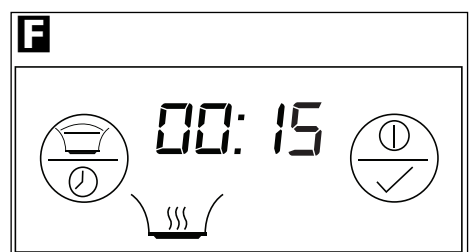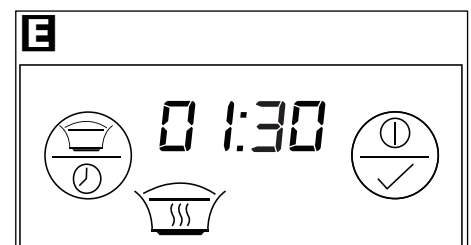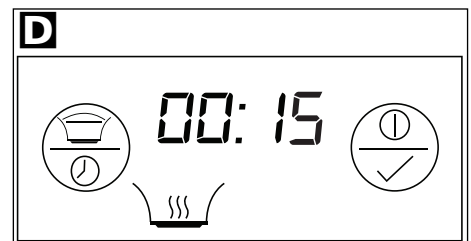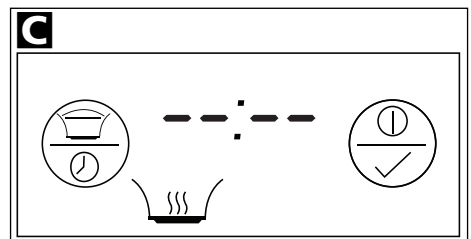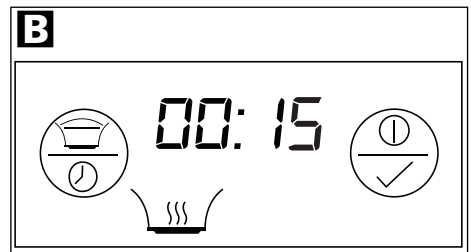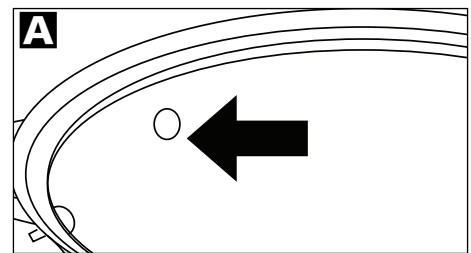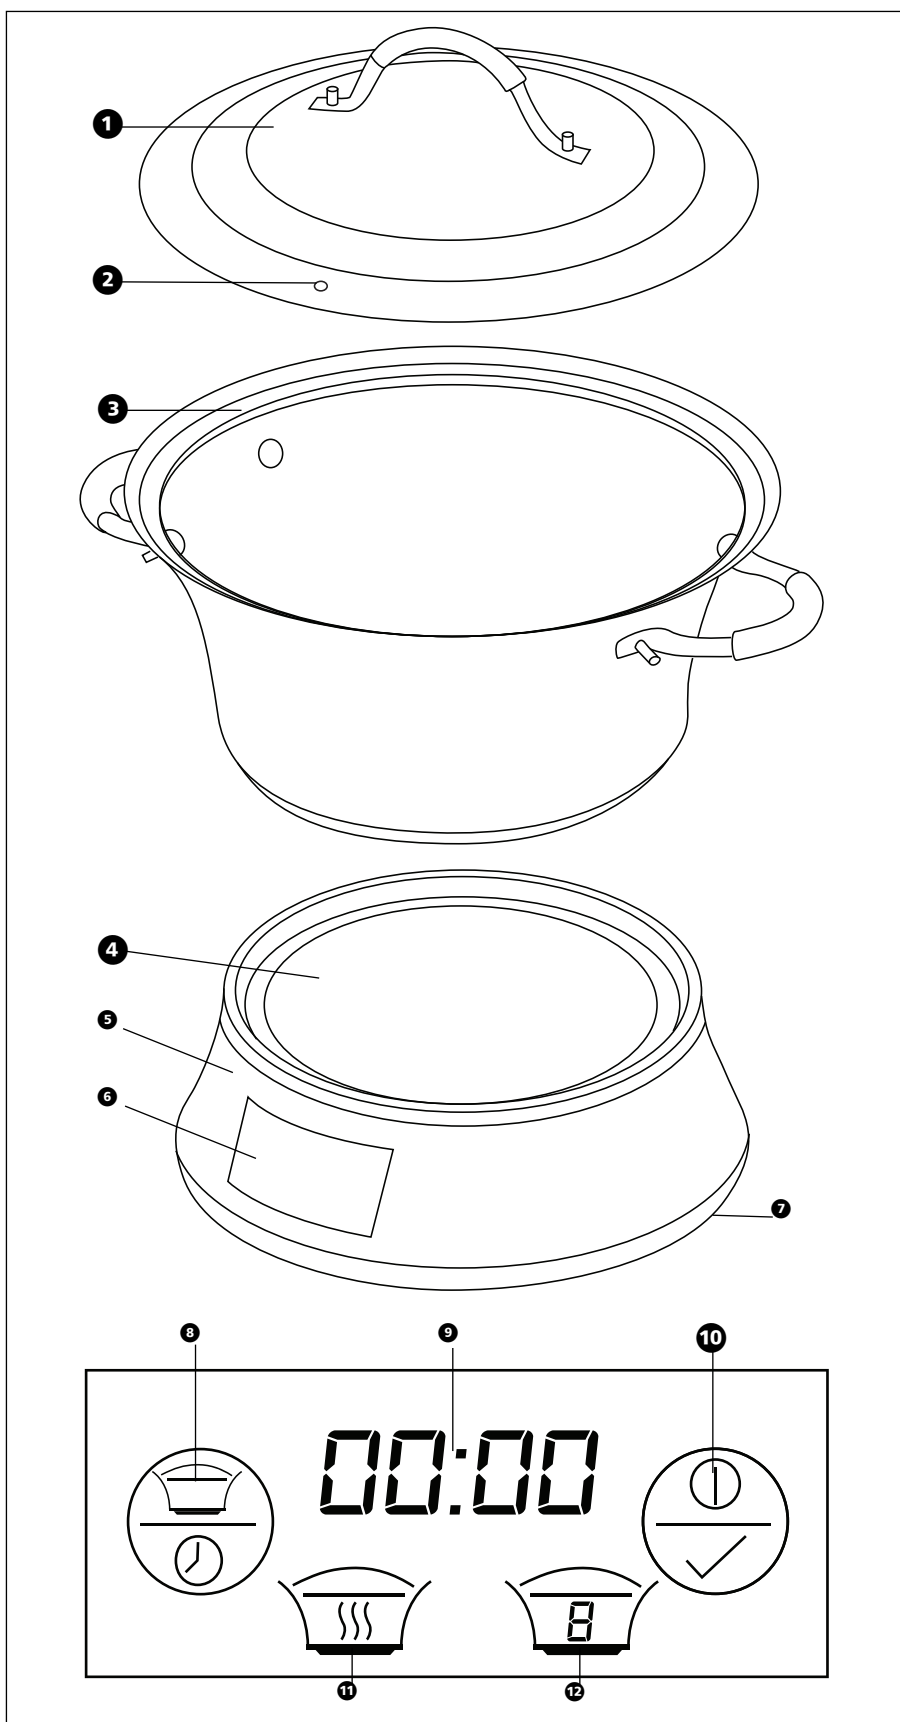

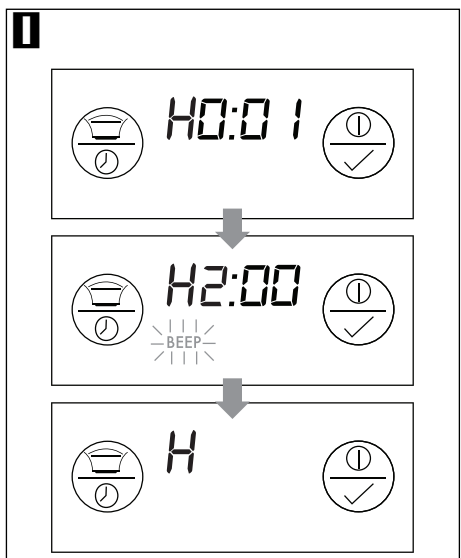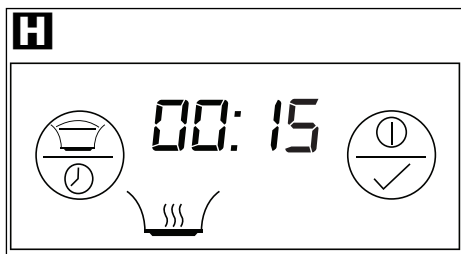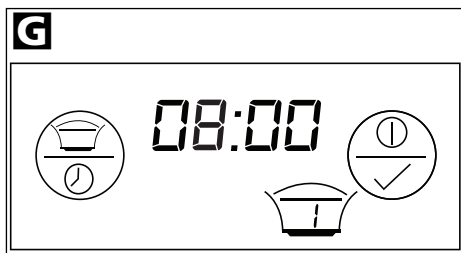


- GB
- F
- D
- E
- NL
- P
- I
- DK
- S
- PL
- RU
- CZ
- TR

Flavour Savour

Easy set-up guide

Please also refer to the main instruction booklet, which contains important safety information and more detail on how to use Flavour Savour.

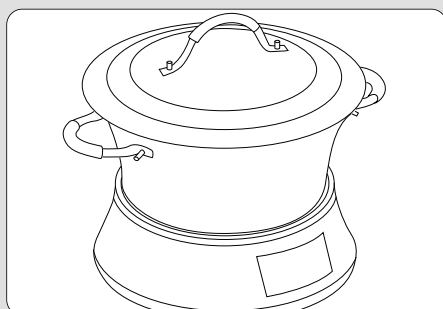

This guide tells you how to use the Flavour Savour to seal / brown approximately 1kg of meat and then use the 1:30 hour stew or 8 hour slow cook programme. For all other programmes, please see the full instructions.


To Use the Seal / Brown Function

1




Place the pan **3** on to the base unit **5**, plug the Flavour Savour in. The display will show the default screen (left.) The Seal / Brown icon **11** and time display **9** will be flashing. Add an appropriate amount of oil to the pan for the quantity of meat you wish to seal.

2

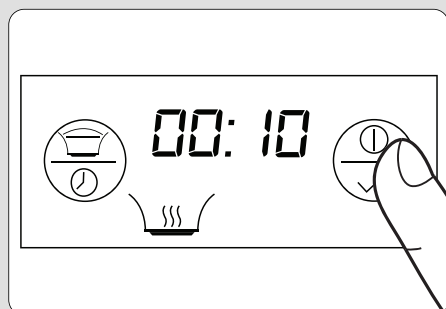

Press the 'Accept' button **10**. The Flavour Savour will beep for approximately 2 seconds and the display will stop flashing. The pan will then start to heat up and the timer **9** will begin to countdown. The oil will take approximately 5 minutes to reach the correct temperature for sealing/browning meat (i.e. when the timer reads 00:10).

3

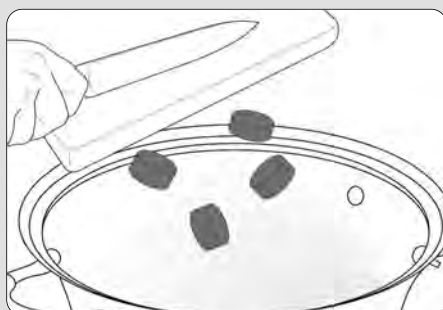

Add the meat to pan and stir regularly until the outside of the meat is sealed/browned. When the timer reaches zero, the base will beep and the cooking process will stop. If your meat is sealed before the 15 minutes is up, hold down the 'Accept' button **10** for approximately 3 seconds. The base will beep and the cooking process will stop. If you need to continue, repeat the process from stage 2 above.

To use the 1:30 Stew Function

4




When the sealing/browning process is complete, add your remaining ingredients (as per the recipe). Press the 'Function / Time' button **8** once and the following screen will appear (left) Press the 'Accept' button **10** twice, the base will then beep for approximately 2 seconds before the cooking process begins. Replace the lid when using the Flavour Savour on this setting. For countdown timer and keep warm, please see point 6.

OR to use the Slow Cook Function

GB


5

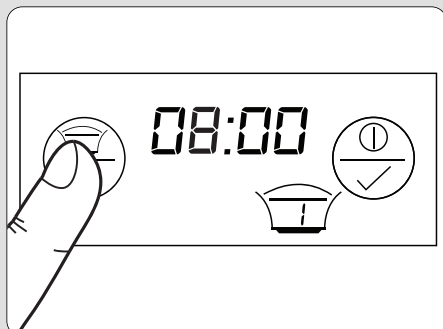

When the sealing/browning process is complete, add your remaining ingredients (as per the recipe). Press the 'Function / Time' button **8** twice and the following screen will appear (left) Press the 'Accept' button **10** twice, the base will then beep for approximately 2 seconds before the cooking process begins. Replace the lid when using the Flavour Savour on this setting. For countdown timer and keep warm, please see point 6.

Countdown Timer and Keep Warm Function

6

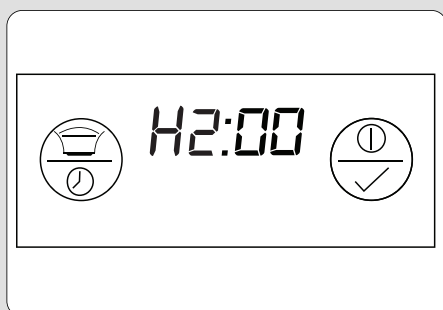

At the end of the cooking process the product will beep and automatically switch to keep warm. Keep warm will last for up to two hours and counts up from H0:00 to H2:00. At the end of the 2 hours, the display will show 'H' which will stay on the screen until the hot plate reaches ambient temperature (approximately 40°C). The screen will then go blank.

Pressing any button will take you back to the screen shown when first turned on.



Getting the best from your new appliance...

Safety

Never touch the outer surface of the slow cooker pan during its operation or before it has cooled down. Use oven gloves when removing the lid or stainless steel cooking pan.

Efficiency

Removing the lid will allow valuable heat to escape, reducing the efficiency of your slow cooker and increasing the cooking time. Try not to remove the lid more than 3 or 4 times to stir or add ingredients.

Enjoy the benefits

Slow cooking gives you convenient, versatile and flavoursome food. Longer cooking times allow better distribution of flavours, giving them time to blend and season the food. A slow cooker heats food gently, making it a great way to cook meats, less expensive cuts in particular, such as stewing beef, which are tenderised through the long cooking process. Remember, there are no limits to the potential uses of your slow cooker, only your imagination!

IMPORTANT SAFETY INSTRUCTIONS

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition, we offer the following safety advice.

Location

- This appliance is intended to be used in household and similar applications such as:
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- Always locate your appliance away from the edge of the worktop.
- Keep your appliance away from any hot burners and heated ovens.
- Ensure that the appliance is used on a firm, flat, heat resistant surface.
- Ensure that sufficient space is left above and around all sides of your appliance to allow air to circulate.
- Do not use the appliance outdoors or near water.
- IMPORTANT:** Do not use too close to curtains, draperies, walls, cupboards and other flammable materials.
- WARNING:** Do not use underneath cupboards.

Personal safety

- WARNING:** Do not touch the appliance or other hot parts during or after use, use the handles or knobs, and always use oven gloves when removing the pan lid.
- To protect against the risk of electrical shock do not put base in water or in any other liquid.
- Do not touch hot surfaces. Use oven gloves or a cloth when removing lid or handling hot containers.
- Extreme caution must be used when moving an appliance containing hot food, water, or other hot liquids.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Mains cable

- The mains cable should reach from the socket to the appliance without straining the connections.
- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the cable run across an open space e.g. between a low socket and table.
- Do not let the cable run across a cooker or hot area which might damage the cable.
- Never leave the appliance connected to the socket outlet when not in use.
- If the supply cable is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Children

- Children should be supervised to ensure that they do not play with the appliance.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.
- Children are vulnerable in the kitchen, particularly when unsupervised and if appliances are being used or cooking is being carried out.
- Never allow a child to operate this appliance.

Other safety considerations

- Do not switch on the cooker if the pan is empty.
- Allow the lid and stainless steel cooking pan to cool before immersing in water.
- Never cook directly on the base unit. Use the stainless steel cooking pan.
- Do not use the lid if cracked or chipped.
- Do not switch on the appliance when it is upside down or laid on its side
- The lid and stainless steel cooking pan are fragile. Handle them with care.
- Do not operate with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Morphy Richards for advice.
- Do not attempt repairs - the appliance contains no user-serviceable parts. Call our helpline for advice.
- The use of attachments or tools not recommended by Morphy Richards may cause fire, electric shock or injury.
- Do not place on or near a hot gas electric burner or in a heated oven.
- Only use for intended purpose.
- Unplug from the socket when not in use, before putting on or taking off attachments, and before cleaning.
- Do not move the appliance whilst hot.
- This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Always use the cooking pan supplied with this appliance. Do not use another pan.**

ELECTRICAL REQUIREMENTS

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).

WARNING: This appliance must be earthed.

UK only

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains cable, if severed, must be destroyed, as a plug with a bared flexible cable is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

Features

- 1 Stainless steel / Glass lid
- 2 Steam vent
- 3 Stainless steel cooking / serving pan (either 4.5L or 6.5L depending on model)
- 4 Heating element
- 5 Base unit
- 6 Control / Display panel (see enlarged diagram)
- 7 Drain hole x2 (underneath)
- 8 Function / Time button
- 9 Time display
- 10 Accept button
- 11 Seal / Brown icon and Stew Icon
- 12 Slow Cook icon

Key



Seal/Brown icon



Stew icon



Slow Cook icon

appliancesonline
.com.au

Australia's largest online appliance retailer

Cooking Capacity

- The 6.5 litre Flavour Savour has a maximum working capacity of 5 litres.
- The 4.5 litre Flavour Savour has a maximum working capacity of 3.5 litres.
- The capacity can be found on the rating label, located underneath the product.

Before using the Flavour Savour for the first time

Remove all labels and tags from the product.

Wash the stainless steel pan and lid in hot soapy water with a sponge or dishcloth. DO NOT use a scouring pad or other abrasive material as this will mark the stainless steel. Rinse the pan and lid thoroughly and dry.

IMPORTANT: DO NOT IMMERSE THE FLAVOUR SAVOUR BASE IN WATER

Please note:

During initial use, you may notice a slight odour due to the burning off of manufacturing residue. This is completely normal, does not effect the food being cooked and will disappear after a few uses.

Flavour Savour Hints & Tips

- All ingredients should be at room temperature before adding. If chilled, allow to come to room temperature, as cold food will affect the cooking time.
- Meat can be used chilled from the fridge, but do not use frozen meat. Use the browning function to seal the meat.
- Make sure all frozen ingredients are thoroughly thawed before use.
- If using cold stock in the slow cooking recipe (for example, wine) you will need to pre-heat the ingredients. Start with the browning function first, adding all the ingredients. When the 15 min time is up, continue with the slow cooking function.
- In traditional stove top slow cooking, it is advised to coat the meat in flour before browning. There is no need to do this in the Flavour Savour. Simply brown / seal the meat as instructed. If the liquid needs to be thickened, add and stir in a corn flour / cold water paste mix 30 minutes towards the end of the cooking time.
- If using meat on the bone (for example, chicken thighs, spare ribs, etc), the slow cooking process can make the meat fall away from the bone - this is normal, and results in a richer flavour. However, watch out for small bones that could be in the liquid.
- Do not over fill the pan, as the recipes in this instruction booklet are designed for maximum capacity, and allows room above the food for even cooking. The capacity can be found on the rating label, located underneath the product. If using your own recipe, do not fill above the handle rivets that can be seen inside the pan. **A**
- The lid will become very hot in use, especially the glass window and the stainless steel rim. The silicon insulated handles will stay cool, allowing you to lift the lid with. However, it is advisable to take the precaution of using oven gloves when doing this.
- Ingredients should be evenly distributed throughout the pan. However, root vegetables are better placed in the lower half of the pot to start cooking. All ingredients should be immersed in the cooking liquid.
- To ensure even cooking, root vegetables should be cut to size (approx 20mm cubed).
- If the pan over boils, this will usually be because it has been over filled, so remove some of the ingredients and /or liquid.
- In general, tough meats like stewing meat require longer cooking times which are ideal for slow cooking. For the stew function, a better quality cut of meat is required to suit the 1:30-1:45 cooking time.
- Chicken and quality cuts of meat require less time to cook. You should therefore use the lower value of the time range – for example, for level 1 use 8 hours.
- For dumplings, add to the stew 30-45 minutes before the end time. You can add these to the surface, and there is no need to submerge in the liquid.
- Ham joints should be left in the plastic wrapper, if supplied. If not, use a suitable heat resistant plastic bag or tie with butchers string to prevent the ham from falling apart during the cooking.
- If using the stew setting, allow the cooked food to rest for 10 minutes in the pan before serving. This allows the hot (boiling) food to cool before eating.
- When you have become experienced at using your Flavour Savour, you can begin to create your own recipes, but it is advisable to follow an existing recipe as a guide. If using ingredients such as pasta, milk, cream, sea food or shell fish in a recipe, these should be added 30 minutes towards the end of the cooking of the other ingredients. Coconut milk and rice pudding recipe does not apply.
- Do not leave raw, uncooked food in the pan for any length of time. Start the cooking process as soon as possible. If you have to delay the cooking, store the food in a fridge, and when ready, allow to come back to room temperature.
- If a previously cooked recipe has gone cold, use the stew setting at 1:30hrs to reheat the food. Depending on the recipe, this can take 30-45 minutes to reheat. Ensure the food is hot before serving.
- If you are cooking half quantities, cooking time can usually be reduced to two thirds. Check that the food is thoroughly cooked before serving.
- Adapting existing recipes from conventional cooking to use in a slow cooker may require reducing the liquid used, as liquid does not evaporate to the same extent.

- Where stock is required, use boiling water.
- When cooking joints of meat, start by covering with boiling water or stock. This can be reduced towards the end of the cooking time.
- Uncooked red kidney beans must be soaked and boiled for 10 minutes to remove toxins before use in the Flavour Savour.
- If required pour off excess oil after browning.
- If using stock or sauces from jars or containers, heat first in a microwave and then add to the pan. Alternatively add 30 minutes to the cooking time.

Explanation of Terms

Browning/Sealing:

Before stewing or slow cooking meat, it is important that the meat is sealed / browned first. This means to cook the meat lightly on the outside in hot oil before starting the stewing or slow cooking process (the meat should still be raw in the middle). Sealing / browning your meat in this way helps it to retain flavour as well as moisture.

Stewing:

With respect to the Flavour Savour, stewing means to cook your meat and / or vegetables in a liquid (eg wine, stock, water) in between 1 hour 30 minutes and 1 hour 45 minutes.

Slow Cooking:

Slow cooking is a way of cooking food over a long period of time (usually between 4 and 10 hours) in a liquid (eg wine, stock, water). As the name suggests, food is cooked more slowly and gently, often meaning that meat will be more tender. Meats with a higher fat content are well suited to slow cooking as the process allows the fat to melt, leaving the meat very tender.

Instructions for Use

Place the base **5** on to a dry, level, heat resistant surface, away from the edge of the work surface. Do not use on the floor.

Please note:

If the product is switched on and not in use, the timer display light will switch off to standby mode after 30 minutes.

Flavour Savour Sealing/Browning Function

Place the pan **3** on to the base unit **5** and plug the Flavour Savour in.

The display **6** will show the default screen **B**.

The time display **9** and the Sealing Function icon **11** will both be flashing. Add an appropriate amount of oil to the pan for the quantity of meat you wish to seal.

See recipes in this instruction booklet.

We recommend that approximately two tablespoons of vegetable oil is suitable to seal between 800g-1200g of meat. This can however be varied depending on personal taste and the amount of fat in the meat being sealed.

To select the Sealing function, press the 'Accept' button **10** once. The Flavour Savour will beep for approximately 2 seconds and the display will stop flashing. The pan will then start to heat up and the timer **9** will begin to countdown. The oil will take approximately 5 minutes to reach the correct temperature for sealing / browning meat (i.e. when the timer reads 00:10). A good way to test if the oil is hot enough is to add a small piece of meat or onion to the pan. If it sizzles when it hits the oil, the temperature is sufficient to seal / brown. If it does not sizzle, let the pan heat up for another minute or so and then test it again.

Add the meat to pan and stir regularly until the outside of the meat is sealed / browned. When the timer reaches zero, the base will beep and the cooking process will stop. If your meat is sealed before the timer reaches zero, hold down the 'Accept' button **10** for approximately 3 seconds. The base will beep, the cooking process will stop and the screen will return to the default display **B**.

If your meat needs a few extra minutes sealing after the timer has reached zero, simply press the 'Accept' button to start the sealing/browning function again. As explained above, to cancel the sealing function before the timer reaches zero, hold down the 'Accept' button **10** for approximately 3 seconds.

Due to the high temperature that the Flavour Savour operates at in Seal / Brown mode, you should only carry out a maximum of two 15 minute programmes in quick succession. If you try to select the programme a third time and the unit is hot, the following screen will show --- and the 'Seal / Brown' icon **11** will flash **C**.

The function cannot be selected again until the product has cooled down sufficiently. This should however not cause any difficulties as it should always be possible to seal/brown the required amount of meat in 30 minutes (2 x 15).

Please note:

Do not start the 'Sealing / Browning' function without the pan **3** on the base **5** as this will make the product overheat. You should also not start the 'Sealing / Browning' function without adding your oil to the pan.



appliancesonline
.com.au

Australia's largest online appliance retailer

Sealing/Browning on your gas or electric hob in your Flavour Savour Pan

If you prefer, you can use your Flavour Savour pan on your gas or electric hob to seal / brown your meat.

Simply add your oil as detailed above and place the pan on your stove. The oil may heat up slightly more quickly on your hob, so use a small piece of meat / onion as explained previously to test the temperature.

Sealing / browning meat tip

When sealing large quantities of meat, we suggest you split the meat into smaller batches to make the job easier. As the meat should be stirred at all times during the process, smaller quantities of meat are easier to handle.

Stew Function

Place the pan **3** on to the base unit **5**. Add your ingredients as per the recipe instructions you are following. Whether you have used the 'Seal / Brown' function or just turned the Flavour Savour on, the display screen showing should be the default one **D**.

Press the 'Function / Time' button **8** once and the display will change to **E**.

The time display **9** and Stew Icon **10** will both be flashing. Press the 'Accept' button **10** to choose Stew function. The Stew icon **11** will then stop flashing.

(Please note that if you have selected the Stew Function by mistake, you can return to the previous screen by holding down the 'Function / Time' button **8** for approximately 2 seconds.)

You can then select either the 1 hour 30 minute or 1 hour 45 minute programme (dependent on which recipe you are following). To select the 1 hour 30 minute programme, press the 'Accept / Start / Stop' button **10**. To select the 1 hour 45 minute programme, press the 'Function / Time' button **8**. The Time Display **9** will then change to show 01:45. Press the 'Accept' button **10**.

The time will then stop flashing and the base will beep for approximately 2 seconds before the cooking process begins. The timer will then countdown to zero.

If more cooking time is required you can repeat the stew setting. You must however determine how much extra cooking time you need.

If for any reason you need to cancel the cooking process before the timer has reached zero, hold down the 'Accept' button **10** for approximately 3 seconds. The base will beep, the cooking process will stop and the screen will return to the default display **E**.

During the stew function, steam will escape through the steam vent. Ensure the vent is positioned at the back of the product.

WARNING: The steam and vent will be hot.

Slow Cook Function

Place the pan **3** on to the base unit **5**. Add your ingredients as per the recipe instructions you are following. Whether you have used the 'Seal / Brown' function or just turned the Flavour Savour on, the display screen showing should be the default one as below **F**.

Press the 'Function / Time' button **8** twice and the display will change to **G**.

The time display **9** and Slow Cook Icon **12** will both be flashing. There are three different Slow Cook programmes available – 1, 2 and 3. The difference is the amount of time that each programme can be set for. Each programme has a different icon as below:



Between 8 and 10 hours (low)



Between 6 and 8 hours (medium)



Between 4 and 6 hours (high)

If you wish to use Slow Cook programme 1, press the 'Accept' button **10**.

If you wish to use Slow Cook programme 2, press the 'Function / Time' button **8** once (Slow Cook icon 2 will appear), before pressing the 'Accept' button **10**.

If you wish to use Slow Cook programme 3, press the 'Function / Time' button **8** twice (Slow Cook icon 3 will appear), before pressing the 'Accept' button **10**.

The time will then stop flashing and the base will beep for approximately 2 seconds before the cooking process begins and the timer will then countdown to zero.

Once you press the 'Accept' button **10**, the Slow Cook icon **12** will stop flashing and just the time will flash. (Please note that if you have selected the 'Slow Cook Function' by mistake, you can return to the previous screen by holding down the 'Function / Time' button **8** for approximately 2 seconds)

You are then able to select the amount of time you would like the Slow Cook programme to run for. Pressing the 'Function / Time' button **8** allows you to cycle through the times available.

When the time you want is displayed, press the 'Accept' button **10**.

The time will then stop flashing and the base will beep for approximately 2 seconds before the cooking process begins. The timer will then countdown to zero.

If for any reason you need to cancel the cooking process before the timer has reached zero, hold down the 'Accept' button **10** for approximately 3 seconds. The base will beep, the cooking process will stop and the screen will return to the default display **E**.

Keep Warm

At the end of the cooking process the product will beep and automatically switch to keep warm. Keep warm lasts for up to two hours and counts up from H0:00 to H2:00. At the end of the 2 hours, the base will beep and the display will show H which will stay on the screen until the hot plate reaches ambient temperature (approximately 40°C) **I**.

The screen will then go blank. Pressing any button will take you back to the screen shown when first turned on.

Please note that the Keep Warm function can be stopped at any time during the 2 hour period by holding down the 'Accept' button **10** for approximately 2 seconds.

After cooking

Switch off at the mains socket and unplug the unit.

Important: Ensure base unit is cool before storing in the pan.

Cleaning and Taking Care of Your Flavour Savour

- The pan and lid can be washed in a dishwasher. Alternatively, you may use hot, soapy water with a non-abrasive scouring pad. Do not use abrasive cleaners or detergents.
- Do not immerse the power base in water or any other liquids. To clean, use a damp cloth and dry thoroughly.
- Ensure the base of the pan, and the hot plate surface are clean, free from burnt-on food, and dry before use. The outer base of the pan can be cleaned with a metal scouring pad if required, to remove stubborn stains.
- When adding ingredients and liquid to the cooking pot, avoid over filling. If an over-spill does occur that runs down into the base, switch off and unplug from the mains socket, remove the pan, and allow the liquid to drain away through the drain holes. Fully clean away any excess food or liquid that may have lodged in the recess between the heater plate and the metal reflector, wipe over with a damp cloth, and dry thoroughly before next use.

RECIPES

Beef Stew

	4.5L	6.5L
Beef, cubed	700g	1kg
Potatoes, cubed	500g	700g
Carrots, sliced	500g	700g
Leeks, sliced	3 medium	3 large
Onion, chopped	1	2
Beef stock	1L	1.5L
Mixed herbs	2 tsp	3 tsp
Salt and freshly ground black pepper		

When using the browning / sealing function, always add 30ml (2 tbsp) of cooking oil to the pan first.

Method

- Use browning / sealing function to brown meat and fry onions. (Fry meat in two batches for the 6.5L)
- Mix in rest of ingredients.
- Switch to slow cook setting.
- Cook for maximum time for the setting.
- Thicken with corn flour / water mix.
- Add dumplings 30 minutes to 1hr before end.

Chicken and White Wine

	4.5L	6.5L
Chicken breasts	6	10
Butter	30g	40g
Onion, chopped	1 large	2 large
Mushrooms, sliced	250g	400g
White wine	3 tbsp	5 tbsp
Chicken stock	500ml	750ml
Mixed herbs	1tsp	2 tsp
Corn flour	3 tbsp	5 tbsp
Egg yolks	2	3
Double cream	100ml	150ml
Salt and freshly ground black pepper		

Method

- No need to use browning / sealing function.
- Add all ingredients except flour, egg and cream to pan and set to slow cook.
- Thicken with corn flour / water mix.
- Once cooked, mix egg and cream together with a little of the hot liquid and stir into the dish.
- Chicken recipes are usually cooked for the shortest time for each setting.
e.g.  8hrs  6 hrs  3-4hrs

Boiled Ham

	4.5L	6.5L
Gammon joint	1.1kg	1.8kg

Method

- No need to use browning / sealing function.
- Place gammon in pan and cover with boiling water.
- Can be cooked for the min or max time for each setting.

Vegetable soup

	4.5L	6.5L
Vegetable selection	1.75kg	1.8kg
Vegetable stock	1.5L	2L
Mixed herbs	to taste	to taste
Salt and freshly ground black pepper		

Method

- No need for browning / sealing function.
- Add all ingredients at once, and cook for the maximum time for the setting.
- Liquidise when cooled.

New England Beef

	4.5L	6.5L
Beef joint, topside	1kg	1.5kg
Bouquet garni	1	1
Thyme	1½ tsp	2 tsp
Peppercorns	1½ tsp	2 tsp
Shallots	8	10
Carrots	400g	550g
Swede	200g	300g
Water, enough to cover joint		

When using the browning / sealing function, always add 30ml (2 tbsp) of cooking oil to the pan first.

Method

- Use browning / sealing function to brown all sides of beef.
- Add rest of ingredients and cook for minimum time for the setting.
- Thicken sauce with corn flour for gravy.

Bolognese sauce

	4.5L	6.5L
Minced beef	1kg	1.5kg
Onions, chopped	2	3
Celery, sliced	4 sticks	6 sticks
Garlic cloves, crushed	2	3
Tomato puree	5 tbsp	7 tbsp
Flour	1 tbsp	3 tbsp
Can tomatoes	2 cans	3 cans
Beef stock	400ml	600ml
Mushroom, sliced	200g	300g
Mixed herbs	1 tsp	2 tsp
Salt and freshly ground black pepper		

When using the browning / sealing function, always add 30ml (2 tbsp) of cooking oil to the pan first.

Method

- Use browning / sealing function to brown mince, a bit at a time.
- Add onions, garlic and celery and fry until soft.
- Switch to slow cook.
- Mix flour with puree and add along with rest of ingredients.
- Stir well.
- Can be cooked for minimum to maximum time for the setting.

Sausage Pot

	4.5L	6.5L
Oil	1 tbsp	1 tbsp
Sausages	1 kg	1.5 kg
Onions, chopped	2 large	3 large
Carrots, sliced	4	5
Leeks, sliced	2	3
Beef stock	1ltr	1.5ltr
Chutney	4 tbsp	6 tbsp
Worcestershire sauce	3 tbsp	5 tbsp
Salt and freshly ground black pepper		

When using the browning / sealing function, always add 30ml (2 tbsp) of cooking oil to the pan first.

Method

- Use browning / sealing function to brown sausages in batches.
- Add vegetables and fry until soft.
- Switch to slow cook.
- Add rest of ingredients and cook for minimum time for the setting.

GB

Beef Curry

	4.5L	6.5L
Vegetable oil	4 tbsp	4 tbsp
Cooking apples, peeled cored and chopped	2 large	3 medium
Onions, chopped	3 medium	3 large
Stewing steak, cubed	1kg	1.5kg
Curry powder	4 tsp	5 tsp
Beef stock	650ml	1L
Mango Chutney	4 tbsp	5 tbsp
Sultanas	100g	150g
Tinned tomatoes, chopped	400g	600g
Lemon juice	2 tbsp	3 tbsp
Corn flour	3 tbsp	5 tbsp
Salt and freshly ground black pepper		

When using the browning / sealing function, always add 30ml (2 tbsp) of cooking oil to the pan first.

Method

- Use browning / sealing function to brown the meat, a bit at a time.
- Add onions and fry until soft.
- Switch to slow cook
- Add other ingredients and stir well.
- Mix flour with puree and add along with rest of the ingredients.
- Stir well.
- Can be cooked for minimum to maximum time for the setting.

Thai Beef Curry

	4.5L	6.5L
Butter	40g	60g
Stewing beef, cubed	700g	1kg
Onion, chopped	1	2
Garlic cloves, crushed	3	4
Peanut butter	4 tbsp	6 tbsp
Coconut milk	400g	800g
Potatoes, quartered	500g	700g
Curry powder	3 tbsp	4 tbsp
Thai fish sauce	3 tbsp	4 tbsp
Soft brown sugar	3 tbsp	4 tbsp
Beef stock	500ml	1L

Method

- Melt butter in pan on browning / sealing function and add meat, garlic and onion and brown. (fry meat in two batches for the 6.5L)
- Add onions and garlic and fry until soft.
- Add other ingredients and stir well.
- Switch to slow cook.
- **Can burn a little to bottom of pan but not badly. Best to use slow cook functions.**

BBQ Ribs

	4.5L	6.5L
Ribs	1kg	1.5kg
BBQ sauce	200ml	300ml

Method

- Marinade ribs in the sauce for a few hours or overnight.
- Place in pan and cook for required time.
- **All programmes work but the longer the cook time the more tender the meat is.**

Syrup Sponge Pudding

	4.5L	6.5L
Butter	125g	125g
Golden syrup	4 tbsp	4 tbsp
Caster sugar	100g	100g
Eggs	2	2
Self raising flour	200g	200g
Milk	2 tbsp	2 tbsp
Lemon juice	2 tbsp	2 tbsp

Method

- Butter inside of a 1.25l pudding basin and line bottom with baking paper.
- Pour the syrup into the bottom of the basin.
- Cream butter and sugar until smooth and creamy.
- Gradually mix in eggs and flour and stir in milk and juice. Spoon mixture on top of syrup and cover with pleated baking paper. Tie with string and make a handle.
- Place into Flavour Savour and fill with boiling water half way up the sides.
- **Best cooked on fast stew setting for 1:45hr**

Rice Pudding

	4.5L	6.5L
Butter	40g	60g
Pudding rice	150g	250g
Milk	1.5L	2L
Nutmeg	Pinch	1 tsp

Method

- Butter inside of slow cooker with butter.
- Add all ingredients to pan and stir.
- **Best results on low setting 1 (8-10hrs) otherwise can burn to bottom of pan.**

Chocolate Cake

	4.5L	6.5L
Cocoa	50g	50g
Boiling water	6 tbsp	6 tbsp
Baking powder	1 tsp	1 tsp
Self raising flour	175g	175g
Caster sugar	150g	150g
Oil	150ml	150ml
Eggs	3	3

Method

- Line a 7" cake tin with baking paper.
- Mix the cocoa with boiling water to a paste.
- Mix flour, baking powder and sugar together in a bowl.
- Beat eggs and oil together and add to mixture together with chocolate paste, mix well.
- Pour into tin and cover with foil. Tie with string and make a handle. Place into slow cooker and fill with boiling water half way up the sides.
- **Best cooked on fast stew setting for 1:45hr**

Berry Cobbler

	4.5L	6.5L
Fresh fruit / berries (raspberries, blackberries, blueberries etc)	700g	1.2kg
Sugar	100g	150g
Self raising flour	100g	200g
Suet	50g	100g
Salt	Pinch	Pinch
Lemon zest	1 Lemon	2 Lemons
Milk	3-4 tbsp	6-8 tbsp



appliancesonline
.com.au

Australia's largest online appliance retailer

Method

- Place the fruit inside the flavour savour and stir in half the sugar.
- Mix the rest of the sugar with the flour, suet, salt and lemon zest.
- Add milk to bind into a dough, do not handle too much.
- Place balls of the dough on top of the fruits in the centre, do not let them touch the sides of the pan as they will expand.
- Cook on any setting for the lowest time of the range.

HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product.
- Model number as shown on the underside of the appliance.
- Serial number as shown on the underside of the appliance.

UK Helpline 0844 871 0956

Replacement Parts 0844 873 0722

Ireland Helpline 1800 409 119

Website

You may also contact us through our website, or visit the site to browse and purchase appliances, spare parts and accessories from the extensive Morphy Richards range.

www.morphyrichards.com

THIS SECTION IS ONLY APPLICABLE FOR CUSTOMERS IN UK AND IRELAND**Registering your two year guarantee**

Your standard one year guarantee is extended for an additional 12 months when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us online at www.morphyrichards.co.uk

N.B. Each qualifying product needs to be registered with Morphy Richards individually. Please refer to the one year guarantee for more information.

YOUR ONE YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference. Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.
Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced. If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You may be asked to return a copy of proof of purchase. Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt. If, for any reason, this item is replaced during the 1 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase. To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied. For example, crumb trays should have been emptied regularly.

EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 The appliance has been used for hire purposes or non domestic use.
- 5 The appliance is second hand.
- 6 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
- 7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered

by the guarantee.

- 8 Batteries and damage from leakage are not covered by the guarantee.
- 9 The filters have not be cleaned and replaced as instructed.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

YOUR INTERNATIONAL TWO-YEAR GUARANTEE

This appliance is covered by two-year repair or replacement warranty.

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.
Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact your local distributor quoting Model number and Serial number on the product, or write to your local distributor at the addresses shown.

You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase.

Subject to the exclusions set out below (1-9) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2-year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2-year guarantee the appliance must have been used according to the manufacturers instructions. For example, appliances must have been descaled and filters must have been kept clean as instructed.

The local distributor shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non domestic use.
- 5 The appliance is second hand.
- 6 The local distributor are not liable to carry out any type of servicing work, under the guarantee.
- 7 The guarantee excludes consumables such as bags, filters and glass carafes.
- 8 Batteries and damage from leakage are not covered by the guarantee.
- 9 The filters have not be cleaned and replaced as instructed.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

GB

AUSTRALIAN WARRANTY

This appliance is guaranteed for 2 years against faulty material, components and workmanship.

This warranty is in addition and does not affect your statutory rights.

Proof of purchase must be produced for any warranty benefit.

In the unlikely event of any appliance proving to be faulty, securely pack and return the item to the place of purchase accompanied by the original receipt or invoice.

NOT COVERED BY THIS WARRANTY (Australian only)

- If the appliance has not been used in accordance with the manufacturers' recommendations or Instructions.
- If the fault is deemed to be caused by abuse, misuse, neglect, modifications or in proper use and or care
Eg: Kettles: Excessive build up of scale.
Toasters: Excessive build up of crumbs or foreign matter etc.
- Connection to incorrect voltage to that stamped on the product.
- Unauthorised repairs.
- Appliance used other than for domestic purposes.
- Excluding bags, filters, glass, carafes, and cutting blades.
- Freight and insurance costs.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original receipt or invoice to indicate the date of original purchase.

Morphy Richards's policy is to continually improve quality design and product quality. The company therefore reserves the right to change any specifications or to carry out modifications as deemed worthy at any time.

The Australian supplier ASKO Appliances reserves the right to repair, modify, exchange or replace the faulty appliance with the same or similar model or product of equivalent value.

- Ⓒ Morphy Richards products are intended for household use only.
See usage limitations within the location sub-heading in the important safety instructions.
Morphy Richards has a policy of continuous improvement in product quality and design.
The Company, therefore, reserves the right to change the specification of its models at any time.

The After Sales Division,
Morphy Richards Ltd, Mexborough, South Yorkshire, England, S64 8AJ
Helpline (office hours) UK 0845 871 0954 Republic of Ireland 1800 409119

- Ⓐ Australia - Sales office locations

Asko Appliances (Australia) Pty Ltd.
Victoria
35 Sunmore Close, Moorabbin. 3189

T: 03 8551 2200

New South Wales
F3/ 3-9 Birnie Ave., Lidcombe. 2141

T: 02 8748 2900

Queensland
2/112 Fison Ave., Eagle Farm. 4009

T: 07 3623 2700

South Australia
45 Hampton Road, Keswick. 5035

T: 08 8292 9500

Western Australia
15 Walters Drive, Osborne Park. 6017

T: 08 9347 0600

- Ⓕ Les produits Morphy Richards sont conçus pour un usage exclusivement domestique. Voir les limitations d'usage dans le sous-titre Positionnement des Consignes de sécurité importantes. Morphy Richards s'engage à mener une politique d'amélioration continue en termes de qualité et de conception. Le fabricant se réserve donc le droit de modifier sans préavis la spécification de ses modèles.

Glen Dimplex France
Z.I de l'Eglantier
20, rue des Censiers
91028 Evry cedex 2851

T: +33 (0)1 69 11 11 91

F: +33 (0)1 60 86 15 24

- Ⓖ Morphy Richards Produkte sind nur für den Einsatz im Haushalt vorgesehen. Lesen Sie dazu die Einschränkungen bezüglich der Nutzung, die in der Zweitüberschrift der wichtigen Sicherheitshinweise erläutert werden. Ständige Verbesserungen an der Produktqualität und dem Design gehören zur Philosophie von Morphy Richards. Aus diesem Grunde behält sich die Firma das Recht vor, die Angaben zu ihren Modellen jederzeit zu ändern.

Glen Dimplex Deutschland GmbH
Service-Hotline: +49(0) 1805/398 346
(0,14 €/ Min. aus dem deutschen Festnetz;
max. 0,42 €/Min. aus dem Mobilfunk)
Service-Fax: +49(0) 1805/355 467
email: service@glendimplex.de

Österreich
Kundendienst
Merangasse 17
A-8010 Graz

Telefon : +43(0) 316/323-041

Telefax: +43(0)316/382-963

- Ⓔ Los productos Morphy Richards están concebidos solamente para uso doméstico. Consulte las limitaciones de uso en un subtitulo de las instrucciones de seguridad importantes.
Morphy Richards tiene una política de mejora en la calidad y diseño de sus artículos. La compañía, por lo tanto, se reserva el derecho de cambiar en cualquier momento las especificaciones de sus modelos.

- Ⓜ De producten van Morphy Richards zijn alleen bedoeld voor huishoudelijk gebruik. Zie gebruiksbepalingen binnen de locatiesubtitel in de belangrijke veiligheidsinstructies.
Morphy Richards streeft ernaar de kwaliteit en het design van zijn producten voortdurend te verbeteren. Het bedrijf behoudt zich daarom het recht voor om de specificaties van de producten op ieder ogenblik te wijzigen.

Glen Dimplex Benelux BV
Antennestraat 84
1322 AS Almere
Nederland

T: +31-(0)-36 538 70 40
Service: +31-(0)-36-538 70 55
E: info@gendimplex.nl

F: +31-(0)-36-538 70 41

www.morphyrichards.nl

- Ⓘ Les produits Morphy Richards sont conçus pour un usage exclusivement domestique. Voir les limitations d'usage dans le sous-titre Positionnement des Consignes de sécurité importantes. Morphy Richards s'engage à mener une politique d'amélioration continue en termes de qualité et de conception. Le fabricant se réserve donc le droit de modifier sans préavis la spécification de ses modèles.
De producten van Morphy Richards zijn alleen bedoeld voor huishoudelijk gebruik.
Morphy Richards streeft ernaar de kwaliteit en het design van zijn producten voortdurend te verbeteren. Het bedrijf behoudt zich daarom het recht voor om de specificaties van de producten op ieder ogenblik te wijzigen.

Glen Dimplex Benelux BV
Gentsstraat 60
B- 9300 Aalst
België

T: +32-(0)-53 82 88 62
E: info@gendimplex.be

F: +32-(0)-53 82 88 63

www.morphyrichards.be

- Ⓕ Os produtos Morphy Richards foram concebidos apenas para utilização doméstica. Consulte as limitações à utilização no sub-cabeçalho de posicionamento, nas instruções importantes de segurança. A Morphy Richards respeita uma política de aperfeiçoamento contínuo da qualidade e design do produto. Desta forma, a companhia reserva-se o direito de alterar as especificações destes modelos a qualquer momento.

Imporaudio Lda
Rua D. Marcos Da Cruz 1281
4455-482 Perafita
Portugal

T: +351 22 996 67 40

Fax: +351 22 996 67 41

- Ⓘ I prodotti Morphy Richards sono concepiti esclusivamente per uso domestico. Vedere le limitazioni d'uso nel sottotitolo delle importanti istruzioni di sicurezza. Morphy Richards è costantemente impegnata a migliorare la qualità e il design dei propri prodotti, pertanto si riserva il diritto di modificare le specifiche dei diversi modelli in qualunque momento.

- Ⓜ Morphy Richards produkter er kun beregnet til husholdningsbrug. Se brugsbegrænsningerne under overskriften om placering i de vigtige sikkerhedsinstruktioner. Det er praksis hos Morphy Richards at fortsætte udviklingen af produktets kvalitet og design. Firmaet forbeholder sig derfor retten til at ændre modellernes specifikationer når som helst.

- Ⓕ Produkter från Morphy Richards är endast avsedda för hushållsbruk.
Se användarbegränsningar under rubriken i de viktiga säkerhetsinstruktionerna.
Morphy Richards har en policy för kontinuerlig förbättring i produktkvalitet och utformning. Företaget förbehåller sig därför rätten att när som helst ändra specifikationen för sina modeller.

- Ⓜ Produkty Morphy Richards są przeznaczone wyłącznie do użytku domowego. Zapoznaj się z informacjami na temat ograniczonego użytkowania urządzenia, które znajdują się w podrozdziale instrukcji dotyczących bezpieczeństwa. Morphy Richards prowadzi politykę ciągłej poprawy jakości i wzoru produktów. Firma zastrzega sobie prawo zmiany specyfikacji modeli w dowolnej chwili.

Glen Dimplex Polska Sp. z o.o
Ul. Strzeszyńska 33
60-479 Poznań
NIP 781-16-70-985

T: +48 (0)61 8425 805

F: +48 (0)61 8425 806

- Ⓜ Изделия Morphy Richards предназначены только для бытового использования. См. информацию об ограничениях использования в подразделе "Размещение" в главе "Важные меры предосторожности". Morphy Richards постоянно совершенствует качество и дизайн своей продукции. Таким образом, компания оставляет за собой право в любое время вносить изменения в технические характеристики своих изделий.

- Ⓜ Výrobky Morphy Richards jsou určeny pouze k použití v domácnostech. Podívejte se na omezení použití v podtitulu umístění v důležitých bezpečnostních pokynech.
Morphy Richards usiluje o neustálé zdokonalování kvality a provedení.
Proto si vyhrazuje právo kdykoliv změnit specifikace svých modelů.

Tauer Elektro a.s.
Mladý Horákově 4
568 02 Svitavy

T: +420 461 540 130

F: +420 461 540 133

- Ⓘ Morphy Richards ürünleri sadece ev içi kullanımlar amaçlıdır.
Morphy Richards, ürün kalitesi ve tasarımında sürekli geliştime politikaına sahiptir.
Bu nedenle Şirket, modellerinin özelliklerini herhangi bir zamanda değıştirme hakkını saklı tutar.

Gizpa Dayanıklı Tüketim Mamülleri
Tic. ve Paz. İth. İhr. A.Ş.
Atatürk Cd. 19 Mayıs Mah. Esin Sok. No: 2/2
Kozyatağı-İSTANBUL

Tel +90(0216) 411 23 77

Fax +90(0216) 369 33 42

- Ⓜ Should your Morphy Richards product become faulty, please do not return the product to the store, contact the Customer Care Help Line 086 111 5006 or e-mail help@creativehousewares.co.za for remedial action. For guarantee claims please furnish your proof of purchase and product serial number.

Creative Housewares
27 Nourse Ave; Epping 2; Cape Town; 7460
P.O. Box 975; Eppindust; 7475

Tel: 021 534 8114
www.creativehousewares.co.za

Fax 021 534 8086



appliancesonline
.com.au

Australia's largest online appliance retailer



- DE** For electrical products sold within the European Community.
At the end of the electrical products useful life it should not be disposed of with household waste.
Please recycle where facilities exist.
Check with your Local Authority or retailer for recycling advice in your country.
- F** Pour les appareils électriques vendus dans la Communauté européenne.
Lorsque les appareils électriques arrivent à la fin de leur vie utile, il ne faut pas les jeter à la poubelle.
Il faut les recycler dans des centres spécialisés, s'ils existent.
Consultez la municipalité ou le magasin où vous avez acheté l'appareil pour obtenir des conseils sur le recyclage dans votre pays.
- D** Für elektrische Artikel, die in der europäischen Gemeinschaft verkauft werden.
Am Ende der Nutzungsdauer sollte das Gerät nicht im regulären Hausmüll entsorgt werden.
Bitte einer Recycling-Sammelstelle zuführen.
Informationen über geeignete Recycling-Annahmestellen erhalten Sie bei Ihrer Stadt- bzw. Ortsverwaltung.
- E** Para productos eléctricos vendidos en la Comunidad Europea.
Al final de su vida útil los productos eléctricos no deberán desecharse con el resto de residuos domésticos.
Recíclelos en las instalaciones destinadas para ello.
Infórmese sobre consejos de reciclaje en su tienda habitual o consulte a las autoridades locales de su país.
- NL** Voor elektrische producten verkocht in de Europese Gemeenschap.
Op het einde van zijn levensduur mag een elektrisch product niet worden meegegeven met het gewone huisvuil.
Laat het product recycleren als deze mogelijkheid voorzien is.
Vraag bij uw lokale overheid of in uw winkel waar u daarvoor terecht kunt.
- P** Para produtos eléctricos vendidos na Comunidade Europeia.
Quando os produtos eléctricos atingirem o final da sua vida útil, não devem ser eliminados juntamente com o lixo doméstico.
Faça a reciclagem nos locais apropriados.
Contacte as autoridades locais ou o revendedor para saber como efectuar a reciclagem no seu país.
- I** Per gli elettrodomestici venduti all'interno della Comunità europea.
Al termine della vita utile, non smaltire l'elettrodomestico nei rifiuti domestici.
Riciclarlo laddove esistono le strutture.
Verificare con la Locale Autorità o con il dettagliante in merito alle possibilità di riciclaggio nel proprio paese.
- DK** Angående elektriske produkter, der sælges inden for EU.
Når det elektriske produkt har nået enden af sin levetid, må det ikke bortkastes sammen med husholdningsaffaldet.
Det bedes genbruges, hvor der er faciliteter hertil.
Bed de lokale myndigheder eller forhandleren om råd om genbrug i dit land.
- S** Gäller elektriska produkter som säljs inom Europeiska Unionen.
När elektriska produkter inte längre kan användas ska de inte kastas med vanliga hushållssopor.
Lämna dem till återvinning där det finns möjlighet.
Kontakta lokala myndigheter eller försäljningsstället och kontrollera vad som gäller för återvinning i ditt land.
- PL** Dla produktów elektrycznych sprzedawanych na terenie Wspólnoty Europejskiej.
Po zakończeniu okresu używalności produktów elektrycznych, nie należy ich wyrzucać wraz z odpadkami pochodzącymi z gospodarstwa domowego.
Jeżeli istnieją odpowiednie zakłady zajmujące się utylizacją, produkty należy poddać recyklingowi.
W celu uzyskania porady na temat recyklingu w Twoim kraju zwróć się do miejscowych władz lub lokalnego sprzedawcy.
- CZ** Pro elektrické výrobky prodávané v Evropském společenství.
Elektrické výrobky se po skončení životnosti nesmí vyhazovat do domovního odpadu.
Nechte je recyklovat v příslušných zařízeních.
Informace o recyklaci ve vaší zemi si zjistěte od místních úřadů nebo prodejce.

GB

F

D

E

NL

P

I

DK

S

PL

RU

CZ

TR


appliancesonline
 .com.au

Australia's largest online appliance retailer

www.morphyrichards.com

morphyrichards®



appliancesonline
www.morphyrichards.com
Australia's largest online appliance retailer

SC48784MEE Rev 1 03/10