


CRU89 Instruction Manual

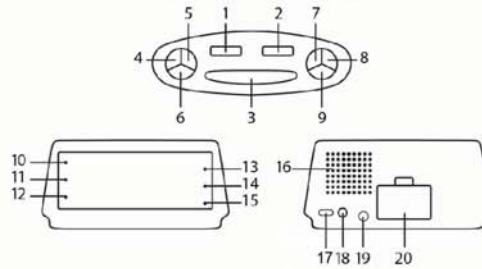

- | | |
|------------------------|------------------------------|
| 1. ON/OFF | 11. AL1 BUZZER INDICATOR |
| 2. STORE/RECALL & TIME | 12. AL1 RADIO INDICATOR |
| 3. SNOOZE & BRIGHTNESS | 13. AL2 BUZZER INDICATOR |
| 4. TU+ / MIN | 14. AL2 RADIO INDICATOR |
| 5. BAND/AUX | 15. SLEEP FUNCTION INDICATOR |
| 6. TU-/HOUR | 16. SPEAKER |
| 7. SLEEP | 17. USB CHARGING |
| 8. VOL+AL2 | 18. AUX IN SOCKET |
| 9. VOL-/AL1 | 19. AC/DC SOCKET |
| 10. PM INDICATOR | 20. BATTERY COMPARTMENT |

Radio

- Press the "ON/OFF" button to turn the clock radio on or off.
- Press the "FM" button to select radio band.
- Adjust the "TU+" or "TU-" to select the desired station.
- Press the "VOL+" or "VOL-" button to adjust the volume.
- Press the "M+" button to store your desired station. The display will show the "P01" means your station will be saved on the first pre-set. If it displays "P02" this means the station is saved in the second pre-set.
- To store the tuned station, press and hold the "PRESET/M+" button until the display shows flashing "P01". Under this condition short press to confirm station to store in this memory location. "P01" will stop to flash to feedback station is stored. Tuned another station and long press "PRESET/M+" button until the display shows "P02" flashing then short press to confirm. Repeat this procedure until 10 memories are stored.

Please note you can only recall the preset station until you save all 10 stations.

Setting the Alarm

- You must switch off the radio before you set the alarm time.
- Press and hold the "ALARM 1" or "ALARM 2" button until the Hour display begins to blink.
- Now you can select to wake up by radio or buzzer. The LED with bell logo stands for wake up to buzzer.
The LED with music note logo stands for wake up to radio. Press "ALARM 1" button to select different wake up modes.
- You can set the alarm time, after you select the wake up mode. Press the "Hour" to adjust the hour and press "Minute" button to adjust the Minute.
- Press the "ALARM 1" button now to fix the alarm time.
- Use the same method to set Alarm 2.

Canceling the Daily Alarm

Press the "ALARM OFF" button to stop the alarm. The alarm will operate 24 hours later as per alarm Time set.

Cancelling the Alarm

Press the "ALARM 1" or "ALARM 2" buttons, the display will show "OFF" and all wake up mode icons will also switch display off. The alarm setting is cancelled now.

Setting the Clock

- You must switch off the radio before you set the clock time.
- Press and hold the "TIME SET" button until the display begins to blink, then release the button.
- Press the Hour and Minute button to adjust the hour and minute.
The PM indicator will light when the hour is set in the PM.
- Press the "TIME SET" button to save time

Setting the Sleep Time

- You must switch off the radio before you set the sleep time.
- Press the Sleep button repeatedly to set the sleep time (90, 80, 70, 60, 50, 40, 30, 20, 10 min or OFF).

Snooze and Alarm Reset

To use the snooze, press the SNOOZE bar when the alarm is sounding. The alarm will stop temporarily, but will resume sounding after 9 minutes.

USB CHARGING

USB charging can be supported any device / mobile phone with charging current 1A or below.

NOTES

- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.
- To be completely disconnect the power input, the mains plug of apparatus shall be disconnected from the mains. As the disconnect devices is the mains plug of apparatus.
- The mains plug of apparatus should not be obstructed OR should be easily accessed during intended use.
- Battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Minimum distances 10cm around the apparatus for sufficient ventilations.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources such as lighted candles should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.

SPECIFICATIONS

Frequency Range: FM 88 ~108 MHz
Power Source: AC 230V ~ 50 Hz, 3W
DC 3V (For back-up)
Power Output: 400 mW