

EN

User instructions

# WDYN P

SENSOR DRY

DYNAMIC  
8+5<sup>W&D</sup>

## HOOVER



## OUR COMPLIMENTS

With the purchase of this Hoover household appliance, you have shown that you will not accept compromises: you want only the best.

Hoover is happy to present their new washing machine, the result of years of research and market experience through direct contact with Consumers. You have chosen the quality, durability and high performance that this washing machine offers.



Hoover is also able to offer a vast range of other household appliances: washing machines, dishwashers, washer-dryers, cookers, microwave ovens. Traditional ovens and hobs, refrigerators and freezers.

Ask your local retailer for the complete catalogue of Hoover products.

Please read this booklet carefully as it provides important guide lines for safe installation, use and maintenance and some useful advise for best results when using your washing machine.

Keep this booklet in a safe place for further consultation.

When contacting Hoover or a Customer Services Centre always refer to the Model, No., and G number (if applicable of the appliance see panel).

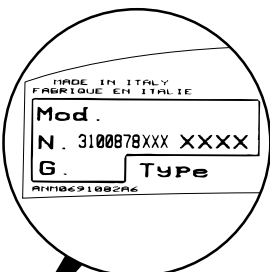

## INDEX

Introduction

General points on delivery

Guarantee

Safety Measures

Technical Data

Setting up and Installation

Control Description

Table of Programmes

Selection

Detergent drawer

The Product

Washing

Drying cycle

Automatic washing/Drying cycle

Cleaning and routine maintenance

Faults Search

## CHAPTER

1

2

3

4

5

6

7

8

9

10

11

12

13

14

15

## CHAPTER 1




### GENERAL POINTS ON DELIVERY

On delivery, check that the following are included with the machine:

- A) INSTRUCTION MANUAL
- B) CUSTOMER SERVICE ADDRESSES
- C) GUARANTEE CERTIFICATES
- D) CAPS
- E) BEND FOR OUTLET TUBE
- F) LIQUID DETERGENT OR LIQUID BLEACH COMPARTMENT (CONTAINER)

**KEEP THEM IN A SAFE PLACE**

Check that the machine has not incurred damage during transport. If this is the case, contact your nearest Hoover Centre.

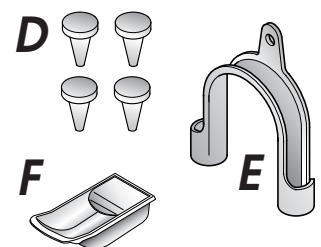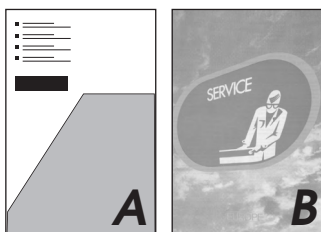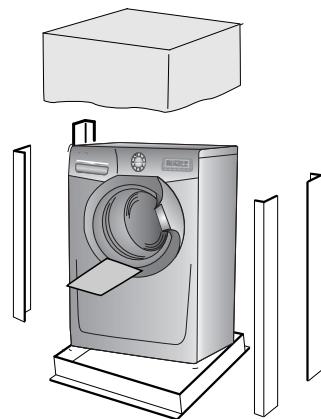

## CHAPTER 2

### GUARANTEE

The appliance is supplied with a guarantee certificate. Please retain purchase receipt in case service assistance covered by the guarantee is required.

## CHAPTER 3

### SAFETY MEASURES

#### IMPORTANT: FOR ALL CLEANING AND MAINTENANCE WORK

- Remove the plug
- Turn off the water inlet tap.
- All Hoover appliances are earthed. Ensure that the main electricity circuit is earthed. Contact a qualified electrician if this is not the case.





**CE** Appliance complies with European Directives 73/23/EEC and 89/336/EEC, replaced by 2006/95/EC and 2004/108/EC, and subsequent amendments.

- This machine is solely for domestic use.
- Do not touch the appliance with wet or damp hands or feet.
- Do not use the appliance when bare-footed.

**WARNING: DURING THE WASHING CYCLE, THE WATER CAN REACH A TEMPERATURE OF 90°C.**

- Before opening the washing machine door, ensure that there is no water in the drum.

**REFER TO CHAPTER 12 FOR ADDITIONAL SAFETY INSTRUCTIONS FOR DRYER USE.**

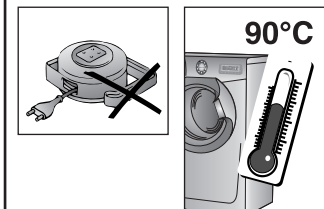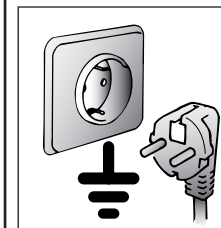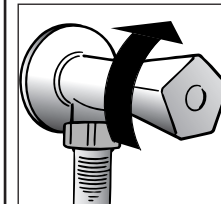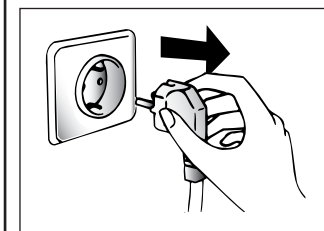

● **WARNING:** Do not use this appliance with a cord extension set, multiple connector or electrical portable outlet device due to risk of overload, splashing or ingress of moisture.

● This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

● Do not pull the mains lead or the appliance itself to remove the plug from the socket.

● Do not leave the appliance exposed to atmospheric agents (rain, sun etc.)

● In the case of removal, never lift the appliance by the knobs or detergent drawer.

● During transportation do not lean the door against the trolley.



#### Important!

When the appliance location is on carpet floors, attention must be paid so as to ensure that there is no obstruction to the bottom vents.


● Lift the appliance in pairs as illustrated in the diagram.

● In the case of failure and/or incorrect operation, turn the washing machine off, close the water inlet tap and do not tamper with the appliance. Contact a Hoover Customer Service Centre for any repairs and ask for original Hoover spare parts. Avoidance of these norms may compromise the safety of the appliance.

● Should the power supply cord of this appliance be damaged, it must be replaced by an authorised Hoover service centre or qualified person in order to avoid a hazard.

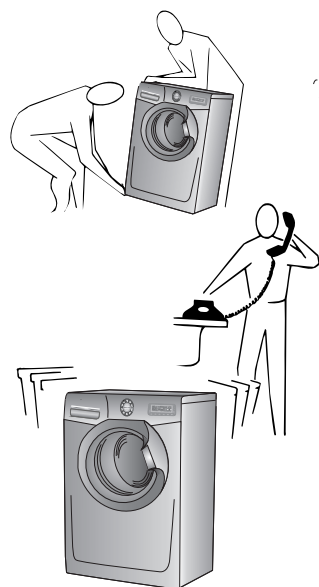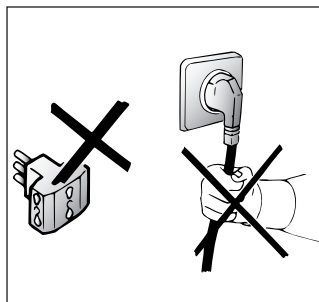

## CHAPTER 4

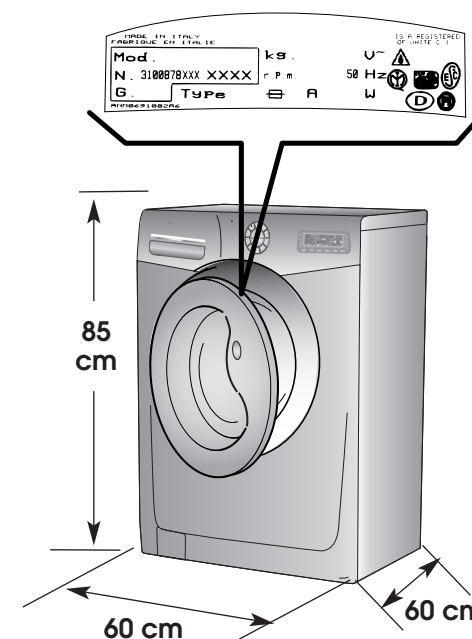

| TECHNICAL DATA                     |                  | Washing             | Drying |
|------------------------------------|------------------|---------------------|--------|
| MAXIMUM WASH<br>LOAD DRY           | kg               | 8                   | 5      |
| NORMAL WATER LEVEL                 | l                | 6÷15                |        |
| POWER INPUT                        | W                | 2400                |        |
| ENERGY CONSUMPTION<br>(PROG. 90°C) | kWh              | 1,8                 |        |
| SPIN<br>r.p.m.                     | SEE RATING PLATE |                     |        |
| WATER PRESSURE                     | kPa              | min. 50<br>max. 800 |        |
| SUPPLY VOLTAGE                     | V                | 220-240             |        |

## CHAPTER 5

### SETTING UP INSTALLATION

Move the machine near its permanent position without the packaging base.

Carefully cut the securing strap that holds the main cord and the drain hose.





Remove the 3 fixing screws marked (A) and remove the 3 spacers marked (B).

Remove the screw (C). A spacer will fall inside the machine.

By tilting the machine, remove the above mentioned spacer.

Cover the 4 holes using the caps provided in the instruction booklet pack.

**WARNING:**  
DO NOT LEAVE THE PACKAGING IN THE REACH OF CHILDREN AS IT IS A POTENTIAL SOURCE OF DANGER.

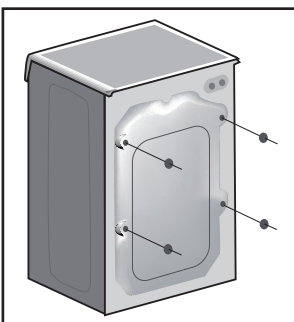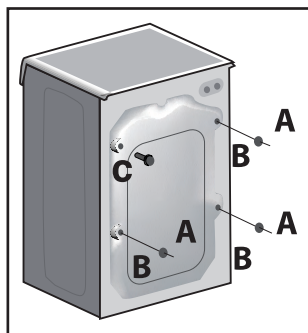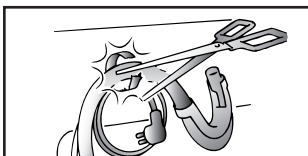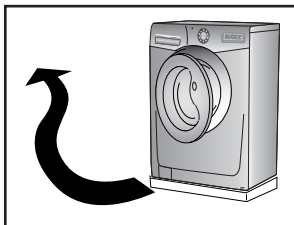

Fix the sheet of corrugated material on the bottom as shown in picture.

Connect the fill hose to the cold water tap only.




The appliance must be connected to the water mains using new hose-sets. The old hose-sets should not be reused.

**IMPORTANT:**  
DO NOT TURN THE TAP ON AT THIS TIME.

Position the washing machine next to the wall. Hook the outlet tube to the edge of the bath tub, paying attention that there are no bends or contractions along the tube.

It is better to connect the discharge hose to a fixed outlet of a diameter greater than that of the outlet tube and at a height of min. 50 cm. If is necessary to use the plastic sleeve supplied.

The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the washer dryer.

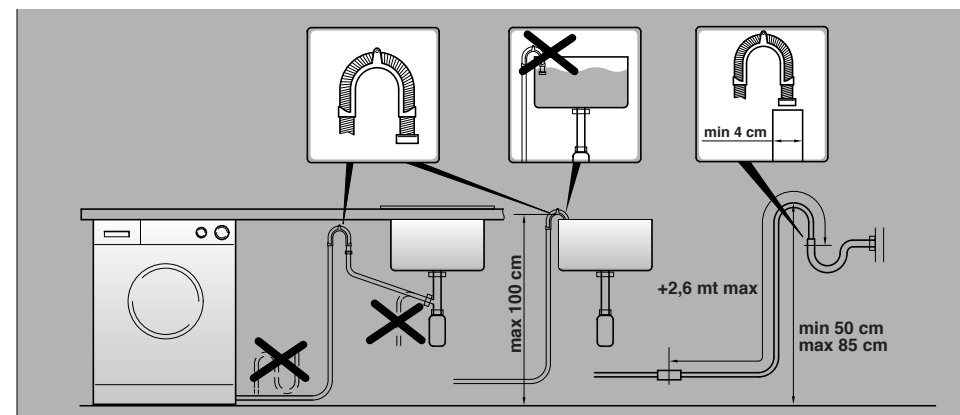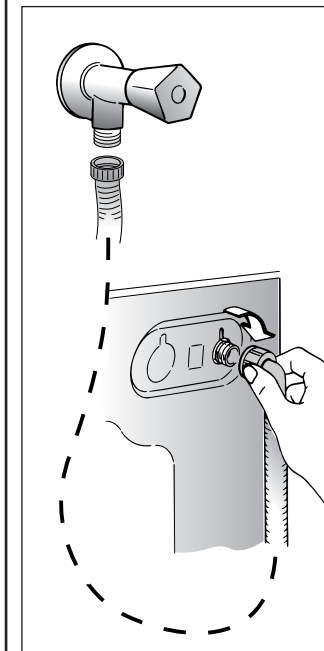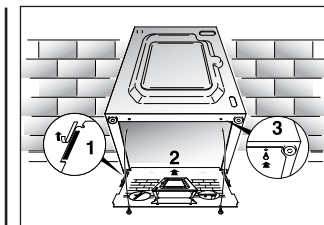


Use the 4 feet to level the machine with the floor:

- Turn the nut clockwise to release the screw adjuster of the foot.
- Rotate foot to raise or lower it until it stands firmly on the ground.
- Lock the foot in position by turning the nut anti-clockwise until it comes up against the bottom of the machine.


Insert the plug.

**ATTENTION:**

if the power supply cord of this appliance is damaged, it must be replaced by an authorised Hoover service centre or qualified person in order to avoid a hazard.

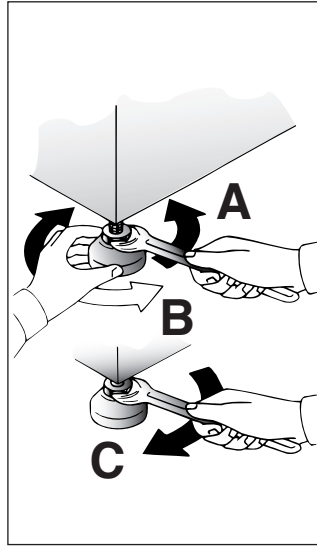

**CHAPTER 6**

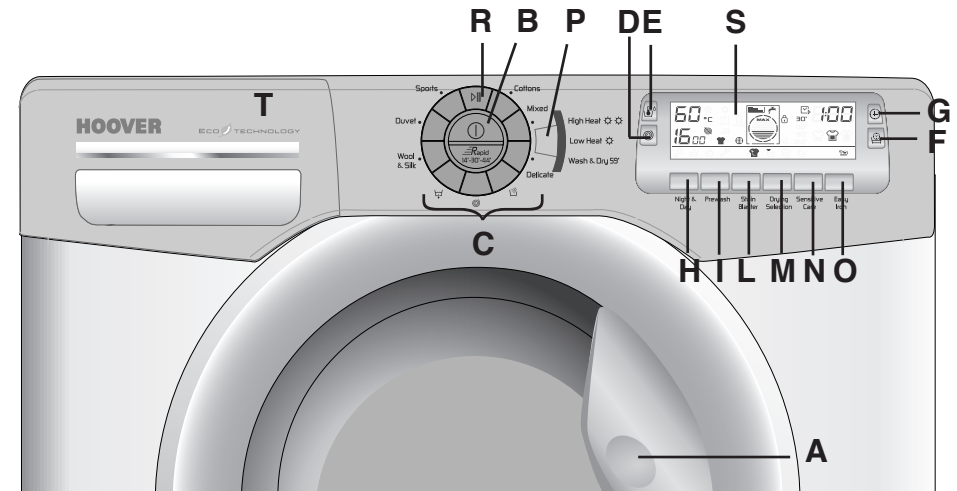


CONTROLS

- Door handle
- On/off button
- Programme selection buttons
- Spin Speed button
- Wash Temperature button
- Wash Time button
- Start Delay button
- Night & Day button
- Prewash button
- Stain Blaster button
- Drying selection button
- Sensitive Care button
- Easy Iron button
- Drying programme selection button
- Start/Pause button
- Digital Display
- Detergent drawer

A  
B  
C  
D  
E  
F  
G  
H  
I  
L  
M  
N  
O  
P  
R  
S  
T

| <div>EN</div> DESCRIPTION OF CONTROL                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |          |   |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|---|
| <p><b>“Kg MODE”</b><br/>(Function active only on Cotton and Synthetics programmes)<br/>Through every wash phase <b>“Kg MODE”</b> allows to monitor information on the wash load in the drum.<br/>So, as soon as the <b>“Kg MODE”</b> is set in motion, in the first 4 minutes of the wash, it:</p> <ul style="list-style-type: none"> <li>o adjusts the amount of water required</li> <li>o determines the length of the wash cycle</li> <li>o controls rinsing</li> </ul> <p>according to the type of fabric selected to be washed it:</p> <ul style="list-style-type: none"> <li>o adjusts the rhythm of drum rotation for the type of fabric being washed</li> <li>o recognises the presence of lather, increasing, if necessary, the amount of water during rinsing</li> <li>o adjusts the spin speed according to the load, thus avoiding any imbalance.</li> </ul> <p>In this way <b>“Kg MODE”</b> is able to decide, by itself, the most suitable programme for each individual wash from the hundreds of possible wash combinations.</p> <p><b>“Kg MODE”</b> meets the need for easy use by permitting a simplified programme selection. In fact, the user need only tell the machine the type of fabric in the drum and the degree of soiling, to obtain a perfect wash with the highest level of drying possible with a spin which really cares for your clothes.</p> |          |   |
| <p><b>DOOR HANDLE</b></p> <p>Press the finger-bar inside the door handle to open the door.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | <b>A</b> |   |
| <p><b>ON/OFF BUTTON</b></p> <p>Press this button to switch on/off the appliance.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | <b>B</b> | ⓘ |
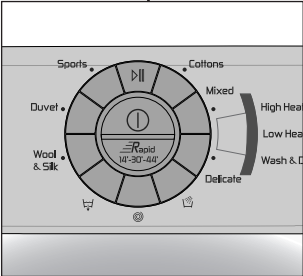
| <div>EN</div>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                  |   |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|---|
| <p><b>PROGRAMME SELECTION BUTTONS</b></p> <p>Pressing a programme button the display lights up to show the settings for the programme selected.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | <div>C</div>  |   |
| <p><b>N.B. TO SWITCH THE MACHINE OFF PRESS THE ON/OFF BUTTON</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                  |   |
| <p><b>TODAY, MOST DETERGENTS HAVE BEEN IMPROVED TO WASH EFFICIENTLY AT LOWER TEMPERATURES, THEREFORE WE HAVE SET THE DEFAULT TEMPERATURE SETTINGS OF EACH PROGRAMME TO A LOWER LEVEL, SAVING ELECTRICITY AND REDUCING THE CARBON FOOTPRINT OF YOUR MACHINE.</b></p> <p><b>YOU CAN SELECT AN HIGH TEMPERATURE BY PRESSING THE TEMPERATURE BUTTON.</b></p> <p><b>PLEASE REFER TO THE PROGRAMME GUIDE FOR THE MAXIMUM TEMPERATURE TO WHICH EACH PROGRAMME CAN BE SET.</b></p>                                                                                                                                                                                                                                                    |                                                                                                  |   |
| <p>Press the START button to start the selected cycle</p> <p>When the cycle ends, switch off the appliance by pressing the ON/OFF button.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |                                                                                                  |   |
| <p><b>SPIN SPEED BUTTON</b></p> <p>The spin cycle is very important to remove as much water as possible from the laundry without damaging the fabrics. You can adjust the spin speed of the machine to suit your needs. By pressing this button, it is possible to reduce the maximum speed, and if you wish, the spin cycle can be cancelled. To reactivate the spin cycle is enough to press the button until you reach the spin speed you would like to set.</p> <p><b>For not damage the fabrics, it is not possible to increase the speed over that automatically suitable during the selection of the program.</b></p> <p>It is possible to modify the spin speed in any moment, also without to pause the machine.</p> | <b>D</b>                                                                                         | ⌀ |
| <p><b>NOTE:</b></p> <p><b>THE MACHINE IS FITTED WITH A SPECIAL ELECTRONIC DEVICE, WHICH PREVENTS THE SPIN CYCLE SHOULD THE LOAD BE UNBALANCED.</b></p> <p><b>THIS REDUCES THE NOISE AND VIBRATION IN THE MACHINE AND SO PROLONGS THE LIFE OF YOUR MACHINE.</b></p>                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                  |   |

### WASH TEMPERATURE BUTTON

When a programme is selected on the display it shows the recommended wash temperature. The temperature button can be used to decrease or increase the temperature of your chosen wash cycle. Each time the button is pressed, the new temperature level is shown on the display.

E



### WASH TIME BUTTON

By selecting this button (active only on COTTON and MIXED FIBRES programmes) there is a choice of 3 levels of wash intensity, depending on how much the fabrics are soiled. Once the programme has been selected the indicator light will automatically show the minimum level required for that programme. Pressing the button increases the duration of the wash cycle, and adjusts the wash settings accordingly. For example: Using this button on the Rapid Wash cycle will enable you to select either a 14, 30 or 44 minute wash cycle.

F



### DELAY START BUTTON

This button allows you to pre-programme the wash cycle to delay the start of the cycle for up to 24 hours. To delay the start use the following procedure: Switch on the appliance by the ON/OFF button. Select the required programme. Press the button once to activate it (h00 appears on the display) and then press it again to set a 1 hour delay (h01 appears on the display); the pre-set delay increases by 1 hour each time the button is pressed, until h24 appears on the display, at which point pressing the button again will reset the delay start to zero.

Confirm by pressing the "START/PAUSE" button (the light on the display starts to flash). The countdown will begin and when it has finished the programme will start automatically.

It is possible to cancel the delay start by taking the following action: Press and hold the button for 5 seconds until the display will show the settings for the programme selected. At this stage it is possible to start the programme previously selected by pressing the START/PAUSE button or to cancel the process by pressing the ON/OFF button.

G



The option buttons should be selected before pressing the START button. If an option is selected but it is not compatible with the selected programme then the symbol first flashes and then goes off.

### NIGHT & DAY BUTTON

Press this button to reduce the intermediate spin speed to 400 rpm, where applicable; the water level is increased during rinsing and the washing is kept immersed in water after the final rinse in order to spread the fibres evenly. During the phase in which the water is held in the tub, the indicator lights to show that the machine is at a standstill. Release the button to end the cycle with a spin dry (which may be reduced or cancelled using the appropriate button) and emptying phase. Thanks to electronic control, the water in the intermediate phases is emptied silently, making this option very useful for washing at night.

H

Night & Day

### PREWASH BUTTON

This option is particularly useful for heavily soiled loads and can be used only on some programmes as shown in the programmes table. Detergent for this programme should be added to the compartment of the soap drawer labelled "1" (Please refer to Detergent Drawer Section of manual). We recommend you use only 20% of the recommended quantities shown on the detergent pack and fabric conditioner should not be used for this programme.

I

Prewash

### STAIN BLASTER BUTTON

By pressing this button, a sensors system come into operation. They affect both the selected temperature, keeping it at a constant level throughout the wash cycle, and the mechanical function of the drum. The drum is made to turn at two different speeds at crucial moments. When the detergent enters the garments, the drum rotates in such a way that the detergent is distributed in a uniform manner; during the wash and rinse procedures, however, the speed increases in order to maximise the cleaning action. Thanks to this special system, the efficiency of the wash procedure is improved WITHOUT ANY INCREASE IN THE LENGTH OF THE PROGRAM.

L

Stain Blaster

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                                                                                                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                      |  |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| <p style="text-align: center;">EN</p> <p><b>DRYING SELECTION BUTTON</b></p> <p>After pressing the ON/OFF button, select before the required washing or drying programme and then press the button to select the required drying degree; an indicator will light to display the drying result selected each time you press the button. To cancel the selection before the start of a drying programme, press the button repeatedly until the indicators go out or press the ON/OFF button. To cancel the cycle during the drying phase, hold the button down for 2 seconds until the cooling indicator lights up; given the high temperature inside the drum, we recommend that you allow the dryer to complete the cool down period before turn off the appliance and removing the laundry.</p> <p><b>NOTE:</b><br/>Do not dry unwashed items in the washer dryer. Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the washer dryer.</p> <p>Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the washer dryer.</p> <p>Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.</p> <p>The final part of a washer dryer cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.</p> <p><b>WARNING:</b><br/><b>Never stop a washer dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.</b></p> | <p style="text-align: center; font-size: 2em;">M</p> <p style="text-align: center; font-size: 1.5em;">Drying<br/>Selection</p> | <p style="text-align: center;">EN</p> <p><b>EASY IRON BUTTON</b></p> <p>The Easy Iron function minimizes creases as much as possible with a uniquely designed anti-crease system that is tailored to specific fabrics. The water is gradually cooled throughout the final two rinses with no spinning and then a delicate spin assures the maximum relaxation of the fabrics.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | <p style="text-align: center; font-size: 2em;">O</p> <p style="text-align: center; font-size: 1.5em;">Easy<br/>Iron</p>                                                                                                                                                                                              |  |
| <p><b>SENSITIVE CARE BUTTON</b></p> <p>By pressing this button you can activate a special new wash cycle in the <b>Colourfast</b> and <b>Mixed Fabrics</b> programs, thanks to the new Sensor System. This option treats with care the fibres of garments and the delicate skin of those who wear them. The load is washed in a much larger quantity of water and this, together with the new combined action of the drum rotation cycles, where water is filled and emptied, will give you garments which have been cleaned and rinsed to perfection. The amount of water in the wash is increased so that the detergent dissolves perfectly, ensuring an efficient cleaning action. The amount of water is also increased during the rinse procedure so as to remove all traces of detergent from the fibres.</p> <p>This function has been specifically designed for people with delicate and sensitive skin, for whom even a very small amount of detergent can cause irritation or allergy. You are advised to also use this function for children's clothing and for delicate fabrics in general, or when washing garments made of towelling, where the fibres tend to absorb a greater quantity of detergent.</p> <p>To ensure the best performance for your wash, this function is always activated on the Delicates and Woollens.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <p style="text-align: center; font-size: 2em;">N</p> <p style="text-align: center; font-size: 1.5em;">Sensitive<br/>Care</p>   | <p><b>DRYING PROGRAMME SELECTION BUTTON</b></p> <p>By pressing this button, one indicator lights will go on to show the selected drying programme:</p> <p><b>High Heat</b> ☼☼ = Cottons drying programme</p> <p><b>Low Heat</b> ☼ = Synthetics drying programme</p> <p><b>Wash &amp; Dry 59'</b> = Wash &amp; Dry 59 minutes</p> <p>The display shows the drying time and the symbol ☼ will begin to flash. Press the button "Drying selection" to select the required drying degree.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p><b>NOTE:</b><br/><b>FEW SECONDS AFTER THE START, THE KG MODE FUNCTION (ACTIVE ONLY ON COTTON AND SYNTHETICS PROGRAMMES) WILL WEIGH THE CLOTHES AND UPDATE THE MAXIMUM WASH TIME REMAINING WITHIN THE FIRST 4 MINUTES OF THE WASH CYCLE. WHILE THIS FUNCTION IS OPERATING THE KG MODE INDICATOR IS ON.</b></p> </div> <p><b>Changing the settings after the programme has started (PAUSE)</b><br/>Once the programme has started the settings can only be altered by pressing the relevant buttons. Press and hold the "START/PAUSE" button for about 2 seconds, the flashing of one indicator light and time remaining will show that the machine has been paused, adjust as required and press the START/PAUSE button again to cancel the flashing light.</p> <p>If you wish to add or remove items during washing, wait 2 minutes until the safety device unlocks the door. When you have carried out the manoeuvre, close the door, press START button and the appliance will continue working where it left off.</p> <p><b>CANCELLING THE PROGRAMME</b><br/>To cancel the programme press and hold the START/PAUSE button for about 5 seconds.</p> | <p style="text-align: center; font-size: 2em;">P</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"> <p>High Heat ☼☼</p> <p>Low Heat ☼</p> <p>Wash &amp; Dry 59'</p> </div> <p style="text-align: center; font-size: 2em;">R</p> <div style="text-align: center; font-size: 2em;">▶    </div> |  |

## "DIGITAL" DISPLAY

The display's indicator system allows you to be constantly informed about the status of the machine:

### 1) SPIN SPEED





Once the programme has been selected, the maximum spin speed allowed for that programme appears on the display. Pressing the spin button will reduce the speed by 100 rpm each time the button is pressed. The minimum speed allowed is 400 rpm, or it is possible to omit the spin by pressing the spin button repeatedly.

### 2) WASH TEMPERATURE

When a programme is selected on the display it shows the recommended wash temperature. The temperature button can be used to decrease or increase the temperature of your chosen wash cycle. Each time the button is pressed, the new temperature level is shown on the display.

### 3) Kg MODE indicator

Available on Cotton and Synthetic cycles, during the first 4 minutes of the cycle the intelligent sensor will weigh the laundry and adjust the cycle time, water and electricity consumption accordingly.

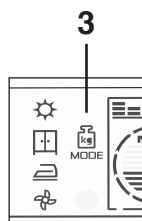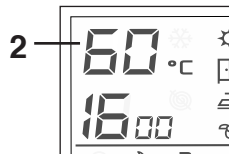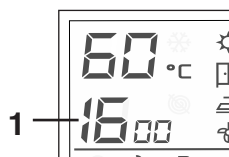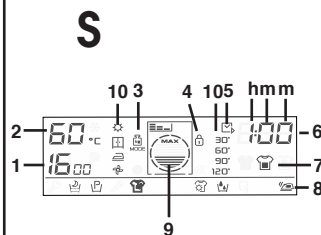

## 4) DOOR LOCKED INDICATOR

The "Door Locked" indicator light is illuminated when the door is fully closed and the machine is ON.

When START is pressed on the machine with the door closed the indicator will flash momentarily and then illuminate.

**If the door is not closed the indicator will continue to flash.**

A special safety device prevents the door from being opened immediately after the end of the cycle.

2 minutes after the end of the wash the light goes off to show that the door can now be opened.

## 5) DELAY START LIGHT

This flashes when delay start has been set.

## 6) CYCLE DURATION




When a programme is selected the display automatically shows the cycle duration, which can vary, depending on the options selected. Once the programme has started you will be kept informed constantly of the time remaining to the end of the wash. The appliance calculates the time to the end of the selected programme based upon a standard loading, during the cycle, the appliance corrects the time to that applicable to the size and composition of the load.

If is selected the automatic washing/drying cycle, at the end of the wash phase, the drying time remaining to the end will be shown on the display.

## 7) WASH TIME


When a programme is selected the relevant indicator will light up to show the minimum possible wash time.

Selecting a greater time using the special button will cause the corresponding indicator to light up.

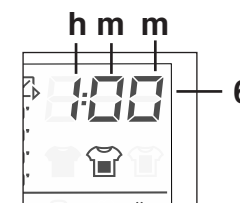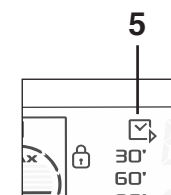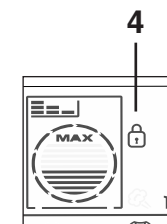

## 8) BUTTONS INDICATOR LIGHT

These light up when the relevant buttons are pressed. If an option is selected but it is not compatible with the selected programme then the symbol first flashes and then goes off.

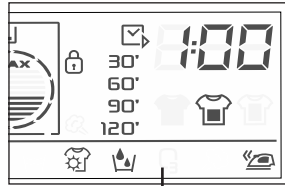

8

## 9) MAXIMUM LOADING CAPACITY and DETERGENT INDICATOR

When a programme is selected on the display is shown the maximum load of laundry suitable for that cycle and the relative detergent quantity.

### Detergent:

===== 20% of the maximum quantity

===== 50% of the maximum quantity


===== maximum quantity The detergent quantity suggested can be vary depending on how much the fabrics are soiled.

### Maximum load

Every levels shown on the display is the 10% of the maximum loading capacity. When a programme is selected the maximum capacity suggested is shown on the display. For the programmes where the KG MODE function is active, the appliance in the first minutes it calculates the real laundry loaded, updating the levels on the display in real time.



9

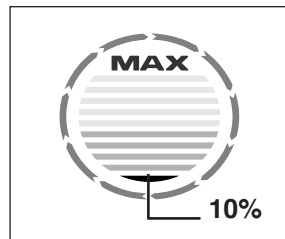

10%

## 10) DRYING PROGRAMME INDICATORS

The indicators display the type of the drying programme: **Automatic Programmes:** By selecting one of these 3 automatic programmes, the washer-dryer will calculate the time needed for drying and the residual dampness required, according to the load and drying type selected. After pressing the START button, the display will shown the drying time remaining.

**The appliance calculates the time to the end of the selected programme based upon a standard loading, during the cycle, the appliance corrects the time to that applicable to the size and composition of the load.**

 = Extra dry drying programme (recommended for towels, bathrobes and bulky loads)

 = Cupboard dry drying programme

 = Iron dry drying programme

### USEFUL TIPS:


The 30 minute drying programme is recommended for small loads (less than 1 kg) or slightly damp loads. Your washer-dryer ends the cycle automatically when it reaches the drying level selected. For the correct operation of the appliance, it is preferable not to interrupt the drying phase unless it is really necessary.

### Timed programmes:

120 minutes – 90 minutes – 60 minutes – 30 minutes: They may be used to select timed drying programmes.

### Cool down phase :

Switched on during the final cool down period, in the last 10 minutes of each drying phase.

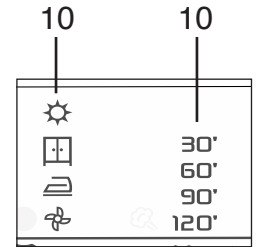



10

10

## CHAPTER 7

## TABLE OF PROGRAMMES

| PROGRAM FOR:                                                                              | PROGRAMME SELECTION BUTTONS:                                                                                                                                                             | WEIGHT MAX kg | RECOMMENDED TEMP. °C | MAX TEMP. °C | CHARGE DETERGENT |                                                                                    |     |
|-------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|----------------------|--------------|------------------|------------------------------------------------------------------------------------|-----|
|                                                                                           |                                                                                                                                                                                          |               |                      |              | 2                |  | 1   |
| <b>Resistant fabrics</b><br>Cotton, linen                                                 | 1)<br>* <b>Cottons</b> **                                                                                                                                                                | 8             | 40°                  | Up to: 90°   | ●                | ●                                                                                  | (●) |
| <b>Mixed fabrics and synthetics</b><br>Cotton, mixed fabrics, synthetics                  | 1)<br>* <b>Mixed</b>                                                                                                                                                                     | 4,5           | 40°                  | Up to: 60°   | ●                | ●                                                                                  | (●) |
| <b>Very delicate fabrics</b>                                                              | <b>Delicate</b>                                                                                                                                                                          | 2,5           | 40°                  | Up to: 40°   | ●                | ●                                                                                  |     |
| <b>Rinse</b>                                                                              | *                                                                                                       | -             | -                    | -            | △                | ●                                                                                  |     |
| <b>Fast spin</b>                                                                          | *                                                                                                       | -             | -                    | -            |                  |                                                                                    |     |
| <b>Drain only</b>                                                                         |                                                                                                         | -             | -                    | -            |                  |                                                                                    |     |
| <b>“Machine-Washable” Wool</b>                                                            | <b>Wool &amp; Silk</b>                                                                                                                                                                   | 1,5           | 30°                  | Up to: 30°   | ●                | ●                                                                                  |     |
| <b>Duvet</b>                                                                              | * <b>Duvet</b>                                                                                                                                                                           | 3             | 30°                  | Up to: 30°   | ●                | ●                                                                                  |     |
| <b>Mixed</b>                                                                              | * <b>Sports</b>                                                                                                                                                                          | 2,5           | 30°                  | Up to: 30°   | ●                | ●                                                                                  |     |
| <b>Resistant fabrics</b><br><b>Mixed fabrics and synthetics</b><br><b>Rapid 14 minute</b> | 2)<br><br><b>14'-30'-44'</b>                                                                          | 1,5           | 30°                  | Up to: 30°   | ●                | ●                                                                                  |     |
| <b>Resistant fabrics</b><br><b>Mixed fabrics and synthetics</b><br><b>Rapid 30 minute</b> |                                                                                                                                                                                          | 2,5           | 30°                  | Up to: 40°   | ●                | ●                                                                                  |     |
| <b>Resistant fabrics</b><br><b>Mixed fabrics and synthetics</b><br><b>Rapid 44 minute</b> |                                                                                                                                                                                          | 3,5           | 30°                  | Up to: 40°   | ●                | ●                                                                                  |     |
| <b>Cotton - Drying</b>                                                                    | <b>High Heat</b>   | 5             | -                    | -            |                  |                                                                                    |     |
| <b>Mixed - Drying</b>                                                                     | <b>Low Heat</b>                                                                                       | 4,5           | -                    | -            |                  |                                                                                    |     |
| <b>Cotton - Mixed</b>                                                                     | <b>Wash &amp; Dry 59'</b>                                                                                                                                                                | 1,5           | 30°                  | Up to: 30°   | ●                | ●                                                                                  |     |

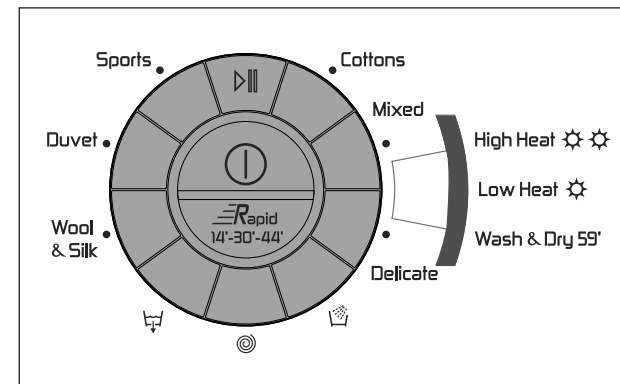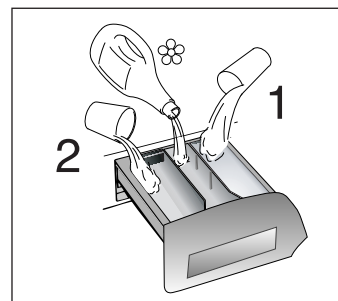

## Please read these notes

**Washing**

\*\* Programme tested in accordance with AS/NZS 2040.2 with the maximum Wash Time selected and a temperature of 40°C.

**Drying**

Cotton – Drying programme tested with Extra Dry selected in accordance with AS/NZS 2442.2.

The spin speed may also be reduced, to match any guidelines suggested on the fabric label, or for very delicate fabrics cancel the spin completely this option is available with a spin speed button.

(●) Only with the Prewash button selected. ( Programmes with Prewash button available)

■ Pressing the wash temperature button makes it possible to wash at any temperature below the maximum allowed.

1) For the programmes shown you can adjust the duration and intensity of the wash using the Wash Time button.

2) Using the Wash Time button on the Rapid cycle will enable you to select either a 14, 30 or 44 minute wash cycle.

\* Programmes for automatic drying.

△ When only a limited number of articles have stains which require treatment with liquid bleaching agents, preliminary removal of stain can be carried out in the washing machine. Pour the bleach into the liquid bleach container, inserted into the compartment marked “2” in the detergent drawer, and set the special programme “RINSE” (  ). When this phase has terminated, switch off the appliance, add the rest of the fabrics and proceed with a normal wash on the most suitable programme.

## CHAPTER 8

### SELECTION

For the various types of fabrics and various degrees of dirt the washing machine has different programme bands according to: wash cycle, temperature and length of cycle (see table of washing cycle programmes).

#### RESISTANTS FABRICS

The programme is designed for maximum washing and rinsing efficiency for normally soiled laundry.  
The final spin gives more efficient removal of water.

#### MIXED AND SYNTHETIC FABRICS

The main wash and the rinse gives best results thanks to the rotation rhythms of the drum and to the water levels.  
A gentle spin will mean that the fabrics become less creased.

#### SPECIAL DELICATE FIBRES

This is a new wash cycle which alternates washing and soaking and is particularly recommended for very delicate fabrics.  
The wash cycle and rinses are carried out with high water levels to ensure best results.

#### SPECIAL "RINSE" PROGRAMME

This programme carries out three rinses with a intermediate spin (which can be reduced or excluded by using the correct button). It can be used for rinsing any type of fabric, eg. use after hand-washing.

This program can be also used as cycle of Bleaching (see table of washing cycle programmes).

Cottons

Mixed

Delicate



### SPECIAL "FAST SPIN" PROGRAMME

Programme "FAST SPIN" carries out a maximum spin (which can be reduced by using the correct button).

#### DRAIN ONLY

This programme drains out the water.

#### WOOL & SILK PROGRAMME

This programme allows a complete washing cycle for garments specified as "Machine-Washable" Wool fabrics and laundry items made from silk or specified "Wash as Silk" on the fabric label. The new motor allows the drum to move with a pulse action.  
This action of partial rotation with pauses in between creates a delicate wash only equalled to that of hand washing.  
The programme has a maximum temperature of 30°C and concludes with 3 rinses, one for fabric conditioner, and a slow spin.

#### DUVET PROGRAMME

This is a programme dedicated to washing a single duvet or big size laundry.  
This programme washes at a cool 30°C, carries out 3 rinses (one is for fabric conditioner) and concludes with a slow spin.  
We suggested to follow the instruction on the cloths label.

#### SPORTS

Hoover has given sports items their own wash care programme.  
The washing machine has a unique Sportswear programme. It is specially designed to wash mixed sportswear fabrics that cannot be washed on hotter programmes and is designed to remove the soil and staining created by participation in sports activities. This programme washes at a cool 30°C, rinses and spins slowly for the best care of your heavily soiled, delicate garments.



Wool & Silk

Duvet

Sports

**RAPID PROGRAMME**

The Rapid programme allows a washing cycle to be completed in just 14 minutes! This programme is particularly suited to slightly dirty cottons and mixed fabrics. Using the Wash Time button on the Rapid cycle will enable you to select either a 14, 30 or 44 minute wash cycle. When selecting the rapid programme, please note that we recommend you use only 20% of the recommended quantities shown on the detergent pack. For information about these programmes please refer to the programmes table.

**COTTON DRYING**

Cotton, terry towelling, linen, hemp fabrics, etc...

**SYNTHETICS DRYING**

Mixed fabrics (synthetics/cotton), synthetic fabrics.

**RAPID 59'**

A complete express washing and drying cycle lasting only 59'. This is an ideal program for having dry, refreshed and ready-to-wear clothes as soon as the cycle is finished.

- Maximum load: 1,5 kg (4 shirts for example)

- Lightly soiled fabrics (cotton and mixed fabrics)

With this program we recommend that you reduce the detergent loading dose (compared to the normal one), in order to avoid detergent waste.

**Rapid**  
**14'-30'-44'**

**High Heat** ☀ ☀

**Low Heat** ☀

**Wash & Dry 59'**

**CHAPTER 9****DETERGENT DRAWER**

The detergent draw is split into 3 compartments:




- the compartment labelled "1" is for prewash detergent;
- the compartment labelled "☼" is for special additives, fabric softeners, fragrances, starch, brighteners etc;
- the compartment labelled "2" is for main wash detergent.

If liquid detergents are used, please insert the special container supplied into the compartment marked "2" in the detergent drawer. This ensures that the liquid detergent enters the drum at the right stage of the wash cycle.

This special container must be inserted into the compartment marked "2" in the detergent drawer, also when you wish to use the "RINSE" programme as BLEACHING cycle.

**NOTE: SOME DETERGENTS ARE DIFFICULT TO REMOVE. FOR THESE, WE RECOMMEND YOU USE THE SPECIAL DISPENSER WHICH IS PLACED IN THE DRUM.**

**NOTE: ONLY PUT LIQUID PRODUCTS IN THE COMPARTMENT LABELLED "☼". THE MACHINE IS PROGRAMMED TO AUTOMATICALLY TAKE UP ADDITIVES DURING THE FINAL RINSE STAGE FOR ALL WASH CYCLES.**

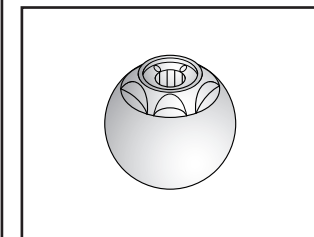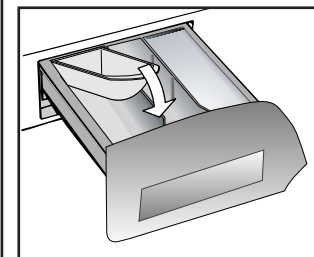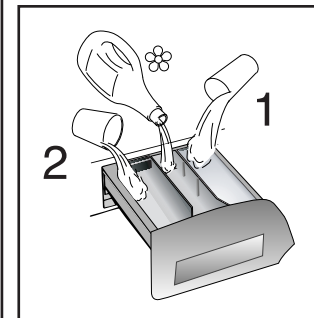

## CHAPTER 10

### THE PRODUCT

#### IMPORTANT:


When washing heavy rugs, bed spreads and other heavy articles, it is advisable not to spin.

To be machine-washed, woollen garments and other articles in wool must bear the "Machine Washable Label".

#### IMPORTANT:

##### When sorting articles ensure that:

- there are no metal objects in the washing (e.g. brooches, safety pins, pins, coins etc.).
- cushion covers are buttoned, zips and hooks are closed, loose belts and long tapes on dressing gowns are knotted.
- runners from curtains are removed.
- attention is paid to garment labels.
- when sorting, any tough stains should be removed prior to washing using stain removers only recommended on label.

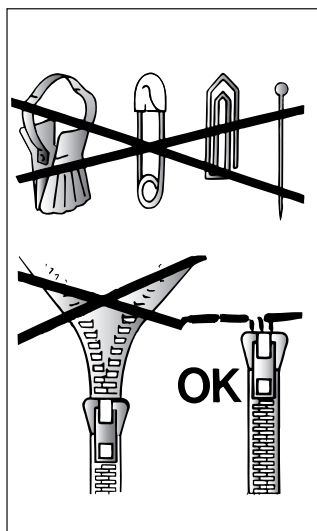

## CHAPTER 11

### CUSTOMER AWARENESS

A guide environmentally friendly and economic use of your appliance.

#### MAXIMISE THE LOAD SIZE

Achieve the best use of energy, water, detergent and time by using the recommended maximum load size. Save up to 50% energy by washing a full load instead of 2 half loads.

#### DO YOU NEED TO PRE-WASH?

For heavily soiled laundry only!  
SAVE detergent, time, water and between 5 to 15% energy consumption by NOT selecting Prewash for slight to normally soiled laundry.

#### IS A HOT WASH REQUIRED?

Pretreat stains with stain remover or soak dried in stains in water before washing to reduce the necessity of a hot wash programme. Save up to 50% energy by using a 40°C wash programme.

#### BEFORE USING A DRYING PROGRAMME...

SAVE energy and time by selecting a high spin speed to reduce the water content in laundry before using a drying programme.

## WASHING

### VARIABLE CAPACITY


This washing machine automatically adapts the level of the water to the type and quantity of washing. In this way it is also possible to obtain a "personalized" wash from an energy saving point of view. This system gives a decrease in energy consumption and a sensible reduction in washing times.

#### EXAMPLE:


A net bag should be used for particularly delicate fabrics.

Let us suppose that the washing consists of HEAVILY SOILED COTTON (tough stains should be removed with suitable stain removal).

It is advisable not to wash a load made up entirely of articles in towelling fabric which absorb a lot of water and become too heavy.

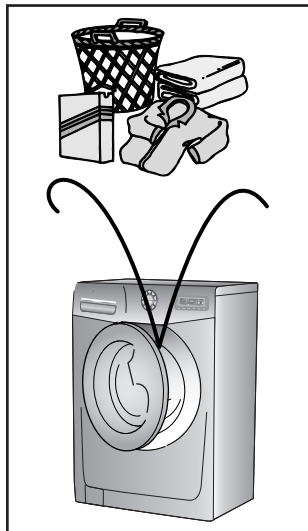

- Open the detergent drawer.
- Put 120 g in the main wash compartment marked **2**.
- Put 50 ml of the desired additive in the additives compartment .
- Close the detergent drawer.

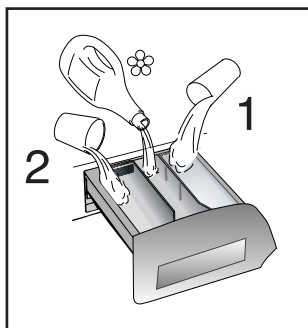

- Ensure that the water inlet tap is turned on.
- And that the discharge tube is in place.

### PROGRAMME SELECTION

Switch on the appliance by the ON/OFF button  
Select the required programme  
The display will show the settings for the programme selected.

Adjust the wash temperature if necessary.


Press the option buttons (if required)

Then press the START button.  
When the START button is pressed the machine sets the working sequence in motion.

**Warning:** If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and, when the power is restored, it continues where it left off.

- When the programme has ended the word "End" will appear on the display
- Wait for the door lock to be released (about 2 minutes after the programme has finished).
- Switch off the appliance by pressing the ON/OFF button
- Open the door and remove the laundry.
- Turn off the water supply after every use.

**FOR ALL TYPES OF WASH CONSULT THE PROGRAMME TABLE AND FOLLOW THE OPERATIONS IN THE ORDER INDICATED.**

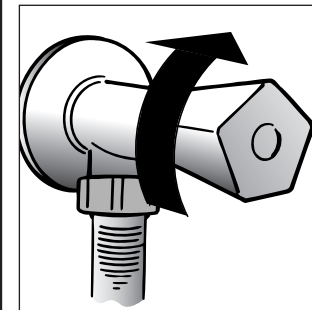

## CHAPTER 12

### DRYING

To minimize the risk of fire in a tumble dryer, the following should be observed:

- Items that have been spotted or soaked with vegetable or cooking oil constitute a fire hazard and should not be placed in a tumble dryer.

- Oil-affected items can ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the items can become hot enough to catch fire. Piling, stacking or storing oil affected items can prevent heat from escaping and so create a fire hazard. If it is unavoidable that fabrics that contain vegetable or cooking oil or have been contaminated by hair care products be placed in a tumble dryer they should first be washed in hot water with extra detergent-this will reduce, but not eliminate, the hazard. The 'cool down' cycle of tumble dryers should be used to reduce the temperature of the items. They should not be removed from the tumble dryer or piled or stacked while hot.

- Items that have been previously cleaned in, washed in, soaked in or spotted with petrol/gasoline, dry-cleaning solvents or other flammable or explosive substances should not be placed in a tumble dryer. Highly flammable substances commonly used in domestic environments include acetone, denatured alcohol, petrol/gasoline, kerosene, spot removers (some brands), turpentine, waxes and wax removers.

- Items containing foam rubber (also known as latex foam) or similarly textured rubber like materials should not be dried in a tumble dryer on a heat setting. Foam rubber materials can, when heated, produce fire by spontaneous combustion.

- Fabric softeners or similar products should not be used in a tumble dryer to eliminate the effects of static electricity unless this practice is specifically recommended by the manufacturer of the fabric softener or product.

- Undergarments that contain metal reinforcements should not be placed in a tumble dryer. Damage to the tumble dryer can result if metal reinforcements come loose during drying. When available a drying rack could be used for such items.

- Plastic articles such as shower caps or babies' waterproof napkin covers should not be placed in a tumble dryer.


- Rubber-backed articles, clothes fitted with foam rubber pads, pillows, galoshes and rubber-coated tennis shoes should not be placed in a tumble dryer.

**IMPORTANT:**  
THIS DRYER CAN ONLY BE USED FOR LAUNDRY WHICH HAS BEEN WASHED AND SPIN DRIED.

#### WARNING:

Indications given are general, therefore some practice is needed for the best drying results. We recommend setting a lower drying time than indicated, when first using, so as to establish the degree of dryness required. We recommend not to dry fabrics that fray easily, such as rugs or garments with a deep pile, to avoid air duct clogging.

The water is then conveyed to the drain circuit, which is sealed and therefore, no steam can be released outside.

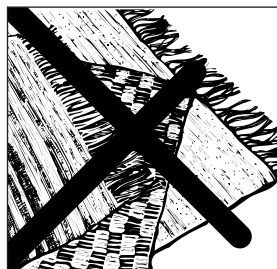

**IMPORTANT**  
NEVER OPEN THE DOOR AFTER THE DRYING CYCLE HAS BEGUN - WAIT UNTIL THE COOL DOWN PERIOD PROVIDED FOR BY THE CYCLE. 

Only dry pre-spun laundry

The washer/dryer can perform two types of drying:

1 Cotton, terry towelling, linen, hemp fabrics, etc...

**Advisory note**  
During drying phase the drum will accelerate to a higher speed to distribute the load and to optimize the drying performance

2 Mixed fabrics (synthetics/cotton), synthetic fabrics.

#### DRYING CYCLE

- Open door.

- Fill with up to 5 kg - in case of large items (e.g. sheets) or very absorbent items (e.g. towels or jeans), it is a good idea to reduce the load.

- Close door.

- Press the ON/OFF button to switch on the washer dryers. Press the drying programme selection button (P). The cottons drying programme indicator lights up. Select the degree of dryness that you require with the button "drying selection".


- This ranges from Extra Dry (  ) for bath towels and bathrobes, through Cup board Dry (  ) for items that will be put away without ironing, to iron dry (  ) that leaves the laundry suitable for ironing.

If you wish to select a timed drying cycle, press the "drying selection" button until the required time indicator lights up.



High Heat 

Low Heat 

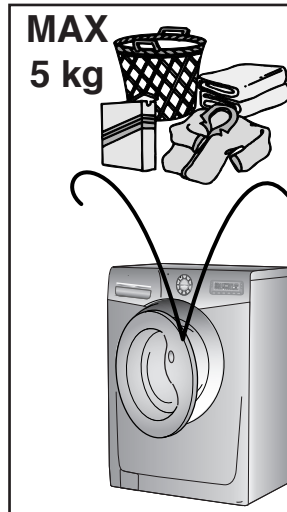

### DOUBLE-SKIN DOOR




The appliance door is fitted with a protective shield to prevent contact with the glass door which can reach high temperatures, during the drying cycle.

**WARNING: DO NOT TOUCH DOOR FOR ANY REASON.**

- Make sure water inlet valve is open.
- Make sure water drain is correctly positioned.

**WARNING:**  
DO NOT DRY WOOLLEN GARMENTS OR ARTICLES WITH SPECIAL PADDING, (E.G. QUILTS, QUILTED ANORAKS, ETC.).  
DELICATE FABRICS IF GARMENTS ARE DRIP/DRY, LOAD LESS ITEMS AS TO PREVENT CREASING.

- Press the START button.
- The drying programme indicator will be on until the cool down phase will begin and the indicator (  ) will go on.
- At the end of the programme the word "END" will appear on the display.
- Wait for the door lock to be released (about 2 minutes after the programme has finished). The "Door Security" indicator light will go out.
- Switch off the appliance by pressing the ON/OFF button
- Open the door and remove the laundry.
- Turn off the water supply after every use.

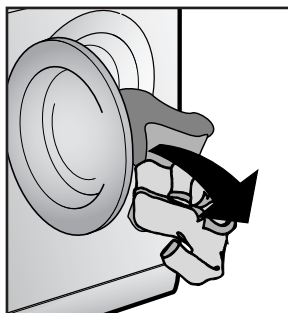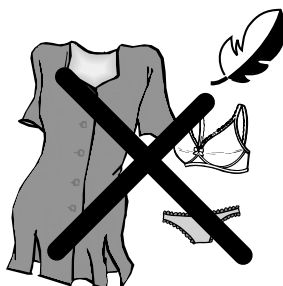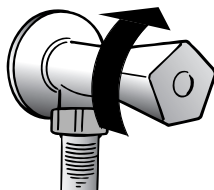

## CHAPTER 13

### AUTOMATIC WASHING/DRYING

**WARNING: ONLY A MAXIMUM 5 KG OF DRY LAUNDRY CAN BE LOADED OTHERWISE THE DRIED LAUNDRY WILL BE NOT SATISFACTORY.**

#### Washing:

Open the drawer, choose the detergent and put in the correct amount.

Press the ON/OFF button to switch on the washer dryers

Refer to the list of washing programmes according to fabrics to be washed (e.g. very dirty cotton) and without pressing Start button, prepare wash as described:

Select the required programme

The display will show the settings for the programme selected.

Adjust the wash temperature if necessary.


Press the option buttons (if required)

Check that the tap is turned on and that the discharge hose is positioned correctly.

#### Drying:

Select the degree of dryness that you require with the button "drying selection".

This ranges from Extra Dry (  ) for bath towels and bathrobes, through Cupboard Dry (  ) for items that will be put away without ironing, to iron dry (  ) that leaves the laundry suitable for ironing.

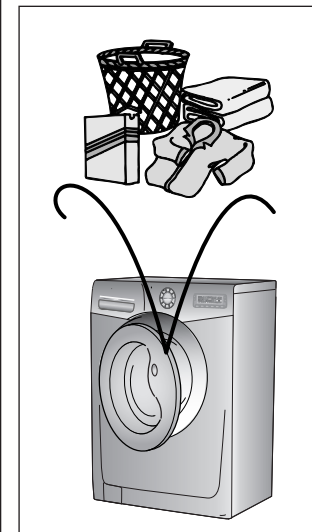

If you wish to select a timed drying cycle, press the "drying selection" button until the required time indicator lights up.

Press the "Start/Pause" button.

At the end of the wash phase the display will show the drying time remaining.

The washer-dryer will then complete the entire drying programme.

The drying programme indicator will be on until the cool down phase will begin and the indicator (🌀) will go on.


At the end of the programme the word "END" will appear on the display.

Wait for the door lock to be released (about 2 minutes after the programme has finished).  
The "Door Security" indicator light will go out.

Switch off the appliance by pressing the ON/OFF button

Open the door and remove the laundry.

Turn off the water supply after every use.

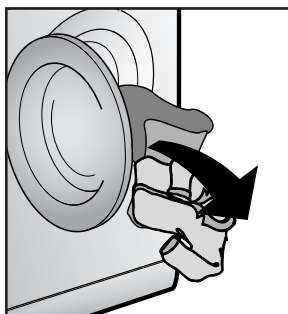

**TABLE OF DRYING TIMES (IN MINUTES):**

| PROGRAMME |    | COTTON   |          | MIXED    |            |
|-----------|----|----------|----------|----------|------------|
|           |    | Min 1 Kg | Max 5 Kg | Min 1 Kg | Max 4,5 Kg |
| Extra     | ☀️ | from 30' | to 230'  | from 30' | to 170'    |
| Cupboard  | 📦  | from 30' | to 220'  | from 30' | to 150'    |
| Iron      | 👕  | from 30' | to 170'  | from 30' | to 80'     |

The appliance calculates the time to the end of the selected programme based upon a standard loading, during the cycle, the appliance corrects the time to that applicable to the size and composition of the load.

## CHAPTER 14

### CLEANING AND ROUTINE MAINTENANCE

Do not use abrasives, spirits and/or diluents on the exterior of the appliance. It is sufficient to use a damp cloth.

The washing machine requires very little maintenance:

- Cleaning of drawer compartments.
- Filter cleaning
- Removals or long periods when the machine is left standing.


#### CLEANING OF DRAWER COMPARTMENTS

Although not strictly necessary, it is advisable to clean the detergent, bleach and additives compartments occasionally.

Remove the compartments by pulling gently.

Clean with water.

Put the compartments back into place

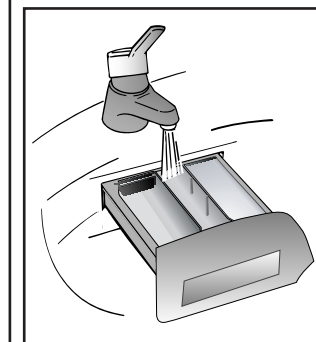

## FILTER CLEANING

The washing-machine is equipped with a special filter to retain large foreign matter which could clog up the drain, such as coins, buttons, etc. These can, therefore, easily be recovered. The procedures for cleaning the filter are as follows:

- Open the flap

- Only available on certain models:  
Pull out the corrugated hose, remove the stopper and drain the water into a container.

- Before removing the filter, place an absorbent towel below the filter cap to collect the small amount of water likely to be inside the pump

- Turn the filter anticlockwise till it stops in vertical position.

- Remove and clean.



- After cleaning, replace by turning the notch on the end of the filter clockwise. Then follow all procedures described above in reverse order.

## REMOVALS OR LONG PERIODS WHEN THE MACHINE IS LEFT STANDING

For eventual removals or when the machine is left standing for long periods in unheated rooms, the drain hose should be emptied of all remaining water.

The appliance must be switched off and unplugged. A bowl is needed. Detach the drainage hose from the clamp and lower it over the bowl until all the water is removed.

Repeat the same operation with the water inlet hose.

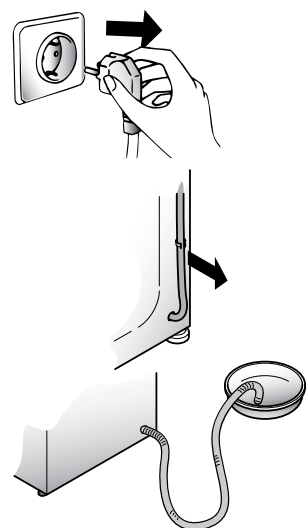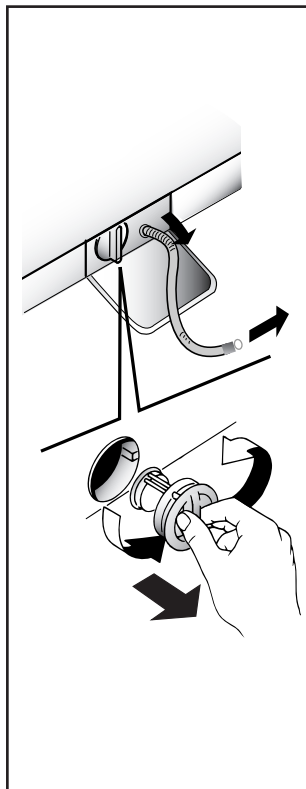

## CHAPTER 15

| FAULT                                    | CAUSE                                               | REMEDY                                                                       |
|------------------------------------------|-----------------------------------------------------|------------------------------------------------------------------------------|
| 1. Does not function on any programme    | Mains plug not plugged in                           | Insert plug                                                                  |
|                                          | Mains switch not on                                 | Turn on mains switch                                                         |
|                                          | No power                                            | Check                                                                        |
|                                          | Electric circuit fuses failure                      | Check                                                                        |
|                                          | Load door open                                      | Close load door                                                              |
| 2. Does not load water                   | See cause 1                                         | Check                                                                        |
|                                          | Inlet tap turned off                                | Turn on water inlet tap                                                      |
| 3. Does not discharge water              | Discharge tube bent                                 | Straighten discharge tube                                                    |
|                                          | Odd material blocking filter                        | Check filter                                                                 |
| 4. Water on floor around washing machine | Leak from the washer between the tap and inlet tube | Replace washer and tighten the tube on the tap                               |
| 5. Does not spin                         | The washing machine has not discharged water        | Wait a few minutes until the machine discharges water                        |
|                                          | "No spin" setting (some models only)                | Turn the programme dial onto spin setting                                    |
| 6. Strong vibrations during spin         | Washing machine not perfectly level                 | Adjust special feet                                                          |
|                                          | Transport bracket not removed                       | Remove transport bracket                                                     |
|                                          | Washing load not evenly distributed                 | Distribute the washing evenly                                                |
| 7. Display reads error 0, 1, 5, 7, 8     | -                                                   | Call service.                                                                |
| 8. Display reads error 2                 | No water fill.                                      | Check water supplies are on.                                                 |
| 9. Display reads error 3                 | No pump out.                                        | Check drain is clear.<br>Check drain hose is not kinked.                     |
| 10. Display reads error 4                | Machine overfilled with water.                      | Turn off water supply to machine.<br>Call service.                           |
| 11. Display reads error 9                | -                                                   | Switch off the appliance<br>Wait 10-15 seconds and start again the programme |

### Advisory note

**During drying phase the drum will accelerate to a higher speed to distribute the load and to optimize the drying performance**

If the fault should persist, contact a Hoover Customer Service Centre. For prompt servicing, give the model of the washing machine, to be found on the label placed on the cabinet inside of the porthole or on the guarantee certificate.

### Important

- 1 The use of environment friendly detergives without phosphates may produce the following effects:**
- The discharge rinse water may result cloudier due to the presence of zeolites in suspension. This does not compromise the efficiency of the rinses.
  - The presence of white powder (zeolites) on the washing at the end of the washing cycle. This does not remain incorporated in the fabric and does not alter the colour.
  - The presence of foam in the last rinse water which is not necessarily a sign of inadequate rinsing.
  - The non-ionic surface-active agents present in the composition of washing machine detergives are often difficult to remove from the washing itself and, even in small quantities, may produce visible signs of the formation of foam.
  - Carrying out further rinses, in cases such as this, is not useful.

- 2 If your washing machine fails to function, carry out the above-mentioned checks before calling the Hoover Customer Service Centre.**

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



The manufacturer declines all responsibility in the event of any printing mistakes in this booklet. The manufacturer also reserves the right to make appropriate modifications to its products without changing the essential characteristics.