
MODEL: POP883S

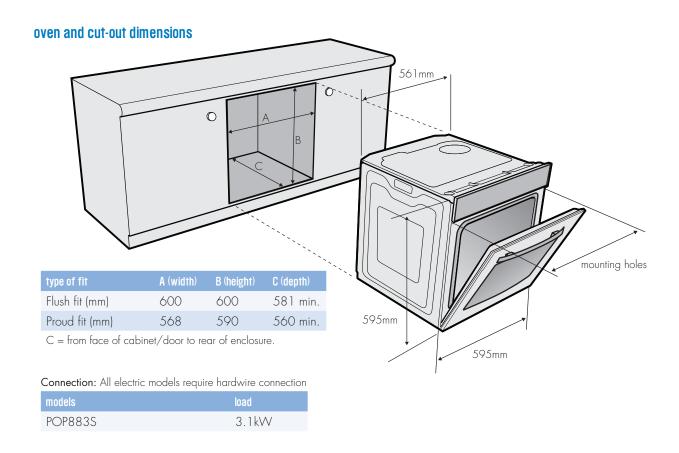

## cabinet construction

Figure 1 – flush fit (top view)


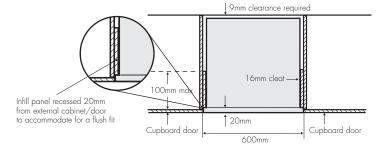


Figure 2 – proud fit (top view)

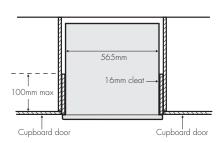

For the best integration within a kitchen, install this appliance in a standard 600mm wide cupboard that gives a flush fit with the surrounding cupboard fronts (Figure 1). A 20mm recess is ideal. It can also be installed using a proud fit with the surrounding cupboard (Figure 2).

Note: Your appliance must be mounted on a flat surface for the full width and depth of the product.