

# motionoffice

## arc 3 Assembly Instructions



### PARTS LIST:


- ☐ MOES (L&R Pairs)
- ☐ MOCS14 x 3
- ☐ MLOOPC60BO x 3

### COMPONENTS LIST:

8 - Pins




## Arc 3 Assembly Instructions




Recommended  
2-person Step


To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

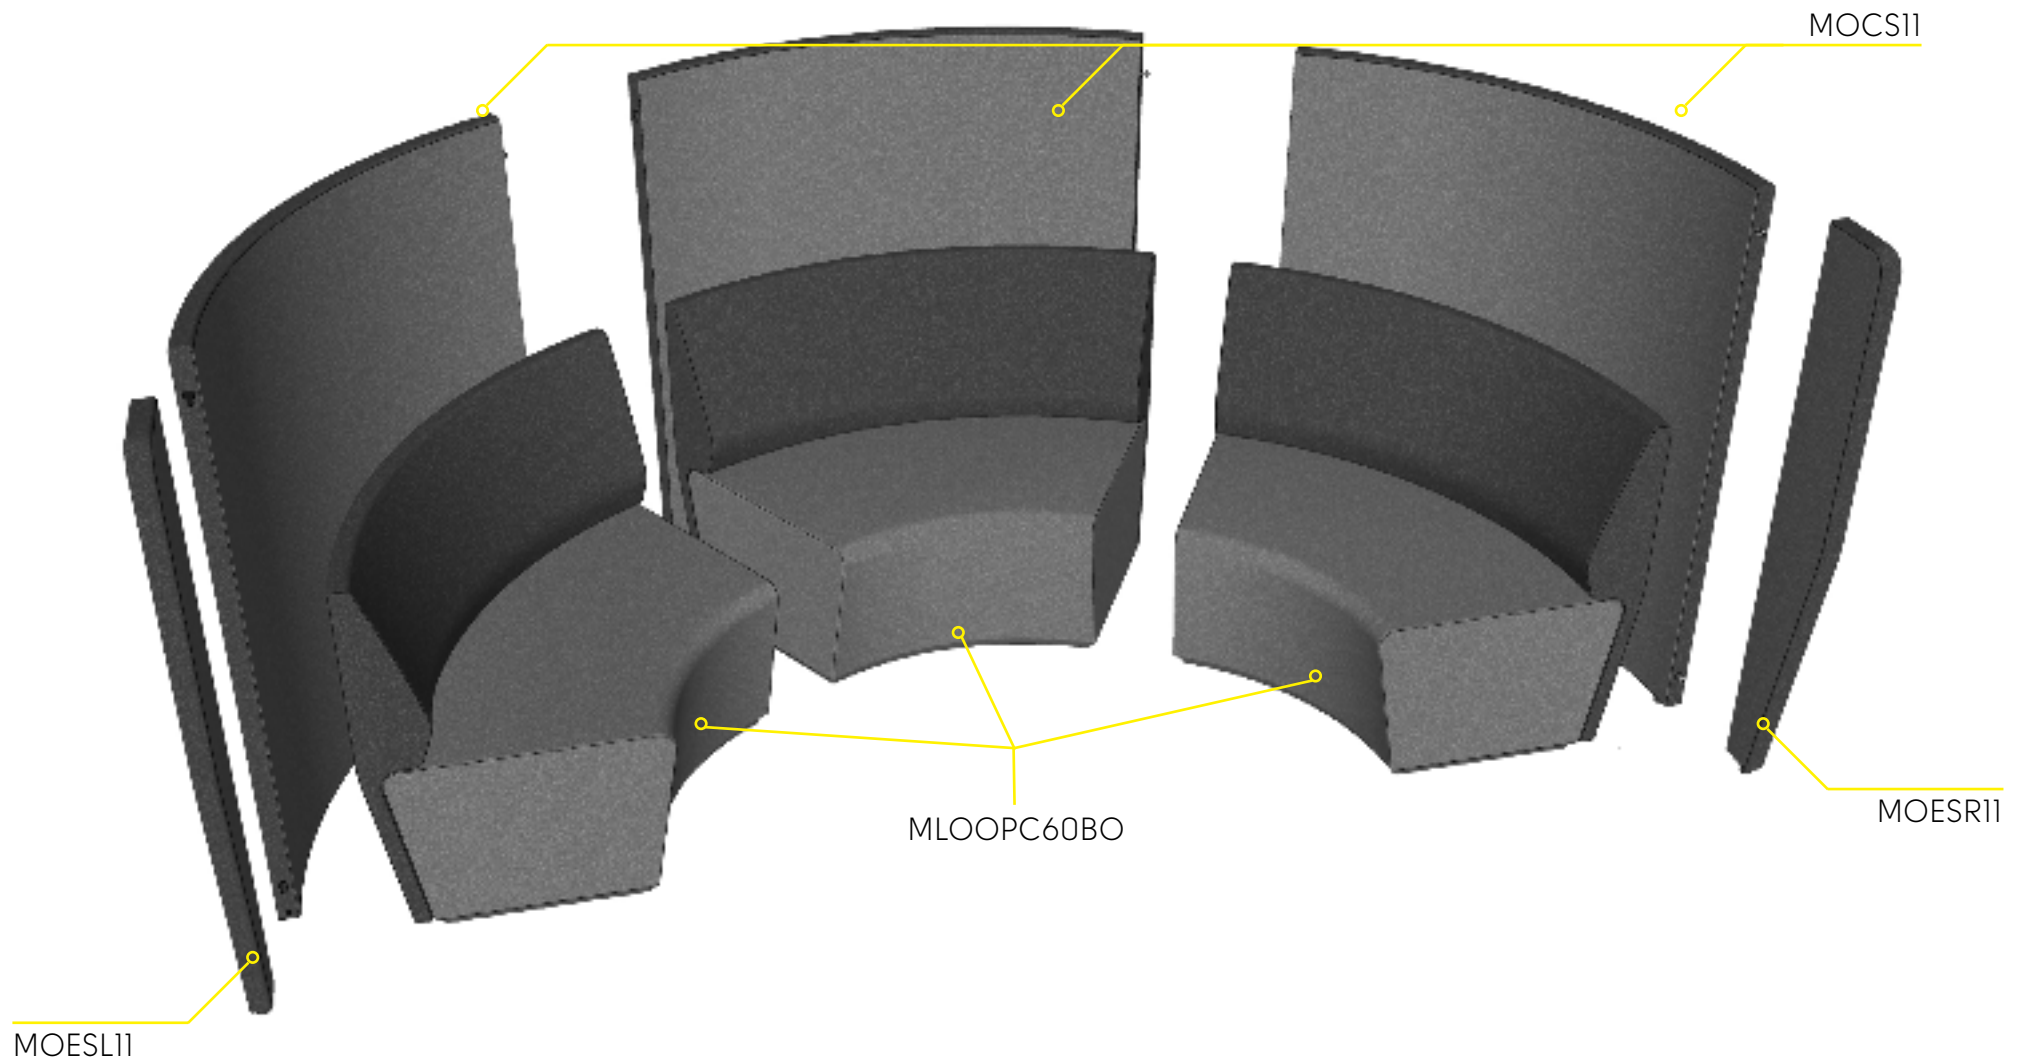


## Arc 3 Assembly Instructions

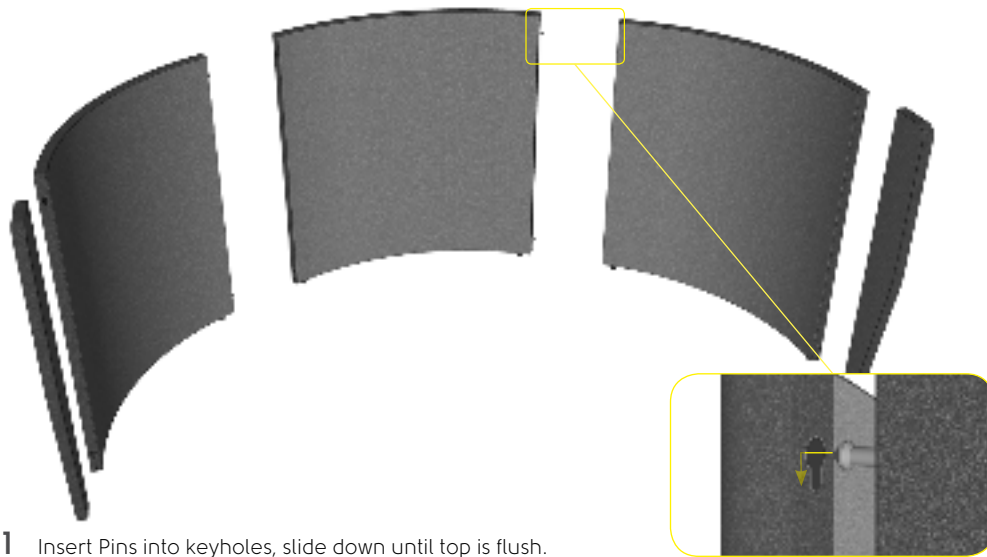


1 Insert Pins into keyholes, slide down until top is flush.

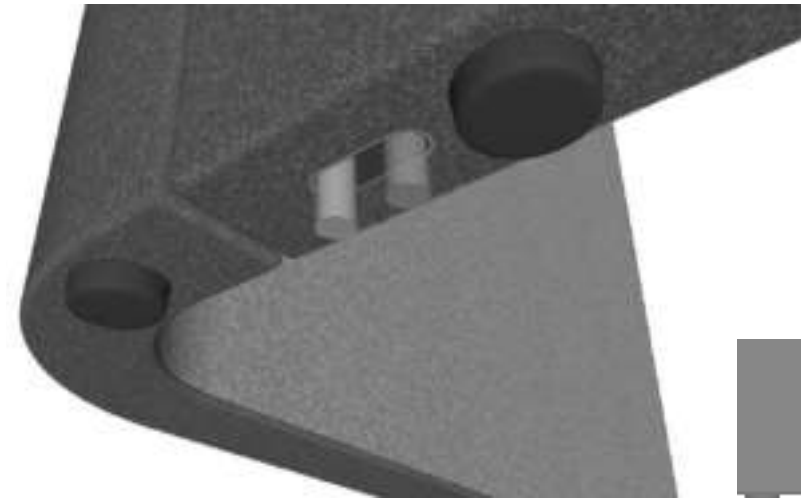

2 Once panels are flush, slide pin across to lock panels together.

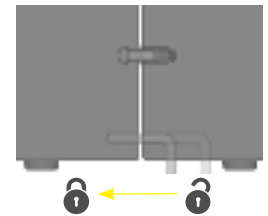

3 Place loop Ottomans as shown in this diagram from the inside outwards.

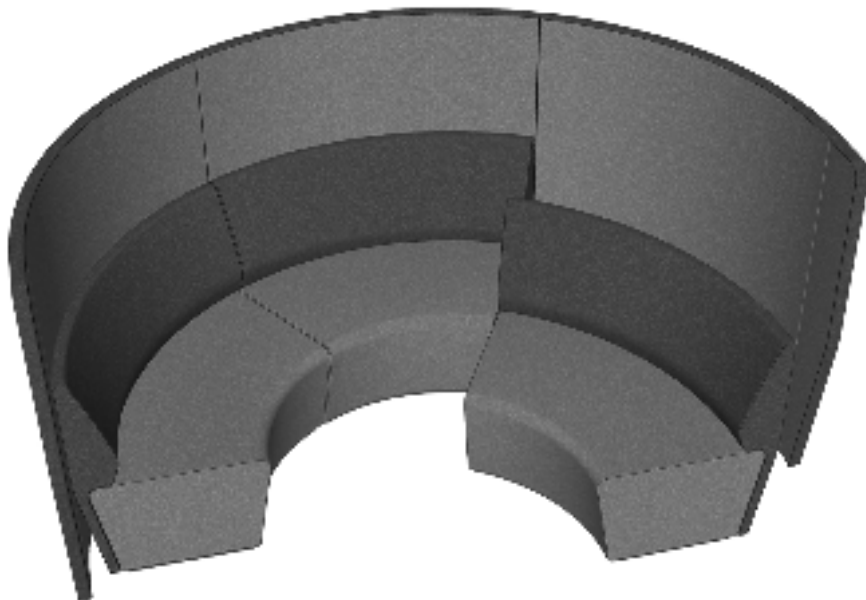

# motionoffice

## Orbit Assembly Instructions



### PARTS LIST:

- ☐ MOES (L&R Pairs)
- ☐ MOCS14 x 5
- ☐ MLOOPC60BO x 5

### COMPONENTS LIST:


14 - Pins




## Orbit Assembly Instructions




To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

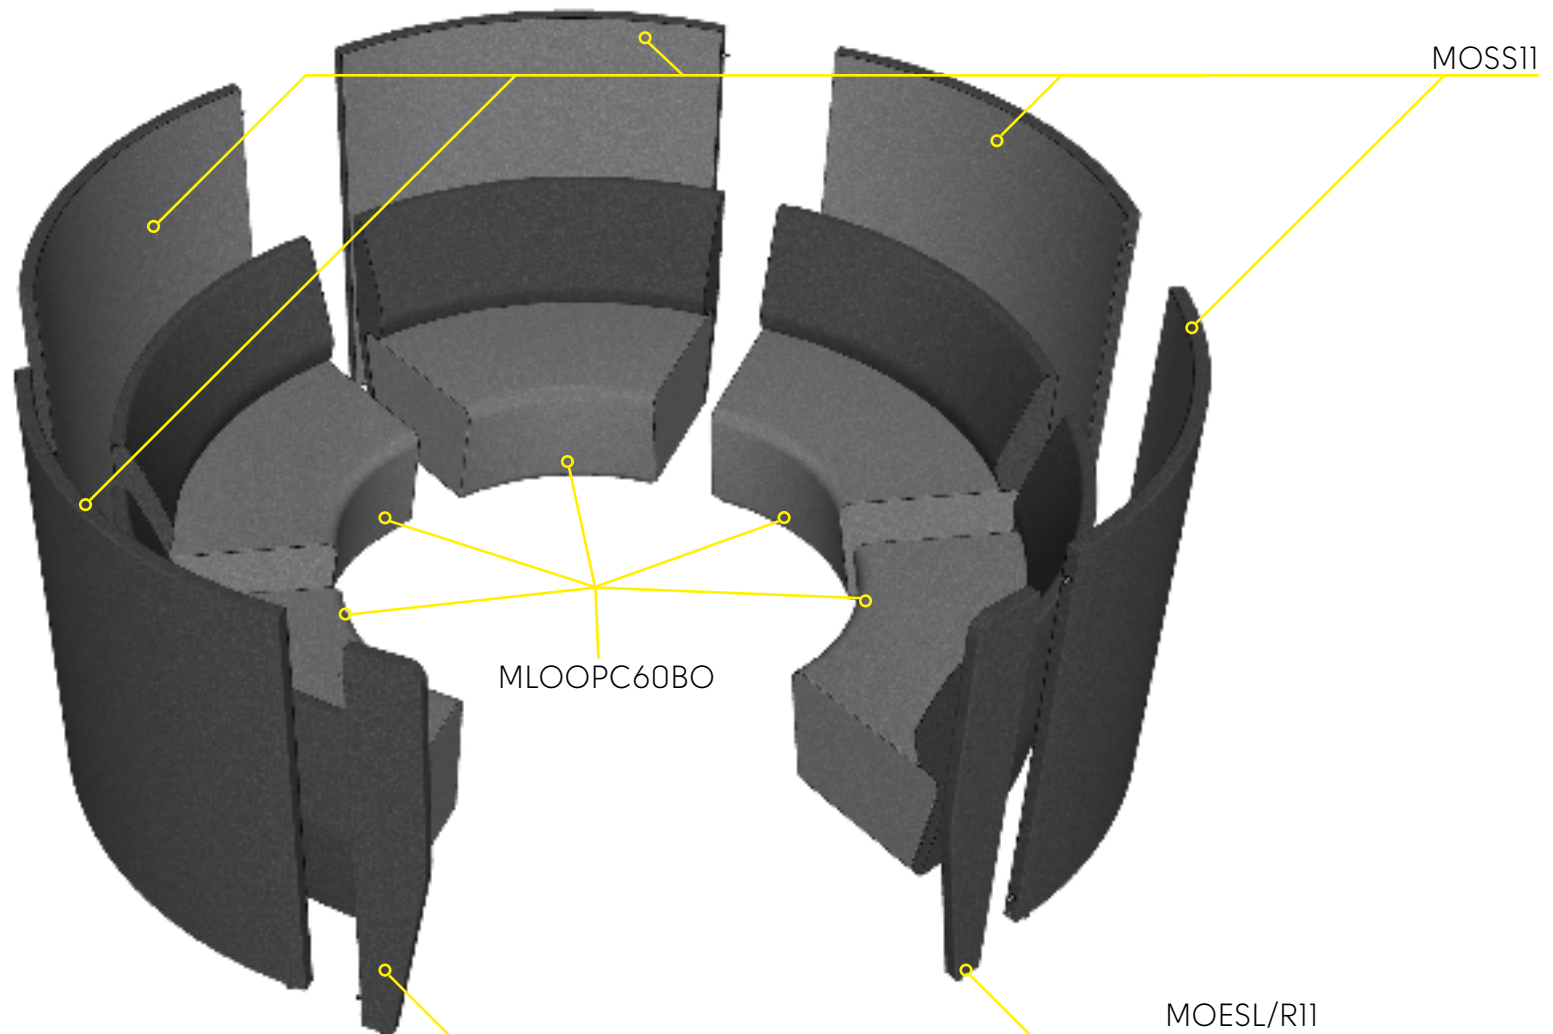


## Orbit Assembly Instructions

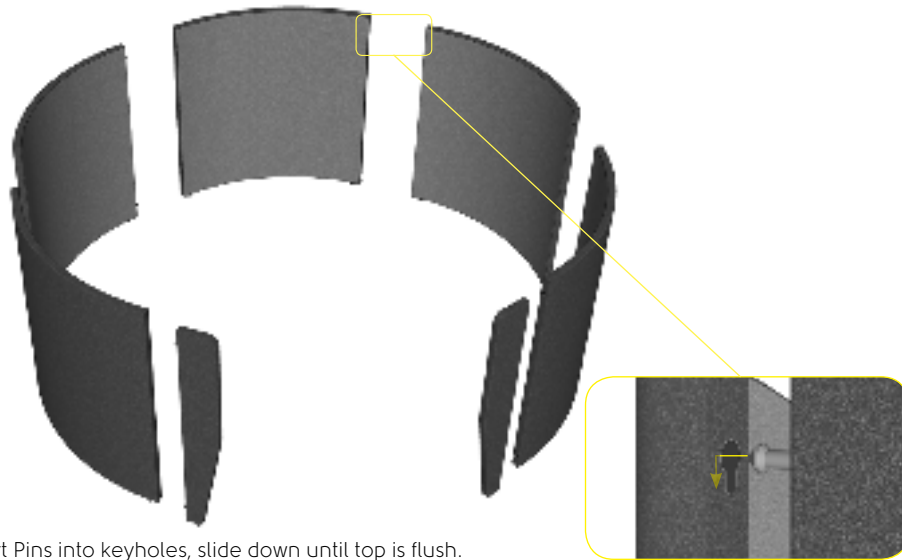


1 Insert Pins into keyholes, slide down until top is flush.

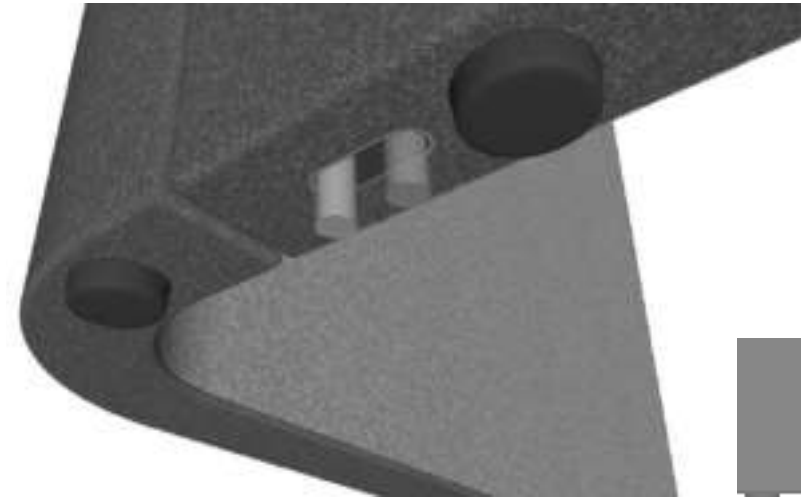


2 Once panels are flush, slide pin across to lock panels together.

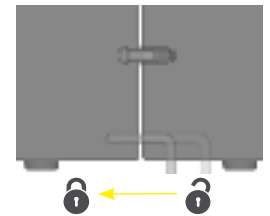


3 Place loop Ottomans as shown in this diagram from the inside outwards.

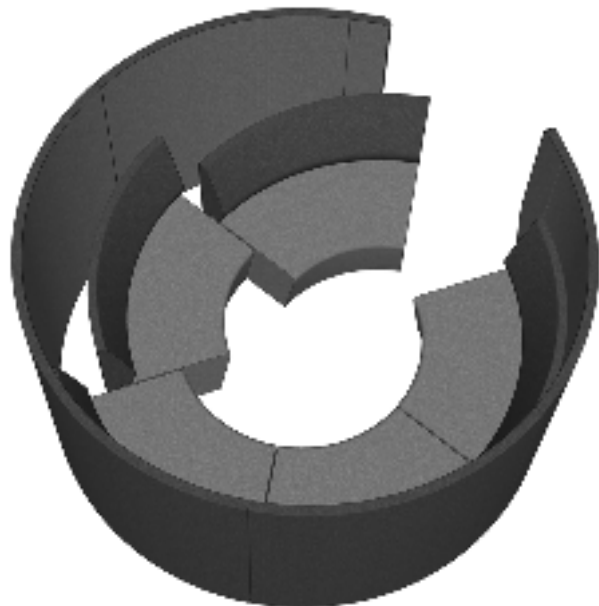



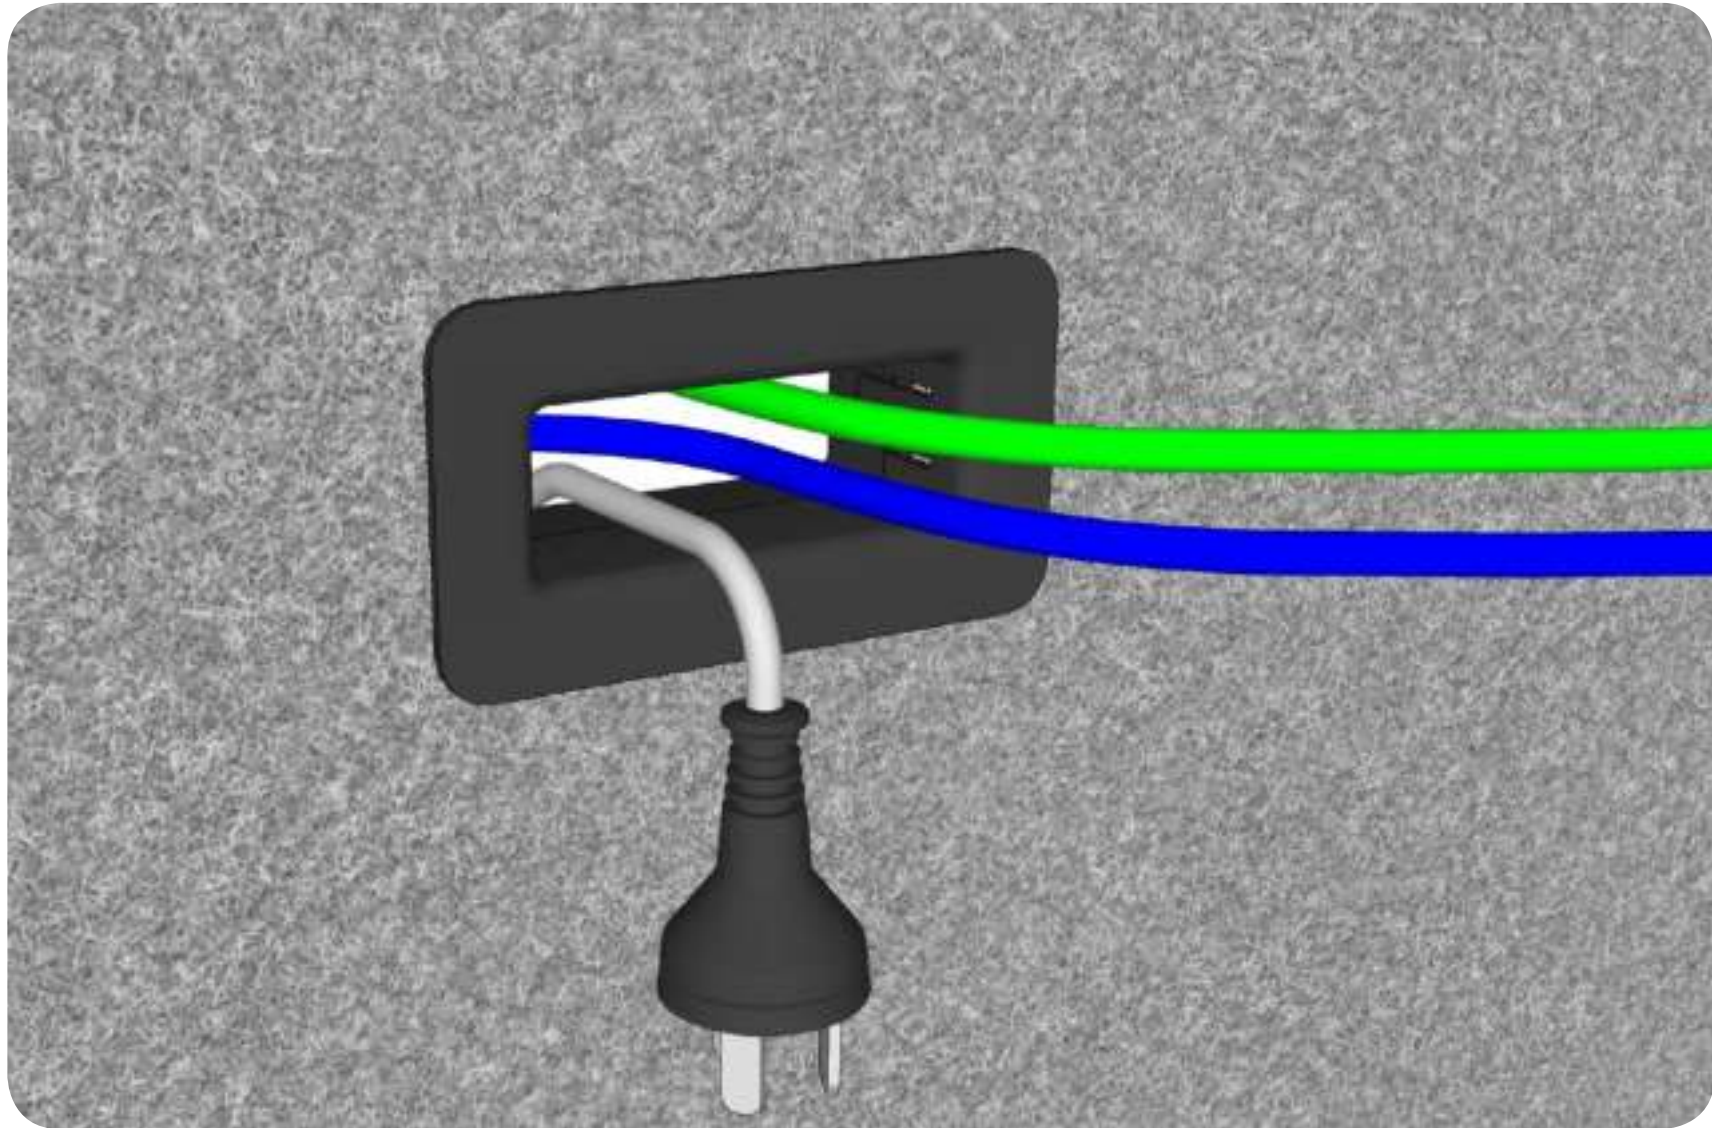


## Cable Ports Assembly Instructions



Recommended  
2-person Step


To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

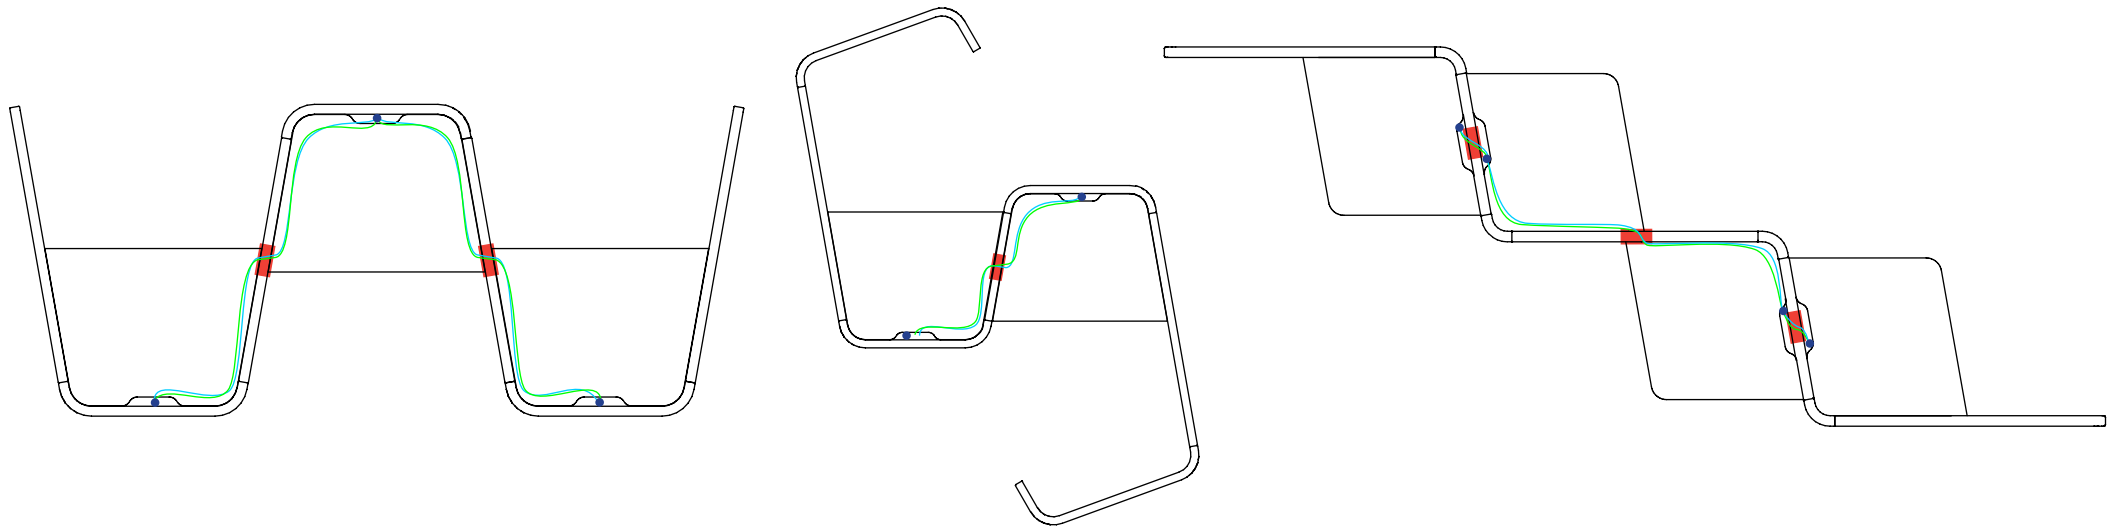


■ Cable port locations marked in red.



## Cable Ports Assembly Instructions

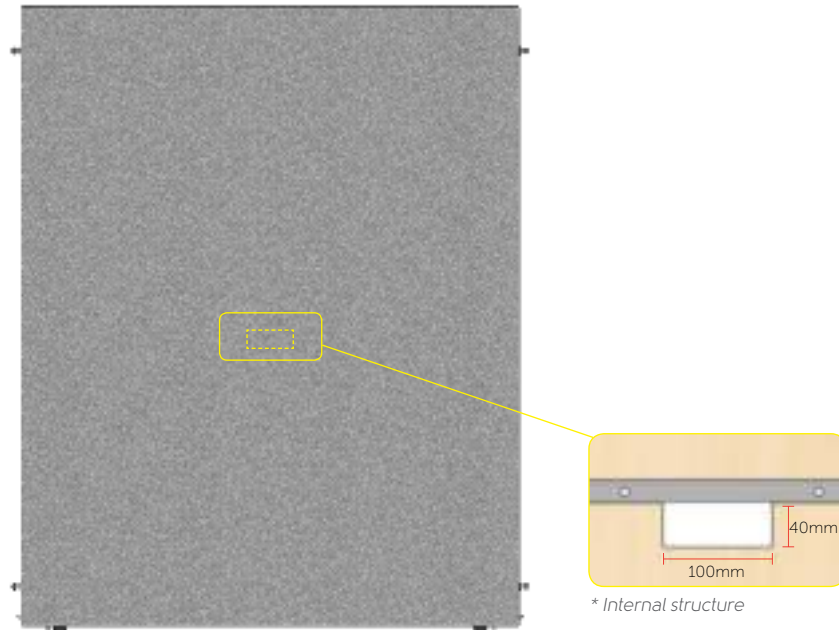


1 Lateral cable port cut outs are located in the centre of the panel below the metal cross tube.

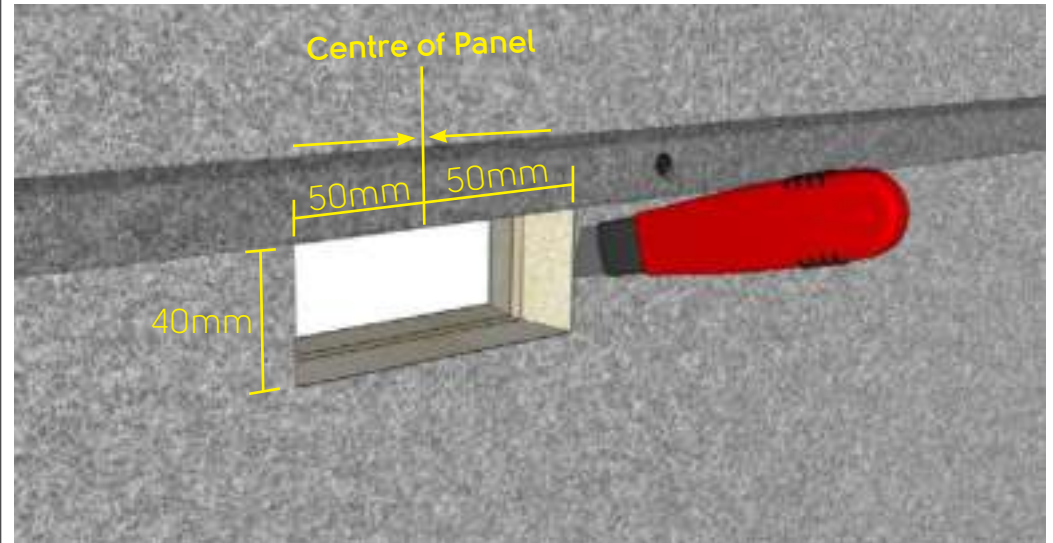

2 Find the centre of the panel, cut away fabric & foam over the lateral cut out. Do this on both sides.

3 Insert the cable port halves into either side of the hole.

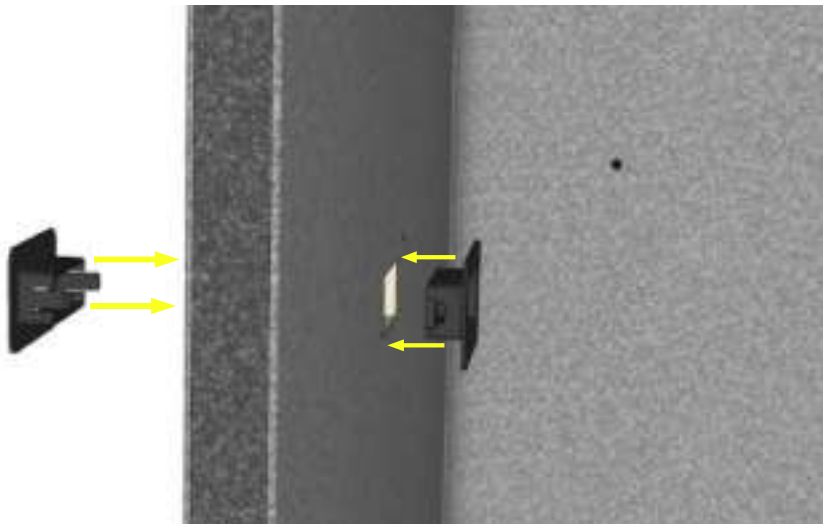

Completed





### PARTS LIST:


- ☐ MRF1508
- ☐ MBP1712
- ☐ MCOV17(L&R Pair)
- ☐ MBACK14
- ☐ MCBASE14

### COMPONENTS LIST:

- 4 - Pins
- 4 - Plates
- 17 - Plate Screws
- 1 - Allen Key




## Cape Roof Booth Assembly Instructions




Recommended  
2-person Step


To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

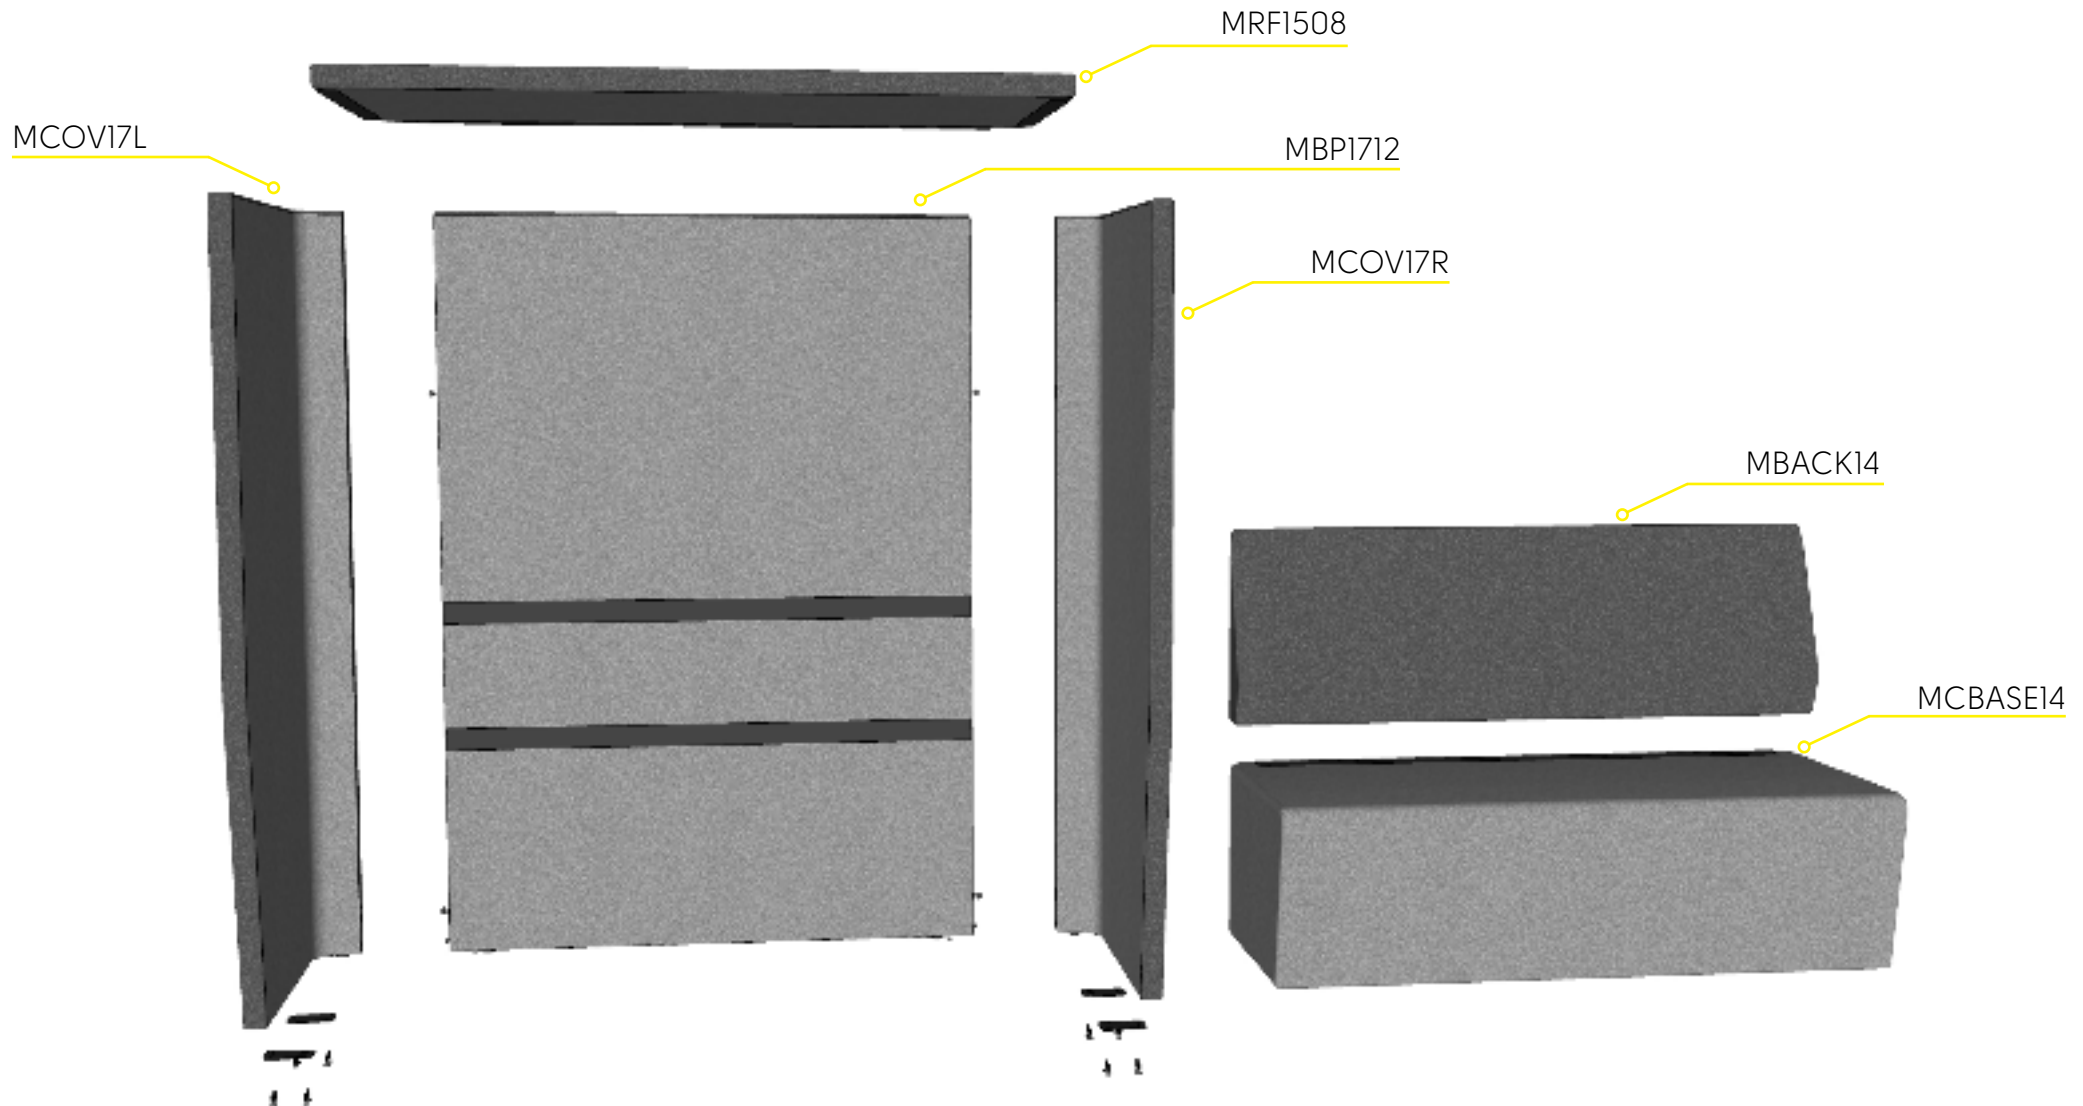

## Cape Roof Booth Assembly Instructions

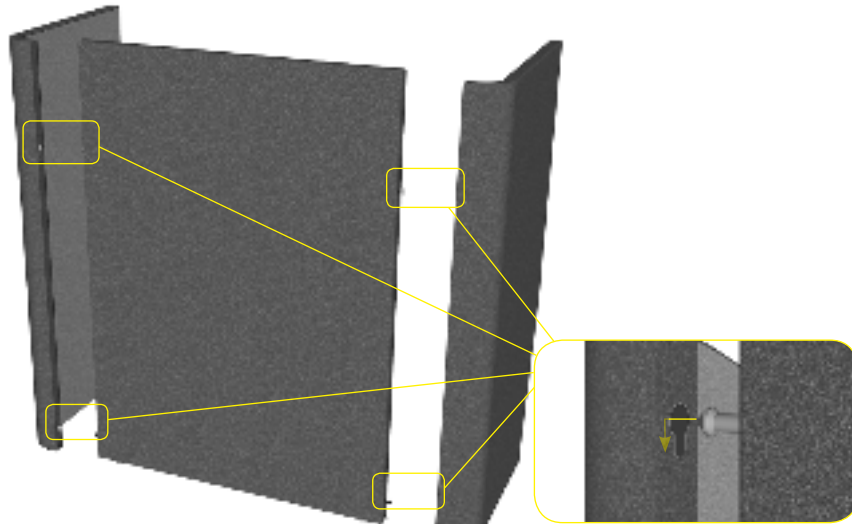


**1** Insert Pins into keyholes, slide down until top is flush.


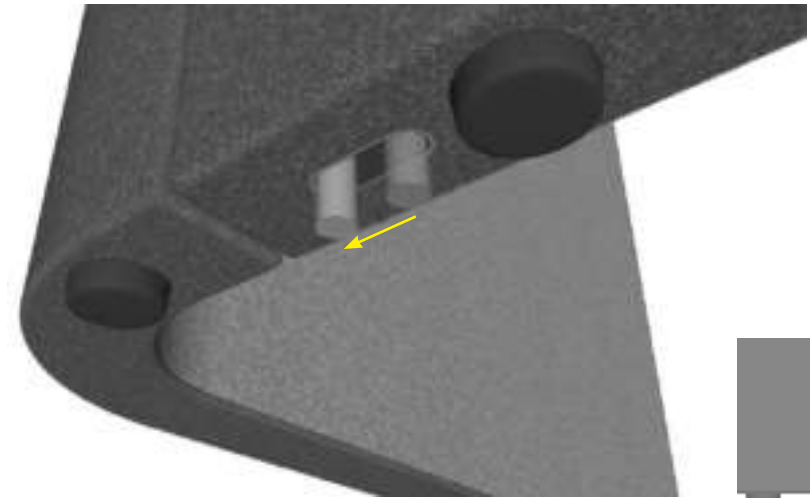


**2** Once panels are flush, slide pin across to lock panels together.

**3** Lie the panels on their back and place seat base inside, then screw plate to panels and seat base to fix firmly.

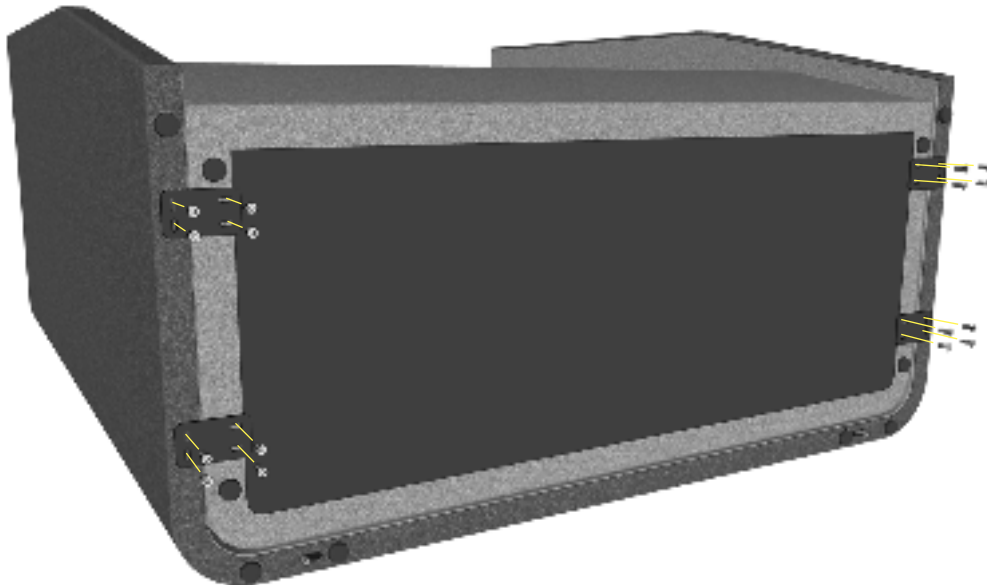

**4** Locate the velcro strips on the backrest & the roof with those on the panels.

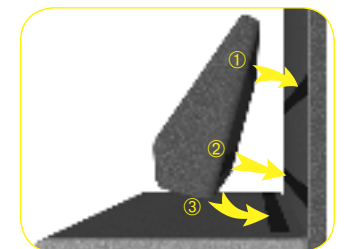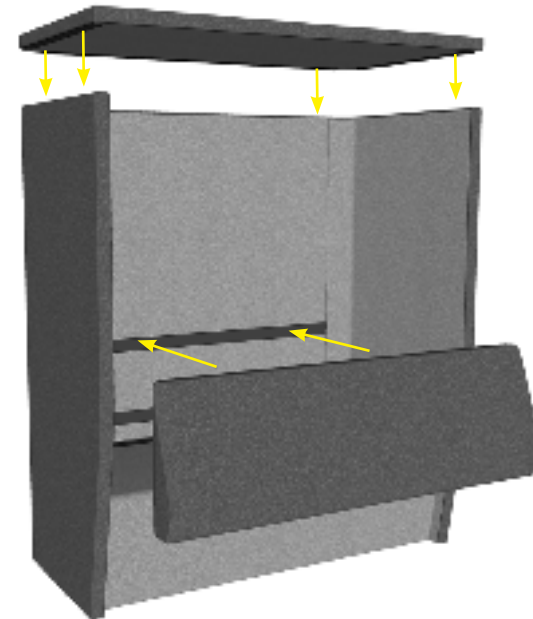

*\* Slide back rest along seat with top racked forward to fasten upper velcro set first.*

# motionoffice

## Cape Seat (Single) Assembly Instructions



### PARTS LIST:


- ☐ MBP1405
- ☐ MCOV14(L&R Pair)
- ☐ MBACK06
- ☐ MCBASE06

### COMPONENTS LIST:

- 4 - Pins
- 4 - Plates
- 17 - Plate Screws
- 1 - Allen Key




## Cape Seat (Single) Assembly Instructions




Recommended  
2-person Step

To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

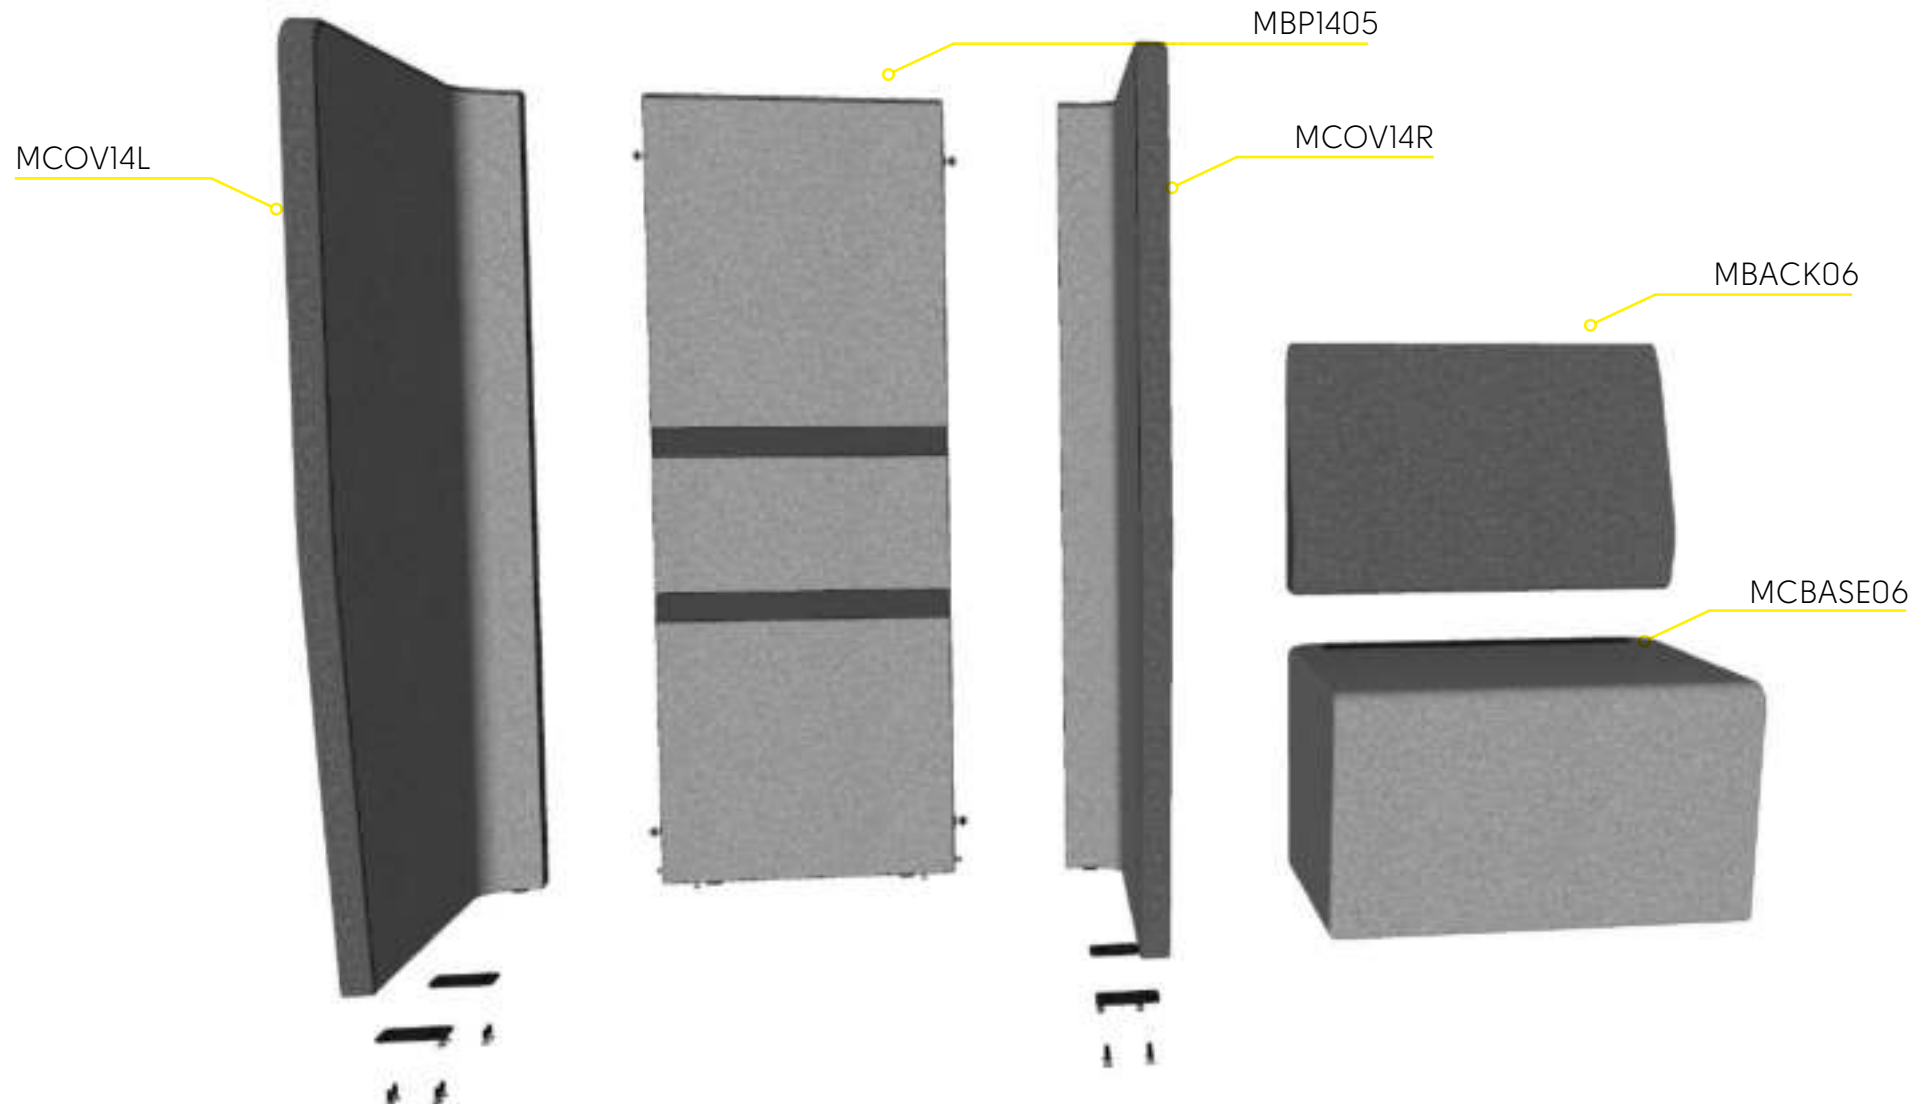





## Cape Seat (Single) Assembly Instructions

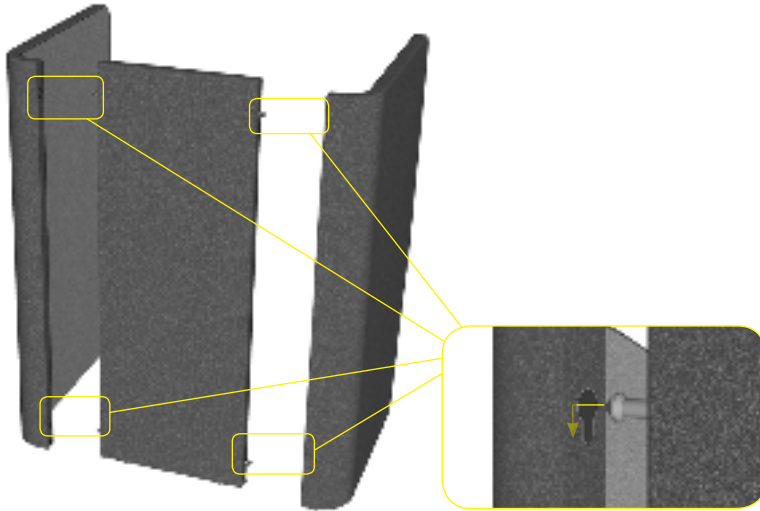


**1** Insert Pins into keyholes, slide down until top is flush.

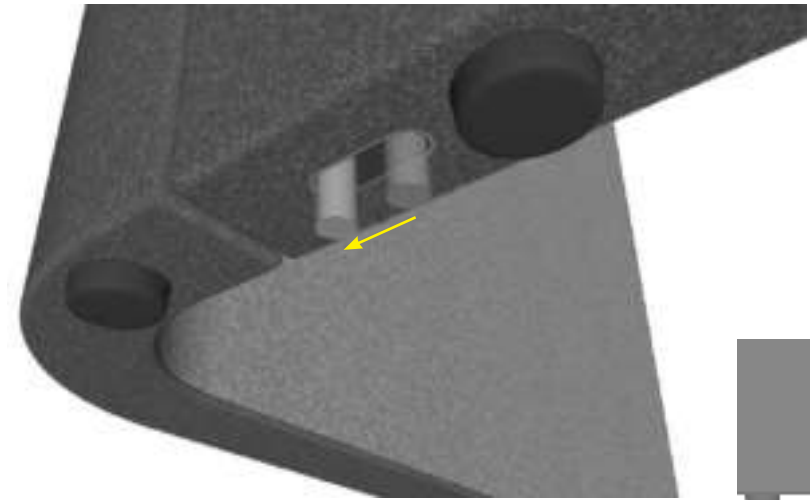



**2** Once panels are flush, slide pin across to lock panels together.

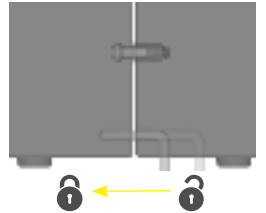

**3** Lie the panels on their back and place seat base inside, then screw plate to panels and seat base to fix firmly.

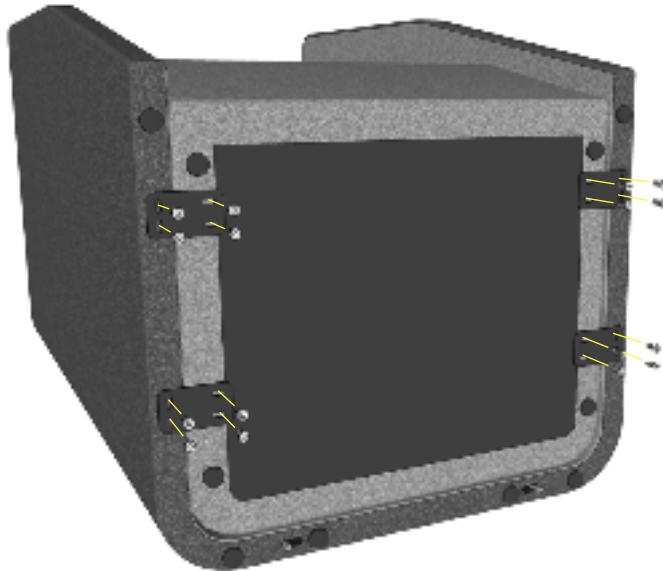


**4** Locate the velcro strips on the backrest with those on the panels.

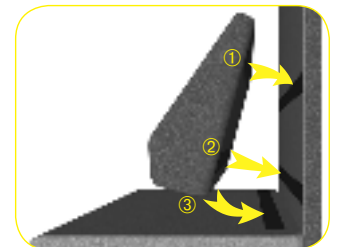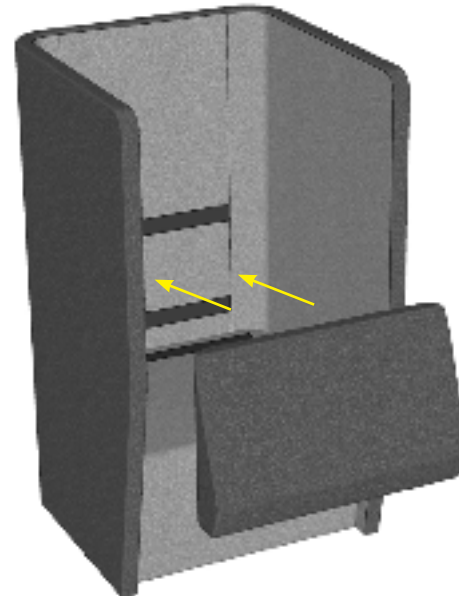

*\* Slide back rest along seat with top racked forward to fasten upper velcro set first.*

# motionoffice

## Cape Seat (Double) Assembly Instructions

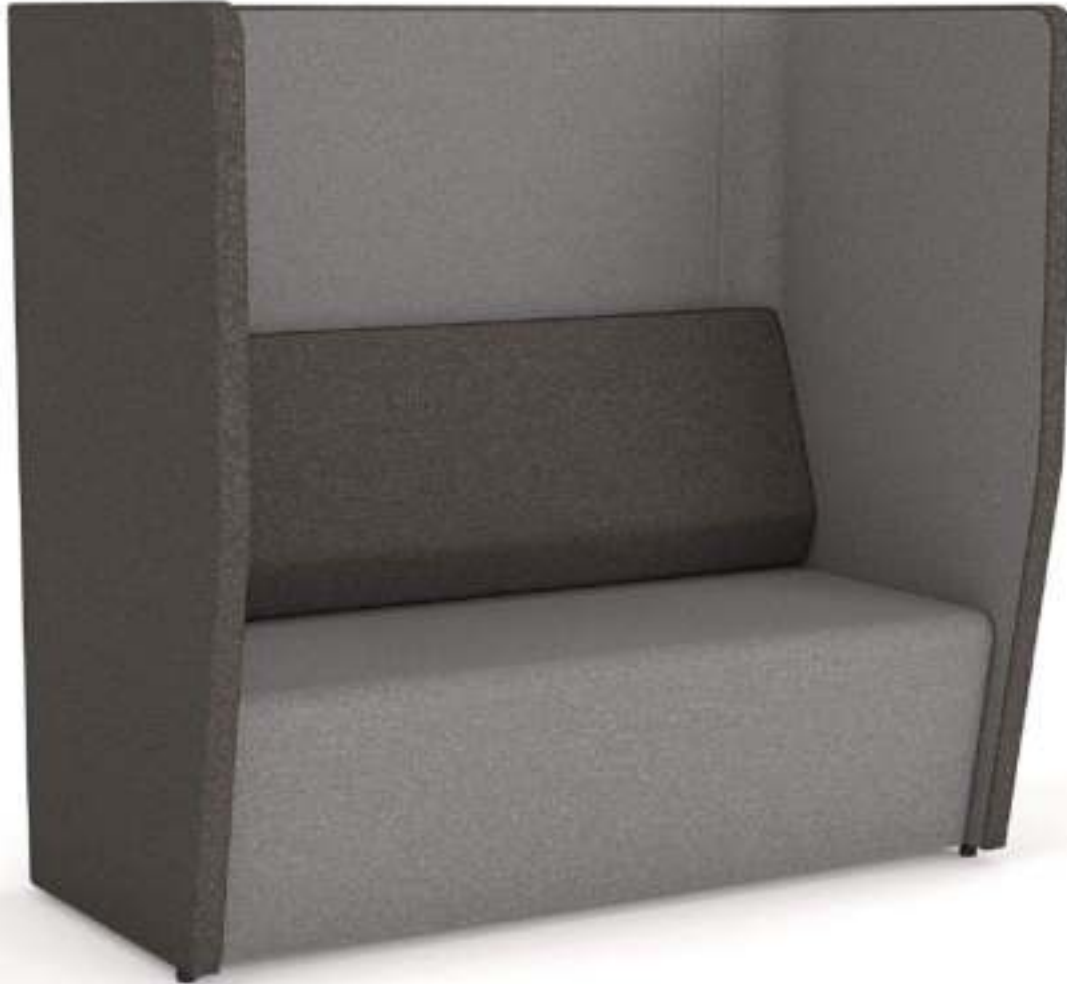

### PARTS LIST:


- ☐ MBP1412
- ☐ MCOV14(L&R Pair)
- ☐ MBACK14
- ☐ MCBASE14

### COMPONENTS LIST:

- 4 - Pins
- 4 - Plates
- 17 - Plate Screws
- 1 - Allen Key




## Cape Seat (Double) Assembly Instructions




Recommended  
2-person Step


To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

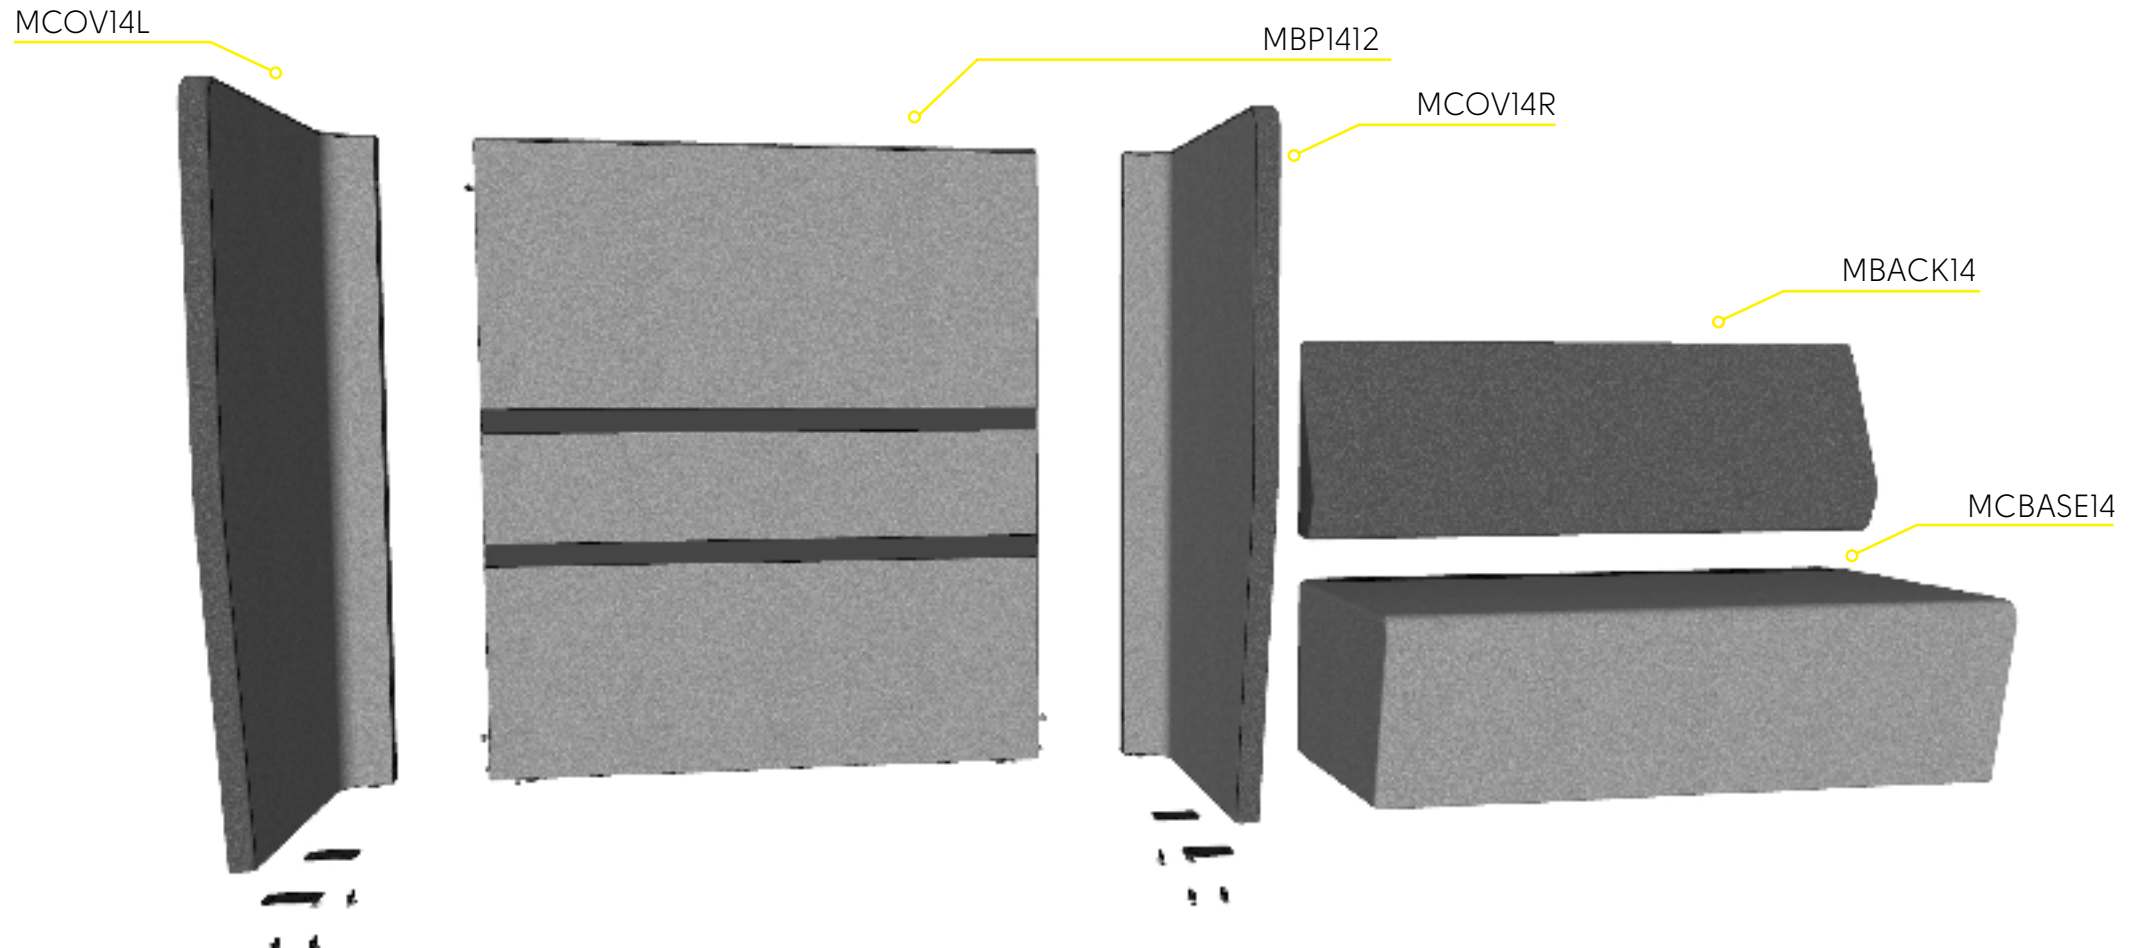

## Cape Seat (Double) Assembly Instructions

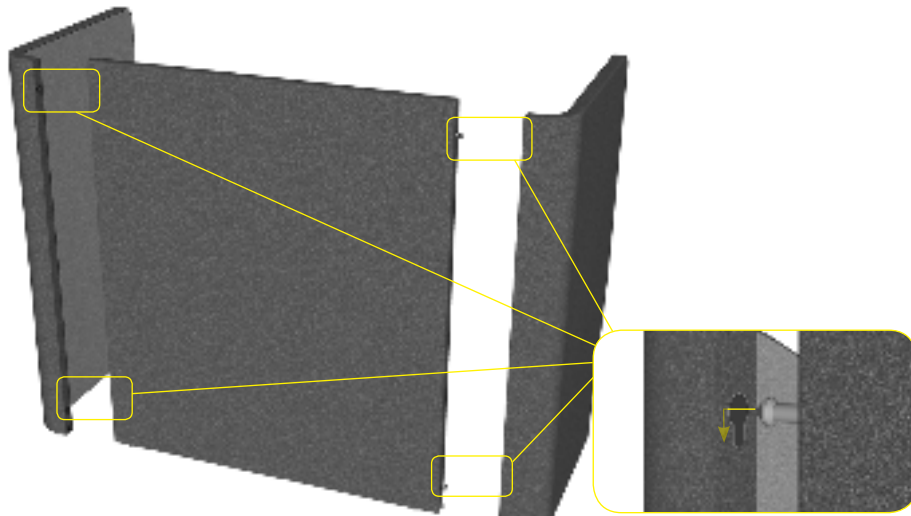


**1** Insert Pins into keyholes, slide down until top is flush.


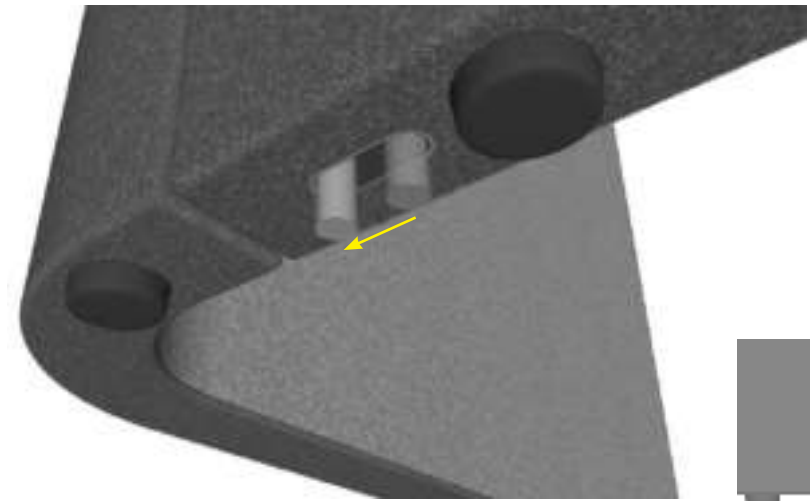


**2** Once panels are flush, slide pin across to lock panels together.

**3** Lie the panels on their back and place seat base inside, then screw plate to panels and seat base to fix firmly.

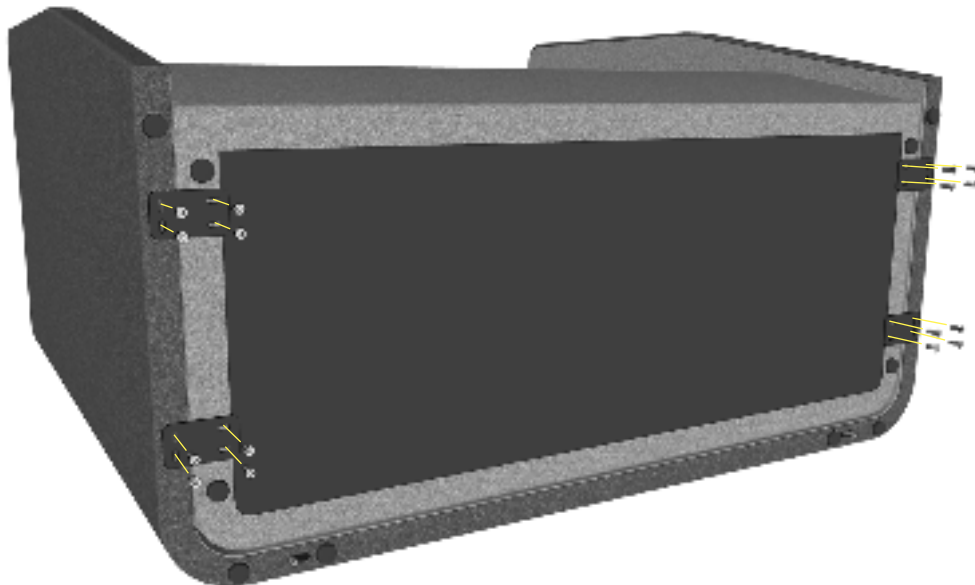

**4** Locate the velcro strips on the backrest with those on the panels.

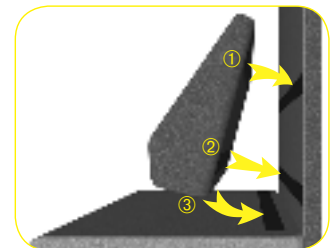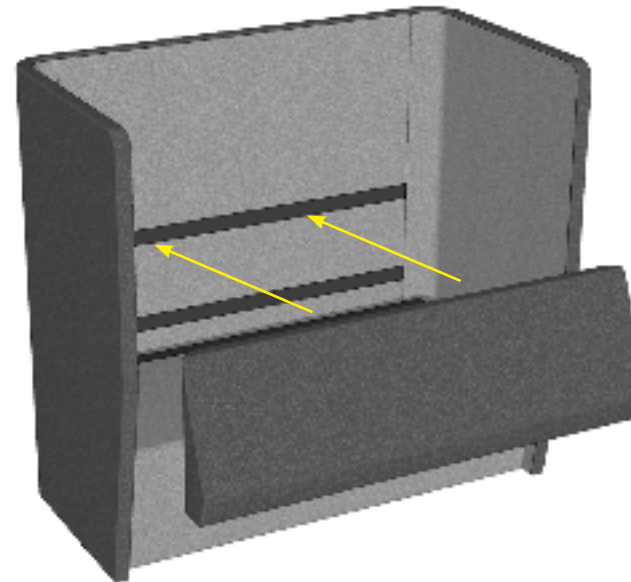

*\* Slide back rest along seat with top racked forward to fasten upper velcro set first.*



### PARTS LIST:


- ☐ MOES (L&R Pairs)
- ☐ MOCS11 x 2
- ☐ MOSS11 x 4
- ☐ MEXTOP x 1
- ☐ MLOOPS7B x 4
- ☐ MLOOPC60BO x 2

### COMPONENTS LIST:

- 14 - Pins
- 16 - Worktop Brackets
- 17 - Self-tapping Screws
- 17 - Bracket Screws
- 1 - Allen Key




## Expo Assembly Instructions




Recommended  
2-person Step

To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

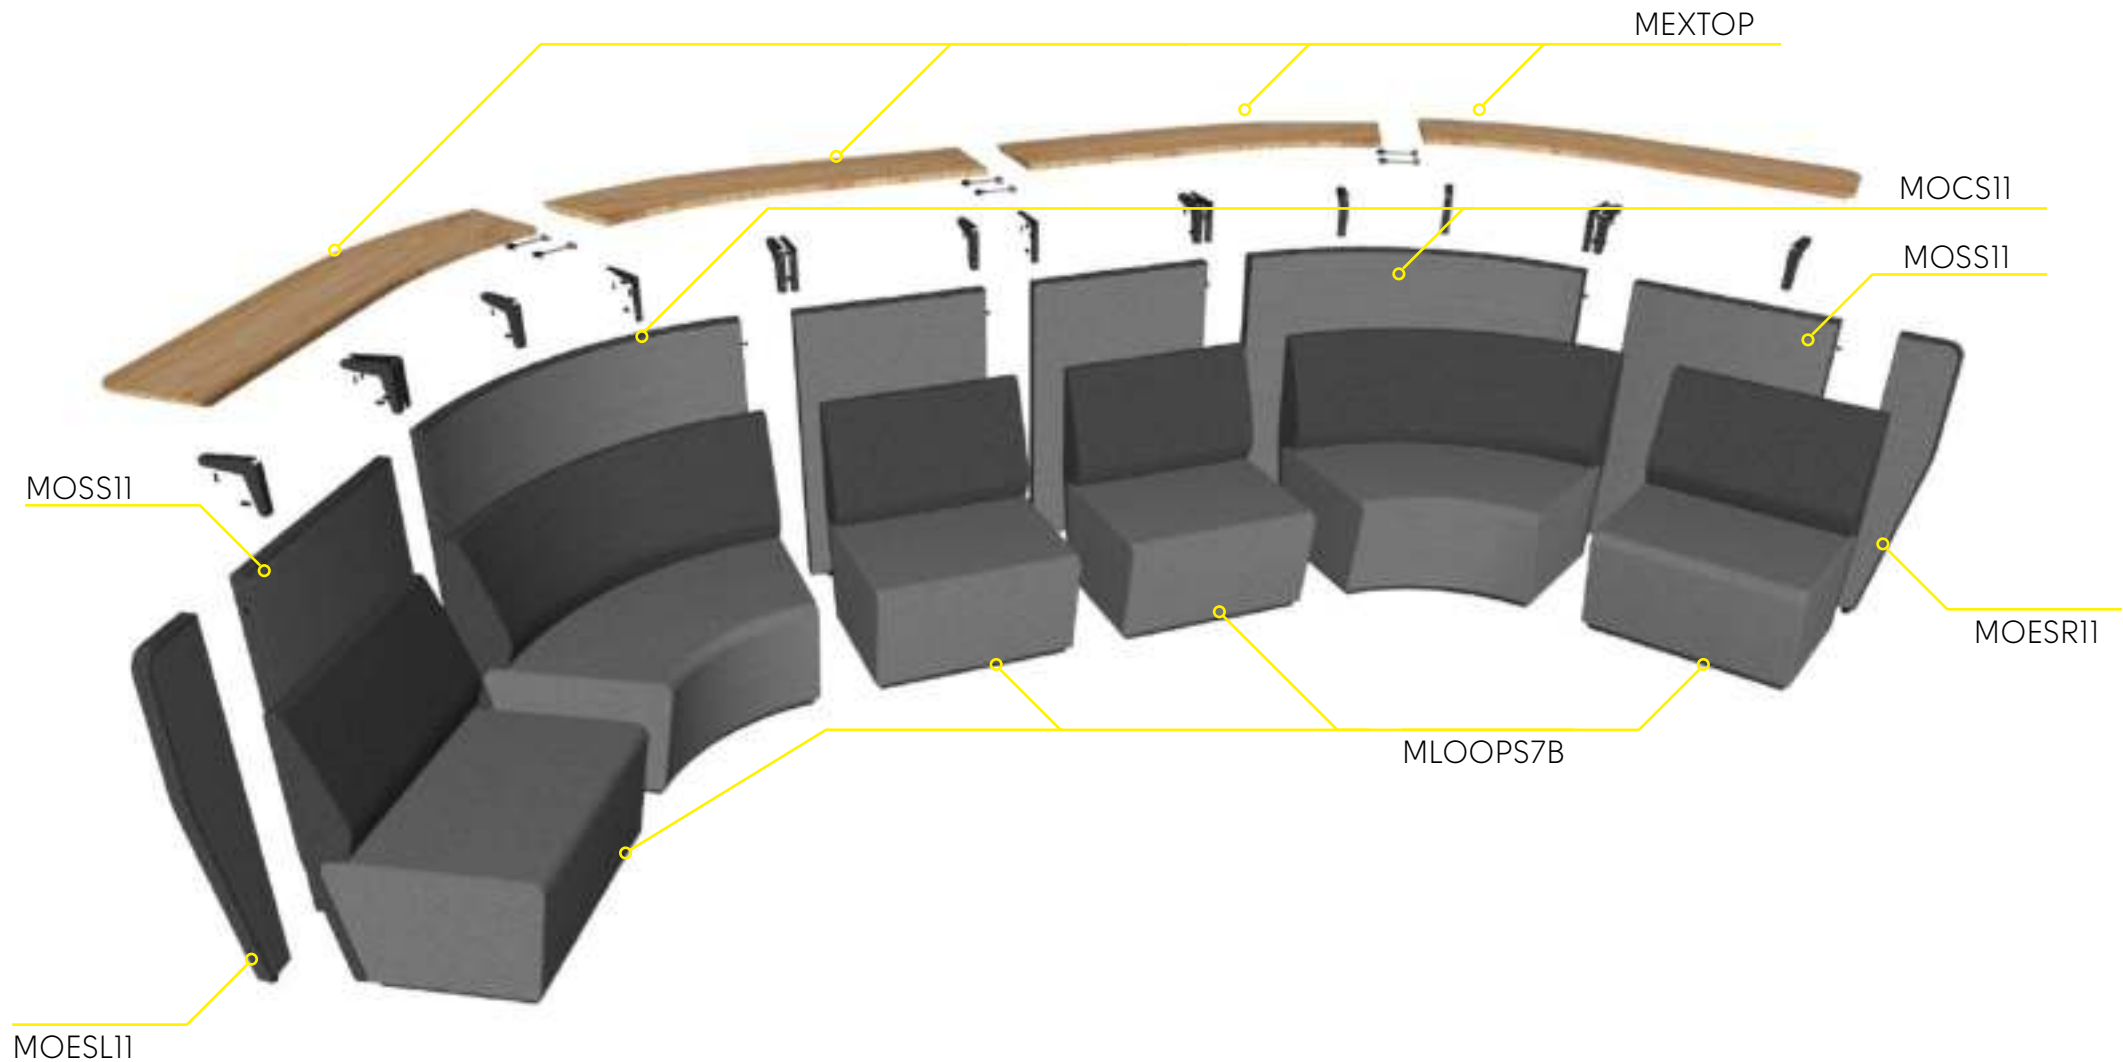




## Expo Assembly Instructions

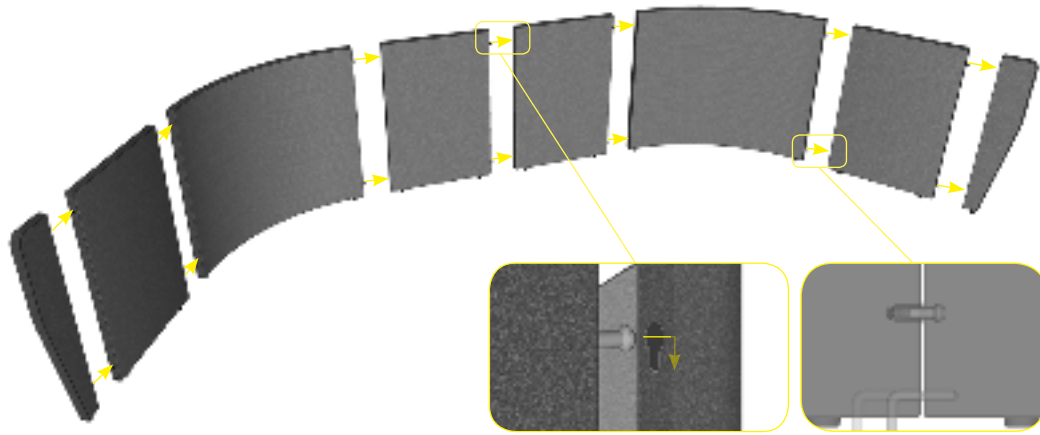


**1** Start with curved panel, insert Pins into keyholes, slide down until top is flush. Once panels are flush, slide pin on the underside of the panel across to lock panels together.

**3** Place worktops to the brackets and use top joining bolts to fix the worktops together, then fix worktops to brackets using wood screws after checking alignment.

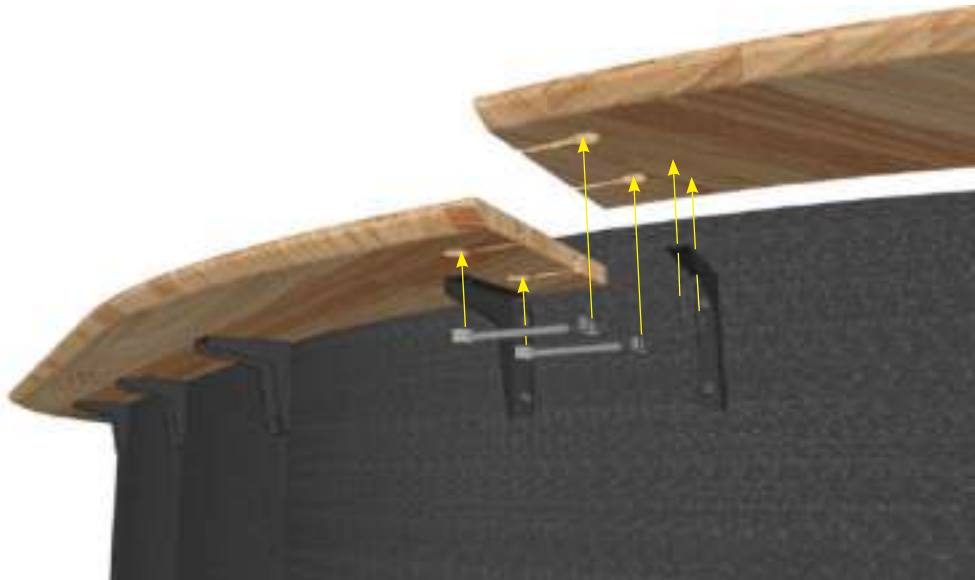

**2** Feel along the steel frame for T-Nut under the fabric surface, and burn holes using soldering iron, then bolt the brackets to the screens.

**4** Place loop Ottomans as shown in this diagram from the inside outwards.

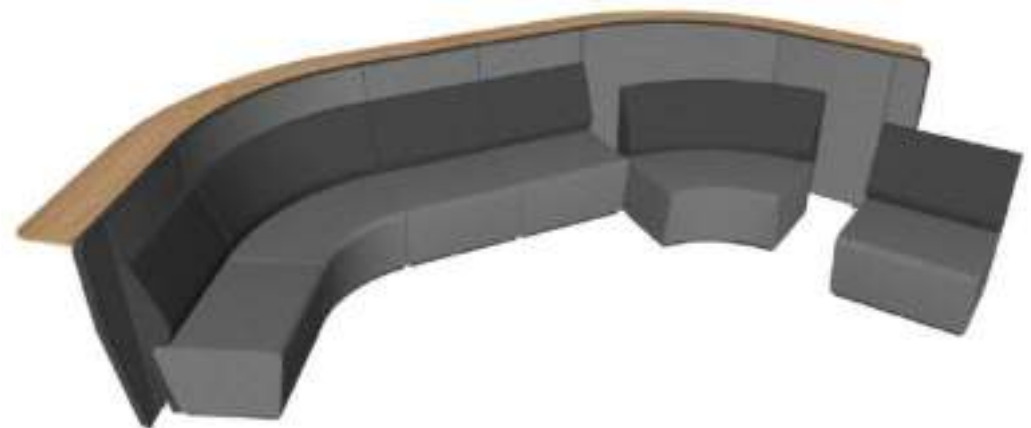

# motionoffice

## Wing Seat - Low Assembly Instructions



### PARTS LIST:


- ☐ MBP0905
- ☐ MWNGLO09 (L&R Pair)
- ☐ MBACK06
- ☐ MCBASE06

### COMPONENTS LIST:

- 4 - Pins
- 4 - Plates
- 17 - Plate Screws
- 1 - Allen Key




## Wing Seat - Low Assembly Instructions




Recommended  
2-person Step


To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

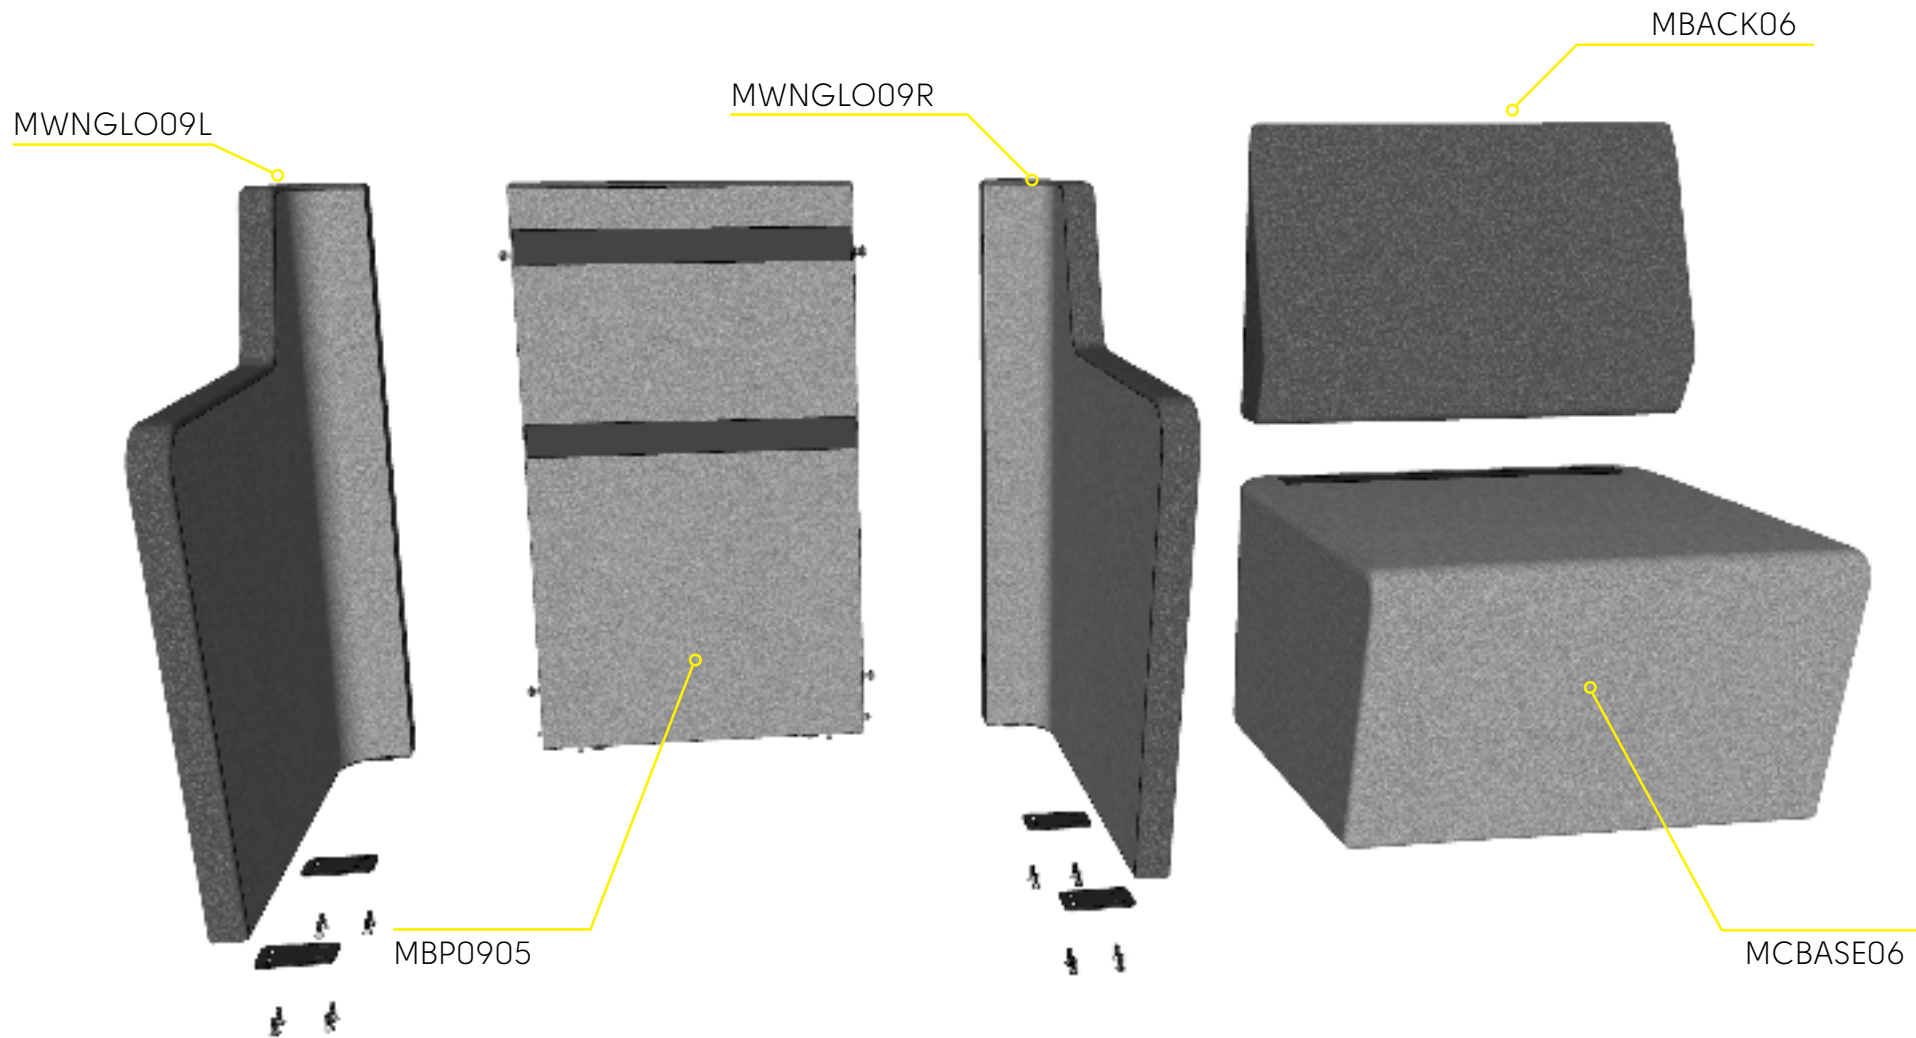


## Wing Seat - Low Assembly Instructions

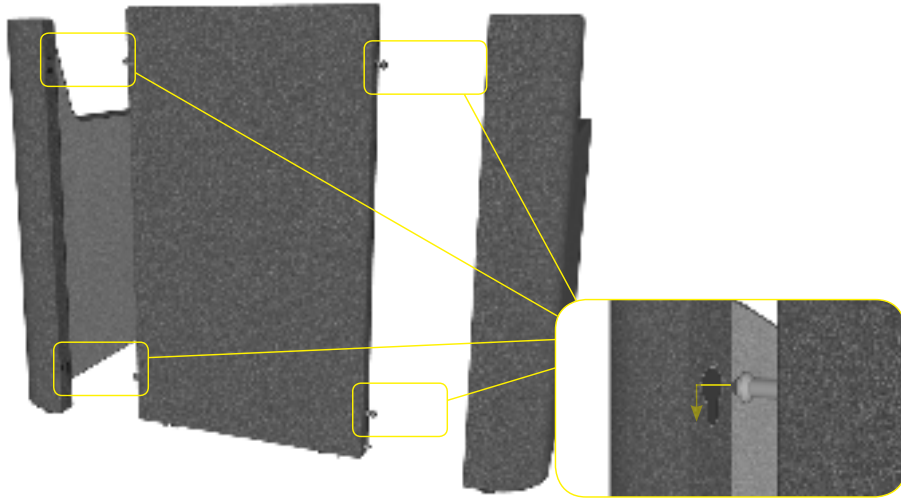


1 Insert Pins into keyholes, slide down until top is flush.

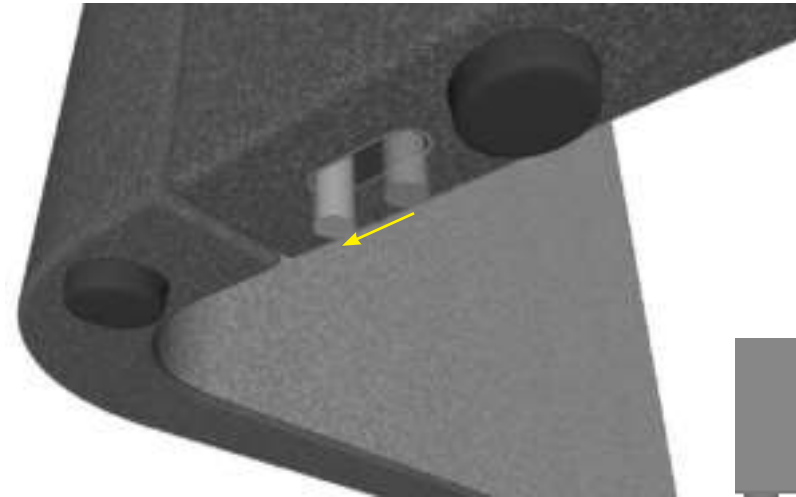



2 Once panels are flush, slide pin across to lock panels together.

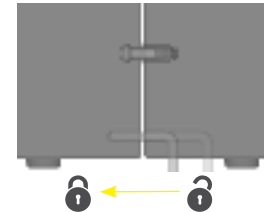

3 Lie the panels on their back and place seat base inside, then screw plate to panels and seat base to fix firmly.

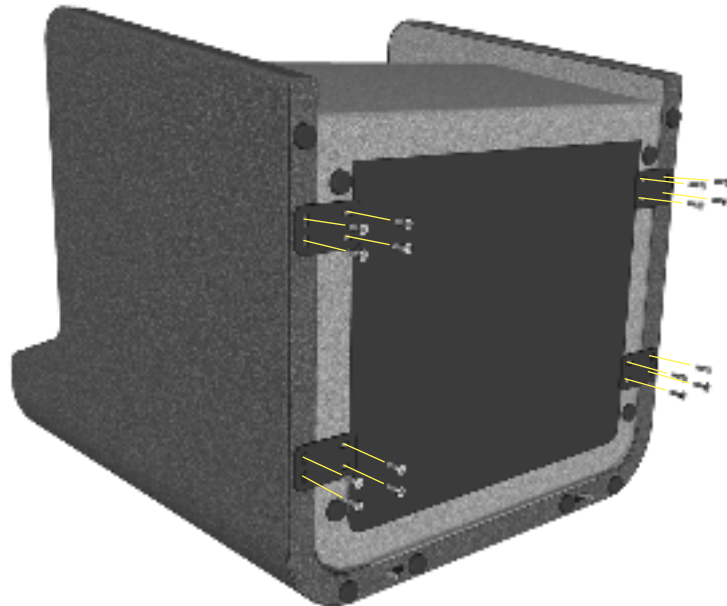

4 Locate the velcro strips on the backrest with those on the panels.

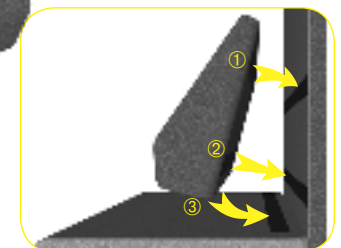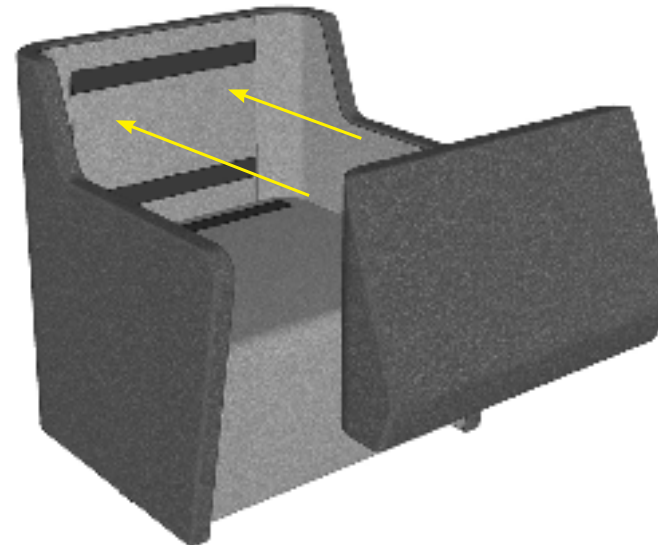

\* Slide back rest along seat with top racked forward to fasten upper velcro set first.

# motionoffice

## Double Wing Seat - Low Assembly Instructions



motionoffice.com




### PARTS LIST:

- ☐ MBP0912
- ☐ MWNGLO09 (L&R pair)
- ☐ MBACK14
- ☐ MCBASE14

### COMPONENTS LIST:


- 4 - Pins
- 4 - Plates
- 17 - Plate Screws
- 1 - Allen Key

## Double Wing Seat - Low Assembly Instructions




Recommended  
2-person Step

To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

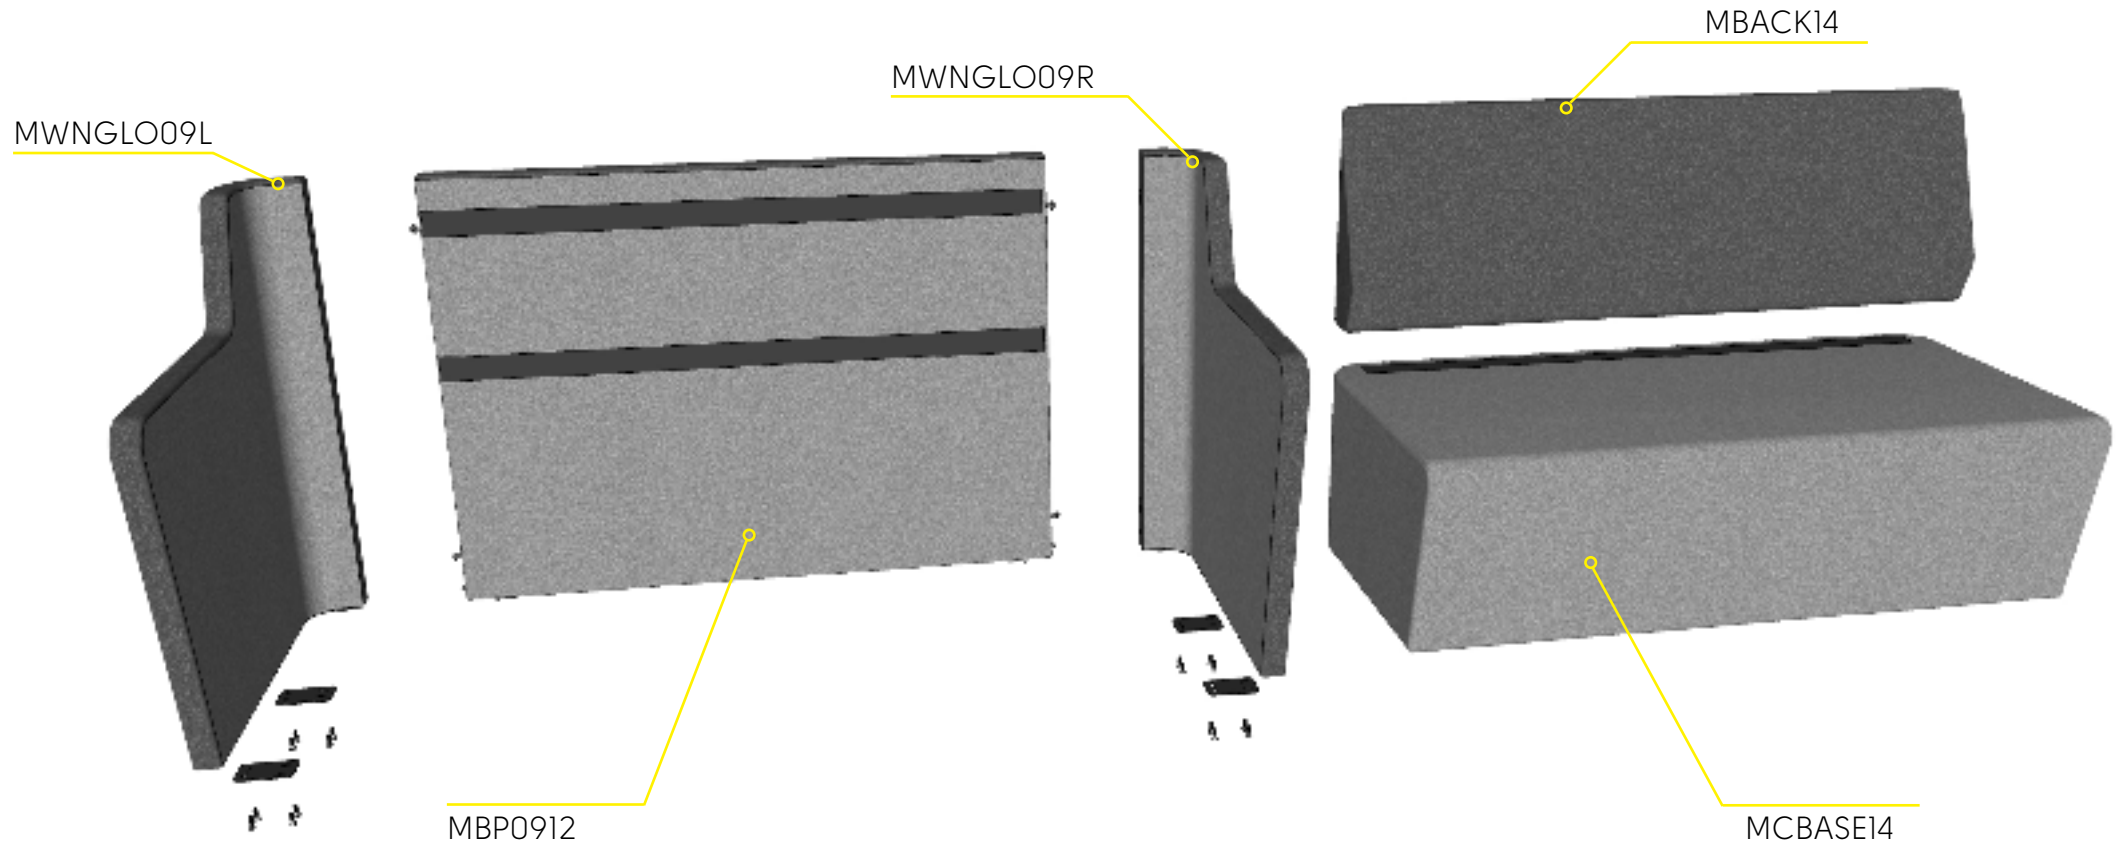





## Double Wing Seat - Low Assembly Instructions

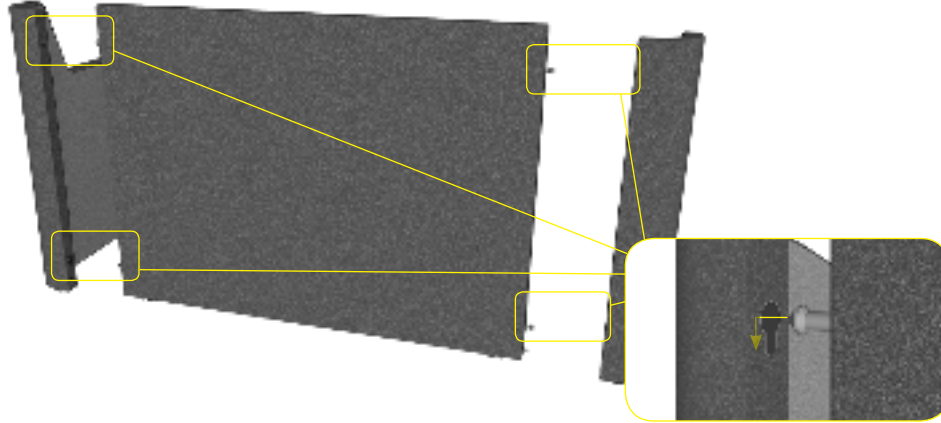


**1** Insert Pins into keyholes, slide down until top is flush.

**3** Lie the panels on their back and place seat base inside, then screw plate to panels and seat base to fix firmly.

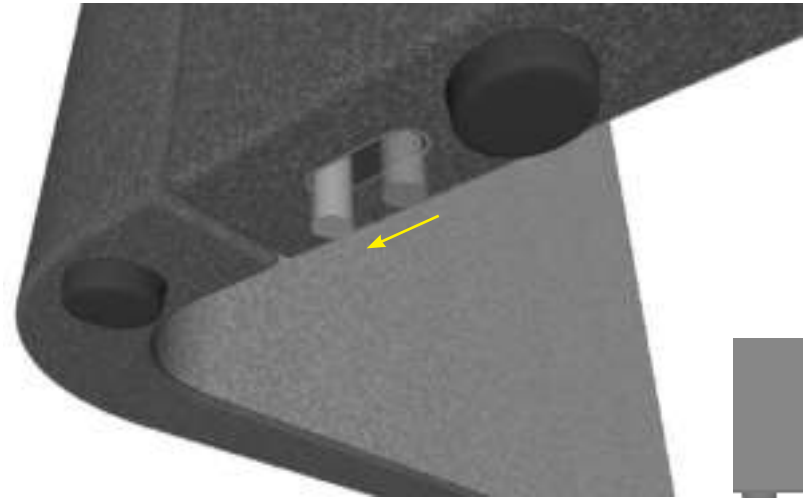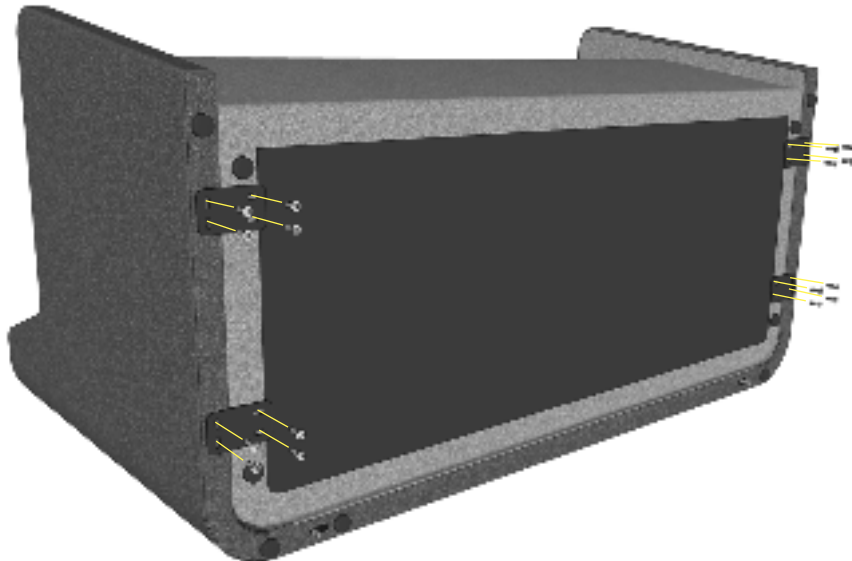

**2** Once panels are flush, slide pin across to lock panels together.

**4** Locate the velcro strips on the backrest with those on the panels.

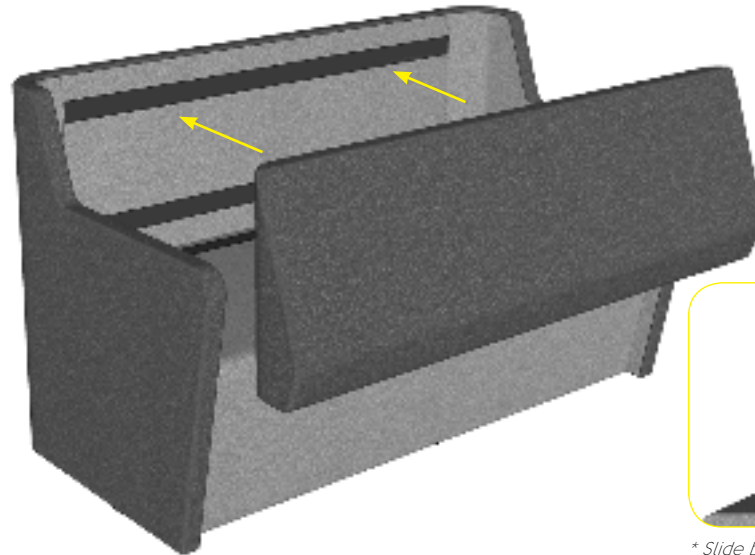

*\* Slide back rest along seat with top racked forward to fasten upper velcro set first.*



### PARTS LIST:


- ☐ MRF9296
- ☐ MBP2106
- ☐ MSP2111
- ☐ MSP902110
- ☐ MLINKTOP

### COMPONENTS LIST:

- 4 - Pins
- 4 - Worktop Brackets
- 5 - Worktop Bracket Screws
- 5 - Wood Screws
- 1 - Allen Key




## Link Assembly Instructions




Recommended  
2-person Step

To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.


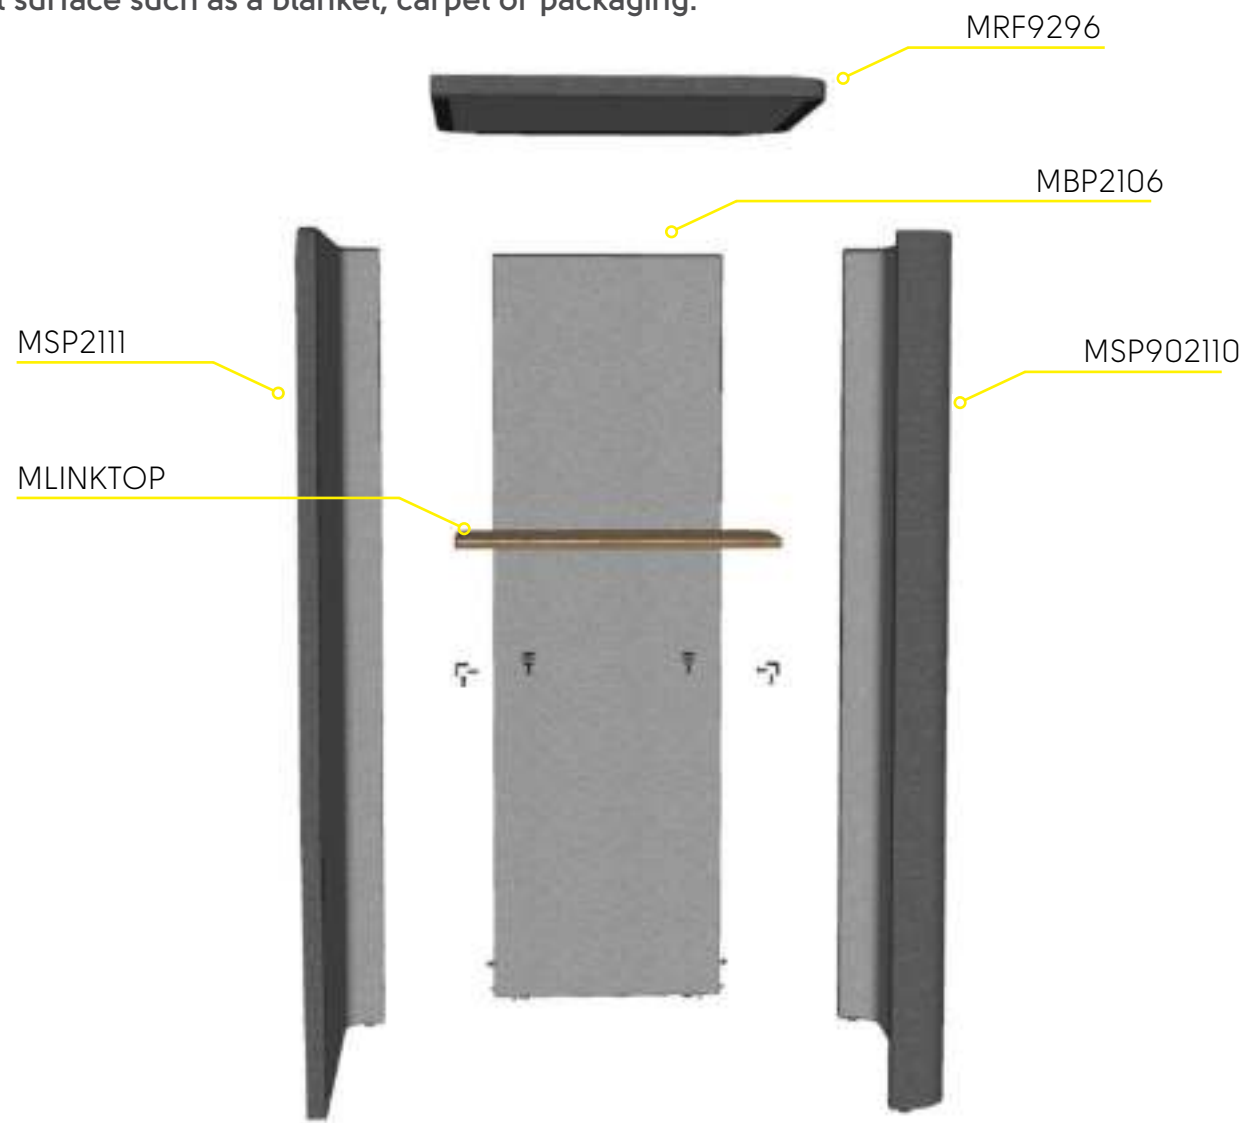


## Link Assembly Instructions

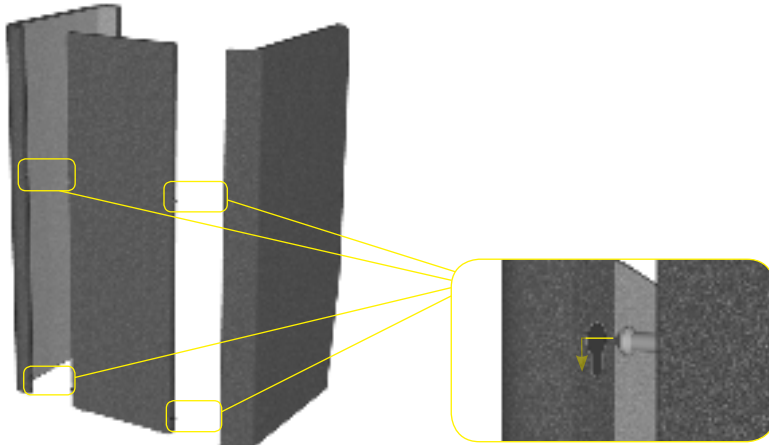

**1** Insert Pins into keyholes, slide down until top is flush, locate the velcro strips on the top of the panels with those on the under of roof panel.

**3** Fix the brackets into the T-nut holes on the panels.

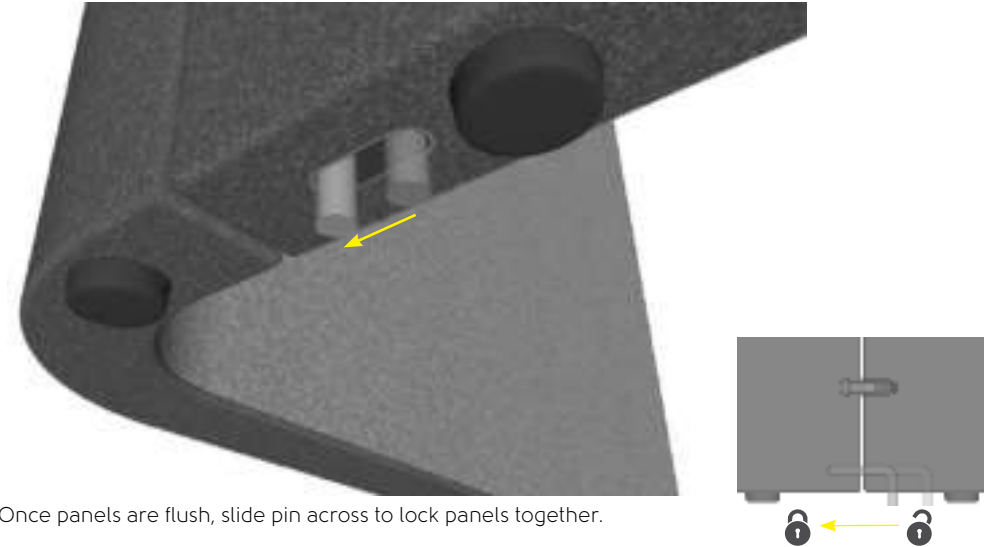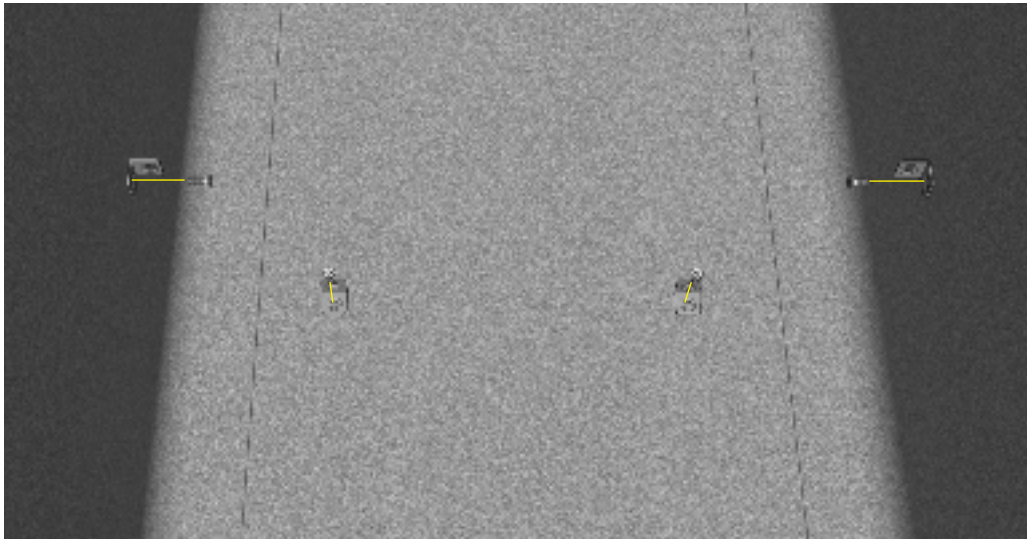

**2** Once panels are flush, slide pin across to lock panels together.

**4** Place the worktop onto the fixed brackets, then screw the worktop to the brackets using wood screws.



## Link Assembly Instructions



- 5** Locate the velcro strips on the top of the panels with those on the under of roof panel.



### PARTS LIST:

- ☐ MSP901413
- ☐ MBP1412 x 2
- ☐ MCOV14
- ☐ MCBASE14 x 2
- ☐ MBACK14 x 2
- ☐ MCMTOP
- ☐ TABLE BASE


### COMPONENTS LIST:

- 10 - Pins
- 2 - Worktop Brackets
- 3 - Worktop Bracket Screws
- 8 - Plates
- 33 - Plate Screws
- 7 - Wood Screws
- 1 - Allen Key






## Cape Meeting Assembly Instructions




Recommended  
2-person Step


To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

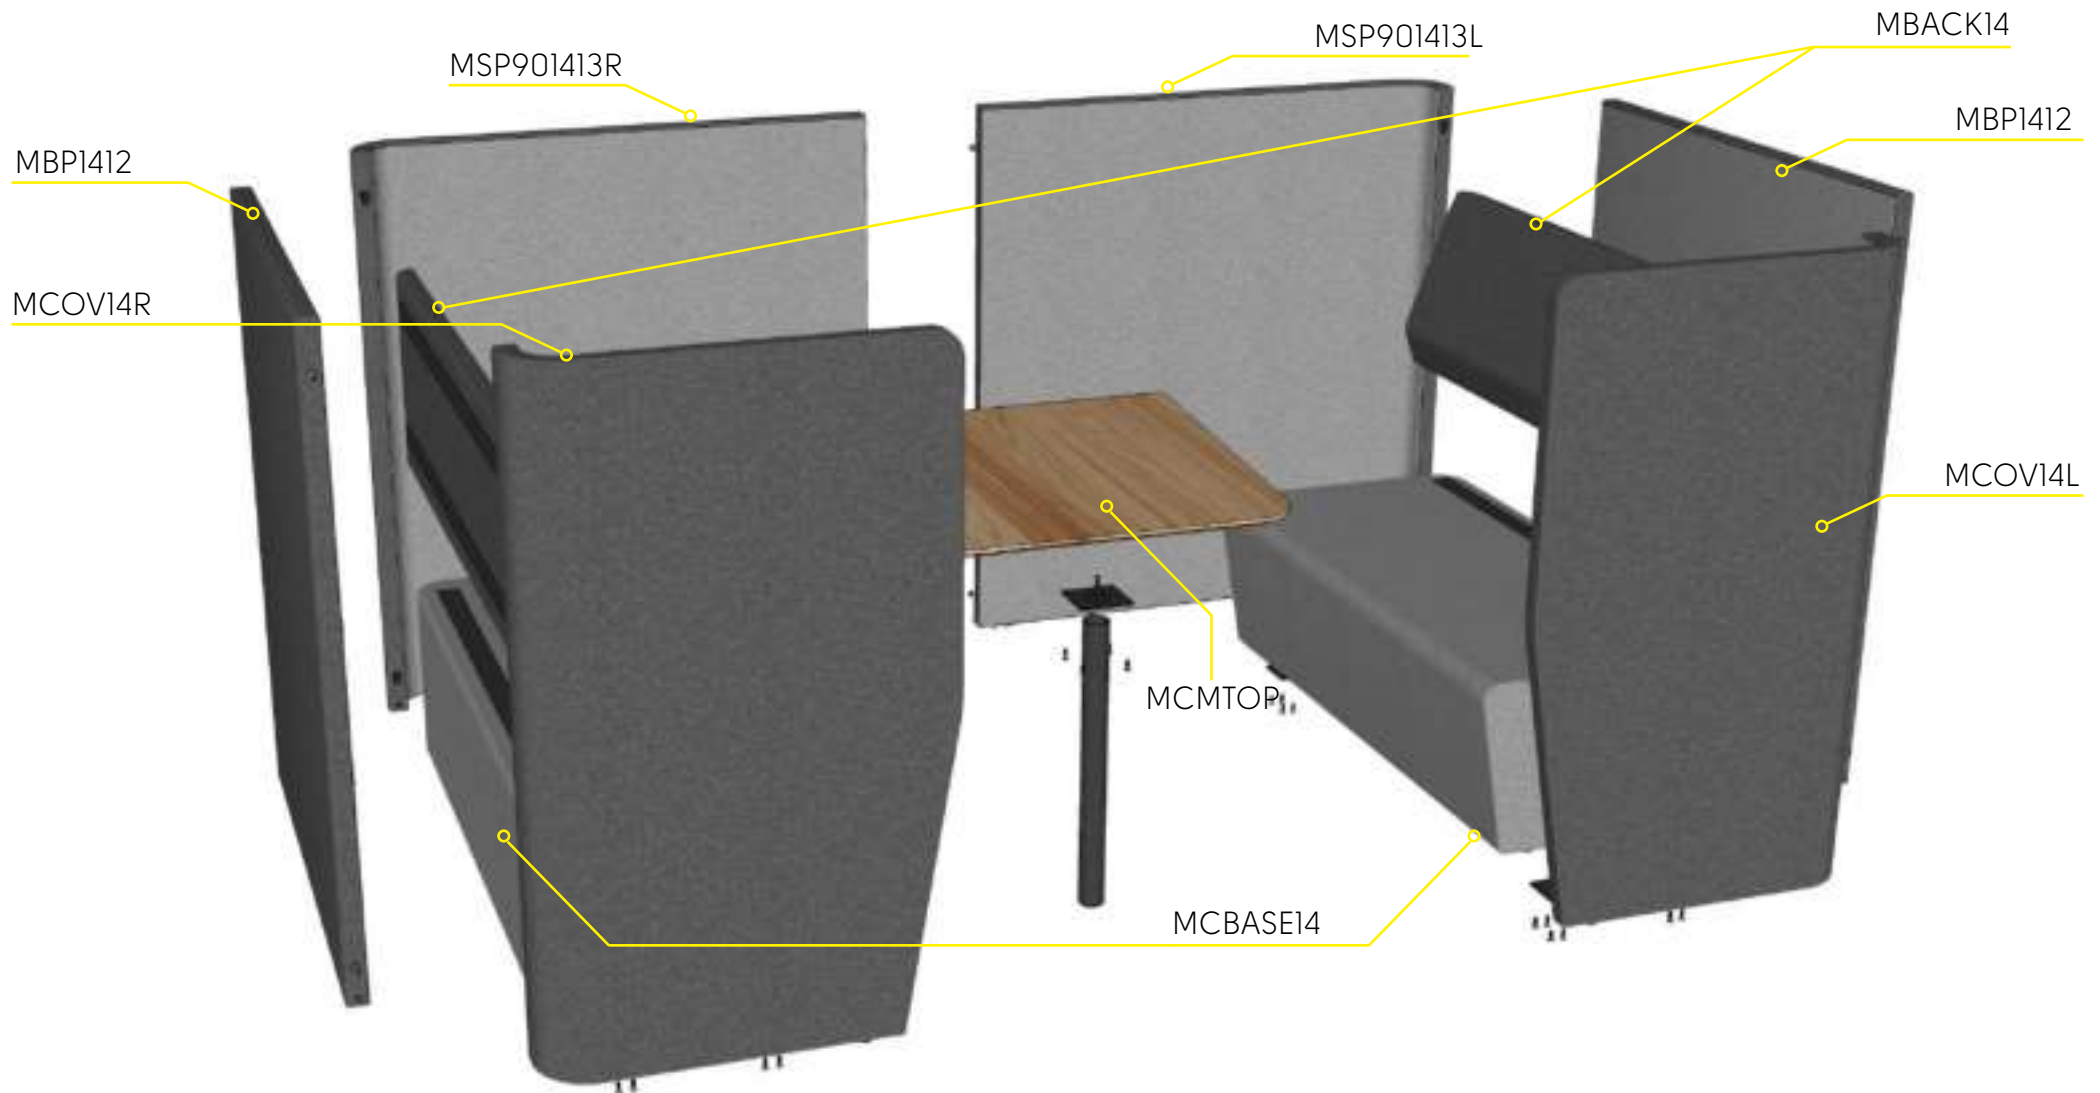

## Cape Meeting Assembly Instructions

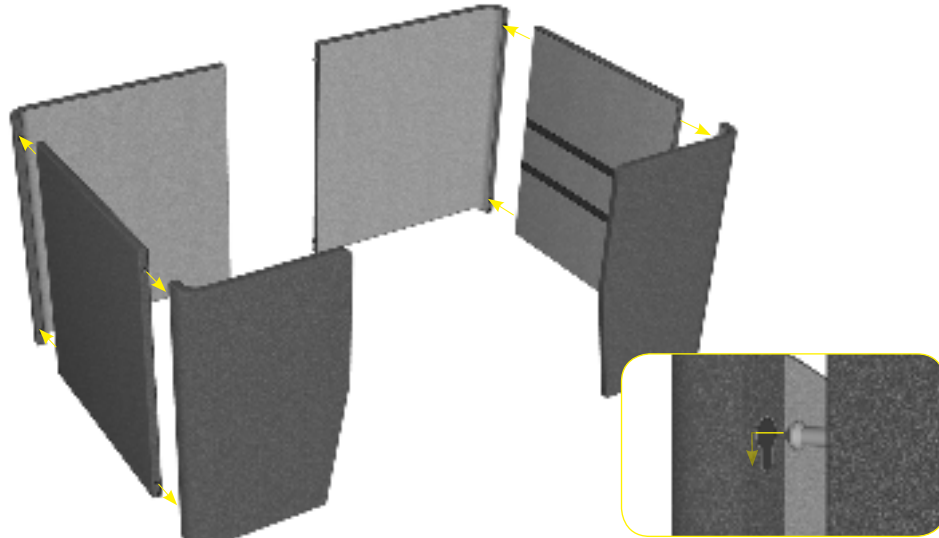


1 Insert Pins into keyholes, slide down until top is flush.

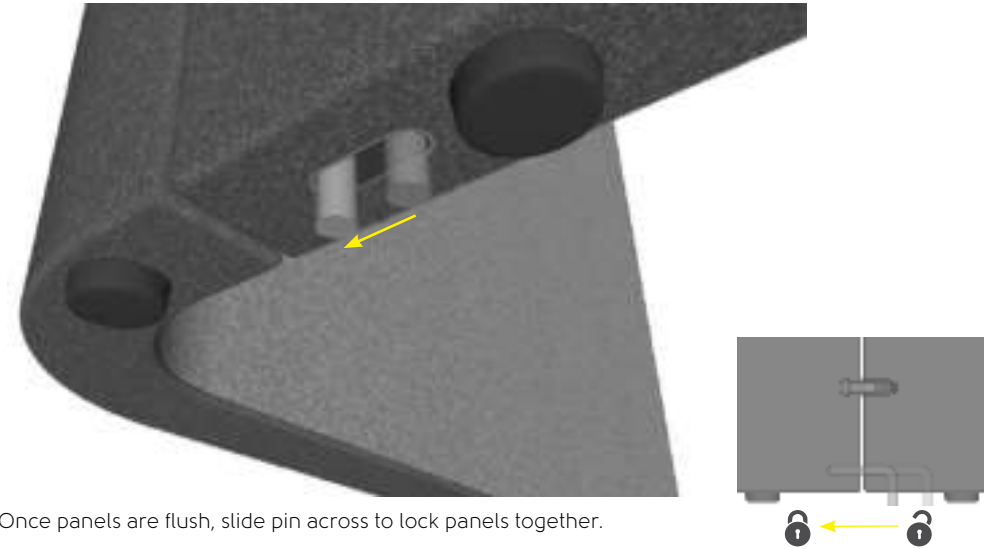


2 Once panels are flush, slide pin across to lock panels together.

3 Lie the panel on their back and place seat base inside, then screw plate to panels and seat base to fix firmly.

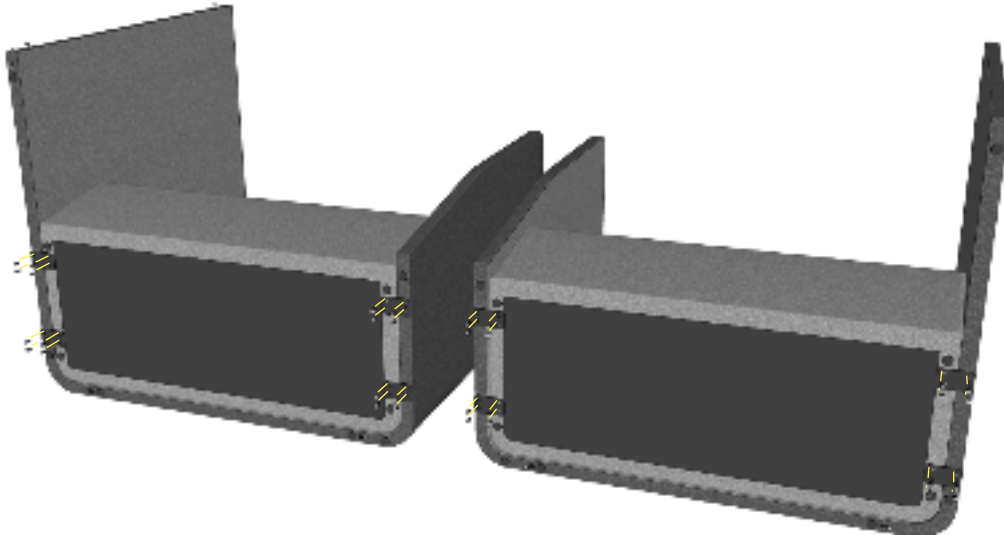


4 Locate the velcro strips on the backrest & the roof with those on the panels.

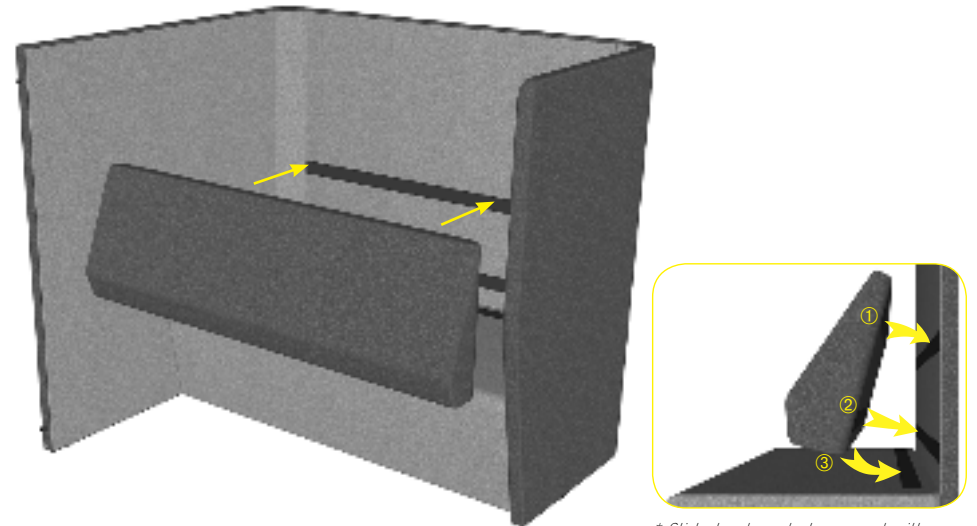

\* Slide back rest along seat with top racked forward to fasten upper velcro set first.

## Cape Meeting Assembly Instructions

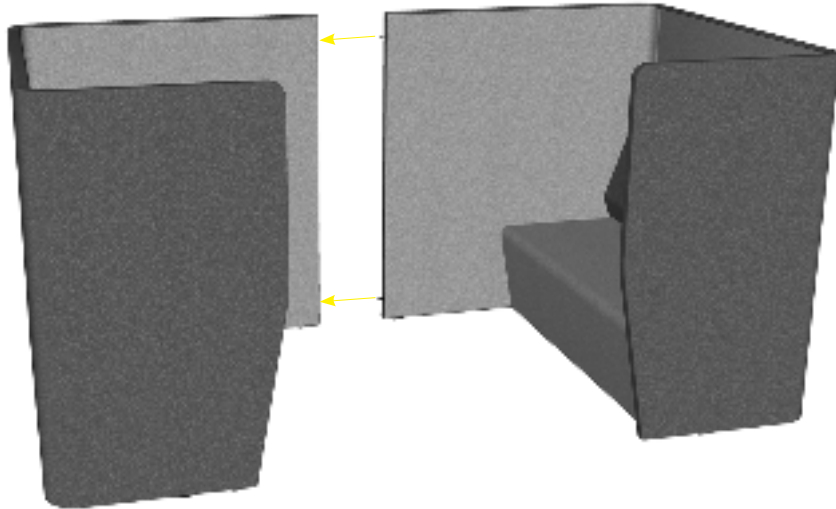


**5** Join the two side panels together as step 1 & 2 above.



**6** Fix plate to the table leg, then screw the worktop to the plate using wood screws.

**7** Fix the brackets into the T-nut holes on the panels.

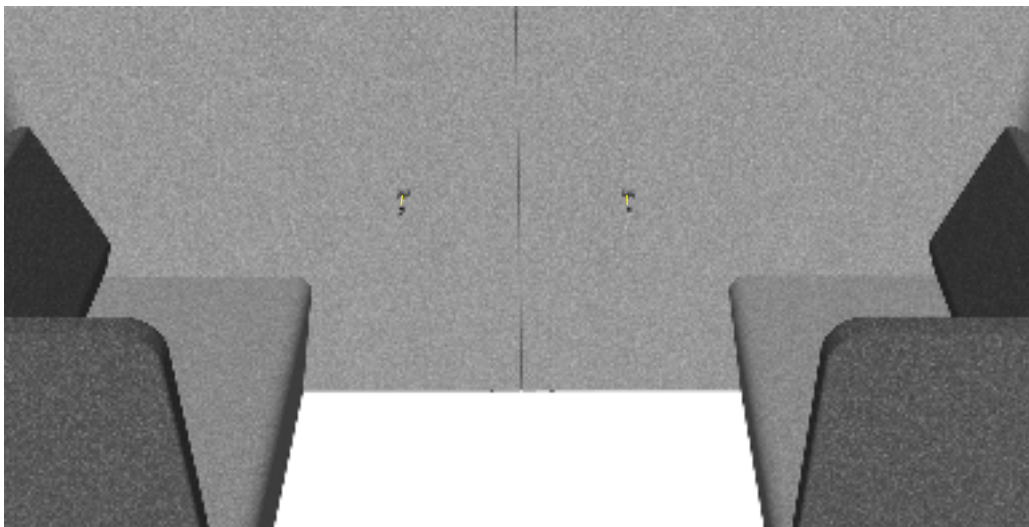


**8** Place the worktop onto the fixed brackets, then screw the worktop to the brackets using wood screws.



# motionoffice

## Solo 4-1 Assembly Instructions

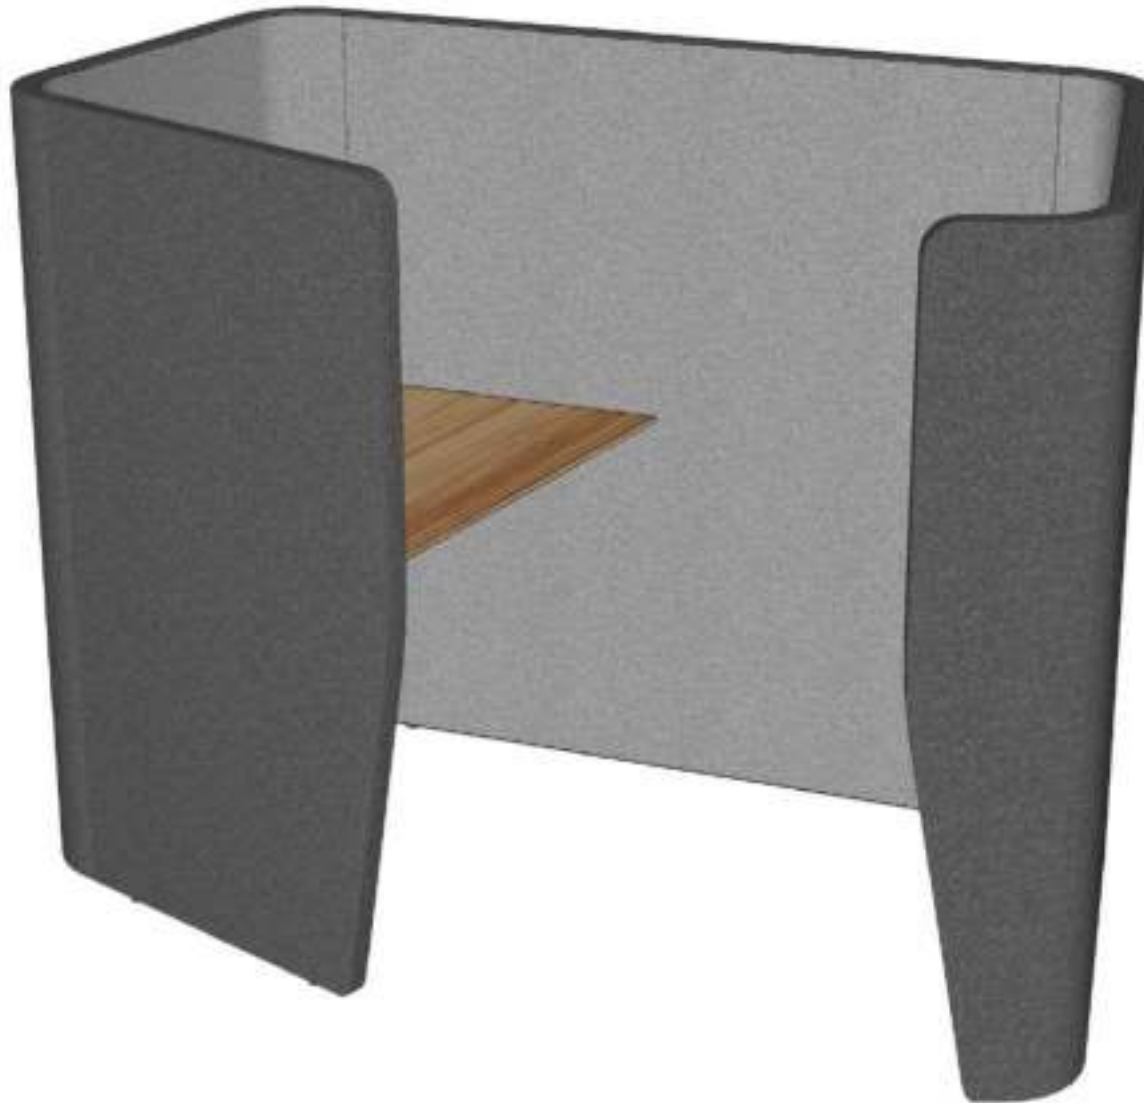

### PARTS LIST:

- ☐ MSOL4SPI4
- ☐ MSOLBP14
- ☐ MSOL4EPS14
- ☐ MSOL4WP14
- ☐ MS3TOP

### COMPONENTS LIST:


- 6 - Pins
- 4 - Worktop Brackets
- 5 - Worktop Bracket Screws
- 5 - Wood Screws
- 1 - Allen Key



## Solo 4-1 Assembly Instructions




To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

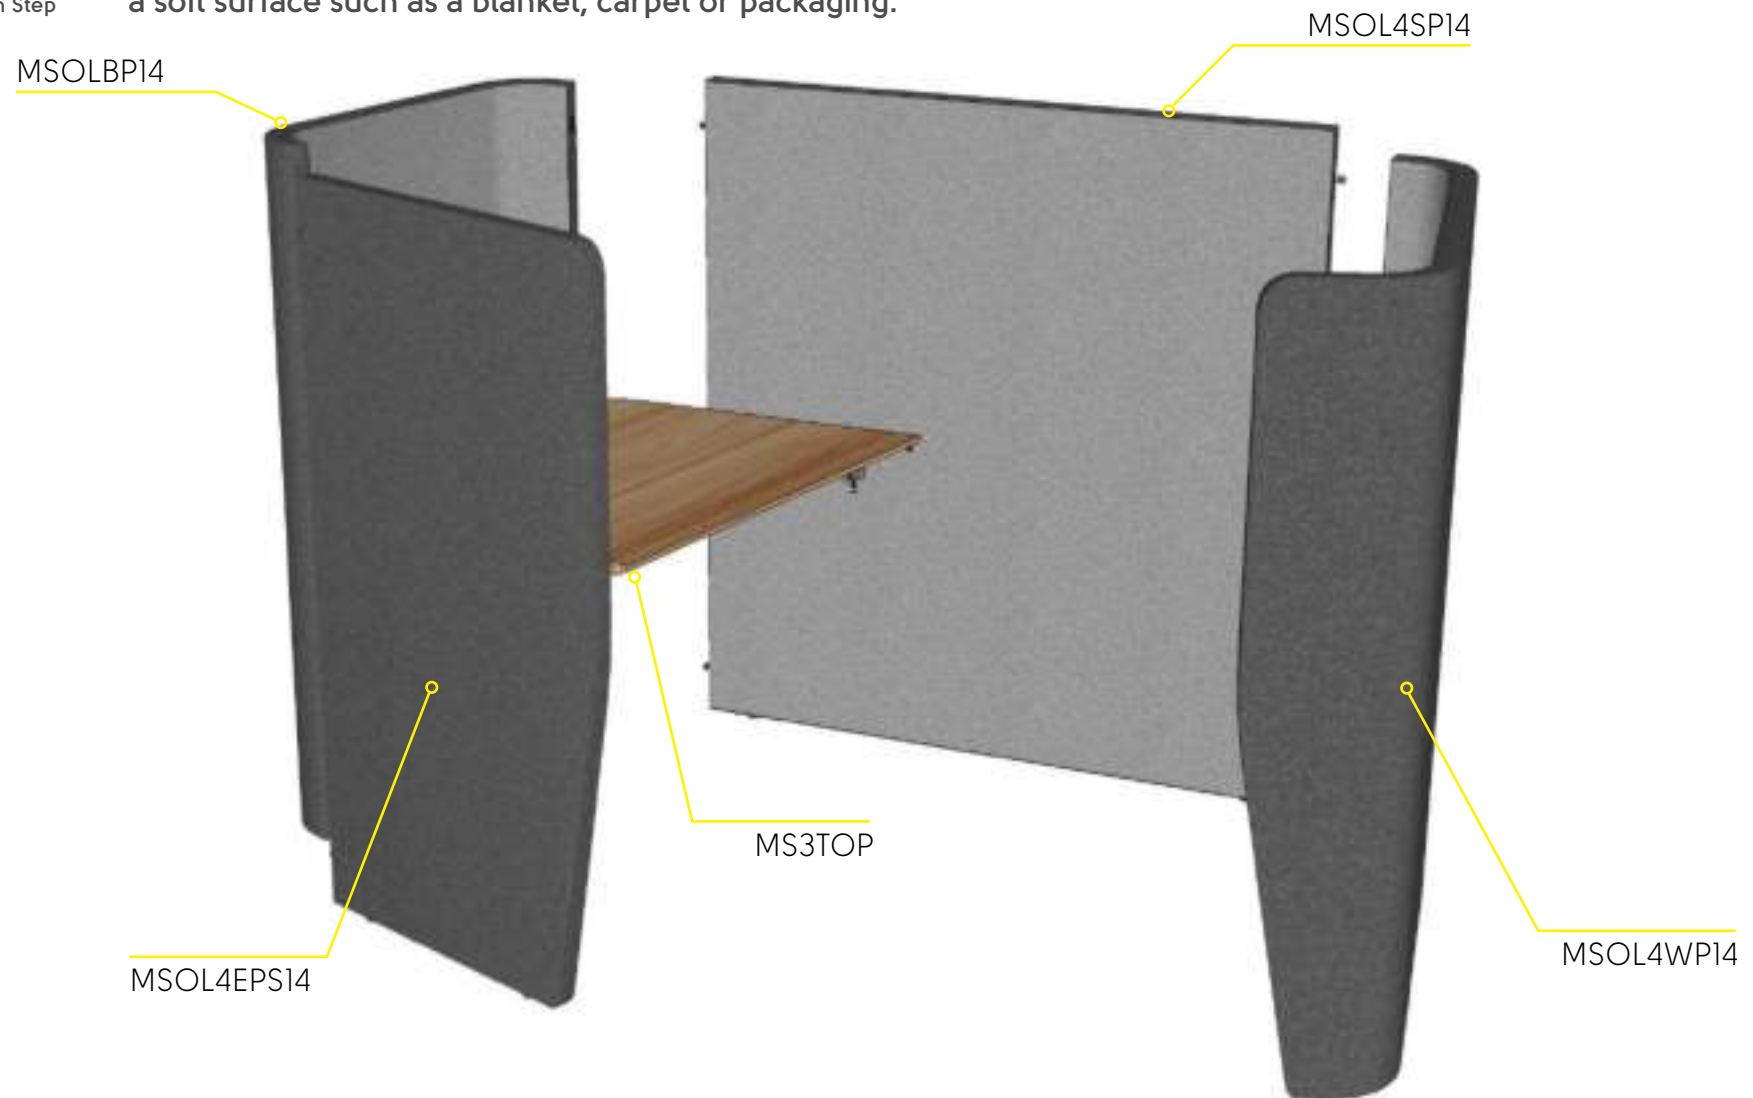





## Solo 4-1 Assembly Instructions

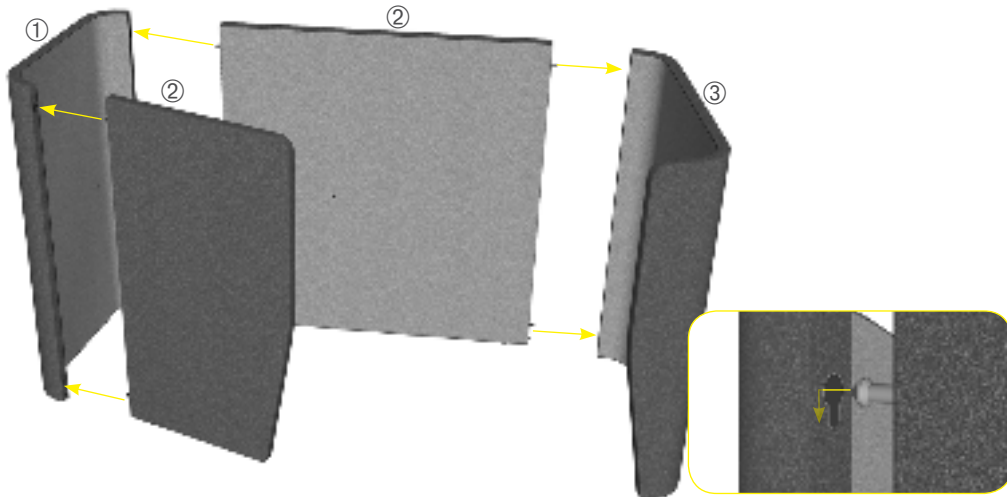


- 1 Start with panel ①, add the two panel ② to ① then lock them together as shown in Step 2. Continue this until item is assembled completed.

- 3 Fix the brackets into the T-nut holes on the panels.

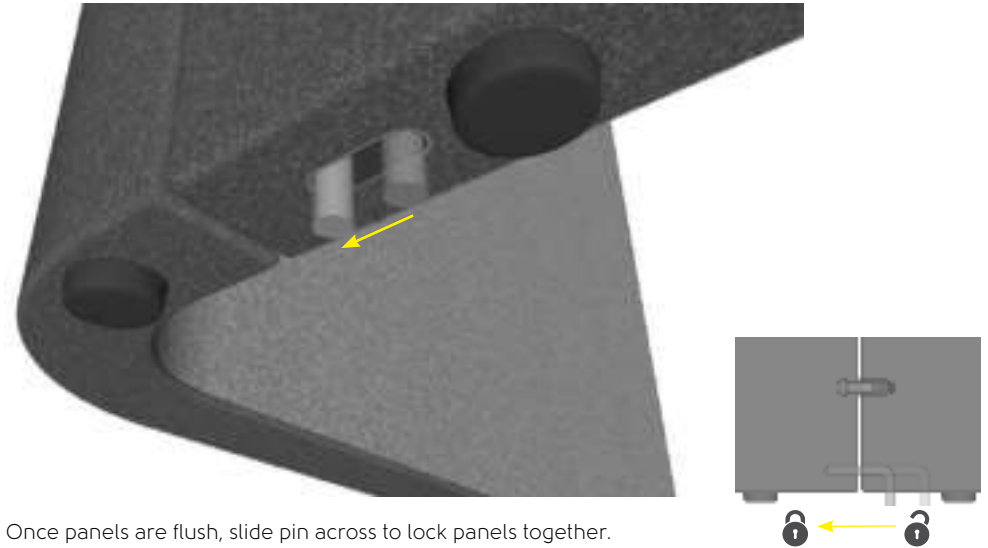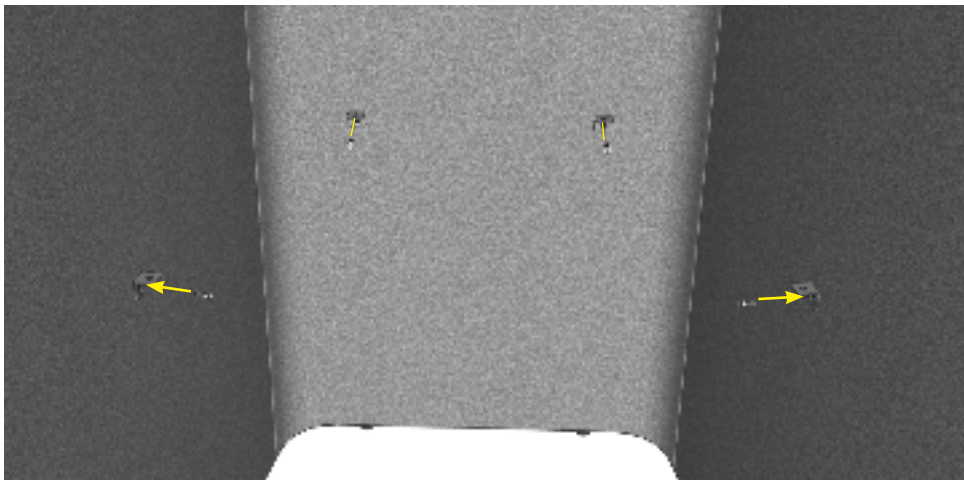

- 2 Once panels are flush, slide pin across to lock panels together.

- 4 Place the worktop onto the fixed brackets, then screw the worktop to the brackets using wood screws.

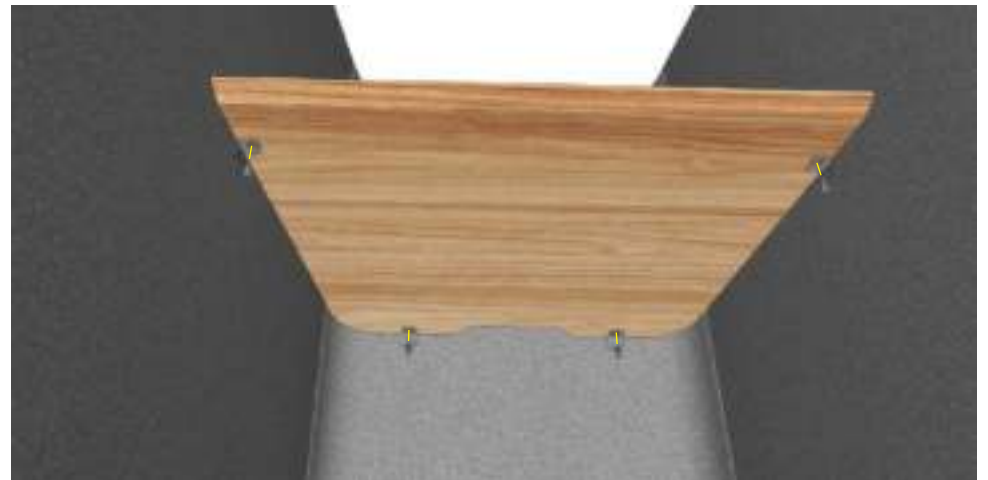



# motionoffice

## Solo 4-2 Assembly Instructions



### PARTS LIST:


- ☐ MSOL4WP14 x 2
- ☐ MSOL4EPS14 x 2
- ☐ MSOLBP14 x 2
- ☐ MSOL4JP14
- ☐ MS3TOP x 2

### COMPONENTS LIST:

- 12 - Pins
- 8 - Worktop Brackets
- 9 - Worktop Bracket Screws
- 9 - Wood Screws
- 1 - Allen Key




## Solo 4-2 Assembly Instructions




Recommended  
2-person Step

To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.


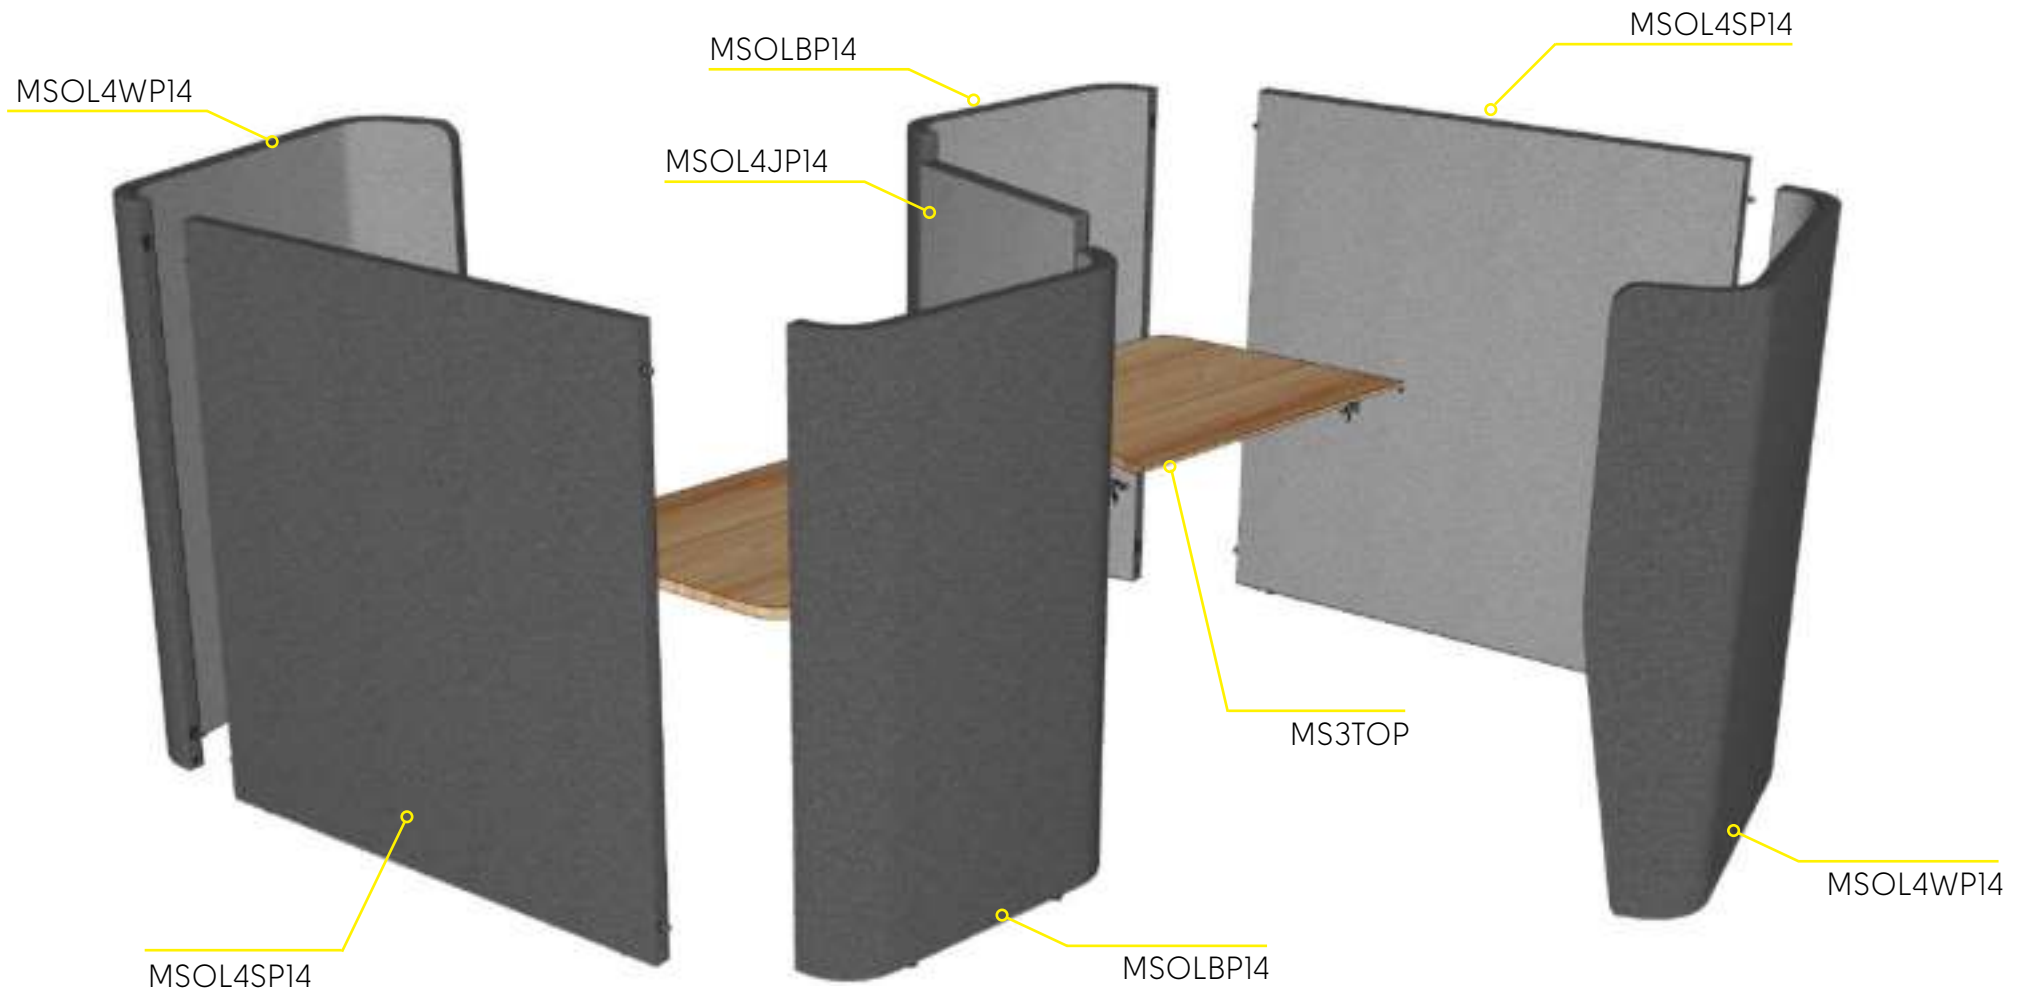


## Solo 4-2 Assembly Instructions

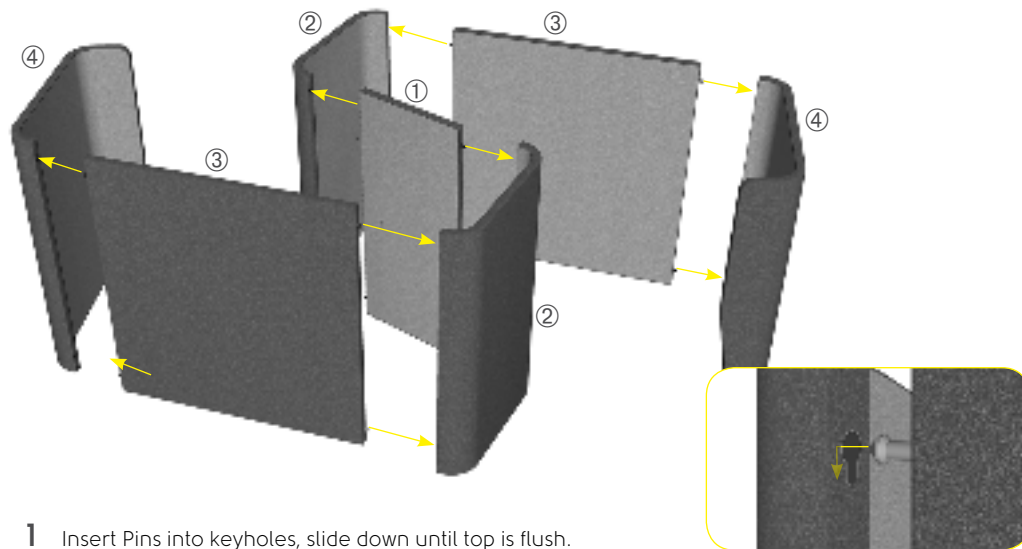


1 Insert Pins into keyholes, slide down until top is flush.

3 Fix the brackets into the T-nut holes on the panels.

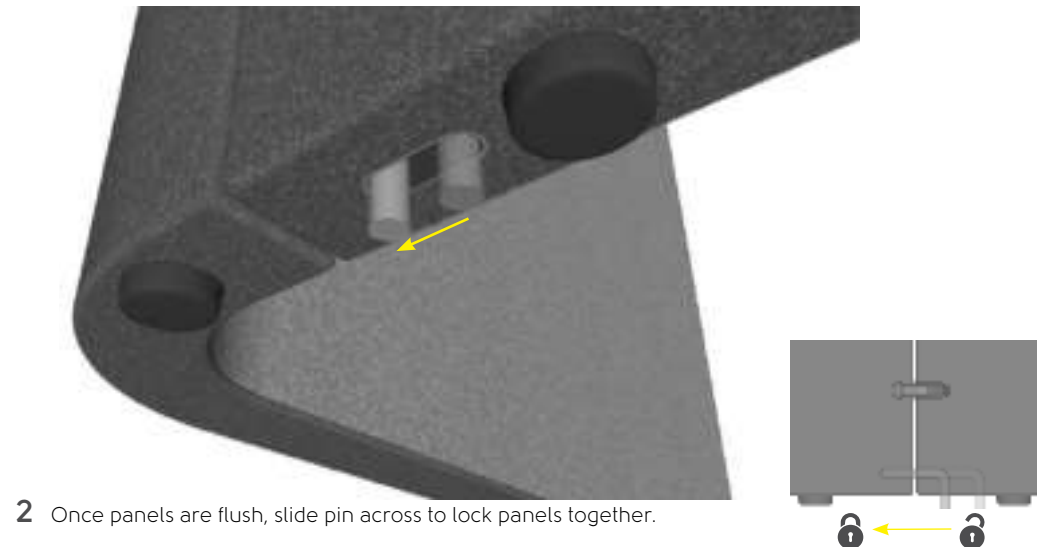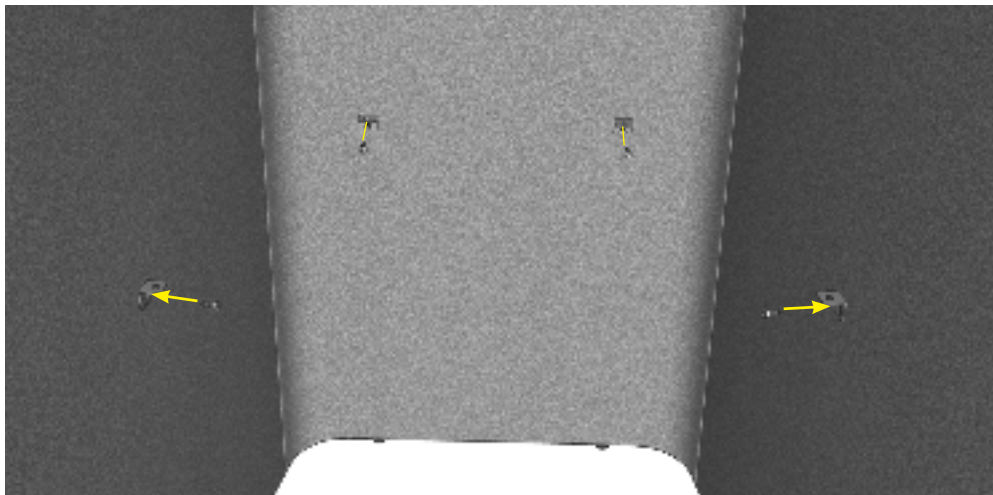

2 Once panels are flush, slide pin across to lock panels together.

4 Place the worktop onto the fixed brackets, then screw the worktop to the brackets using wood screws.

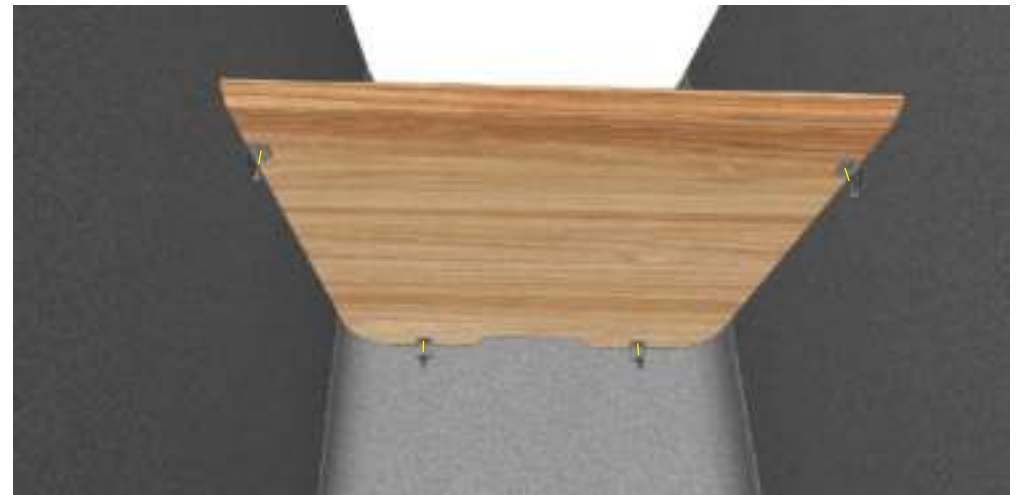

# motionoffice

## Loop Curve Table Assembly Instructions




### PARTS LIST:

- ☐ MLPLEG
- ☐ MLP60TOP




## Loop Curve Table Assembly Instructions



Recommended  
2-person Step

To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

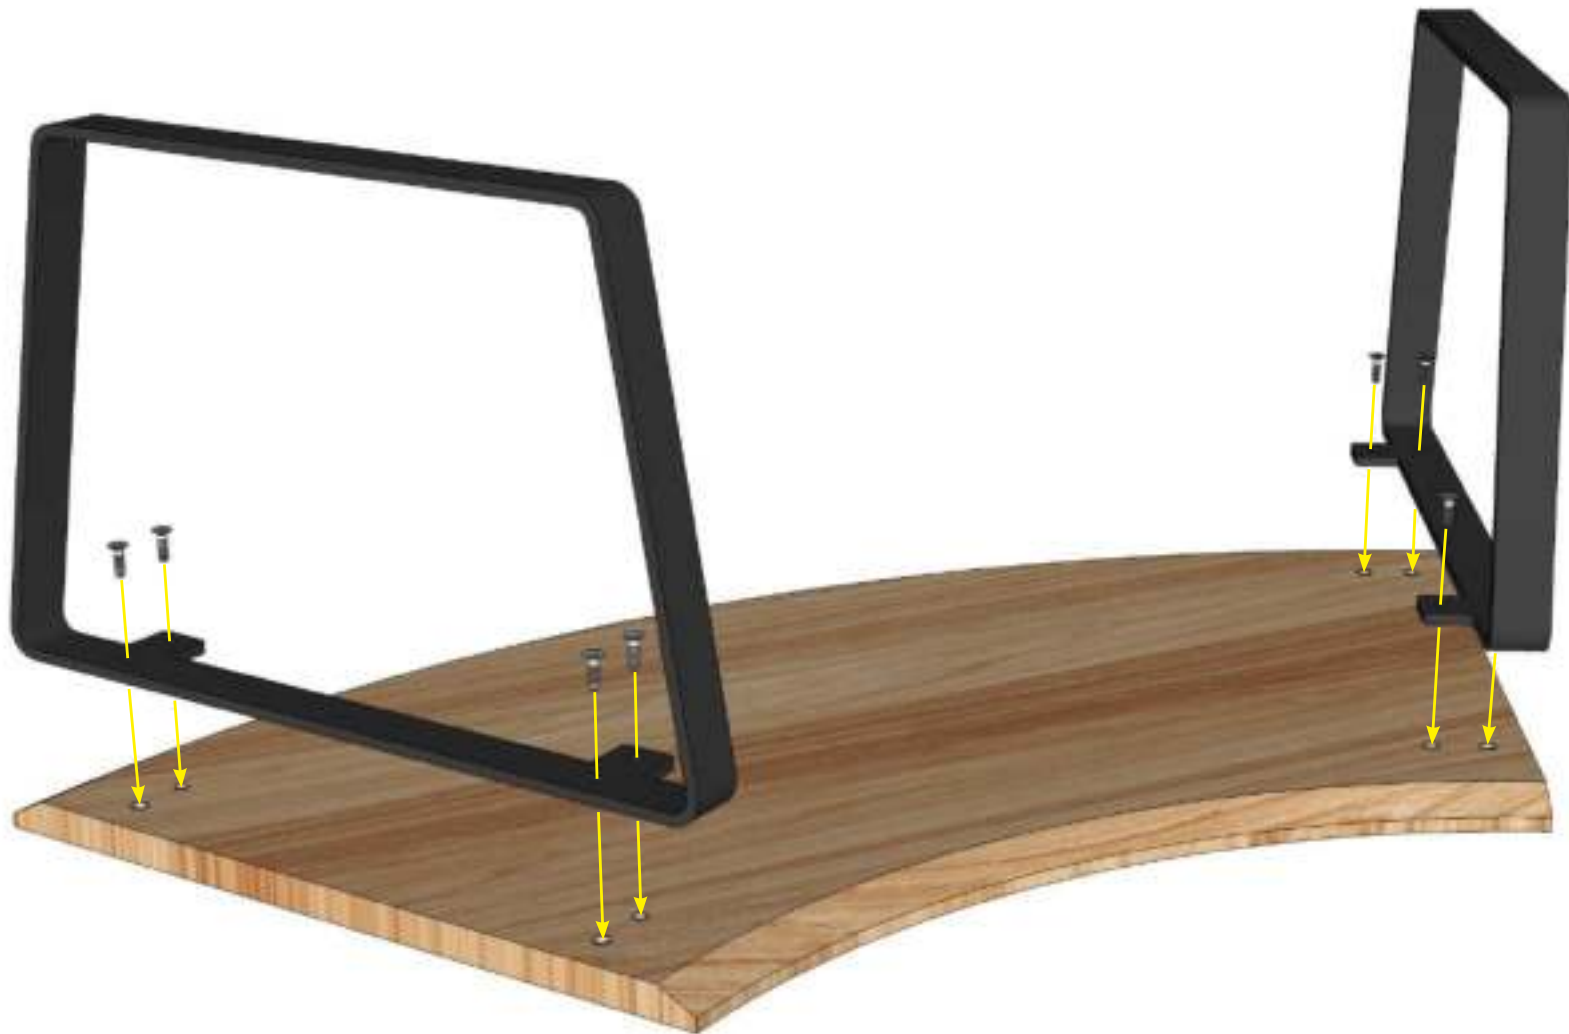

# motionoffice

## Loop Straight Table Assembly Instructions



### PARTS LIST:

- ☐ MLPLEG
- ☐ MLP60TOP






## Loop Straight Table Assembly Instructions



To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

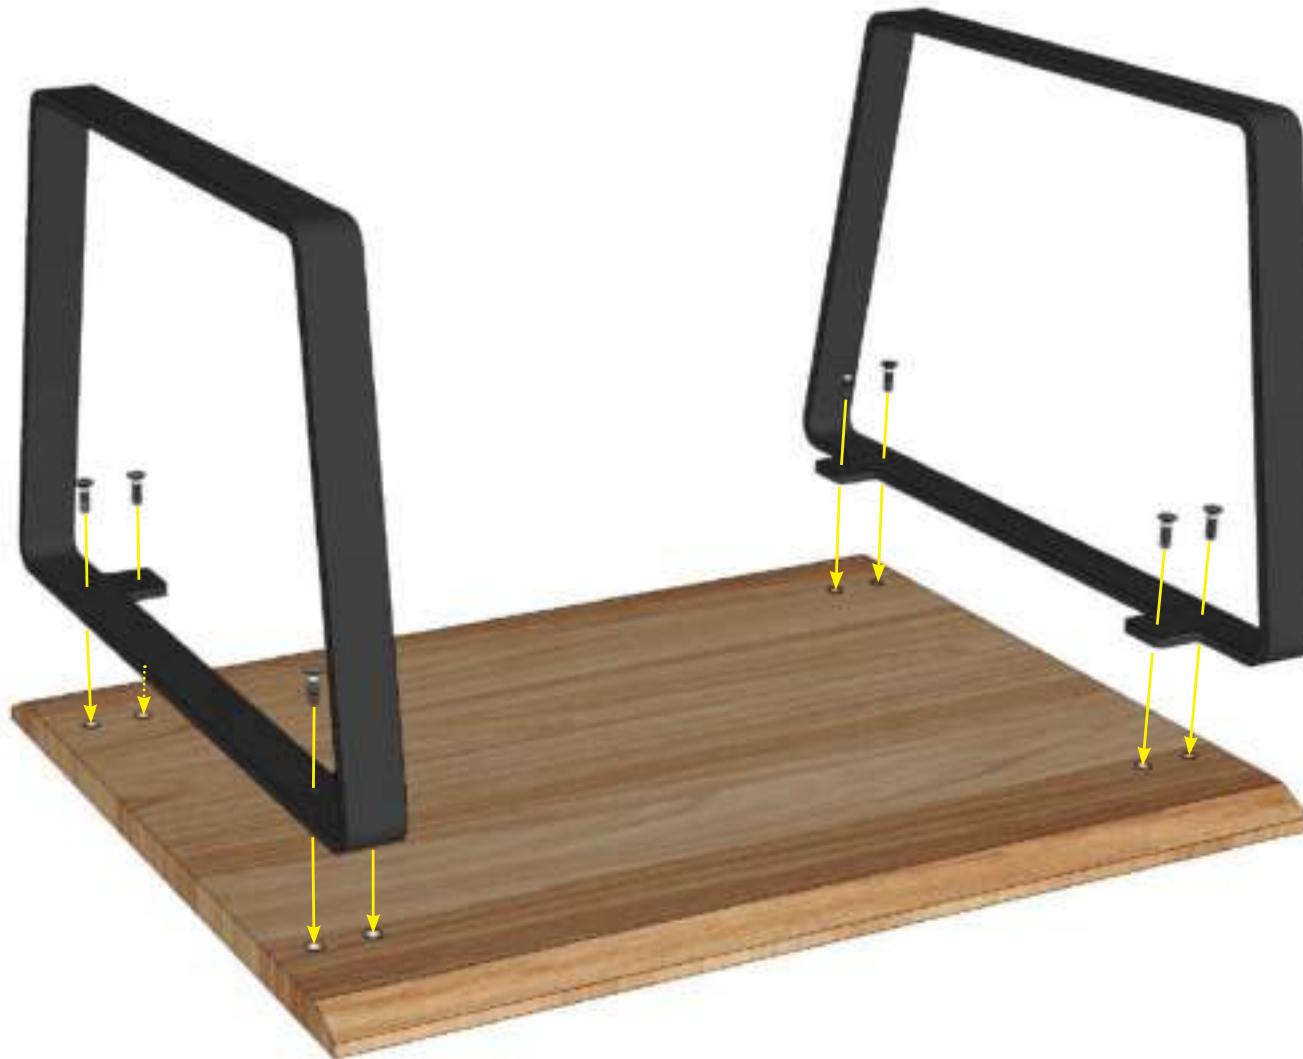



### PARTS LIST:


- ☐ MTABTOP
- ☐ MTABLEG

### COMPONENTS LIST:

- 5 - Countersunk Screws
- 5 - Worktop Screws
- 1 - Allen Key




## Loop Tablet Table Assembly Instructions




Recommended  
2-person Step

To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

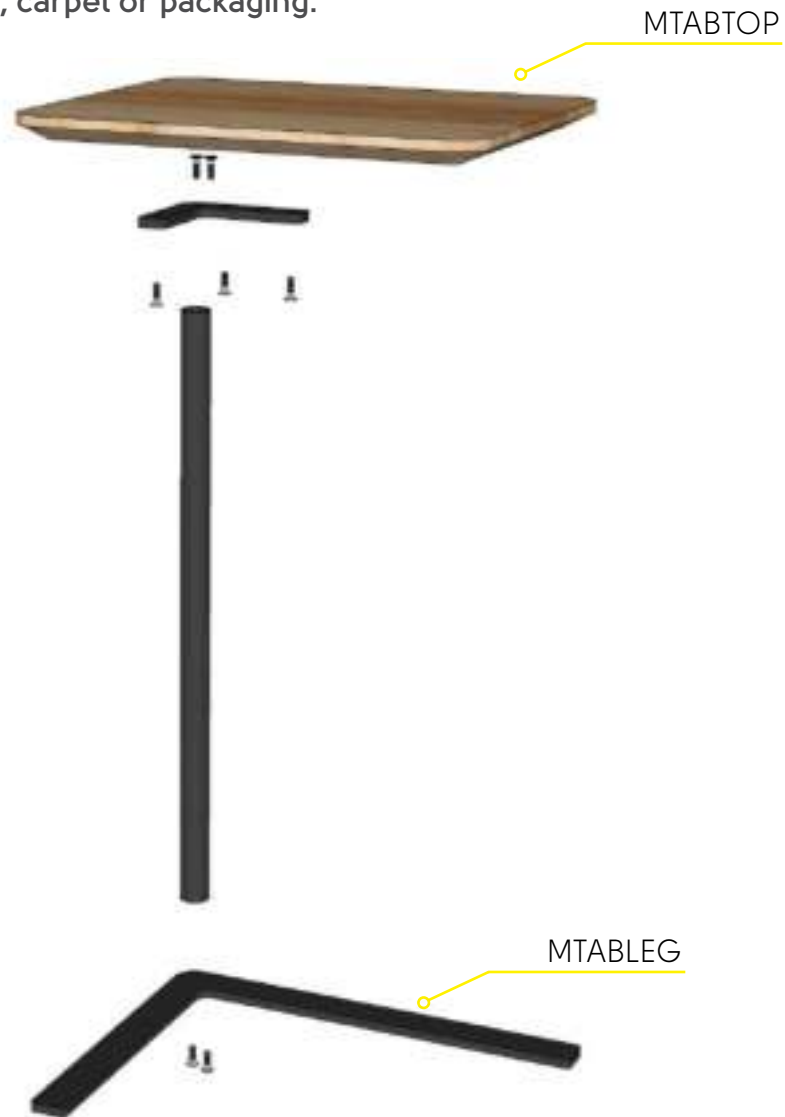

## Loop Tablet Table Assembly Instructions

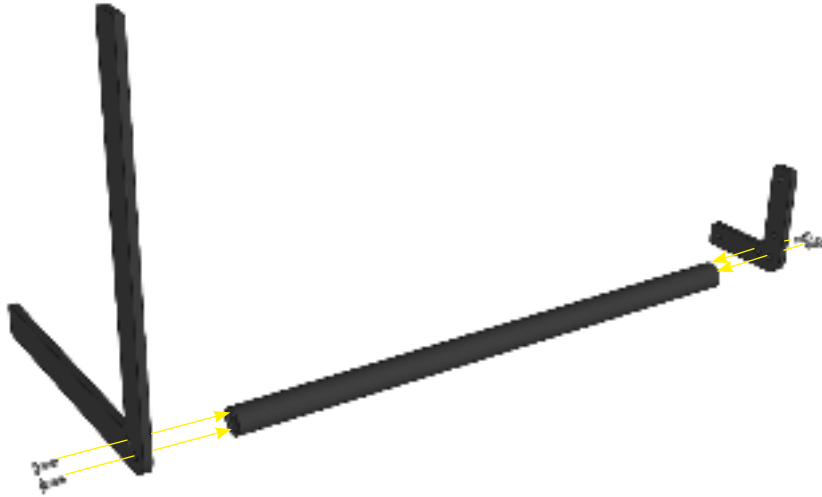

**1** Fix the table base and worktop holder with the post.



**2** Screw bolt through the worktop holder in to the T-nut on the underside of the worktop.

# motionoffice

## Motion Team Assembly Instructions



### PARTS LIST:


- ☐ MSP901416
- ☐ MBPA1411 x 2
- ☐ MBPBC1411
- ☐ MTCAP14 (L&R pair)
- ☐ MTEAMTOP x 2

### COMPONENTS LIST:

- 14 - Pins
- 8 - Worktop Brackets
- 9 - Worktop Bracket Screws
- 9 - Wood Screws
- 1 - Allen Key




## Motion Team Assembly Instructions




Recommended  
2-person Step

To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

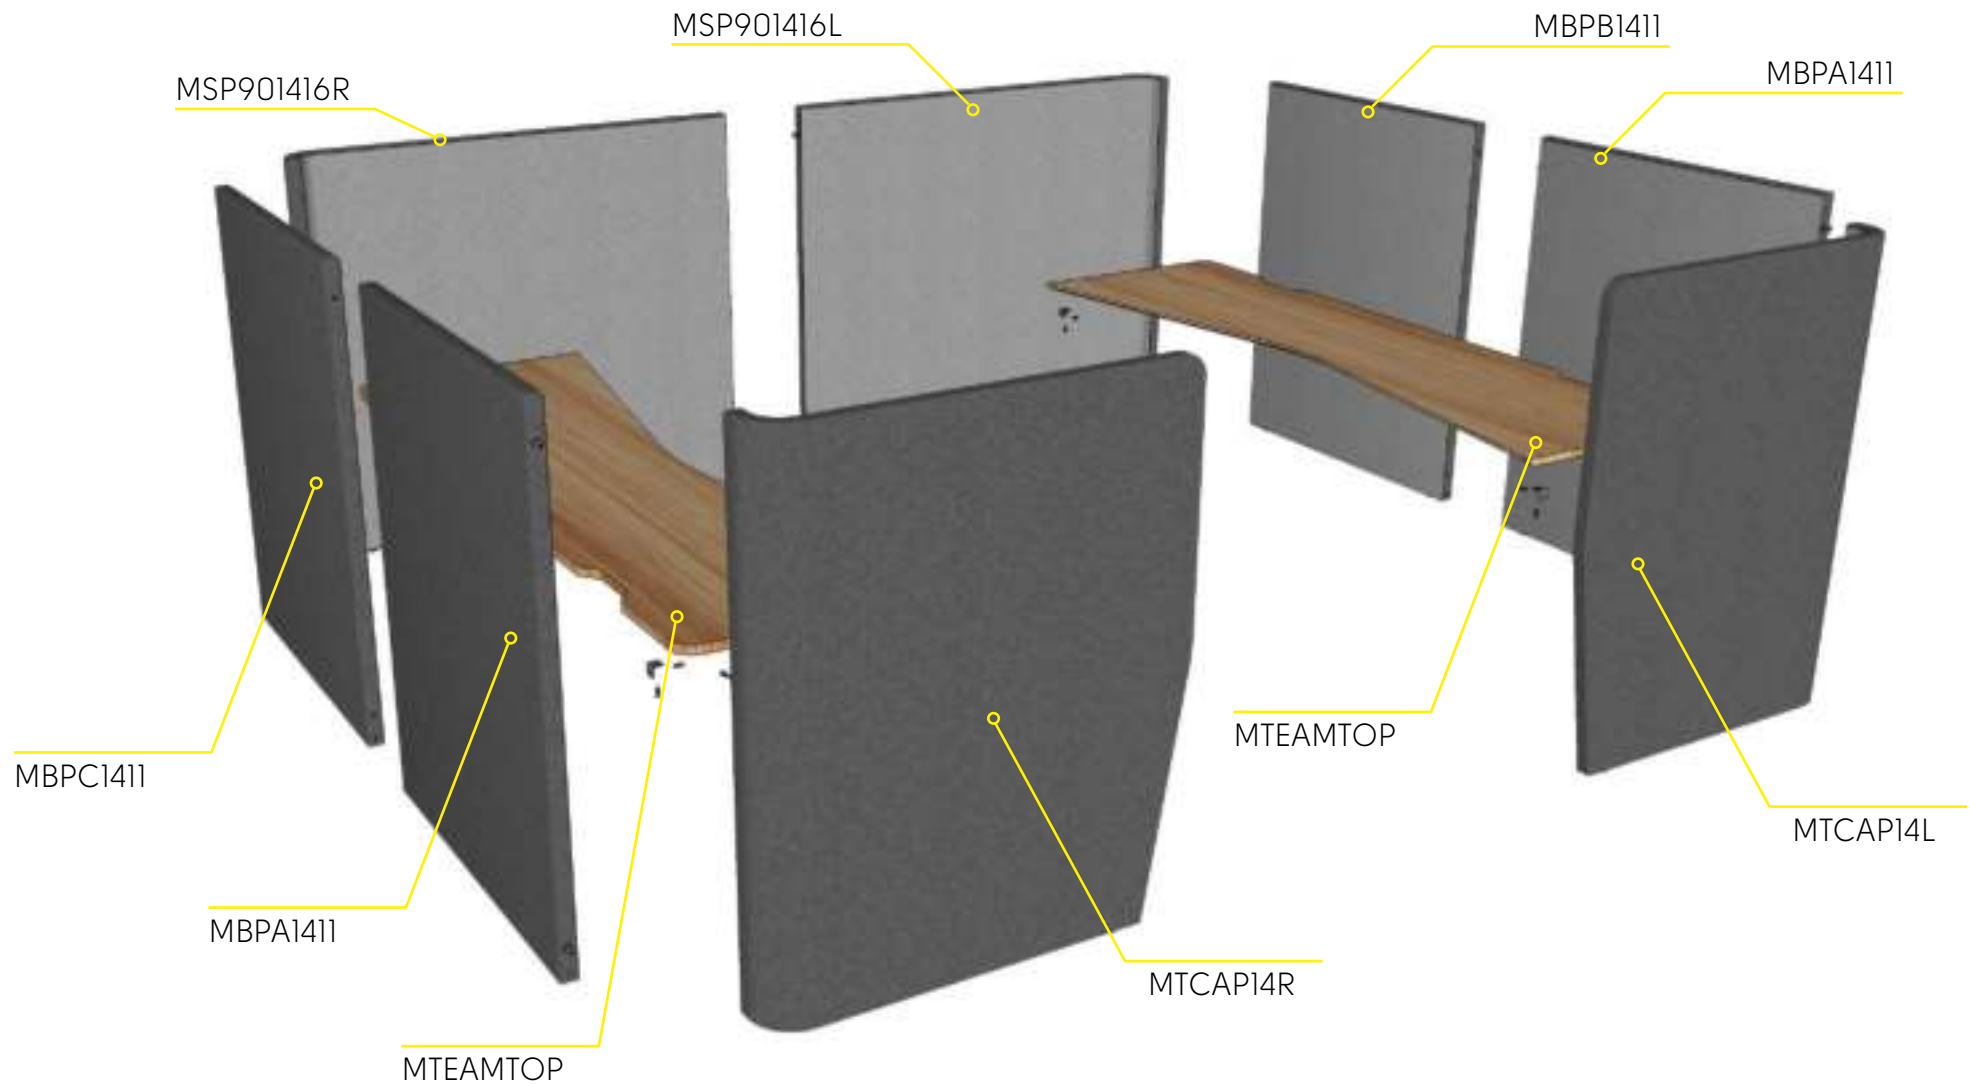




## Motion Team Assembly Instructions

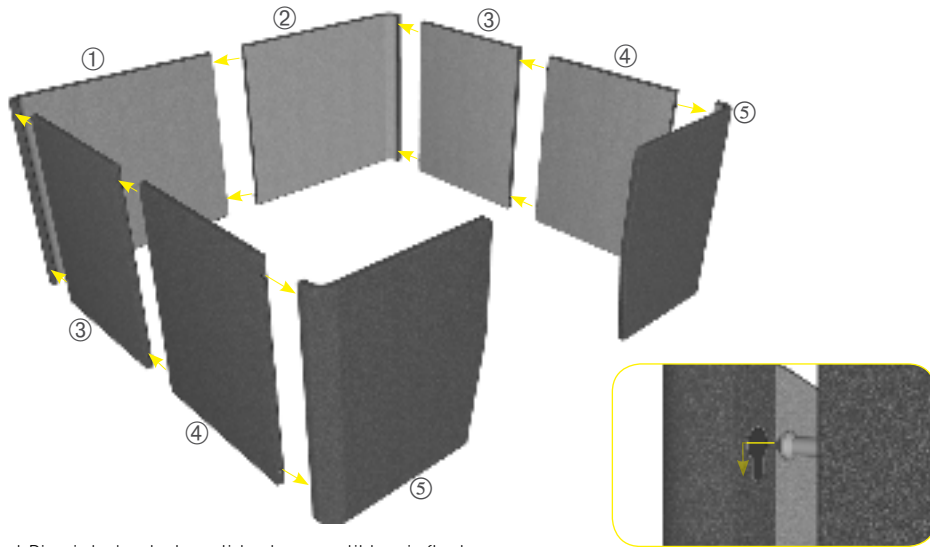


1 Insert Pins into keyholes, slide down until top is flush.

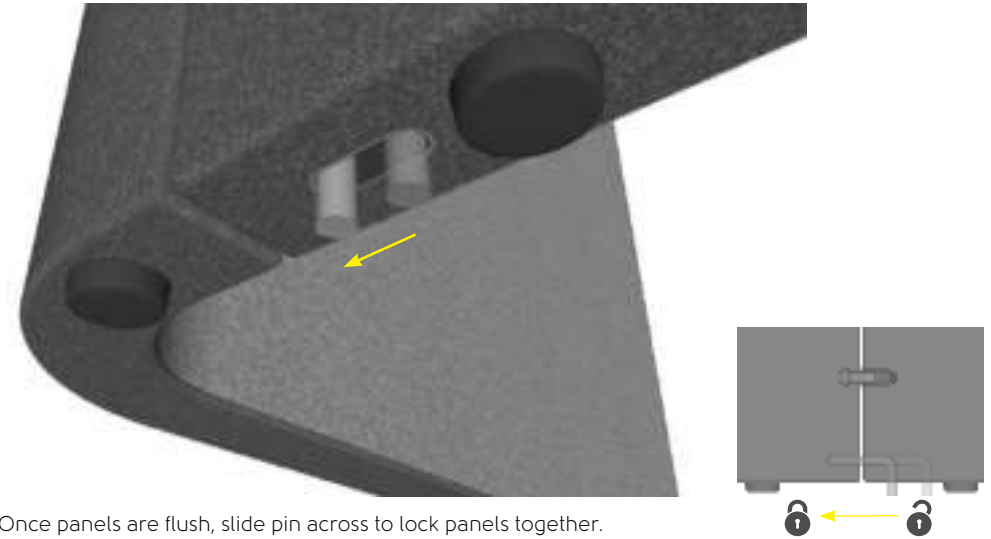


2 Once panels are flush, slide pin across to lock panels together.

3 Fix the brackets into the T-nut holes on the panels.

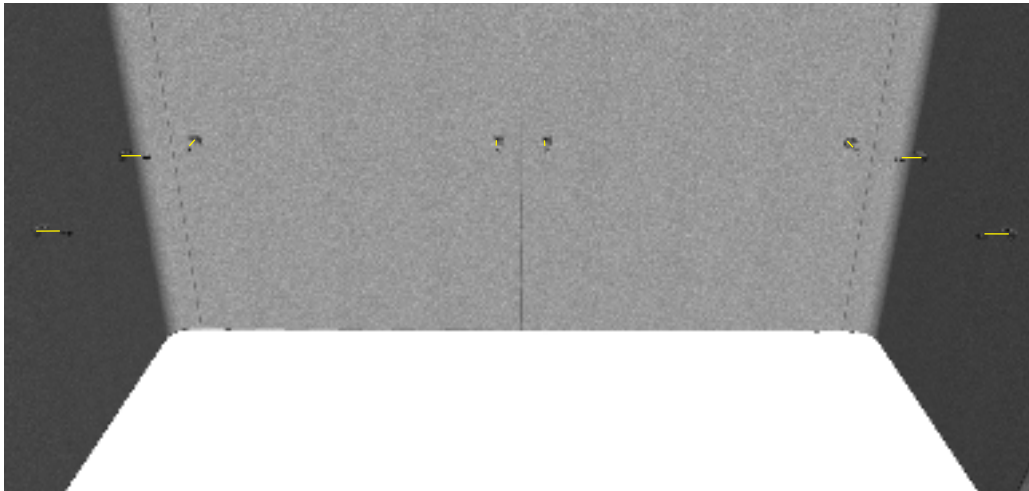

4 Place the worktop onto the fixed brackets, then screw the worktop to the brackets using wood screws.

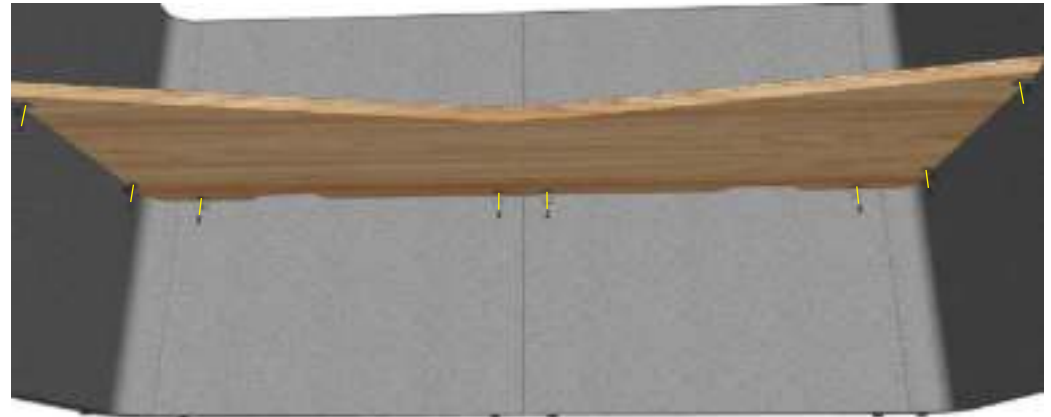

# motionoffice

## Urban Mesh Assembly Instructions



[motionoffice.com](https://motionoffice.com)



## Urban Mesh Assembly Instructions



- 1 Place chair base upright on floor, stabilizing it so it does not move or slide. Insert gaslift cylinder into hole through chair base.



- 2 Attach the optional arms using the screws provided.

- 3 Carefully place seat assembly onto cylinder, fitting cylinder into the hole in bottom of seat mechanism. Press down firmly.




- 4 Place the chair back into the seat mechanism, and tighten at the desired height. Before making any other adjustments, sit firmly on the chair to complete assembly.



# motionoffice

## Solo 2-2 Assembly Instructions

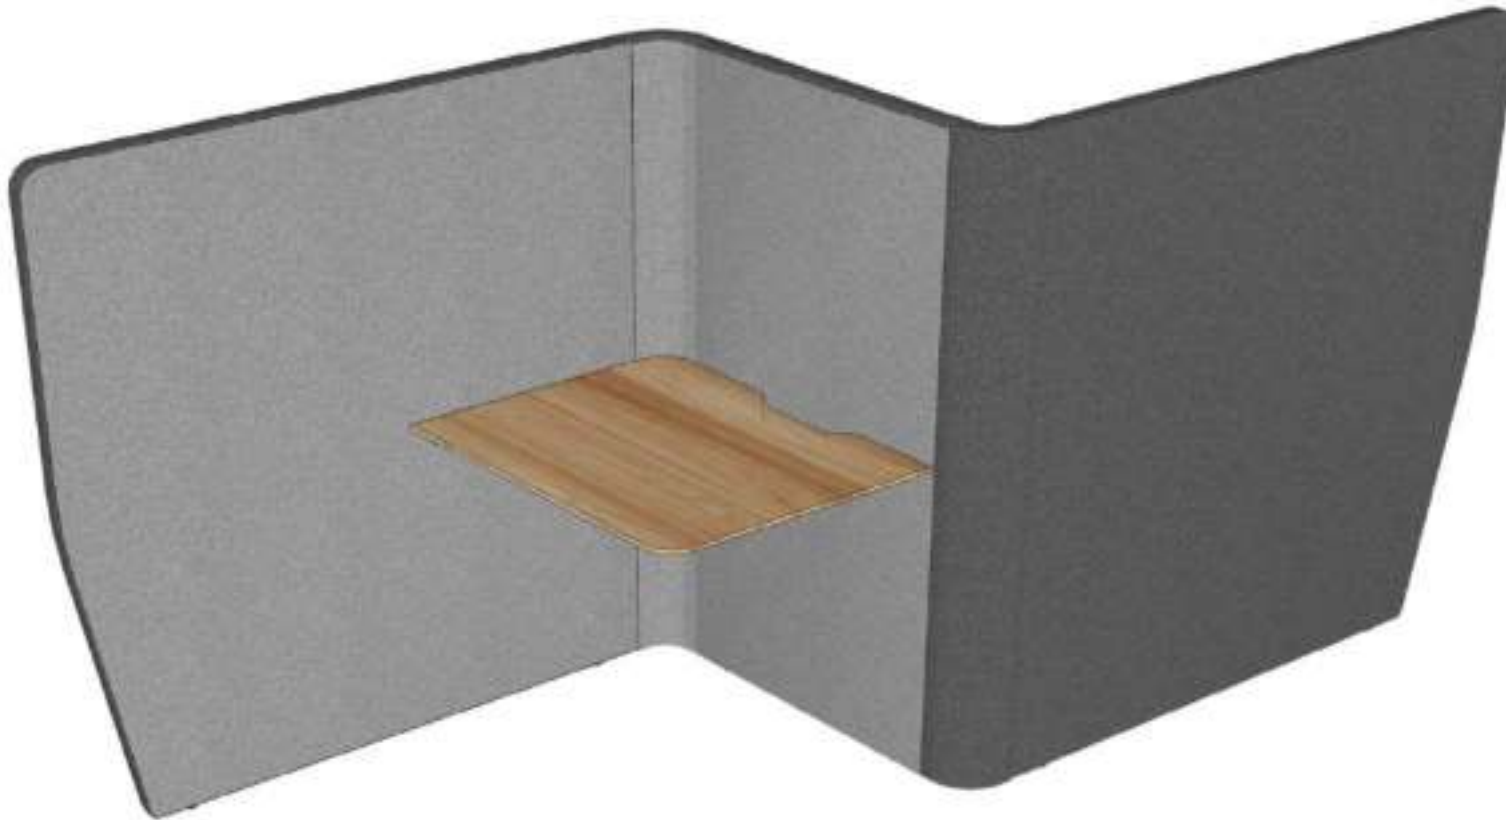

### PARTS LIST:

- ☐ MSOL3EP14L x 2
- ☐ MSOL2JP14
- ☐ MS2TOP x 2

### COMPONENTS LIST:


- 4 - Pins
- 6 - Worktop Brackets
- 7 - Worktop Bracket Screws
- 7 - Wood Screws
- 1 - Allen Key




## Solo 2-2 Assembly Instructions




To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

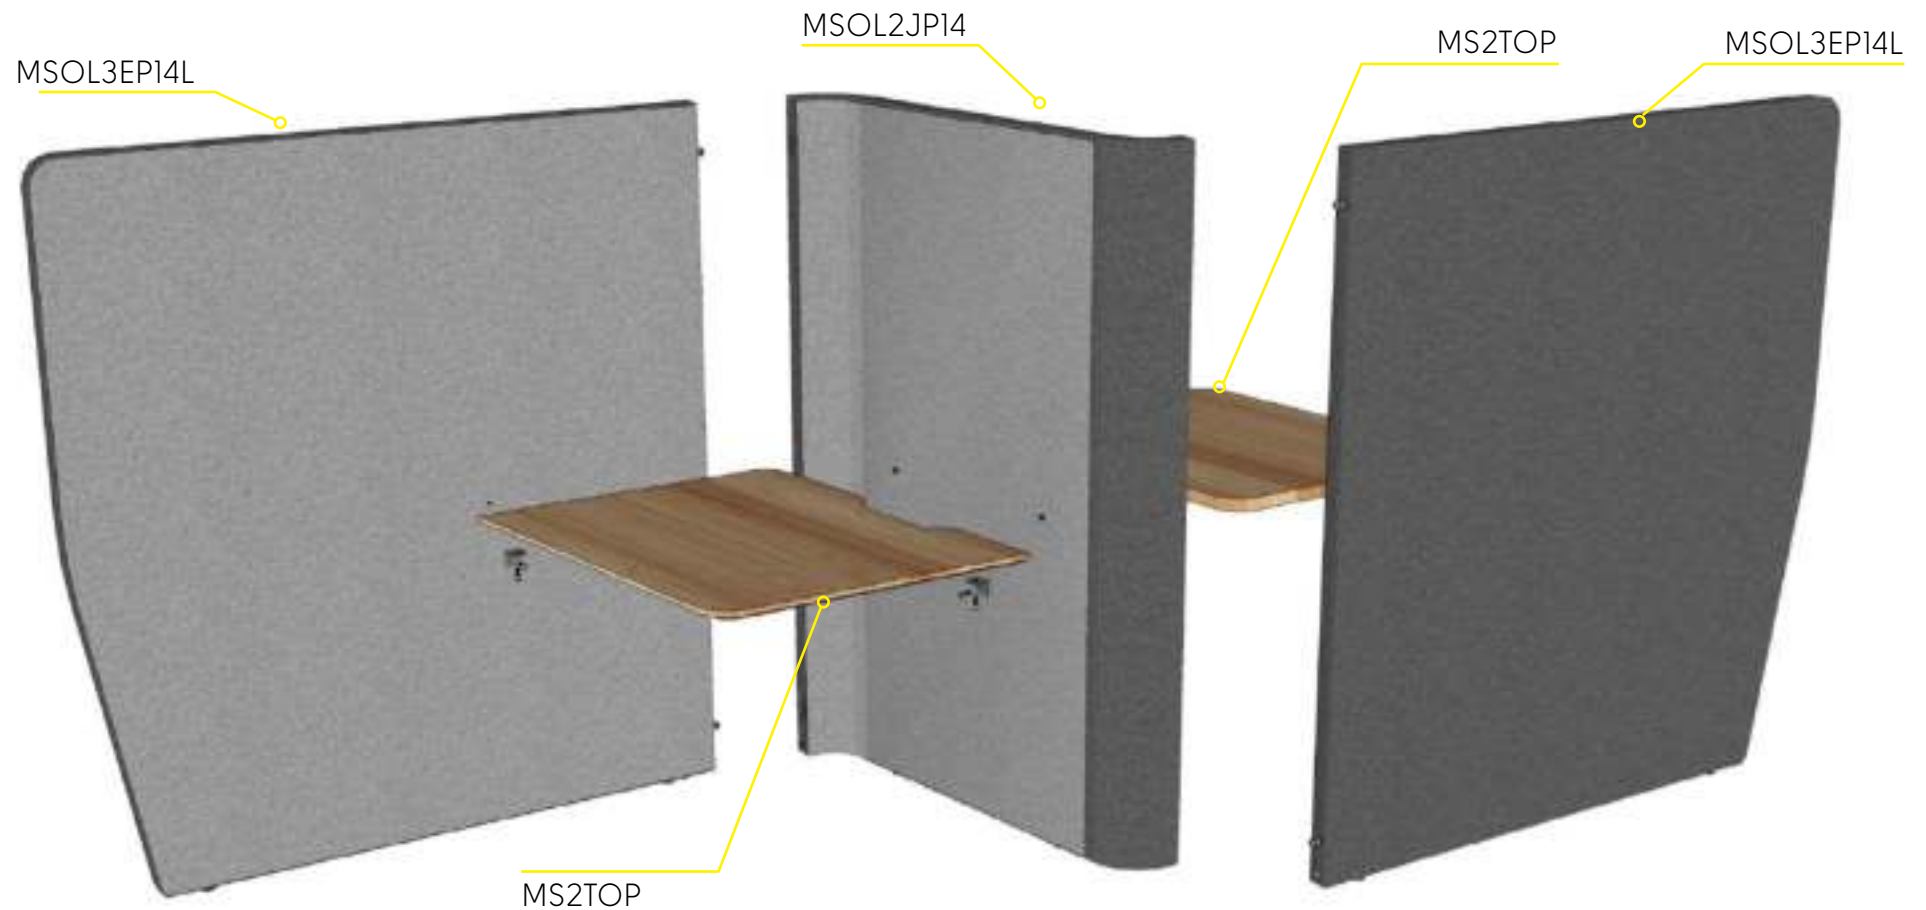

## Solo 2-2 Assembly Instructions

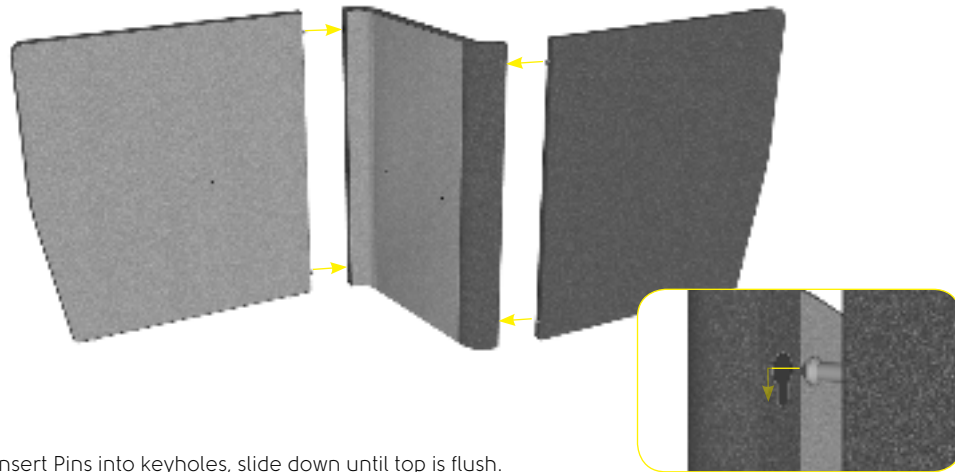


1 Insert Pins into keyholes, slide down until top is flush.

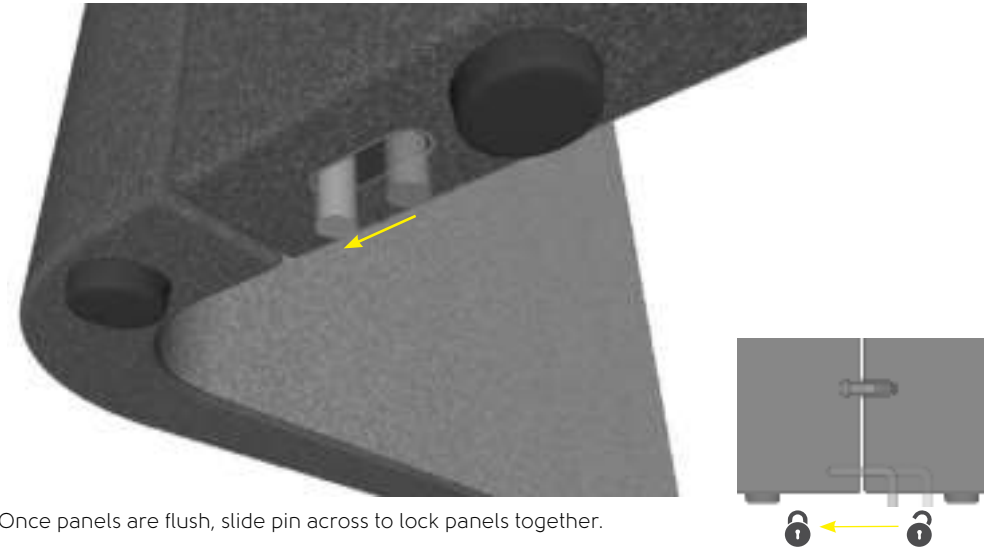

2 Once panels are flush, slide pin across to lock panels together.

3 Fix the brackets into the T-nut holes on the panels.

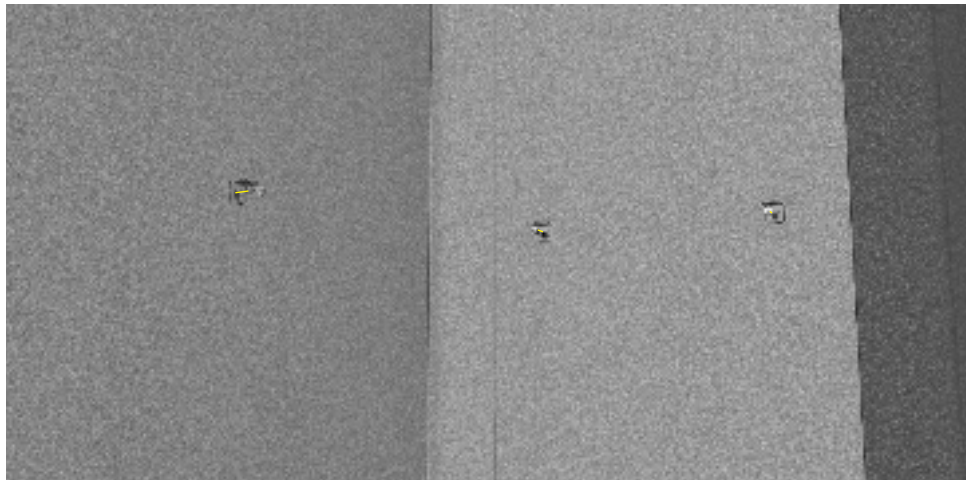

4 Place the worktop onto the fixed brackets, then screw the worktop to the brackets using wood screws.





# motionoffice

## Solo 2-4 Assembly Instructions



### PARTS LIST:


- ☐ MSOL3EP14L x 2
- ☐ MSOL2JP14 x 2
- ☐ MSOL3JP14
- ☐ MS2TOP x 4

### COMPONENTS LIST:

- 8 - Pins
- 12 - Worktop Brackets
- 13 - Worktop Bracket Screws
- 13 - Wood Screws
- 1 - Allen Key




## Solo 2-4 Assembly Instructions




Recommended  
2-person Step

To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.


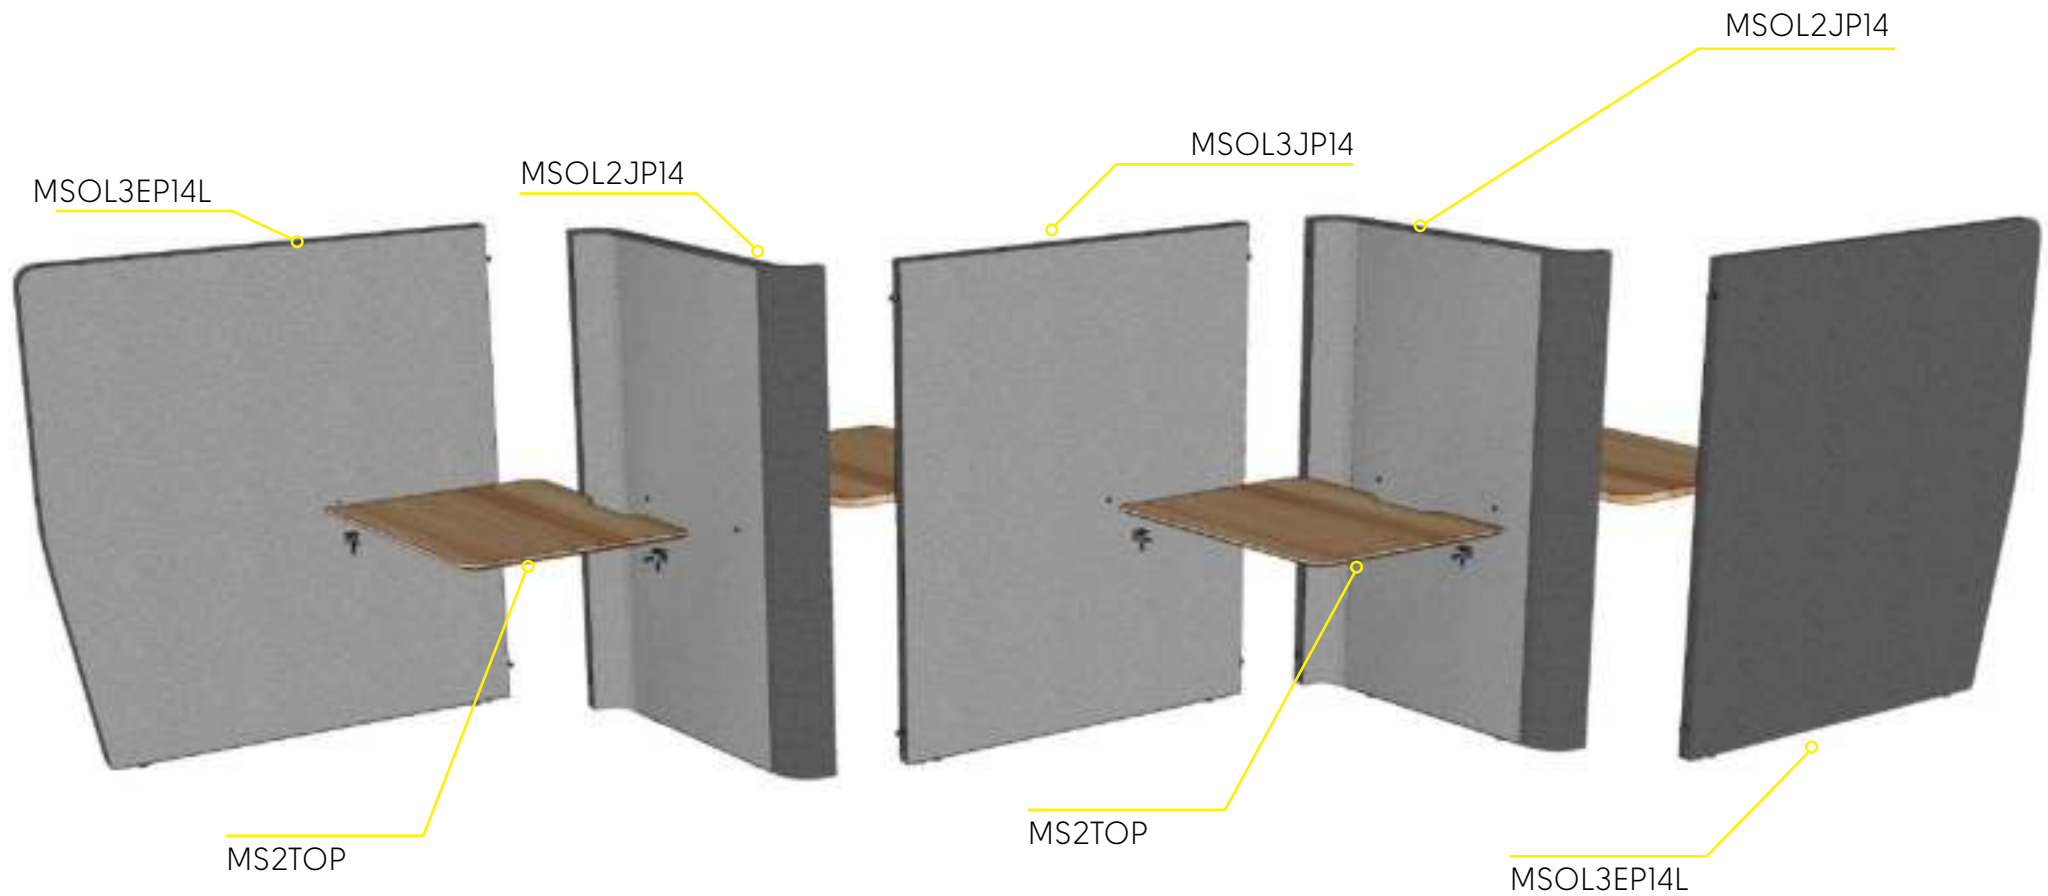


## Solo 2-4 Assembly Instructions

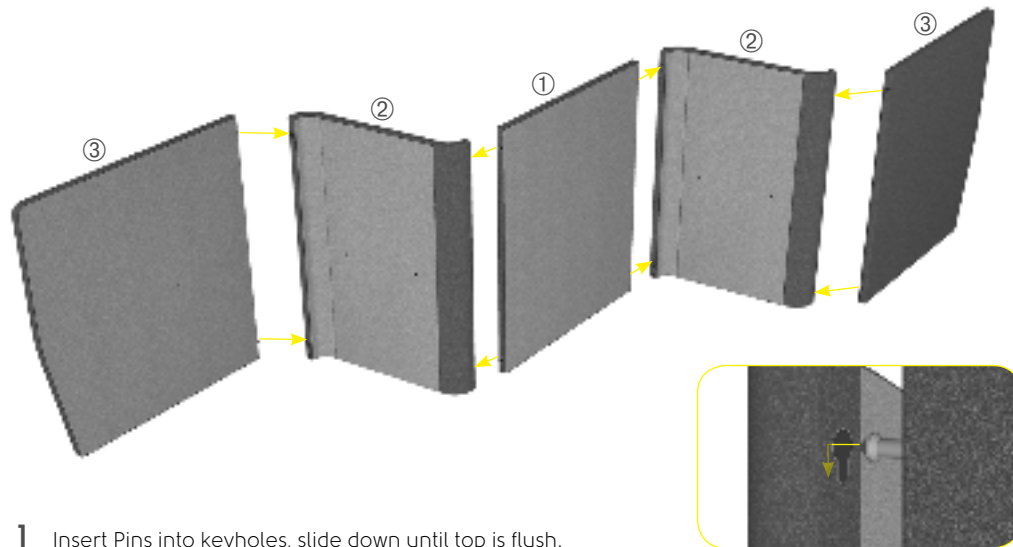

1 Insert Pins into keyholes, slide down until top is flush.

3 Fix the brackets into the T-nut holes on the panels.

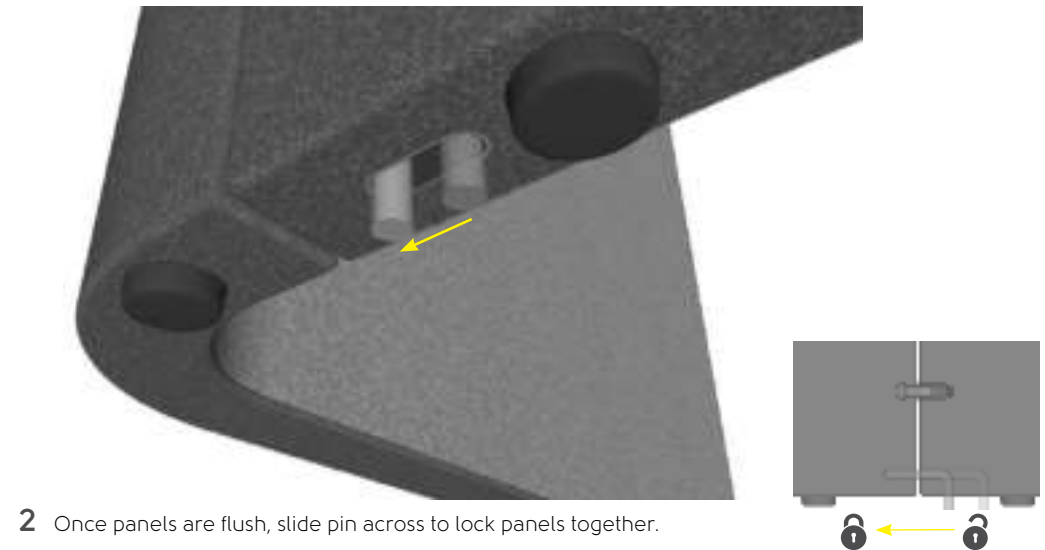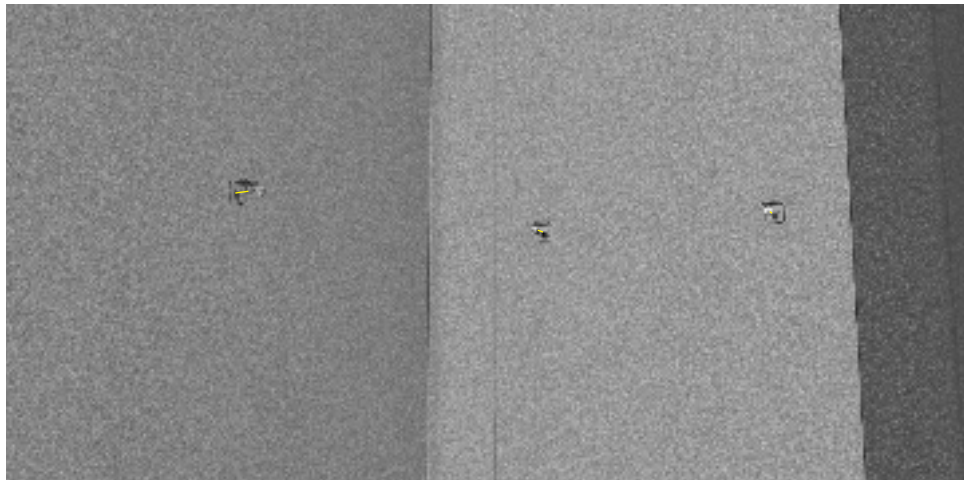

2 Once panels are flush, slide pin across to lock panels together.

4 Place the worktop onto the fixed brackets, then screw the worktop to the brackets using wood screws.



# motionoffice

## Wing Seat Assembly Instructions



### PARTS LIST:


- ☐ MBP1405
- ☐ MWNG14 (L&R Pair)
- ☐ MBACK06
- ☐ MCBASE06

### COMPONENTS LIST:

- 4 - Pins
- 4 - Plates
- 17 - Plate Screws
- 1 - Allen Key




## Wing Seat Assembly Instructions




Recommended  
2-person Step


To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

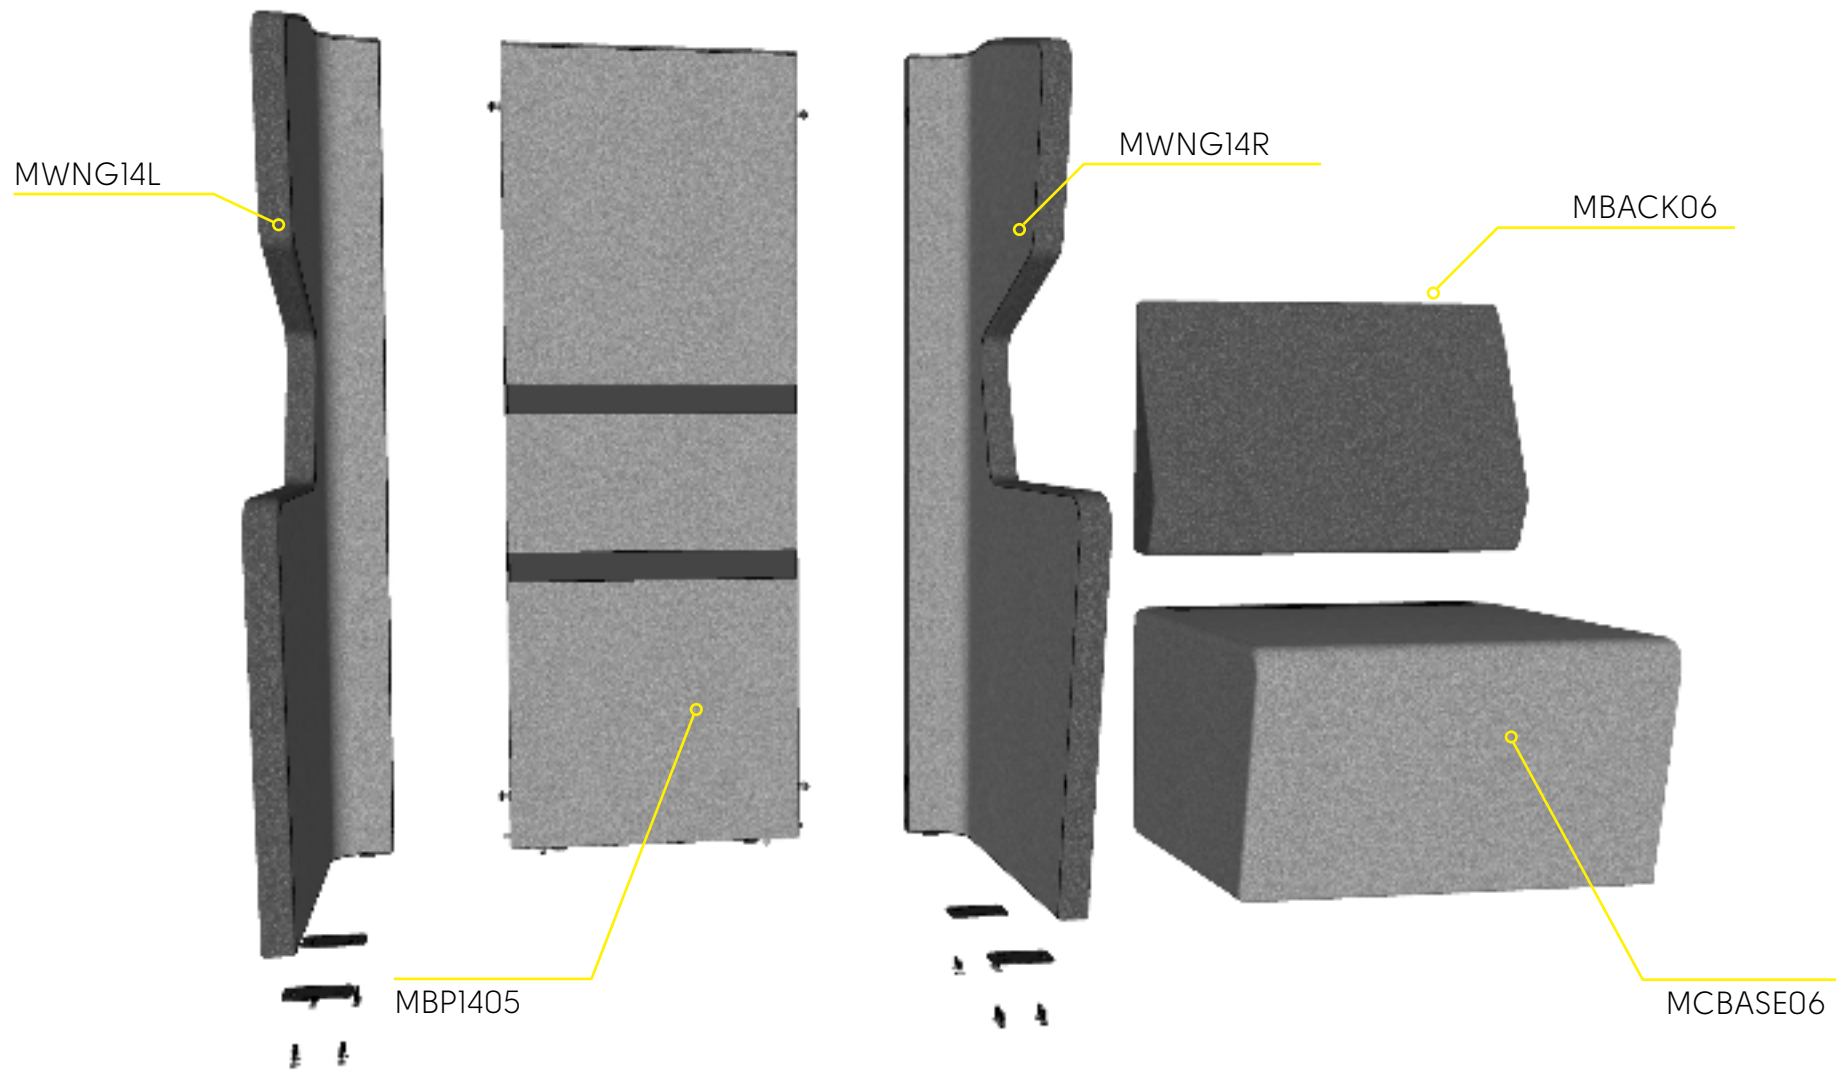

## Wing Seat Assembly Instructions

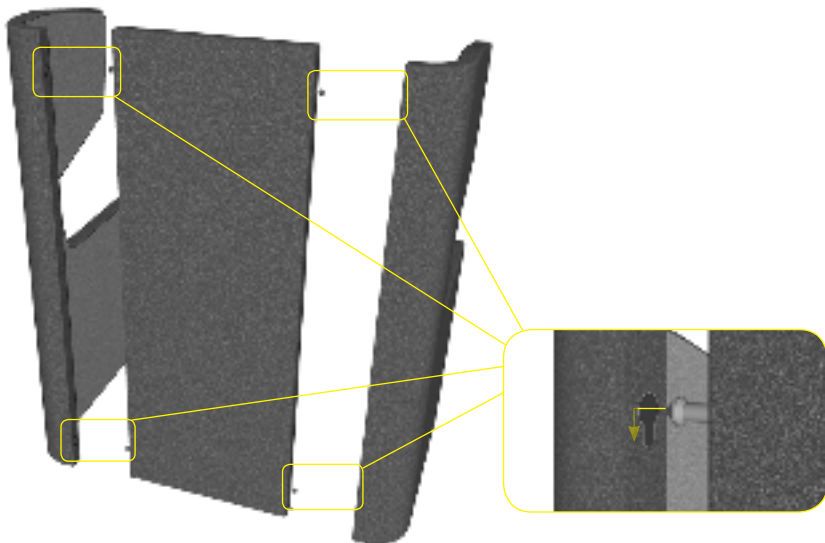


**1** Insert Pins into keyholes, slide down until top is flush.


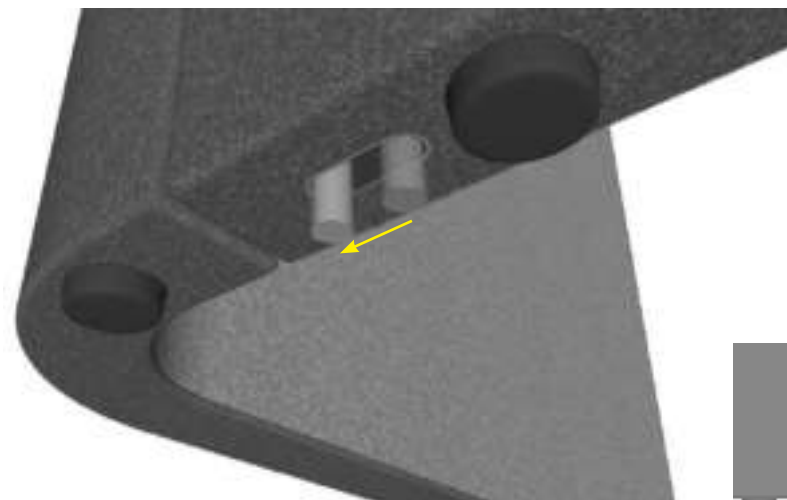


**2** Once panels are flush, slide pin across to lock panels together.

**3** Lie the panels on their back and place seat base inside, then screw plate to panels and seat base to fix firmly.

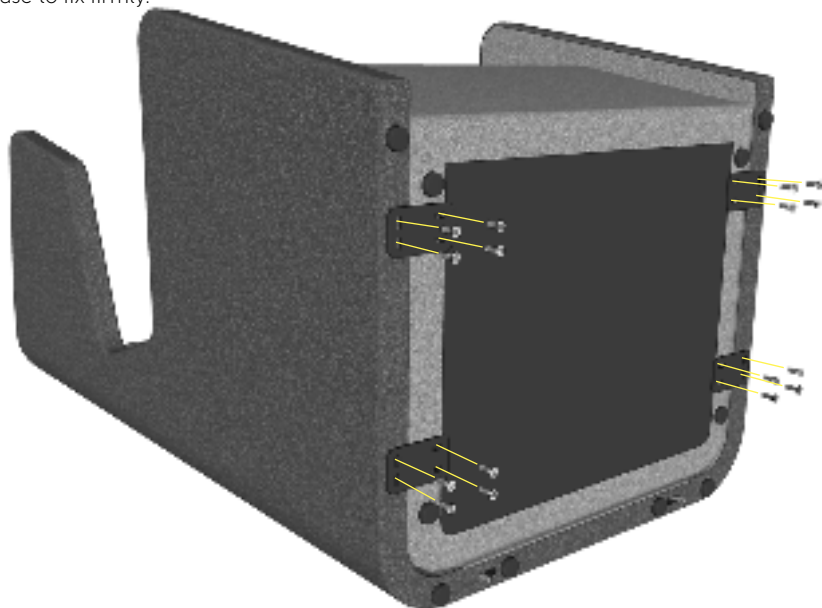

**4** Locate the velcro strips on the backrest with those on the panels.

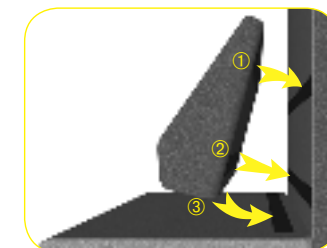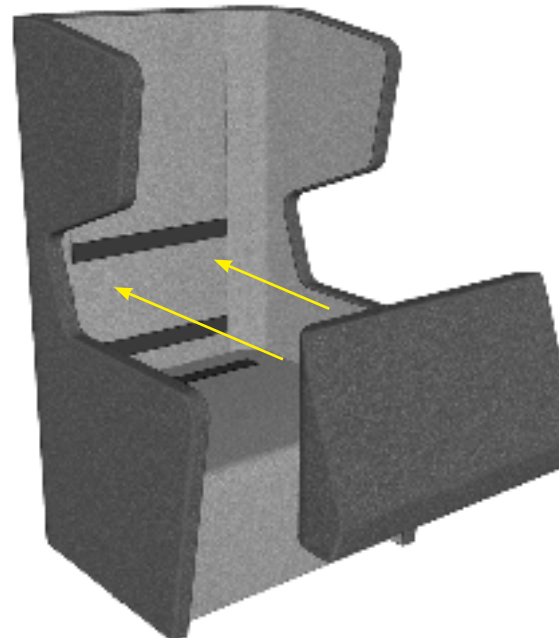

*\* Slide back rest along seat with top racked forward to fasten upper velcro set first.*



# motionoffice

## Double Wind Seat Assembly Instructions



### PARTS LIST:

- ☐ MBP1412
- ☐ MWNG14 (L&R Pair)
- ☐ MBACK14
- ☐ MCBASE14

### COMPONENTS LIST:

- 4 - Pins
- 4 - Plates
- 17 - Plate Screws
- 1 - Allen Key





## Double Wing Seat Assembly Instructions




To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.


MWNG14L




MWNG14R

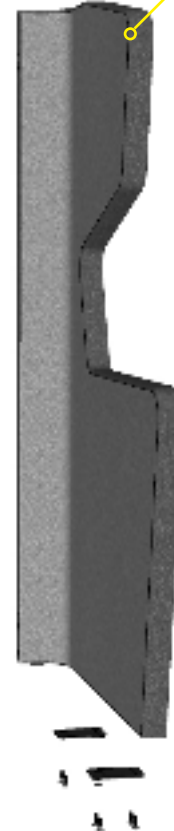


MBACK14

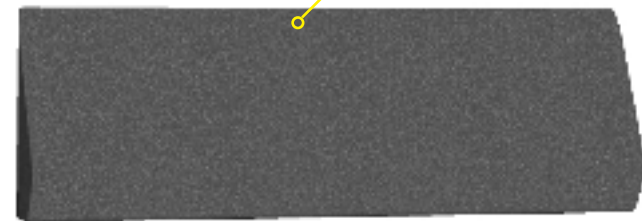


MBP1412

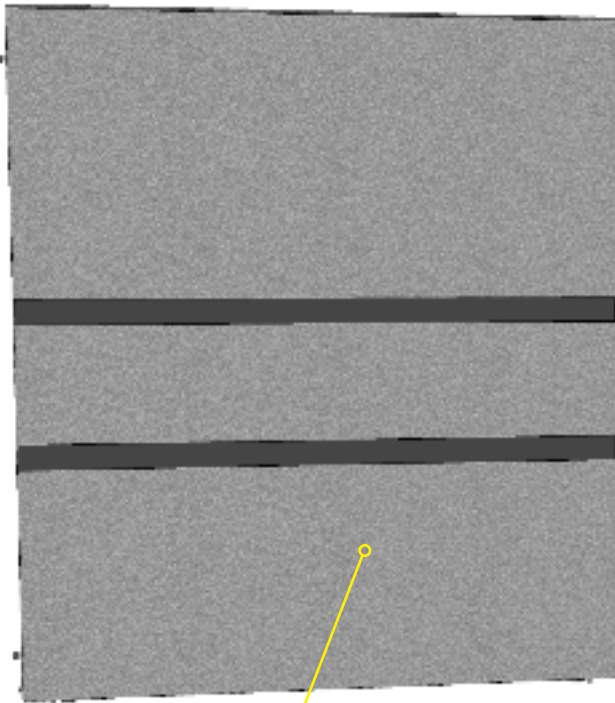


MCBASE14

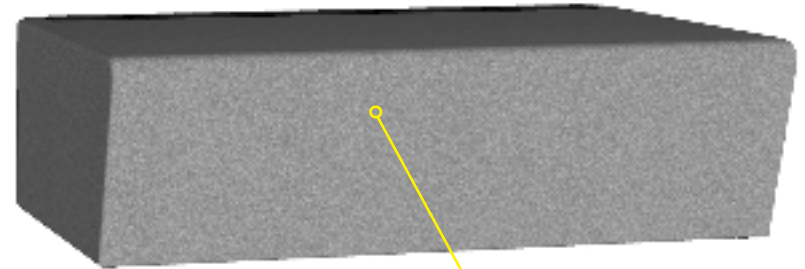

## Double Wing Seat Assembly Instructions

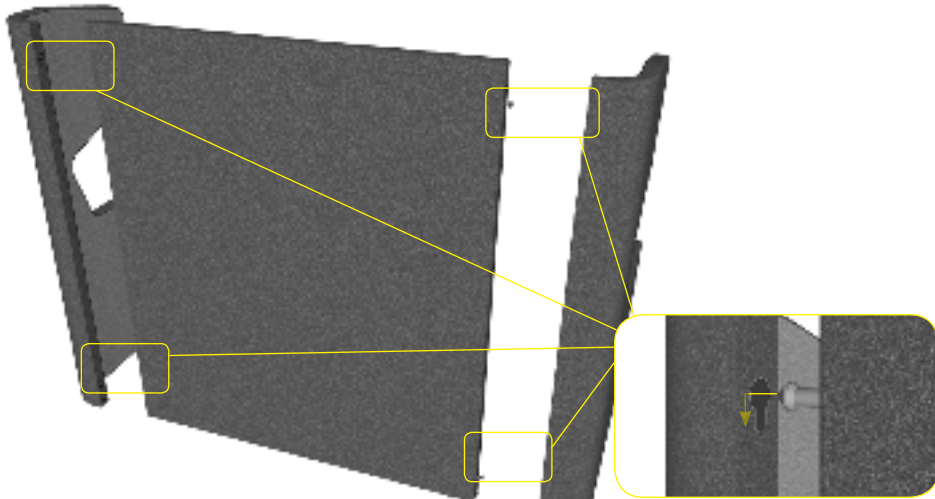


**1** Insert Pins into keyholes, slide down until top is flush.

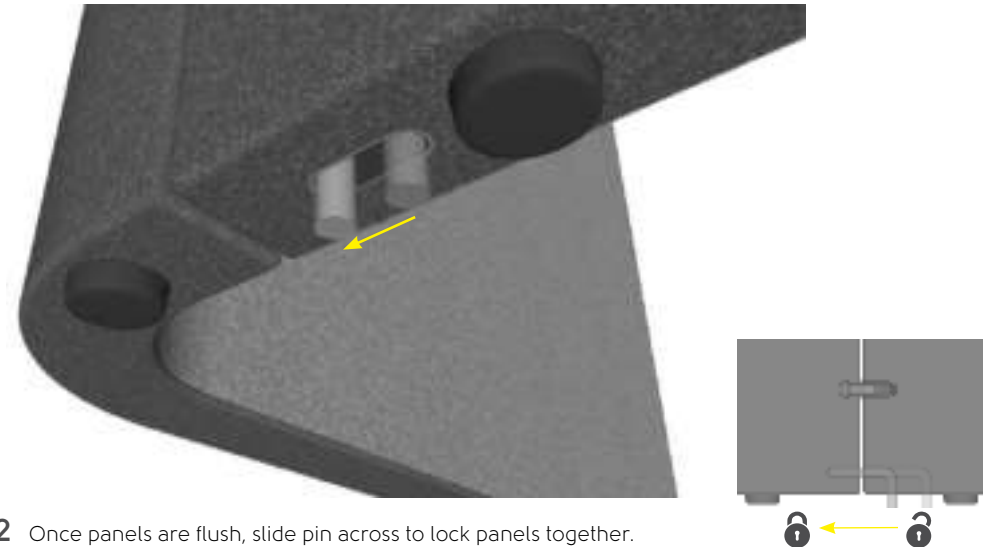


**2** Once panels are flush, slide pin across to lock panels together.


**3** Lie the panels on their back and place seat base inside, then screw plate to panels and seat base to fix firmly.

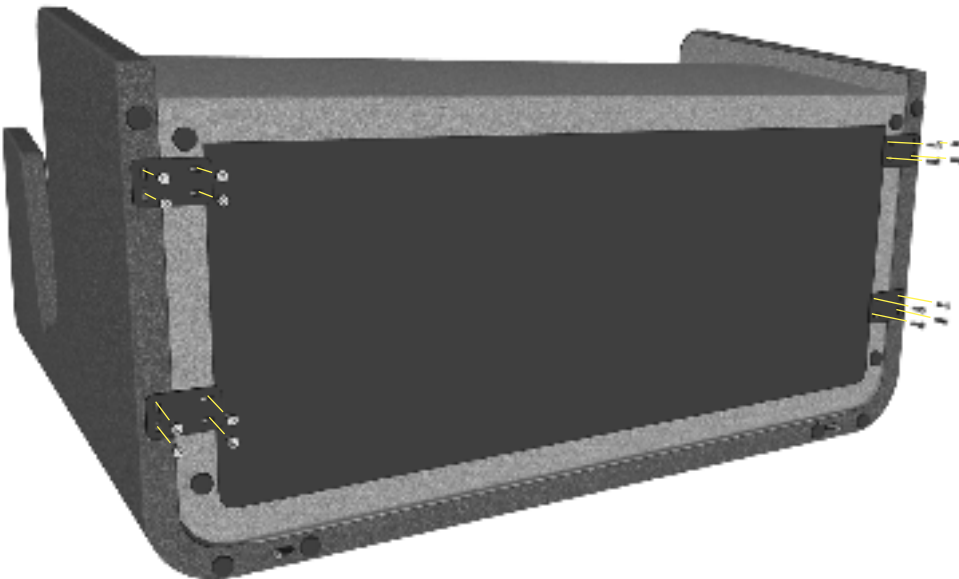

**4** Locate the velcro strips on the backrest with those on the panels.

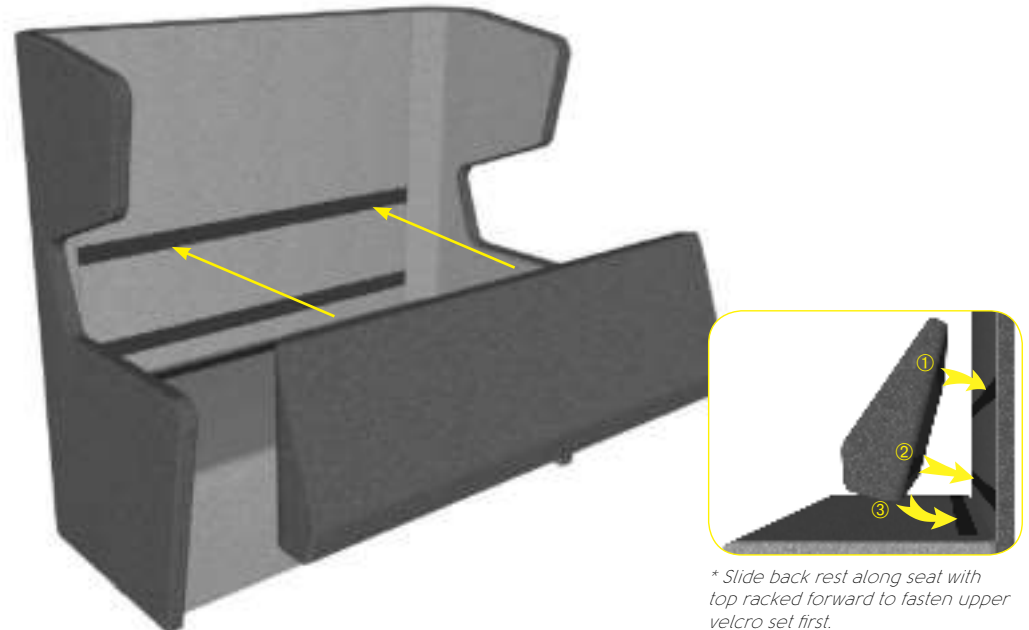

*\* Slide back rest along seat with top racked forward to fasten upper velcro set first.*

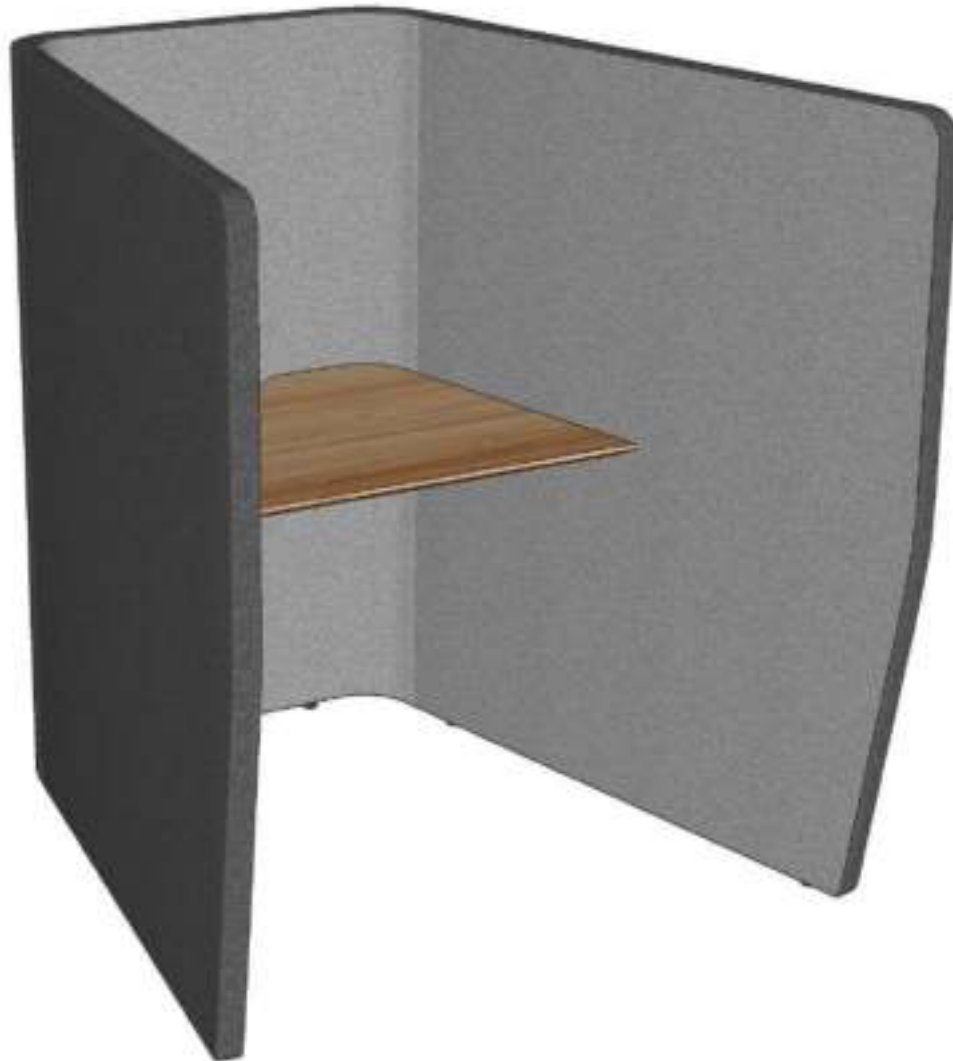


### PARTS LIST:

- ☐ MZIPEP14 (Left & Right)
- ☐ MBUP14
- ☐ MZIPTOP

### COMPONENTS LIST:


- 4 - Pins
- 4 - Worktop Brackets
- 5 - Worktop Bracket Screws
- 5 - Wood Screws
- 1 - Allen Key

## Zip 1 > Assembly Instructions





Recommended  
2-person Step


To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

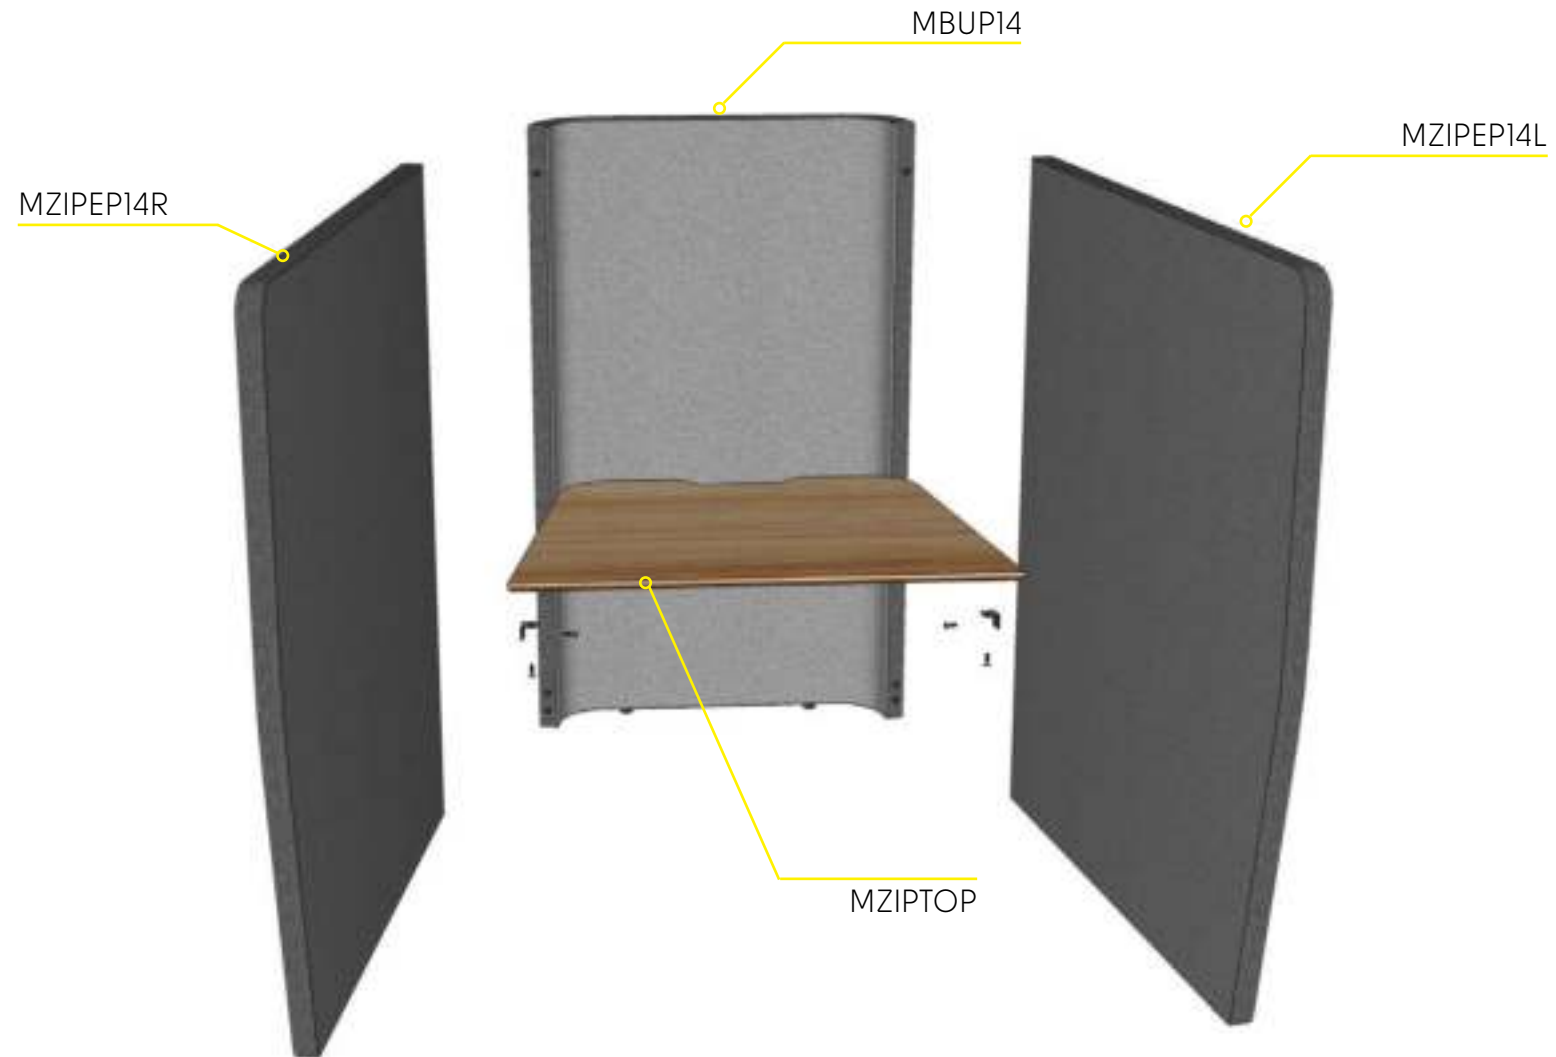


## Zip 1 > Assembly Instructions

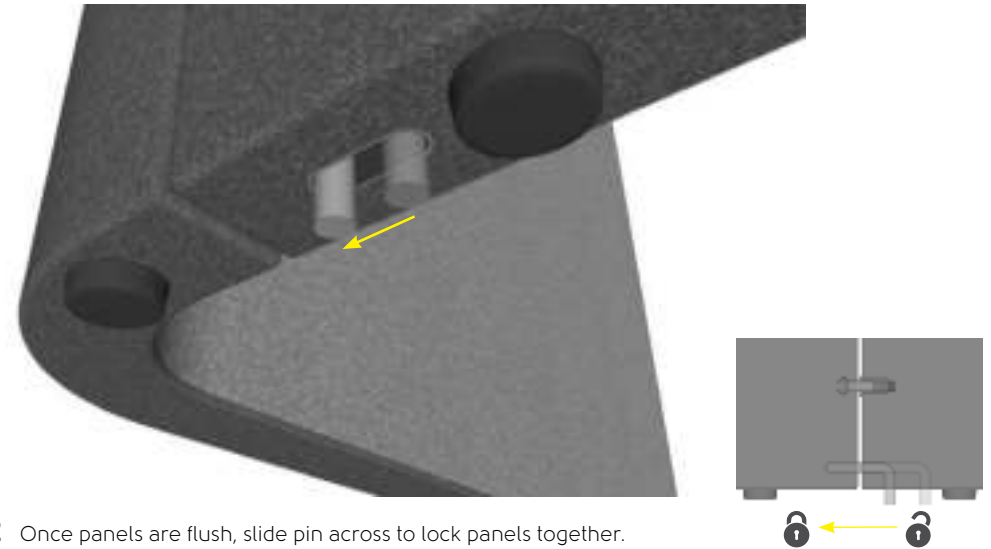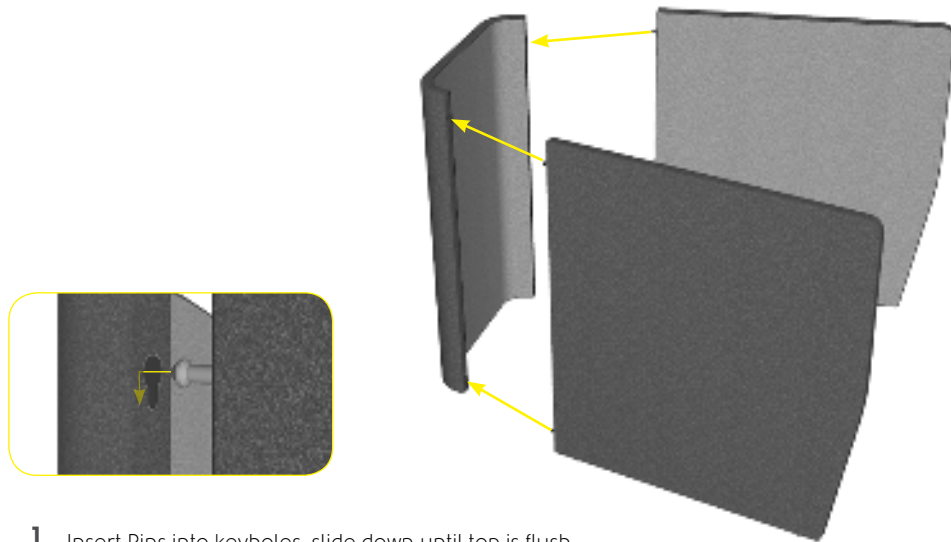

3 Fix the brackets into the T-nut holes on the panels.

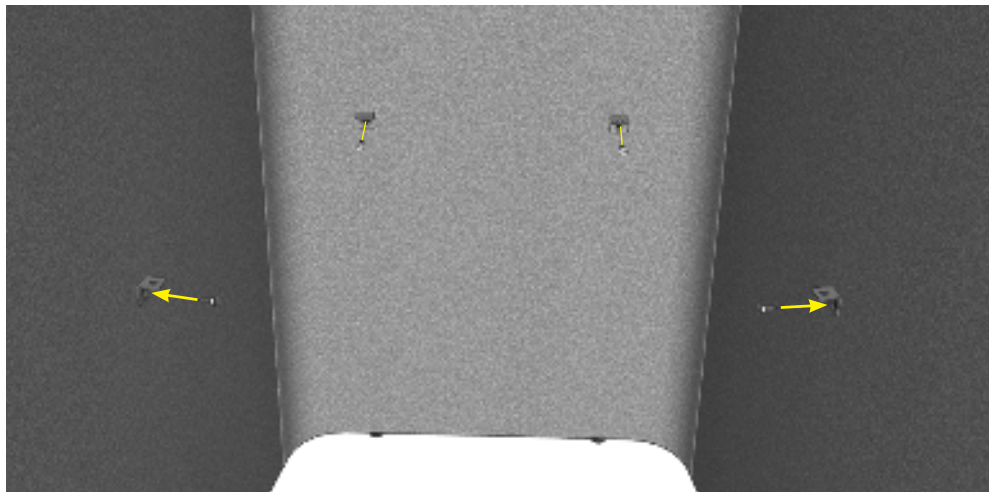


4 Place the worktop onto the fixed brackets, then screw the worktop to the brackets using wood screws.

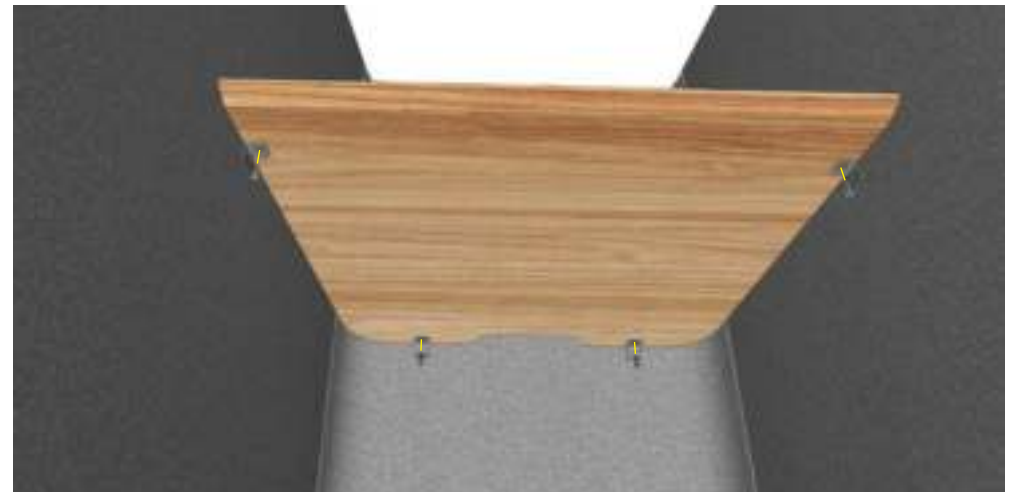

# motionoffice

## Solo 3-2 Assembly Instructions

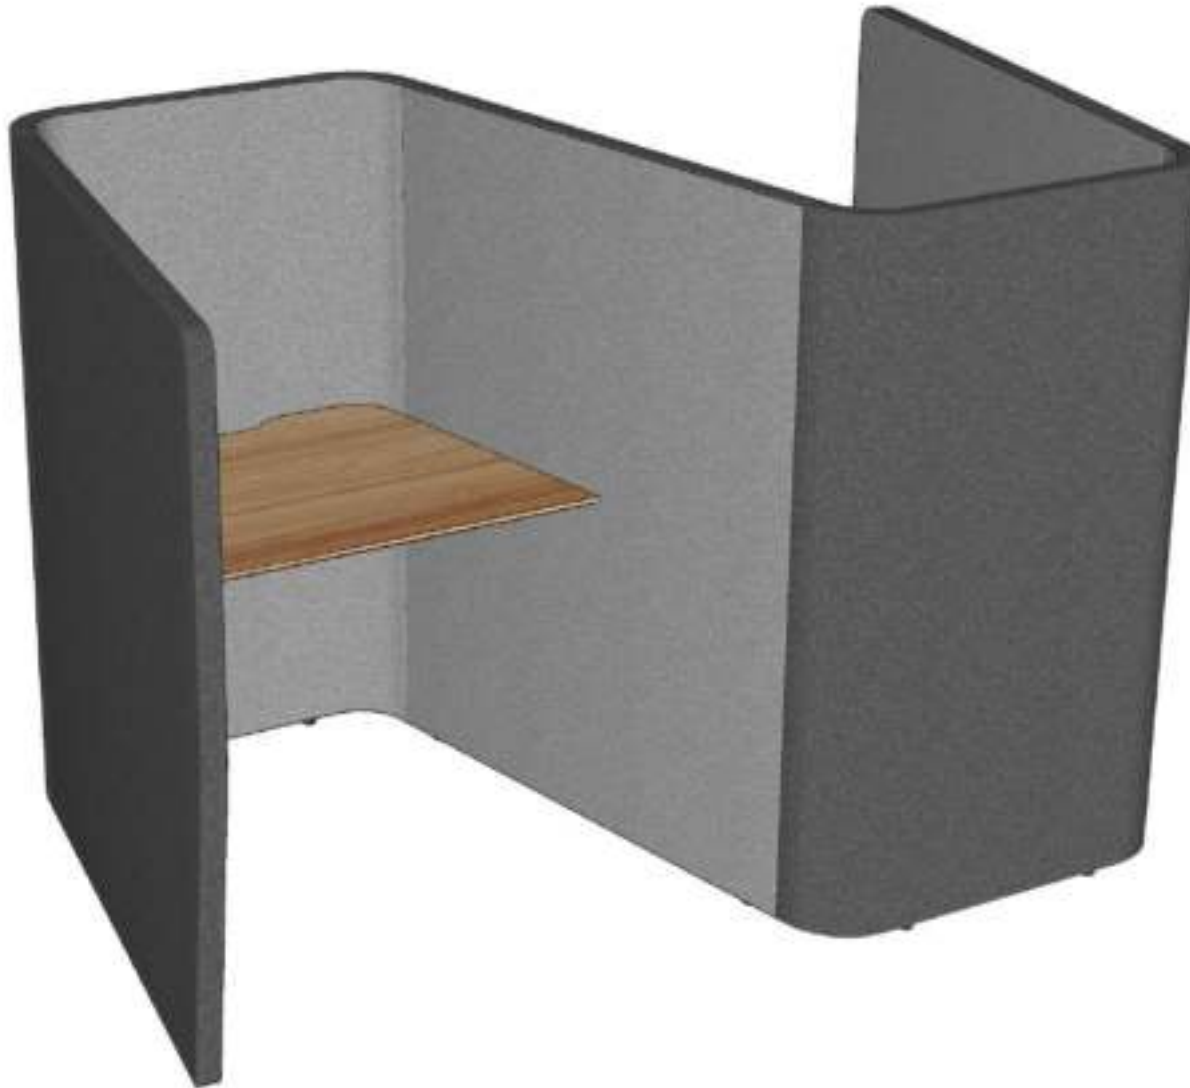

### PARTS LIST:


- ☐ MSOL3EP14L x 2
- ☐ MSOLBP14 x 2
- ☐ MSOL3JP14
- ☐ MS3TOP x 2

### COMPONENTS LIST:

- 8 - Pins
- 8 - Worktop Brackets
- 9 - Worktop Bracket Screws
- 9 - Wood Screws
- 1 - Allen Key




## Solo 3-2 Assembly Instructions




Recommended  
2-person Step

To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

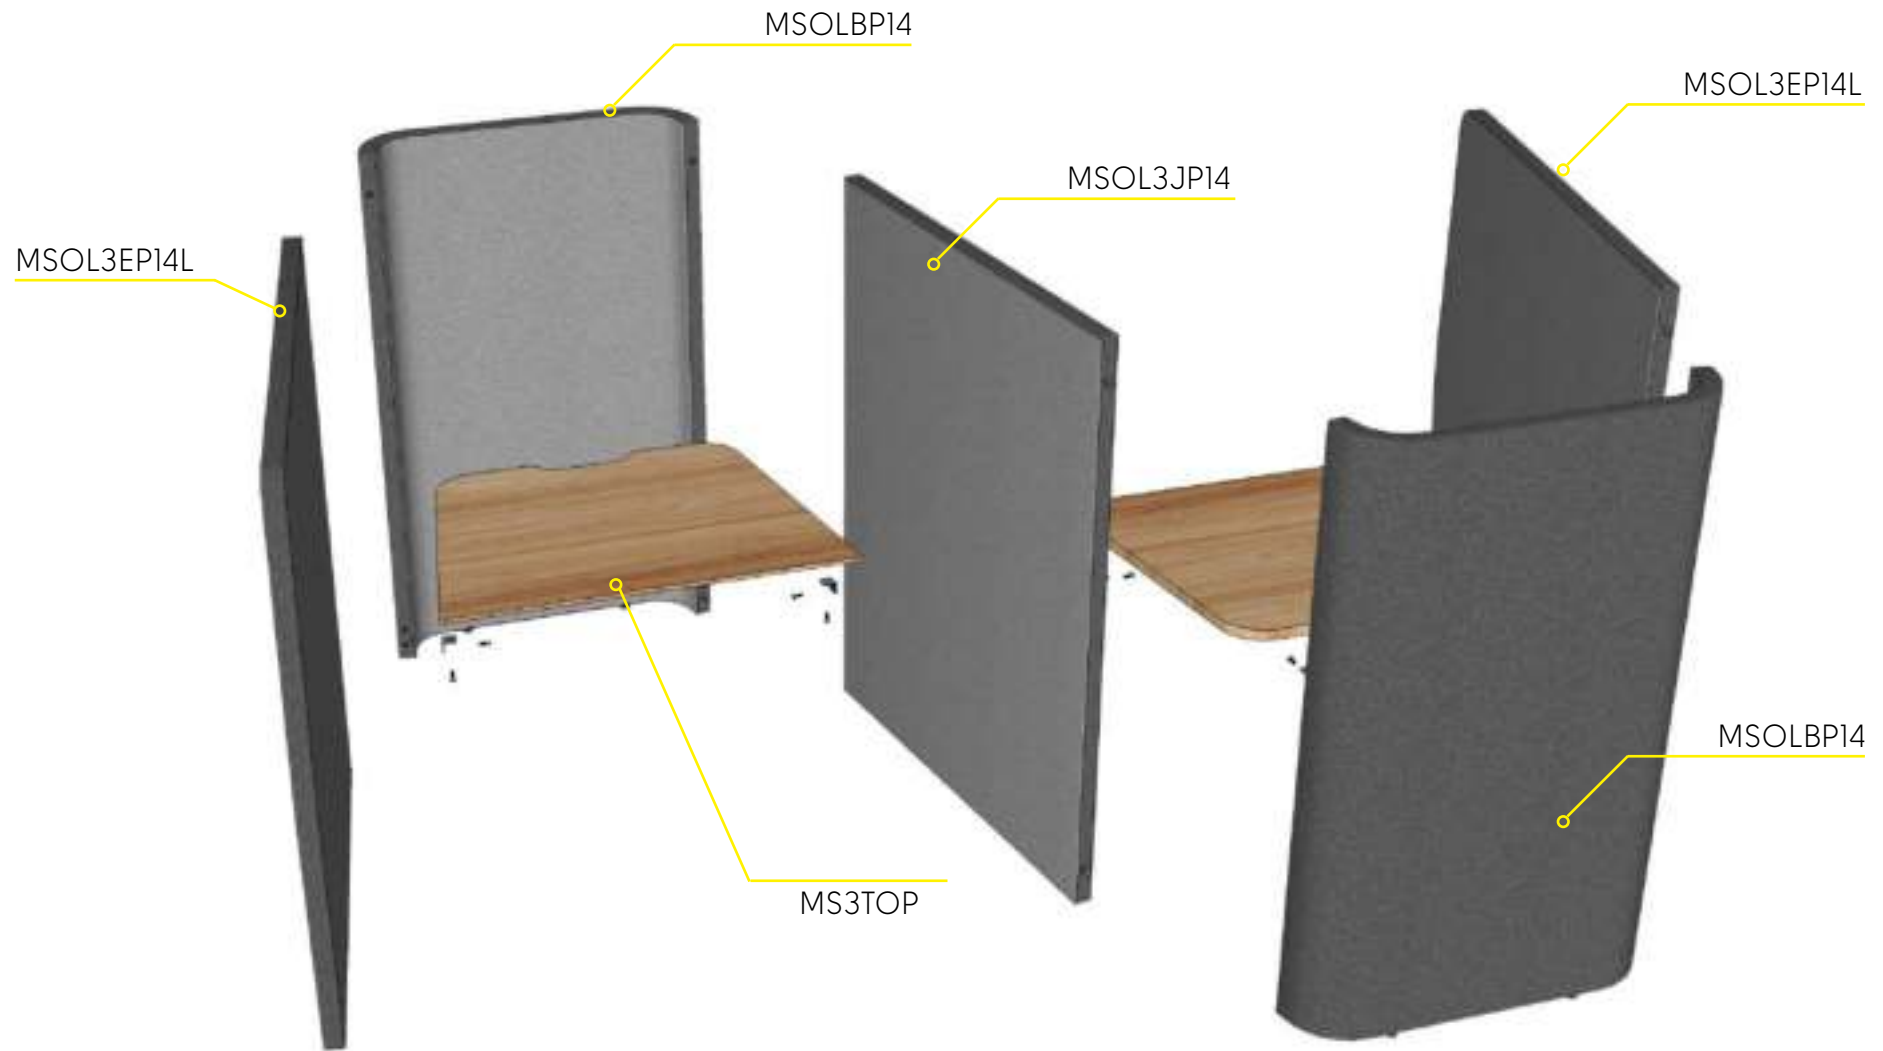





## Solo 3-2 Assembly Instructions

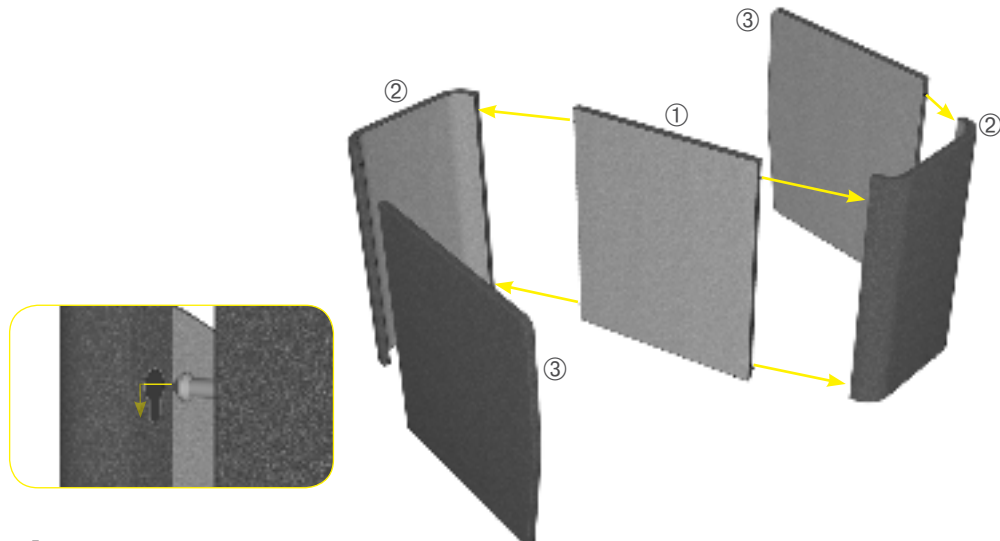


1 Insert Pins into keyholes, slide down until top is flush.

3 Fix the brackets into the T-nut holes on the panels.

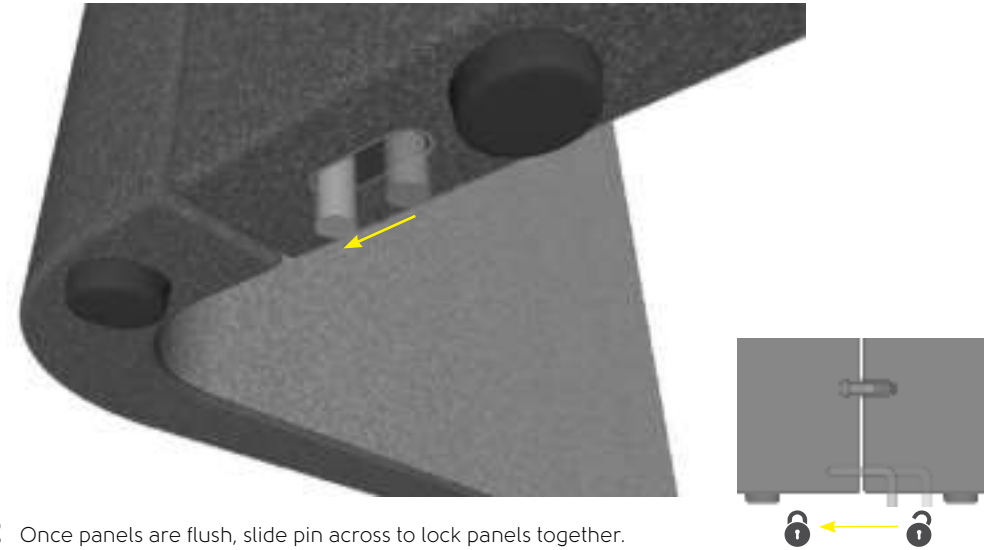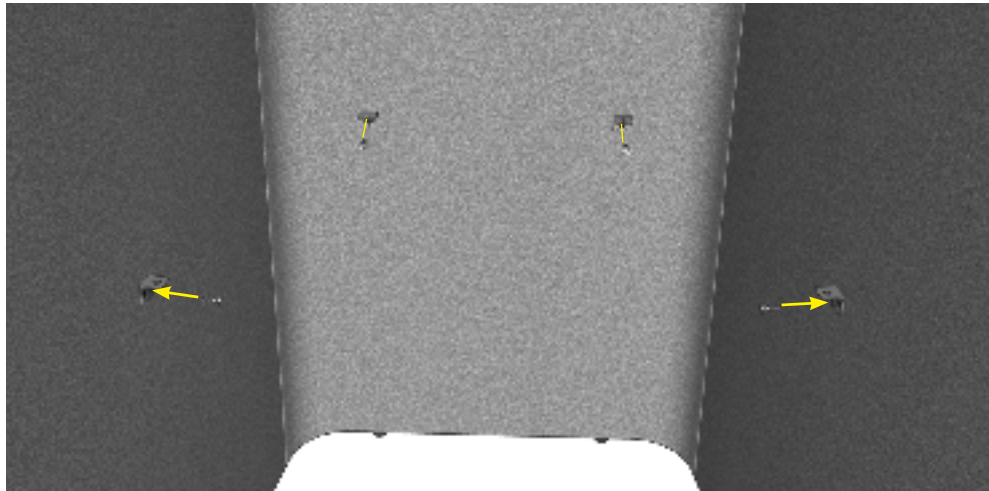


2 Once panels are flush, slide pin across to lock panels together.

4 Place the worktop onto the fixed brackets, then screw the worktop to the brackets using wood screws.

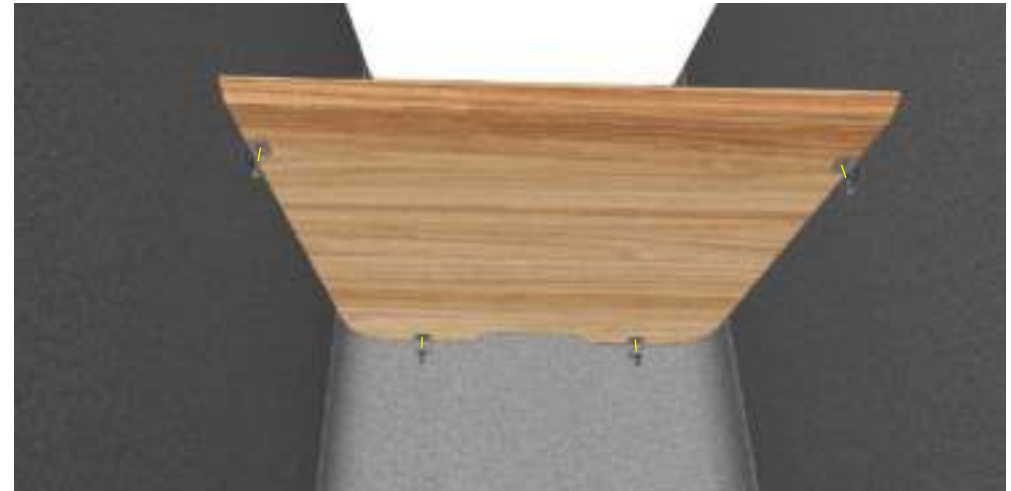

# motionoffice

## Solo 3-3 Assembly Instructions

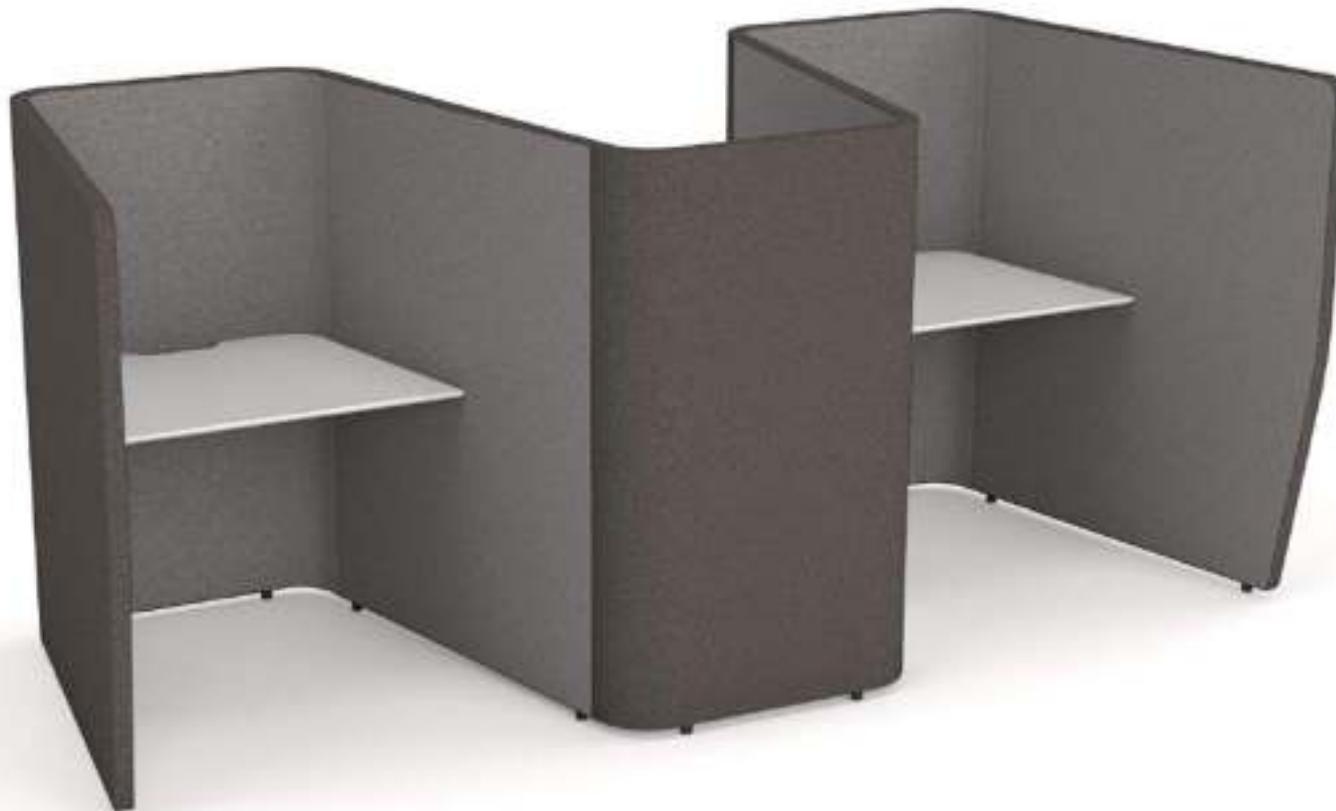

### PARTS LIST:


- ☐ MSOL3EP14
- ☐ MSOLBP14 x 3
- ☐ MSOL3JP14 x 2
- ☐ MS3TOP x 3

### COMPONENTS LIST:

- 12 - Pins
- 12 - Worktop Brackets
- 13 - Worktop Bracket Screws
- 13 - Wood Screws
- 1 - Allen Key




## Solo 3-3 Assembly Instructions




Recommended  
2-person Step


To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

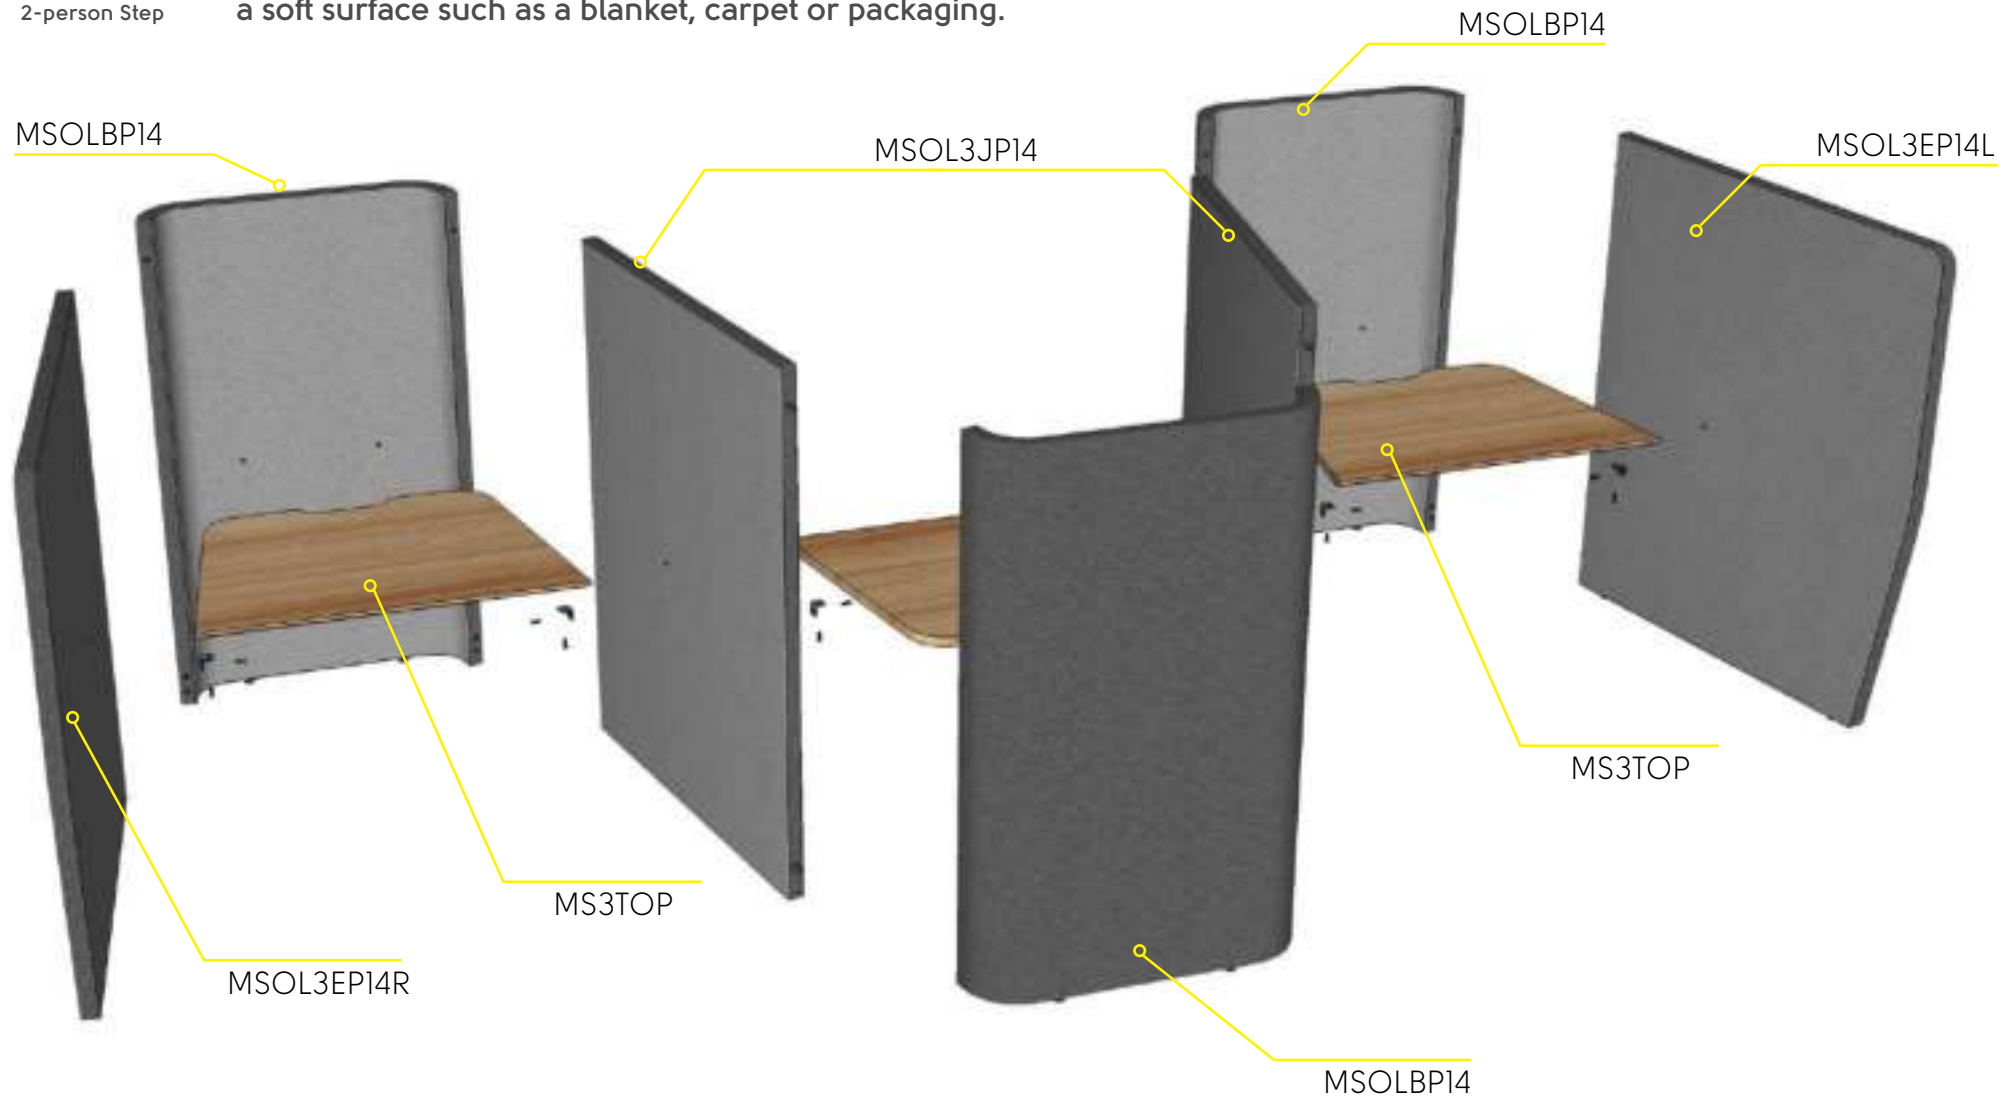

## Solo 3-3 Assembly Instructions

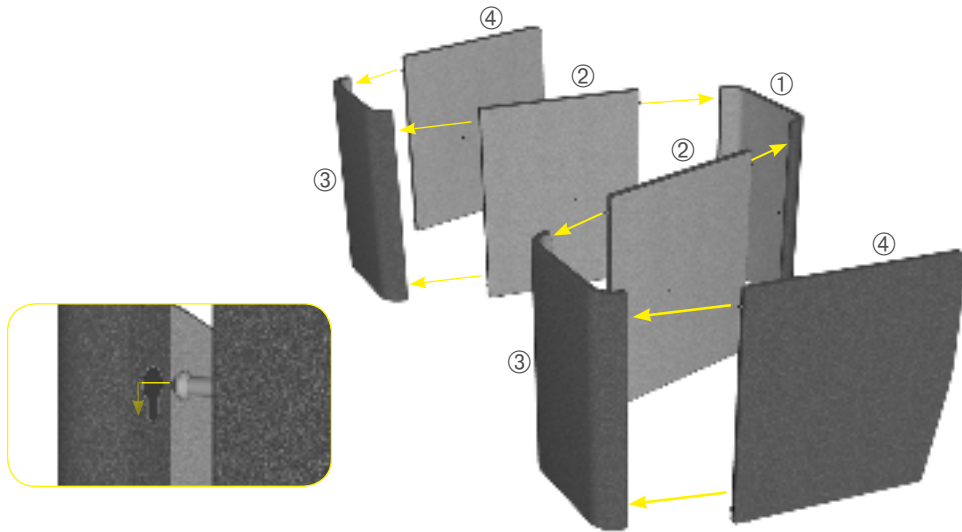


1 Insert Pins into keyholes, slide down until top is flush.

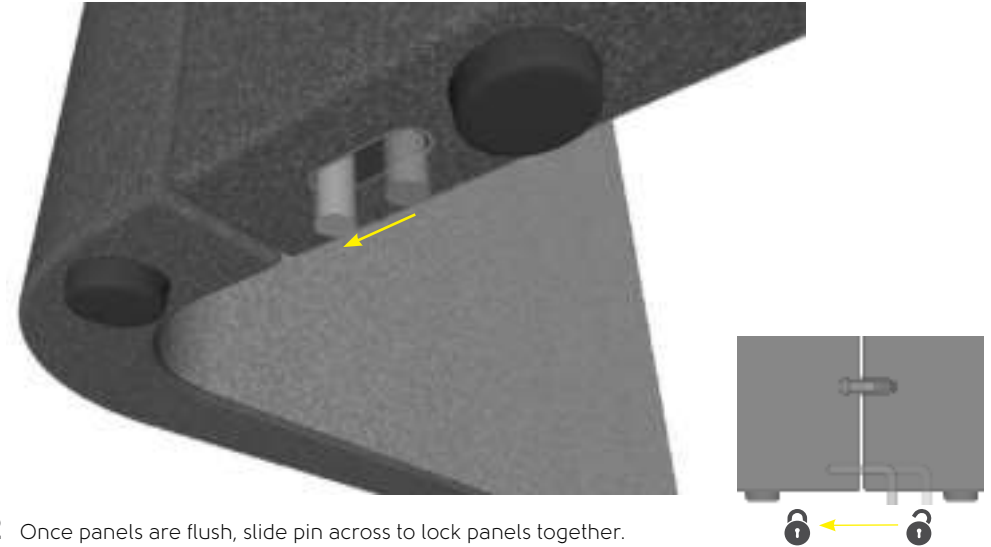


2 Once panels are flush, slide pin across to lock panels together.

3 Fix the brackets into the T-nut holes on the panels.

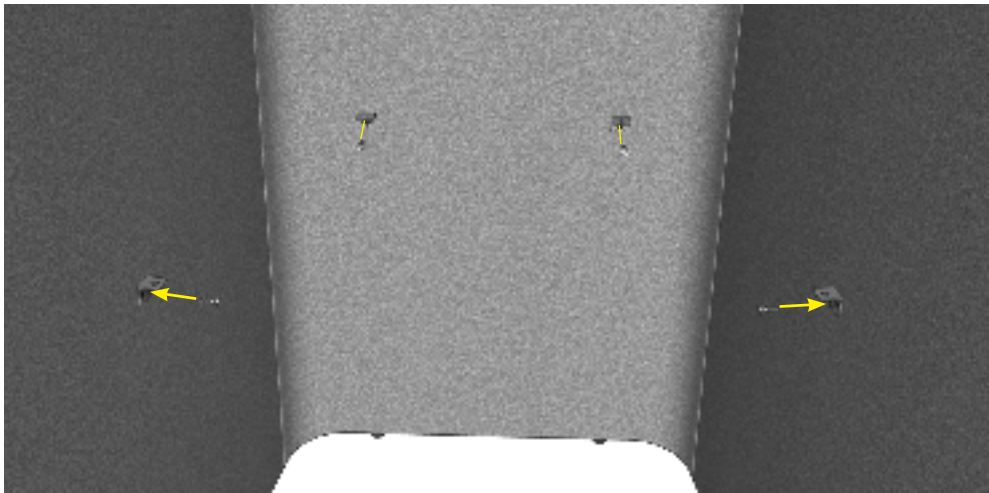


4 Place the worktop onto the fixed brackets, then screw bolt through the bracket in to the T-nut on the underside of the worktop.

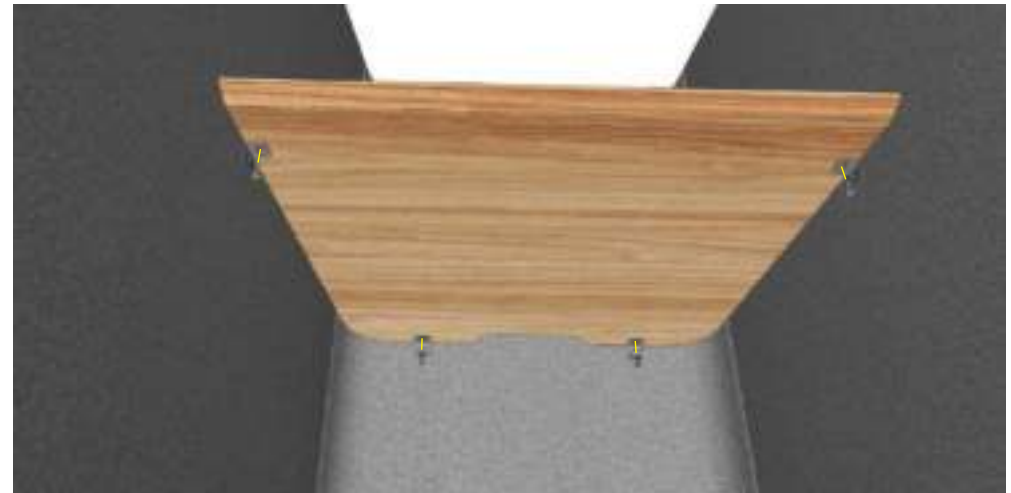

# motionoffice

## Solo 3-4 Assembly Instructions

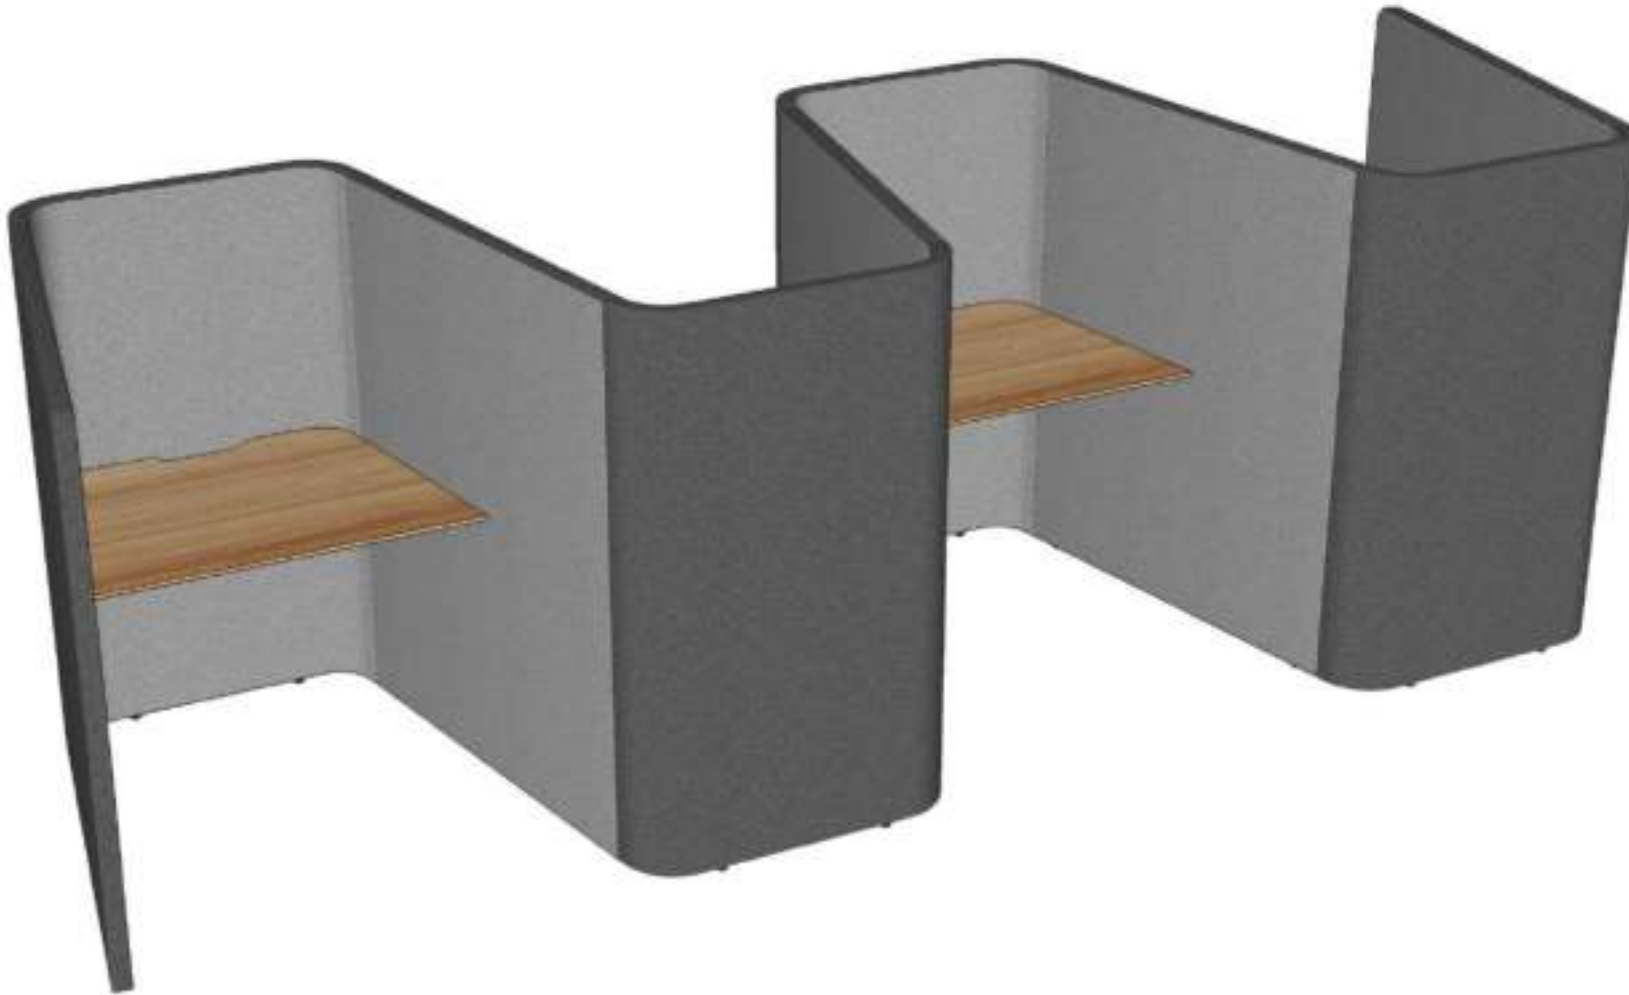

motionoffice.com



### PARTS LIST:

- ☐ MSOL3EP14L x 2
- ☐ MSOLBP14 x 4
- ☐ MSOL3JP14 x 3
- ☐ MS3TOP x 4


### COMPONENTS LIST:

- 16 - Pins
- 16 - Worktop Brackets
- 17 - Worktop Bracket Screws
- 17 - Wood Screws
- 1 - Allen Key

## Solo 3-4 Assembly Instructions




To prevent possible scratches or damage, assemble the product on a soft surface such as a blanket, carpet or packaging.

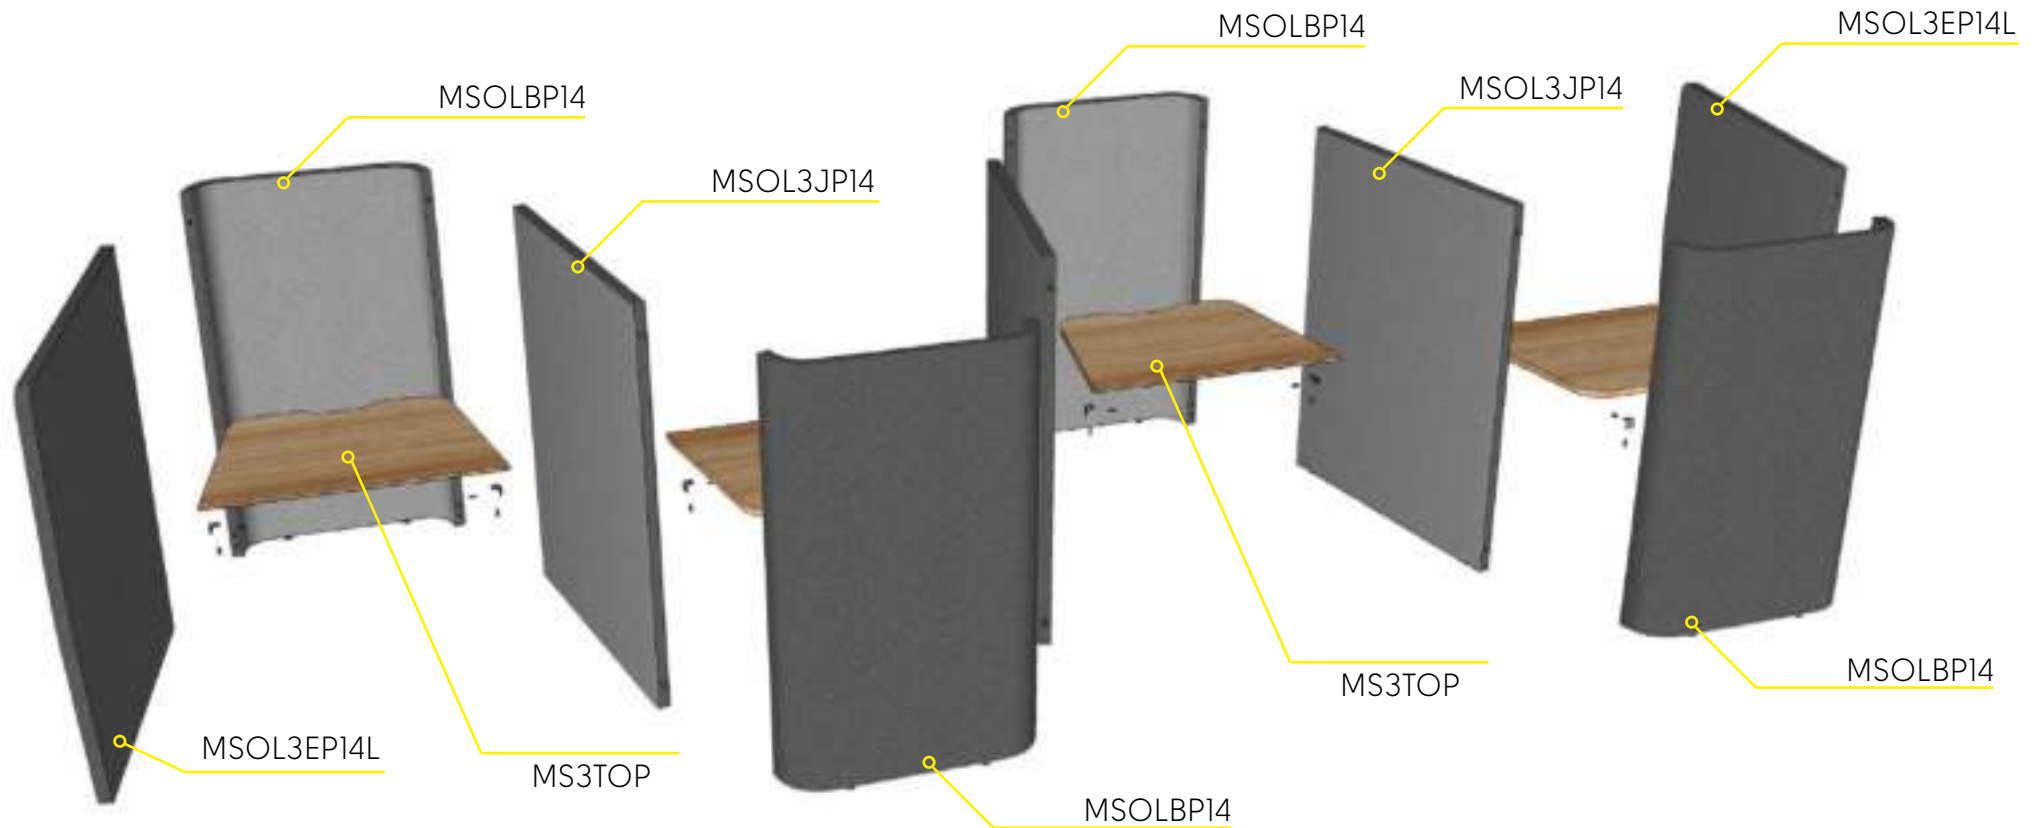




## Solo 3-4 Assembly Instructions

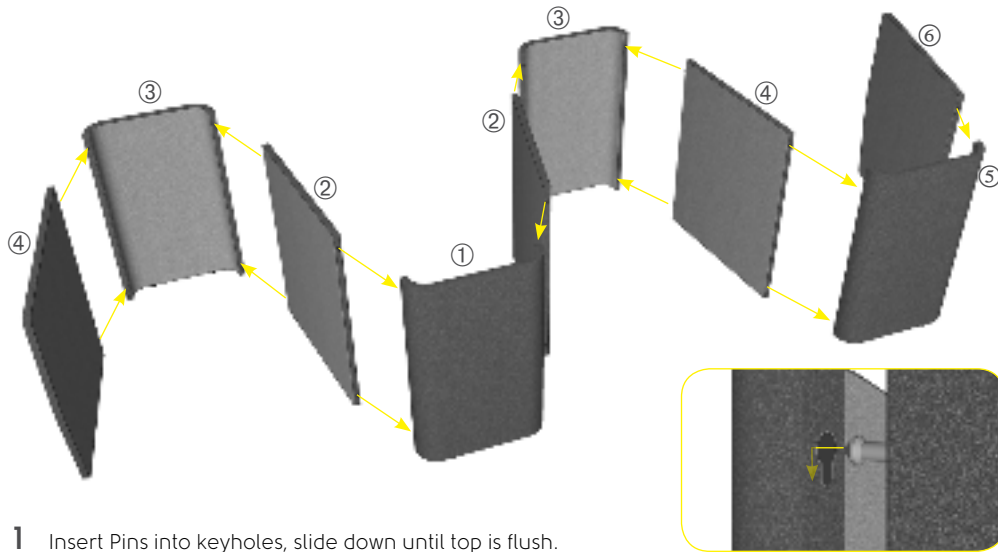


1 Insert Pins into keyholes, slide down until top is flush.

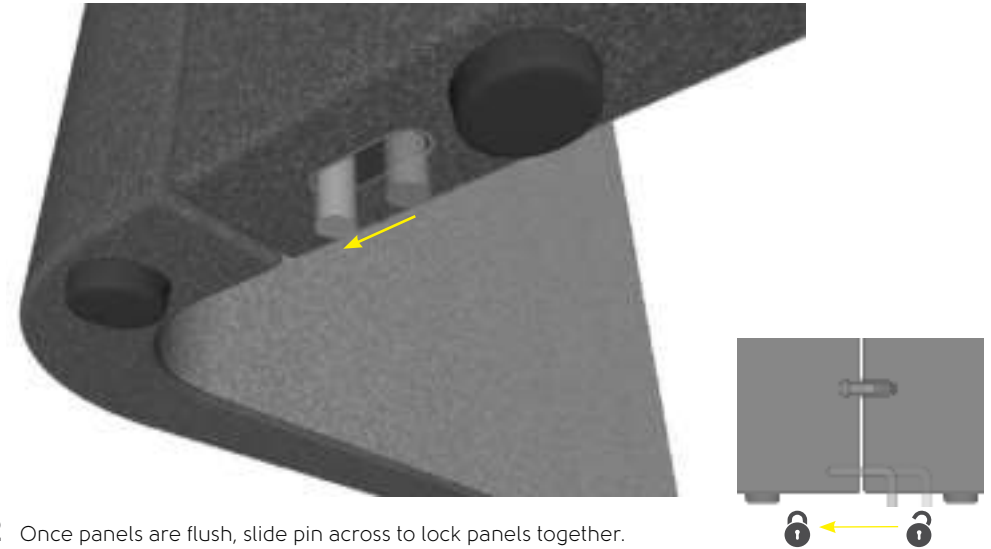

2 Once panels are flush, slide pin across to lock panels together.

3 Fix the brackets into the T-nut holes on the panels.

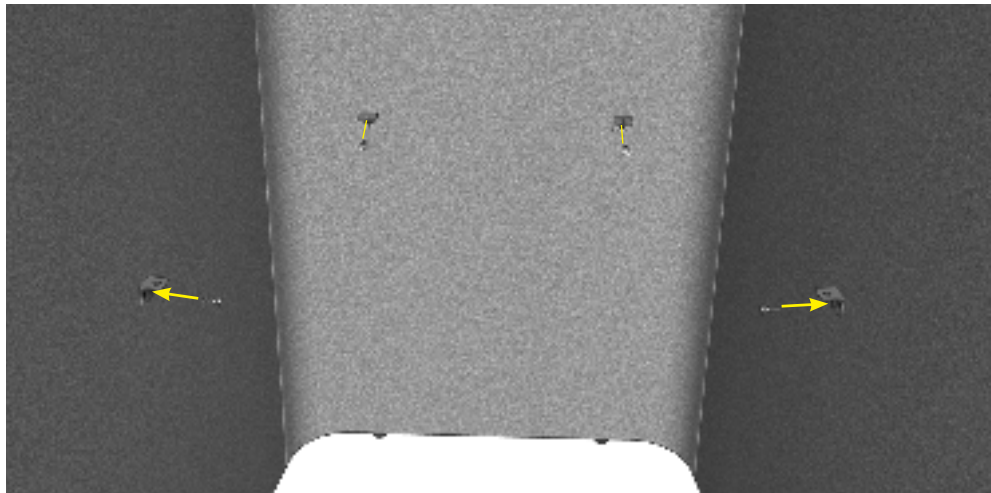

4 Place the worktop onto the fixed brackets, then screw bolt through the bracket in to the T-nut on the underside of the worktop.

