




built-in kit user manual

SMEG MICROWAVE TRIM KIT -

SMEG MICROWAVE TRIM KIT

Suits 34 Litre microwave ovens PART IDENTIFICATION SHEET

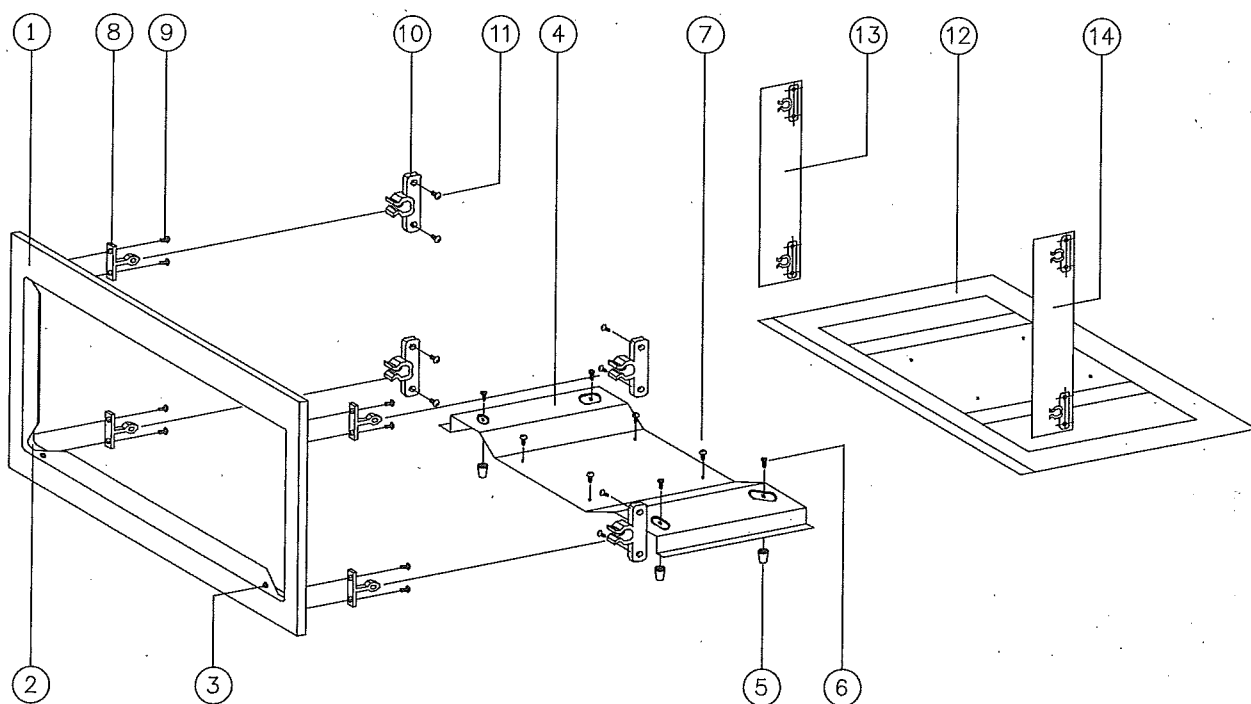

NO	PARTS CODE	PARTS NAME	DESCRIPTION	Q'TY
1	3510403200	BODY-KIT	STS H/L	1
2	3511600320	DECORATOR-KIT	ABS	4
3	7125401211	SCREW TAPPING	T2S FLT 4x12 MFZN	4
4	3510318700	BASE-KIT	SBHG	1
5	3512102310	FOOT-BASE-KIT	PP	4
6	7125401211	SCREW TAPPING	T2S FLT 4x12 MFZN	4
7	7112401211	SCREW TAPPING	T1 TRS 4x12 MFZN	4
8	3513102000	HOOK-KIT	POM	4
9	7272400811	SCREW TAPTITE	TT3 TRS 4x8 MFZN	10
10	3513005200	HOLDER-KIT	PC	4
11	7112401011	SCREW TAPPING	T1 TRS 4x10 MFZN	8
12	3516007420	TEMPLATE BASE	CABINET PAPER	1
13	3516007340	TEMPLATE *L	CABINET PAPER	1
14	3516007350	TEMPLATE *R	CABINET PAPER	1

CAUTION

1. Read and follow all of the instructions completely.
2. The Smeg Built-in Trim Kit must be installed in accordance with the full set of instructions listed and meet the regulations laid by electrical authorities, building regulations and the requirements of state and local government authorities.
3. For safe use of the microwave oven, DO NOT modify or alter any part of this kit.
4. Slots are for effect only and should not be considered as a substitute to the required rear, side & above cabinetry ventilation of the microwave.

CLEANING TIPS

Use a domestic stainless steel cleaner applied with a soft cloth. Wipe in the stainless steel grain direction.
DO NOT USE ABRASIVE OR HARSH CLEANERS OR SCOURING PADS.

TRIM KIT SPECIFICATIONS


Cavity Dimensions		Overall Kit Dimensions;	
Internal Width	600mm	Width	596mm
External Front Height	426mm	Height	425mm
Depth	500mm(minimum)	Depth	22mm(fascia)

Cabinetry Ventilation


An opening on the upper cavity panel must be cut for air circulation. This opening should be placed at the rear-minimum 600mm x 100mm.

Smeg Microwave Oven & Built in Trim Kit Installation Procedure


1. Draw screw points of the holder-kit^⑩ using template *L^⑬/*R^⑭ or ruler. Drive 2 screws^⑪ to install one holder-kit at the points. Install each 2 holder-kit at the left and right side wall of the cupboard.

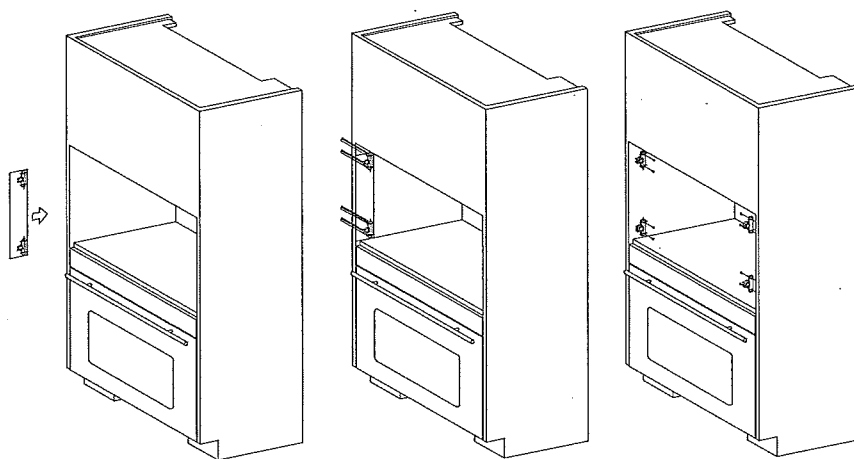

2. Draw screw points of the base-kit^④ using template^⑫ on the bottom of cupboard.

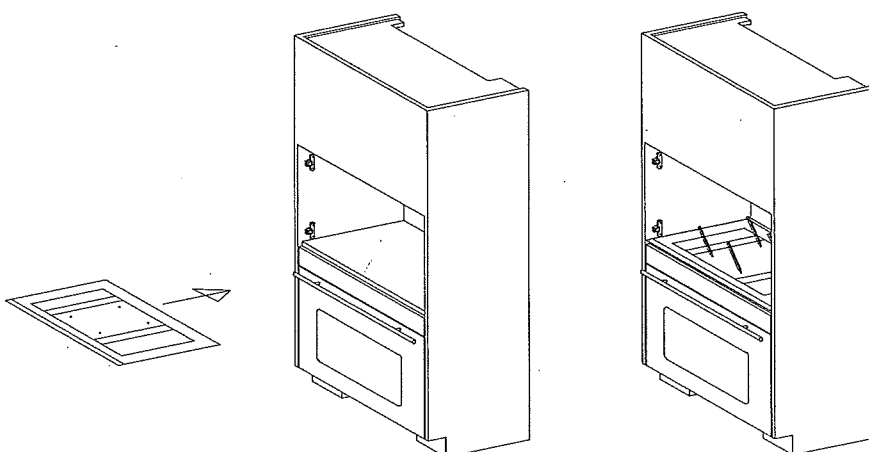


3. Attach 4 foot-base-kit^⑤ to the base-kit^④ using flat screws^⑥. Drive 4 screws^⑦ on the base-kit at the drawn points of the cupboard.

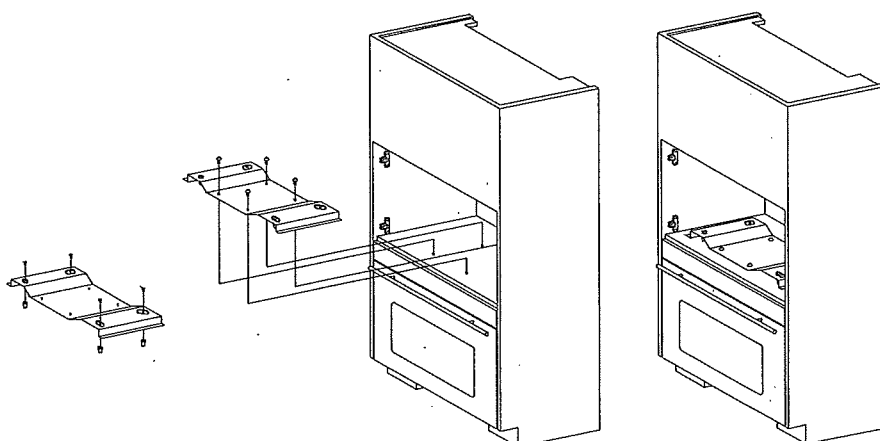


SMEG MICROWAVE TRIM KIT

4. Install the microwave oven onto the base kit④.

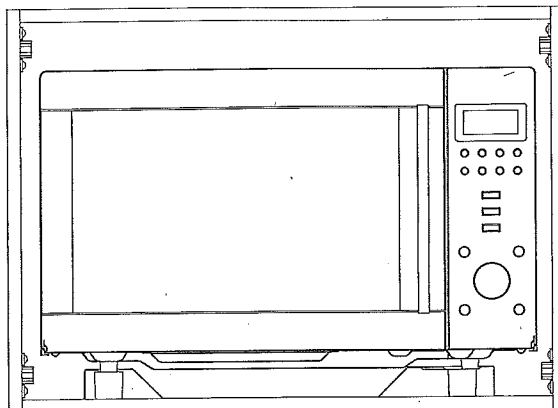

5. Drive 2 screws⑨ to install one hook-kit⑧ into the body-kit①. Install 4 hook-kit at four corners.

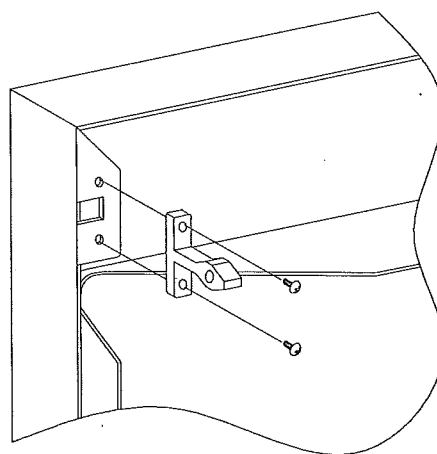

6. Install body-kit① to the cupboard :
Insert 4 hook-kit⑧ into the 4 holder-kit⑩.

