

Inset Sink Installation Instructions



FIGURE - 1

Sink is placed upside down on the counter-top mounting area. The outer edges are drawn all around and marked on the counter.

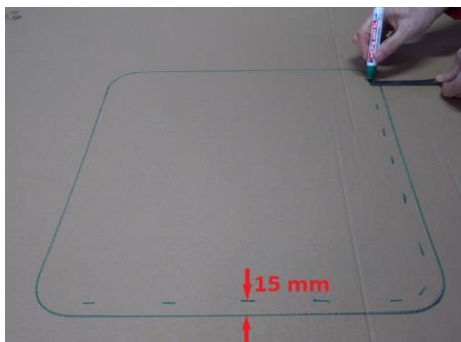


FIGURE - 2

The sink is removed from the mounting area and a second line is drawn 15 mm inside the marked line.



FIGURE - 3

3- The bench is cut on the inside marking



FIGURE - 4

The waste outlet is mounted on the sink

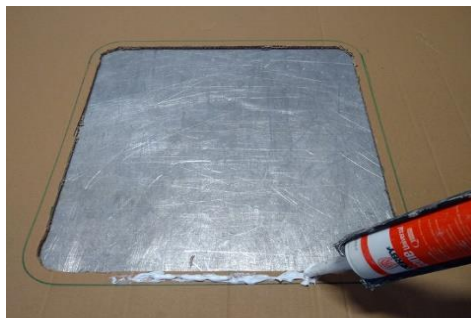


FIGURE - 5

Silicone is applied to the mounting area of the bench countertop.



FIGURE - 6

The sink is placed in the cut-out countertop.
The surplus silicone is cleaned off
and left to stand for 24 hours before use.