
Size: 1000mm

www.jasonl.com.au

Need help!

Call us on **1300 527 665**

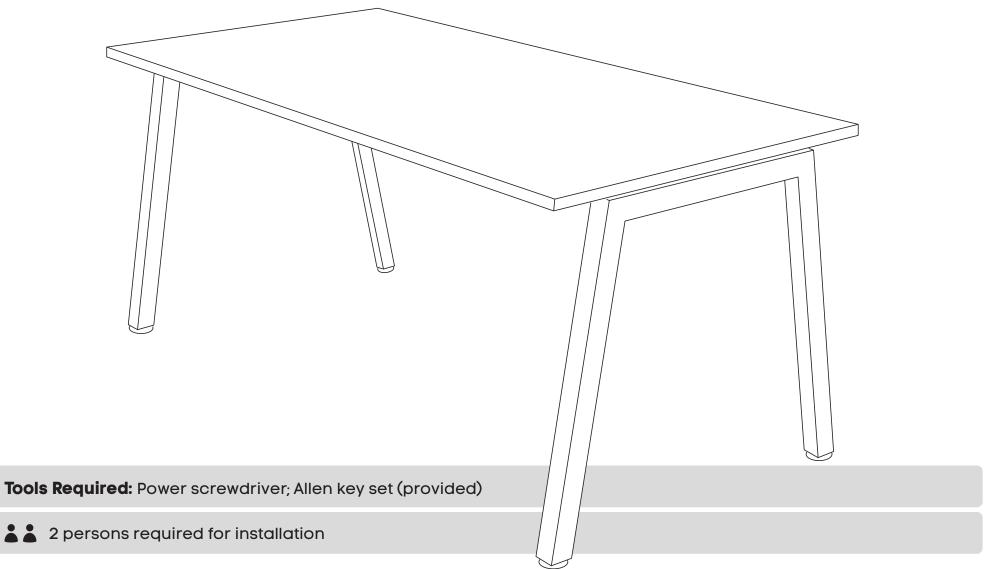




Size: 1000mm

www.jasonl.com.au

Need help!

Call us on **1300 527 665**



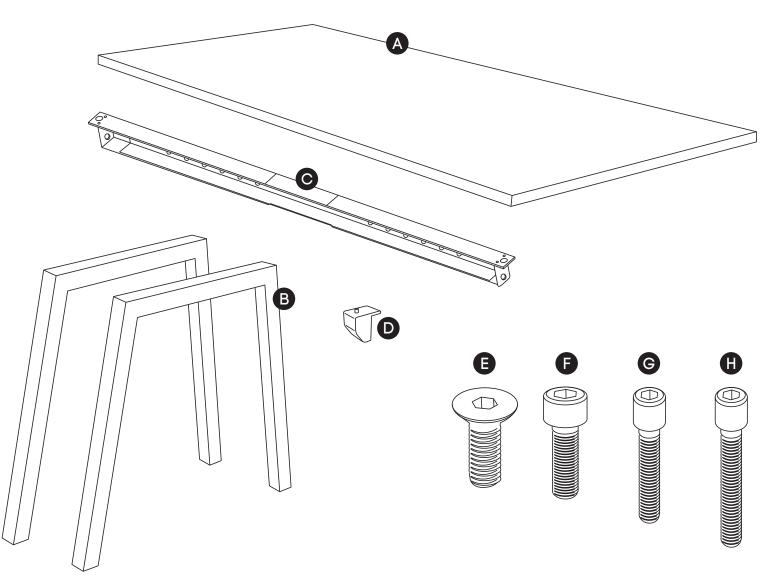

COMPONENTS

- A Table top x1
- B Legs Quadro A x2
- C Beam x1
- D Plastic bracket x4

SCREWS

- E M8x20MM CSK x1
- F M8x20MM Socket head x1
- G M6x20MM Socket head x2
- H M6x30MM Socket head x2
- I Allen key x2

Size: 1000mm

www.jasonl.com.au

Need help!

Call us on **1300 527 665**






Using Allen Key provided, attach 2 plastic brackets per leg **(D)** (as per picture above) using M6x20MM **(G)** Socket head screw



Using Allen Key provided, attach M8x20MM Socket head (F)-screw socket half way into leg for both legs (B)

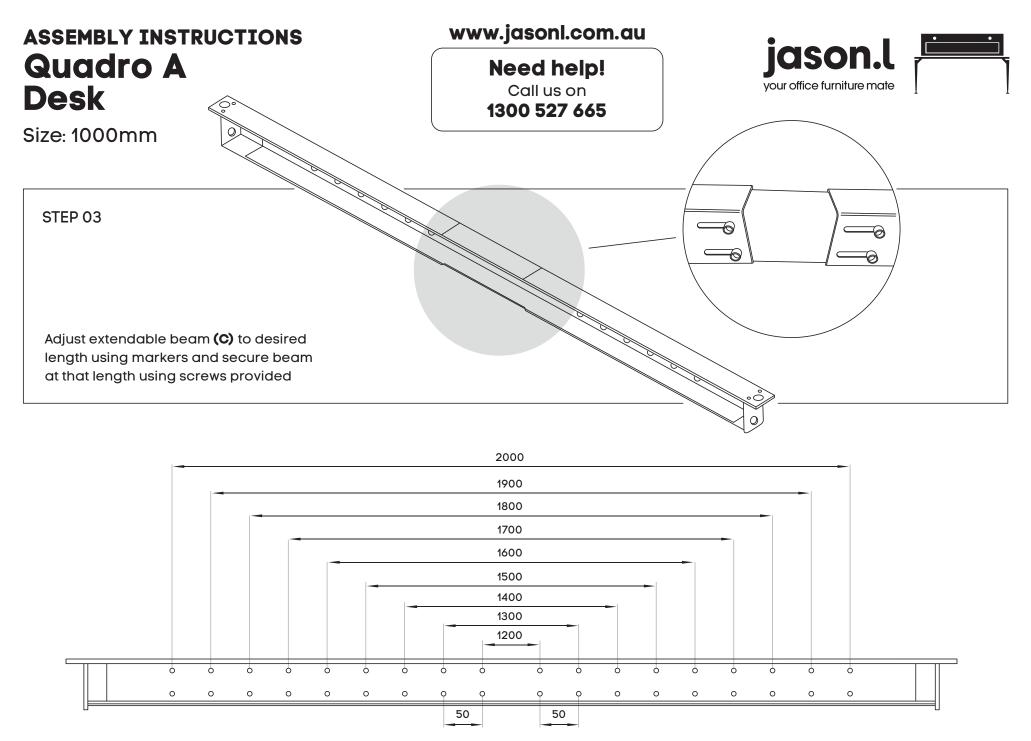

Size: 1000mm


www.jasonl.com.au


Need help!

Call us on **1300 527 665**






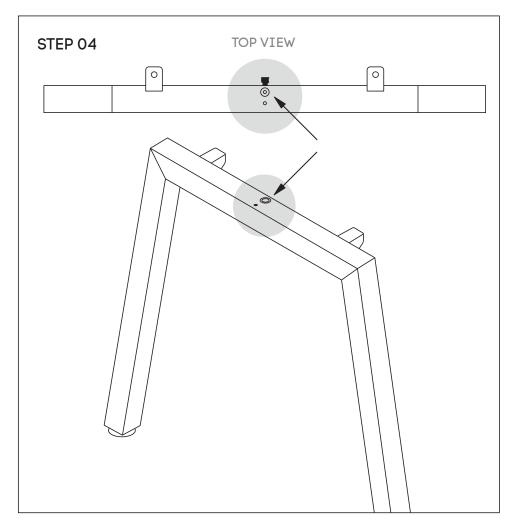

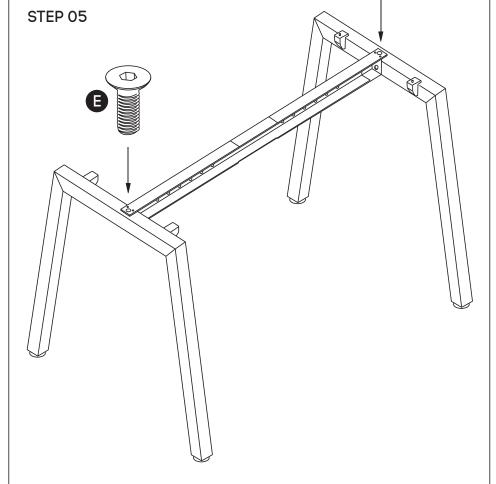

Attach beam **(C)** to legs **(B)** using nut insert in legs See point attached

Frame looks like this. Using Allen Key, attach beam (C) with Socket (E)

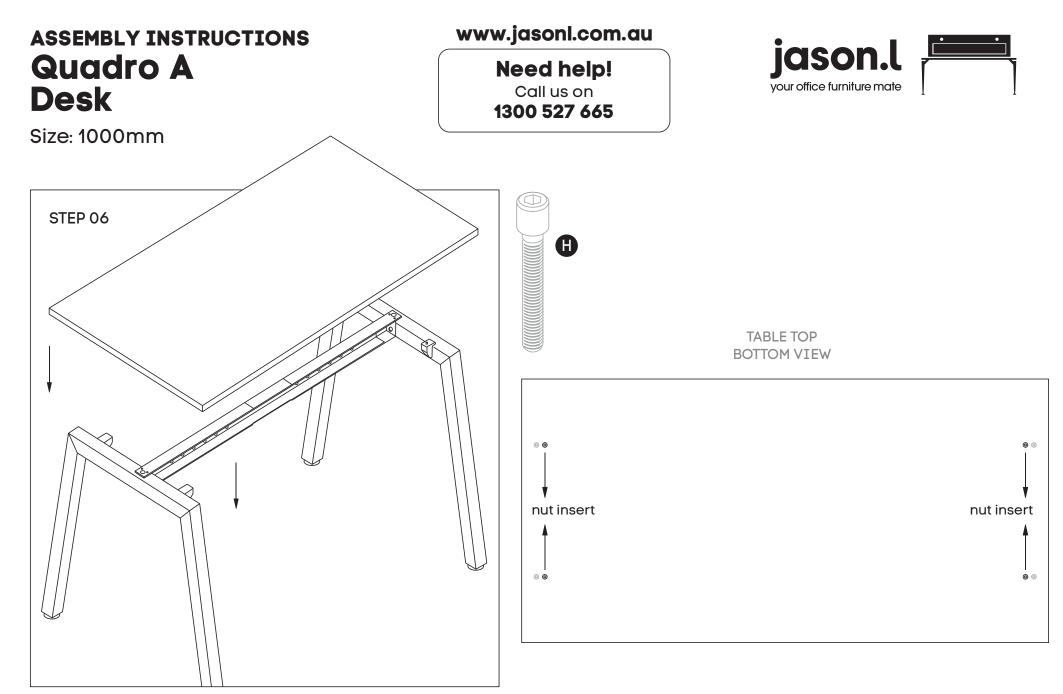

Place desktop ontop of frame. Nut inserts in top will align with plastic joiner brackets using M6x30MM **(H)** sockets attached top to frame.