

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A Desk


Size: 1000mm

[www.jasonl.com.au](http://www.jasonl.com.au)


**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

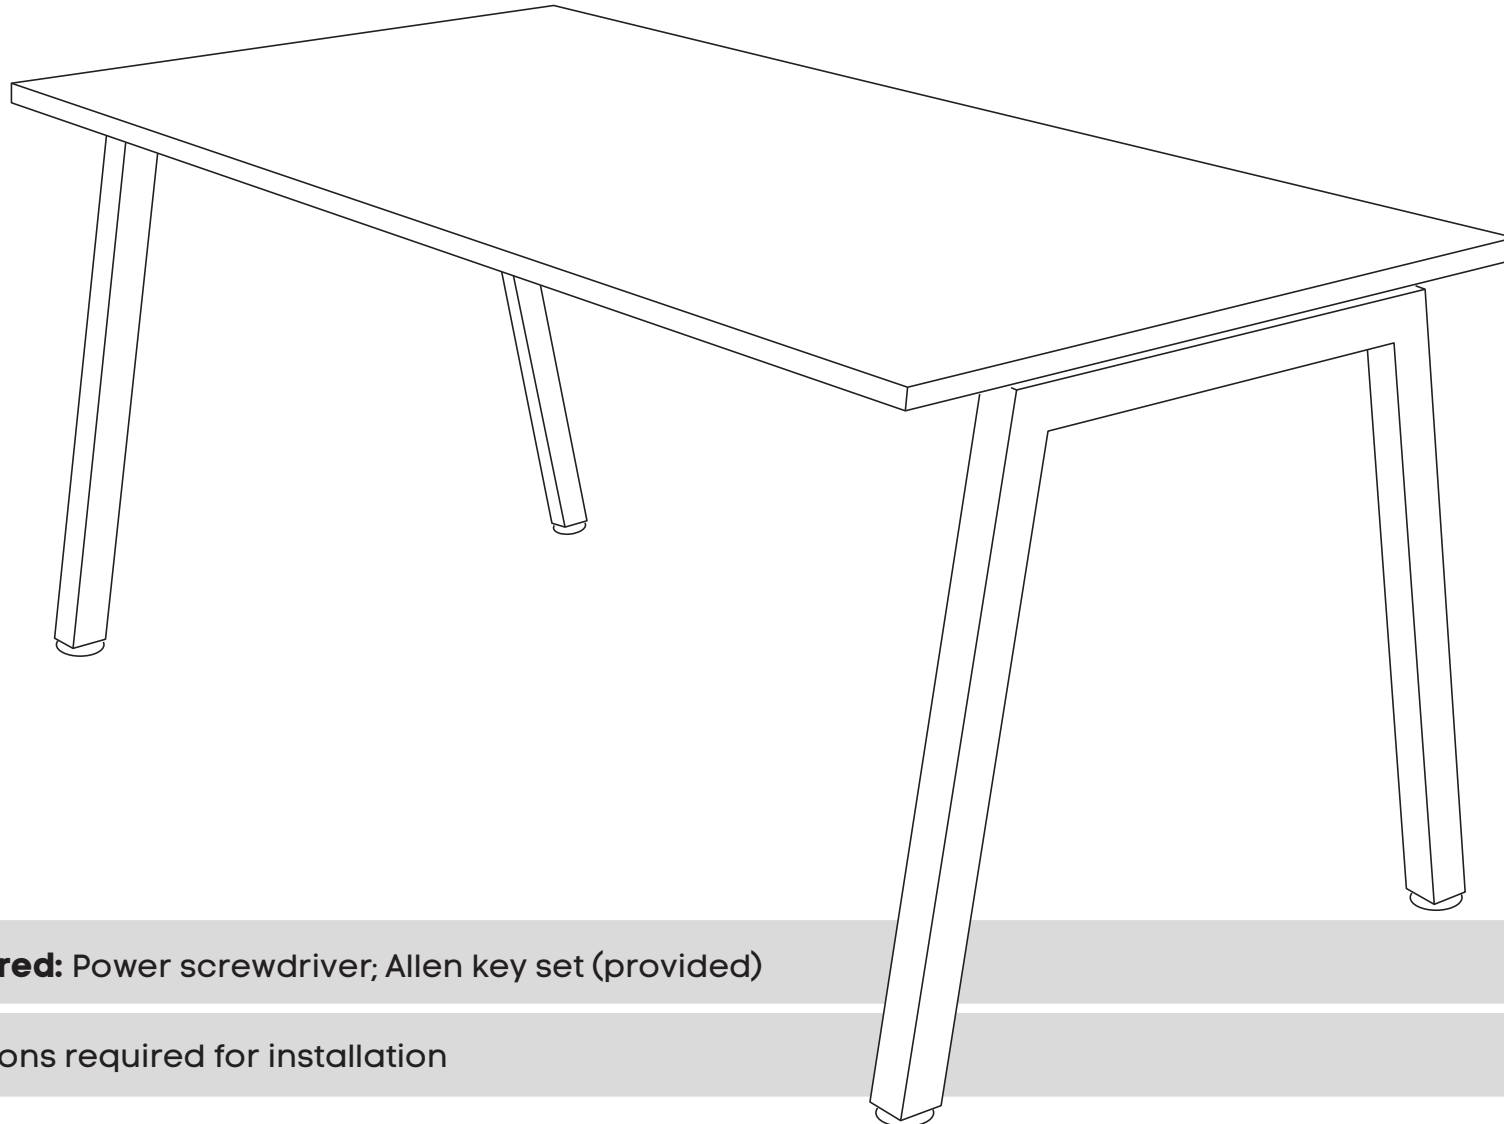

**Tools Required:** Power screwdriver; Allen key set (provided)

 2 persons required for installation

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A Desk


Size: 1000mm

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

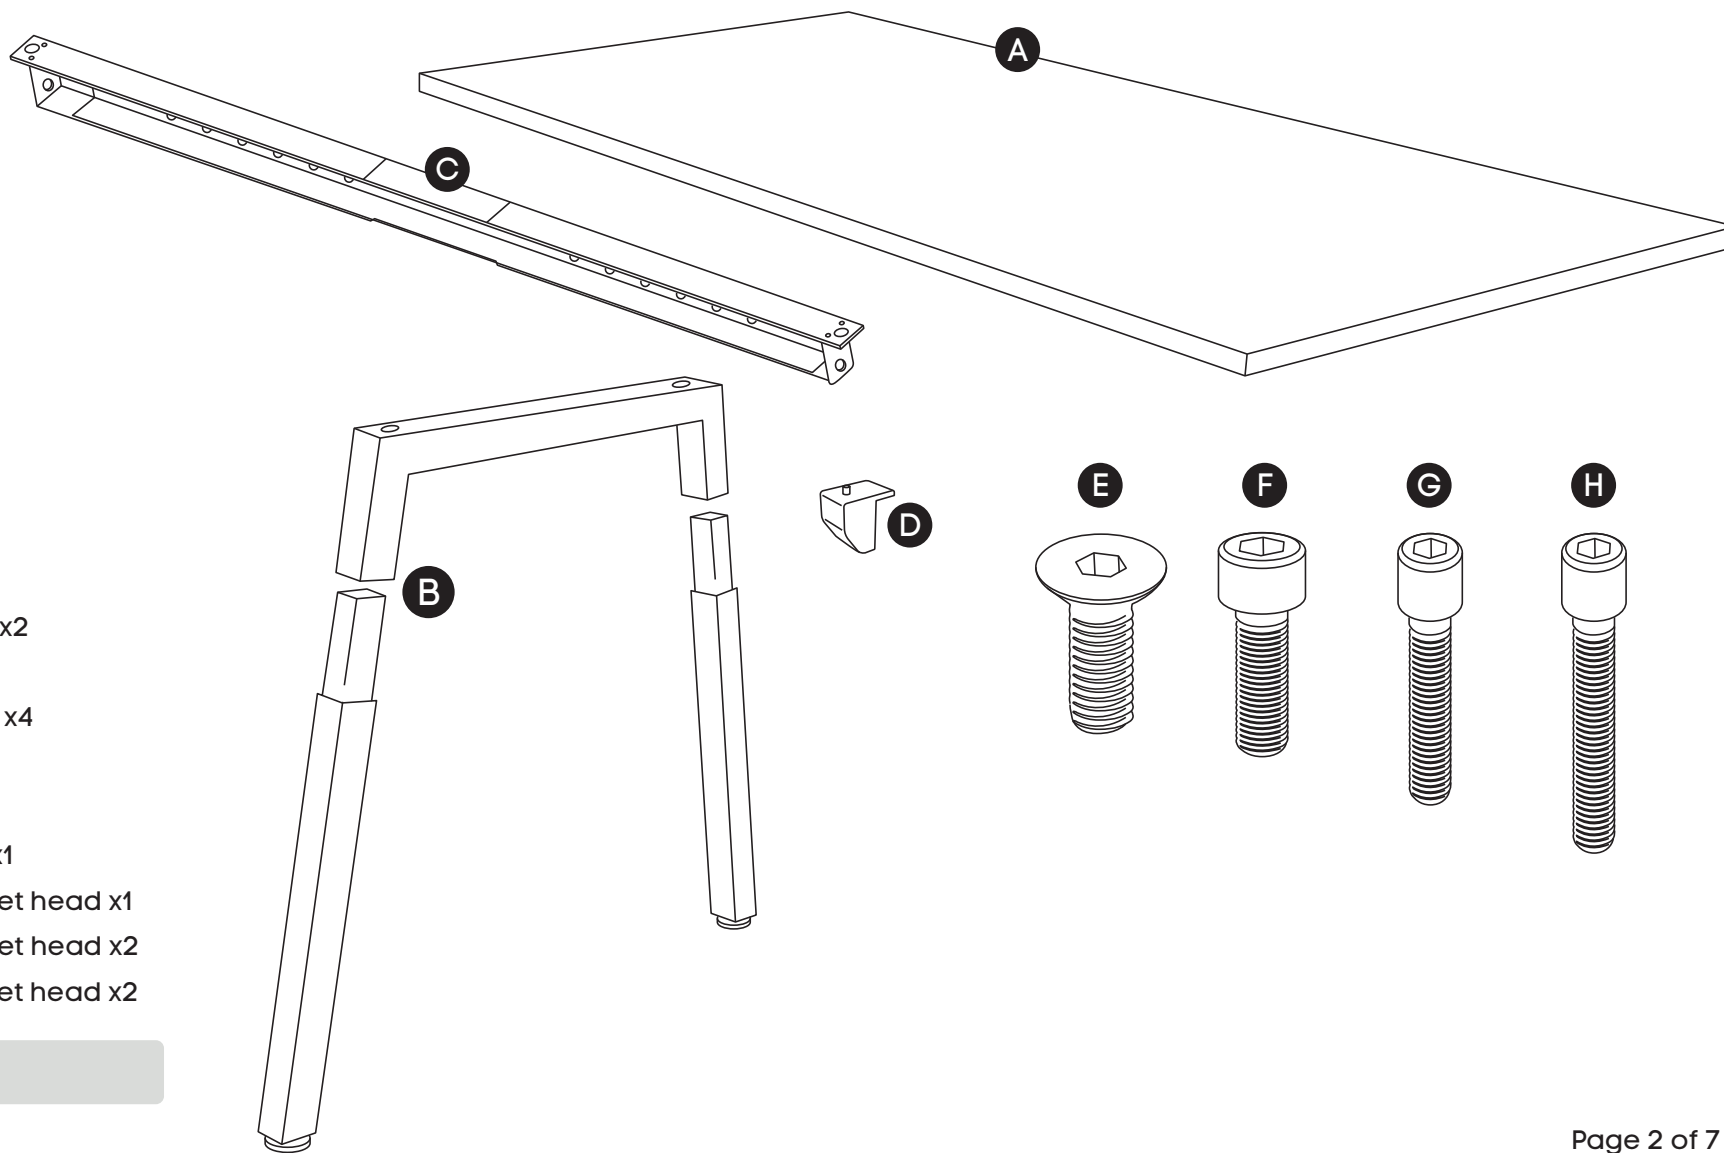

### COMPONENTS

- A Table top x1
- B Legs Quadro A x2
- C Beam x1
- D Plastic bracket x4

### SCREWS

- E M8x20MM CSK x1
- F M8x20MM Socket head x1
- G M6x20MM Socket head x2
- H M6x30MM Socket head x2

- I Allen key x2

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A Desk

Size: 1000mm

[www.jasonl.com.au](http://www.jasonl.com.au)


**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate




### STEP 01

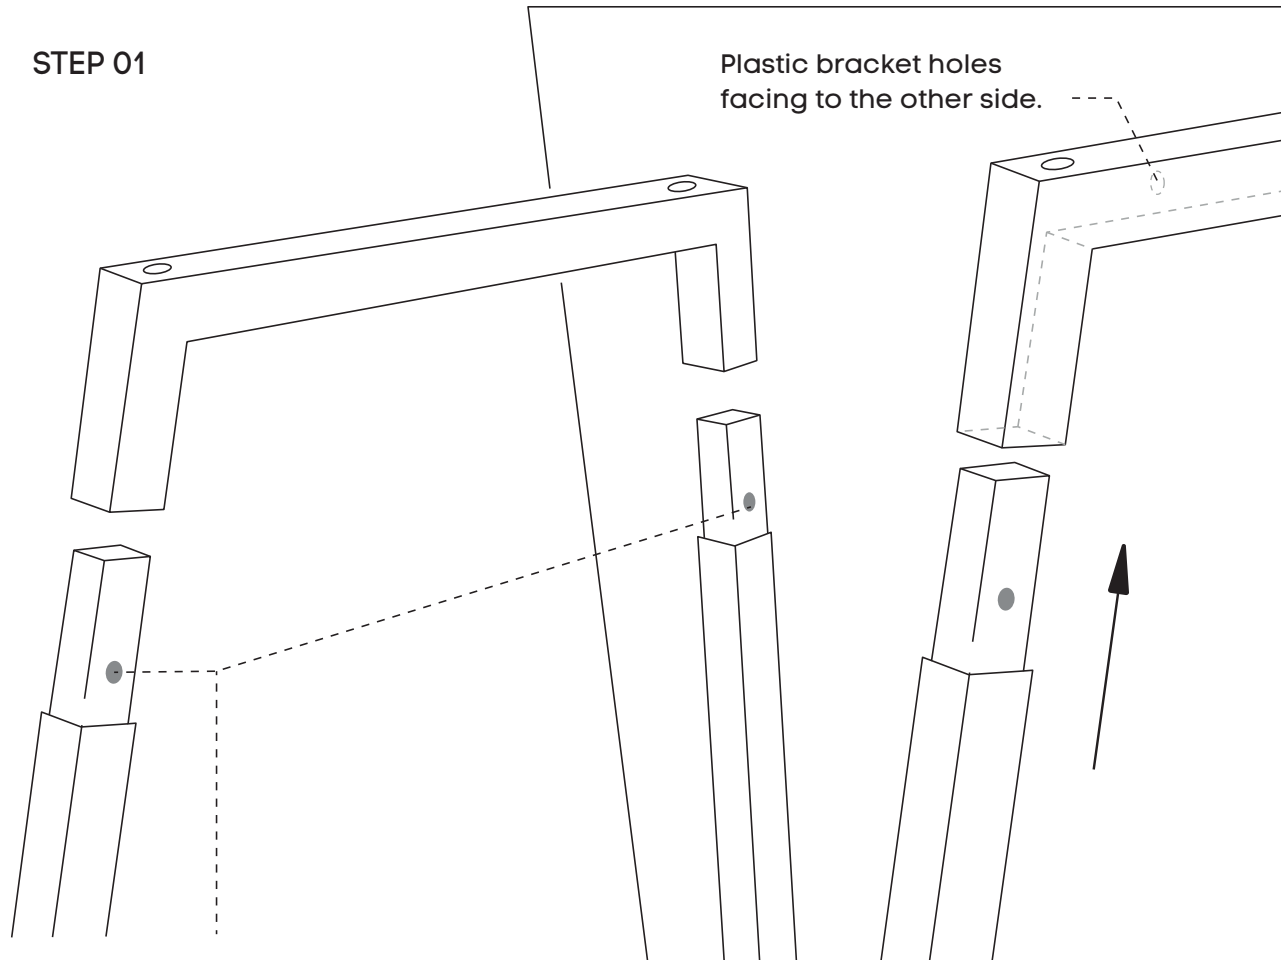

You will notice two colored stickers located on each leg.

Both legs must have the colour sticker facing away from where the plastic brackets are inserted.

### STEP 02

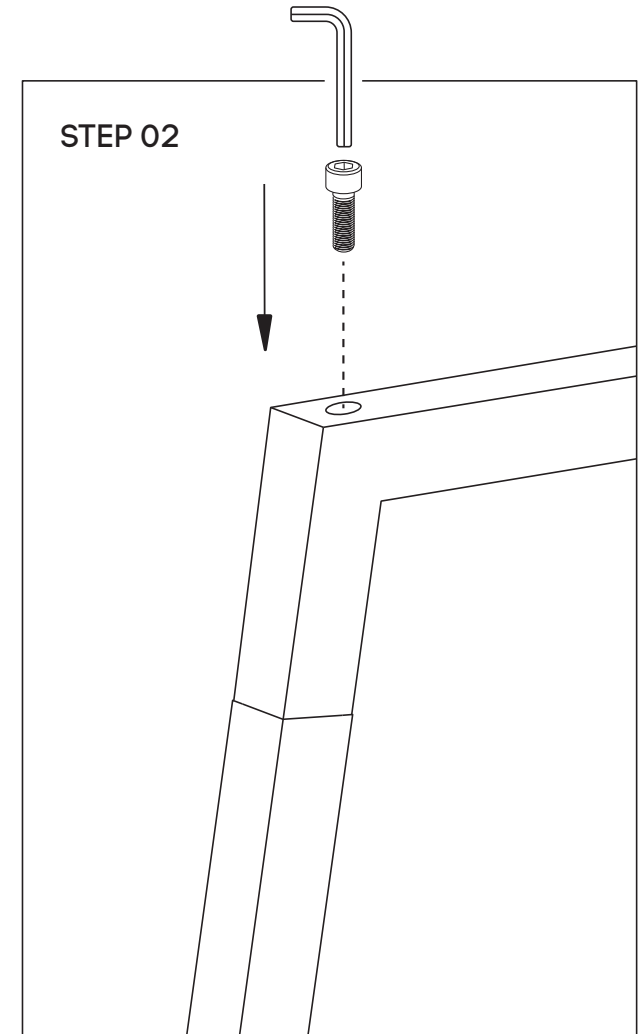

Insert the bottom of the legs as shown in the illustration. Using Allen Key provided, attach Socket head screw socket for all legs.

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A Desk

Size: 1000mm

[www.jasonl.com.au](http://www.jasonl.com.au)


**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate



Using Allen Key provided, attach 2 plastic brackets per leg **(D)**  
(as per picture above) using M6x20MM **(G)** Socket head screw

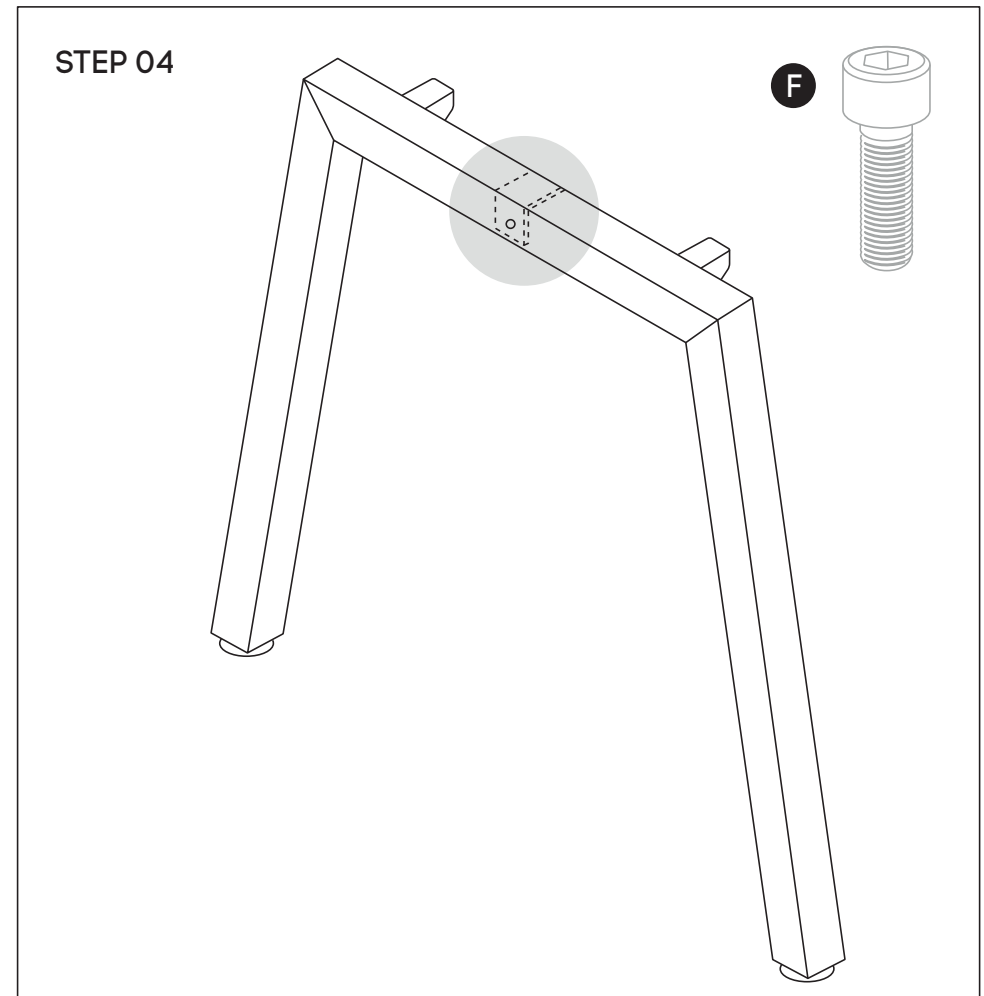

Using Allen Key provided, attach M8x20MM Socket head **(F)**-  
screw socket half way into leg for both legs **(B)**

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A Desk

Size: 1000mm

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**



Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate



### STEP 05

Adjust extendable beam **(c)** to desired length using markers and secure beam at that length using screws provided

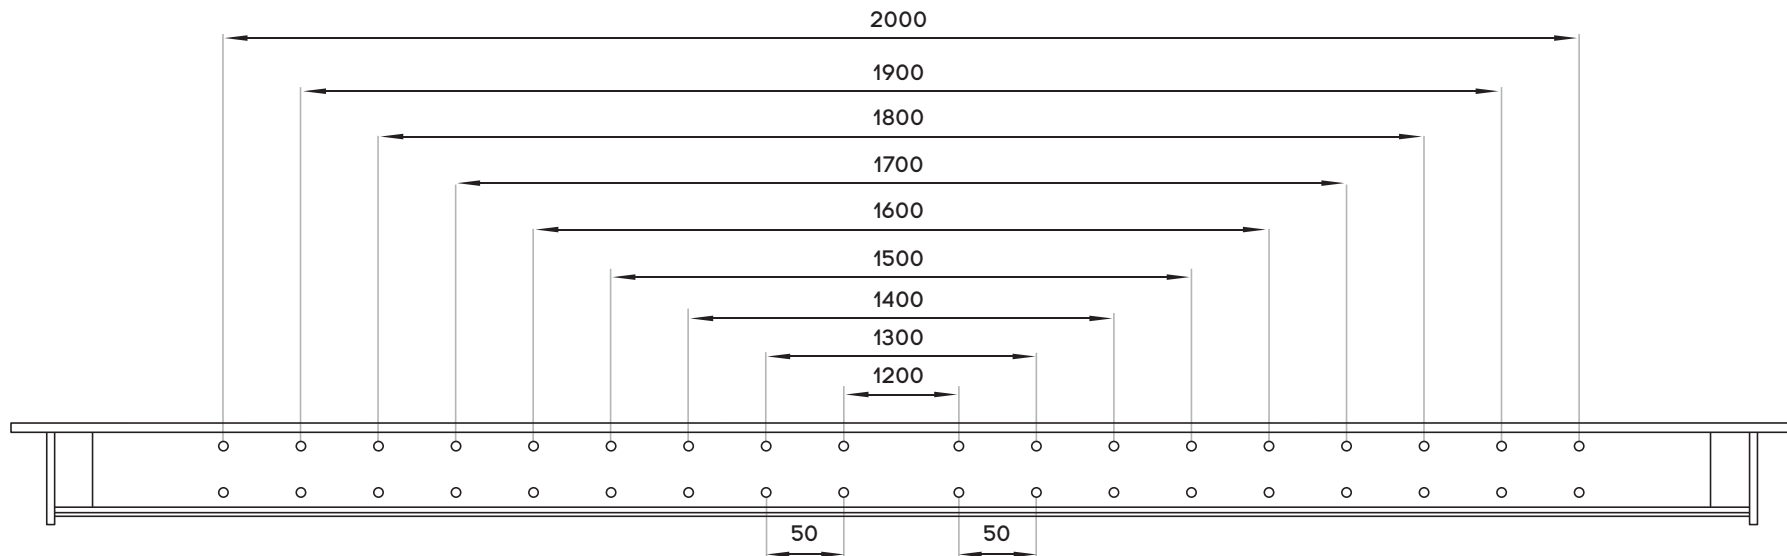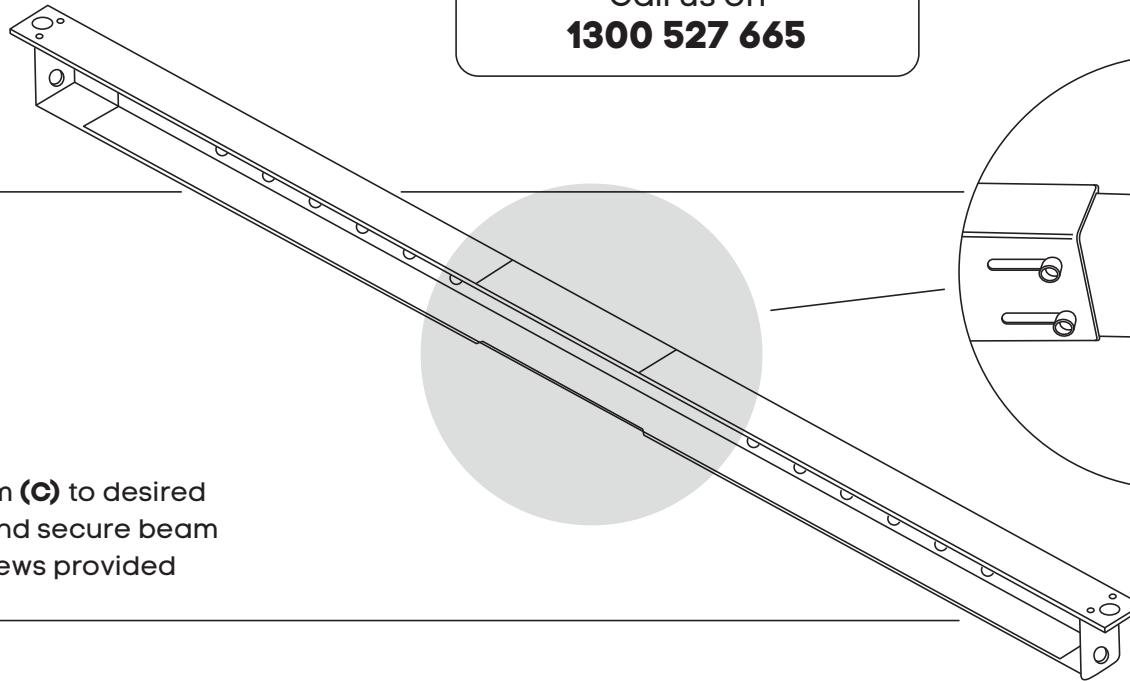

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A Desk


Size: 1000mm

[www.jasonl.com.au](http://www.jasonl.com.au)


**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate

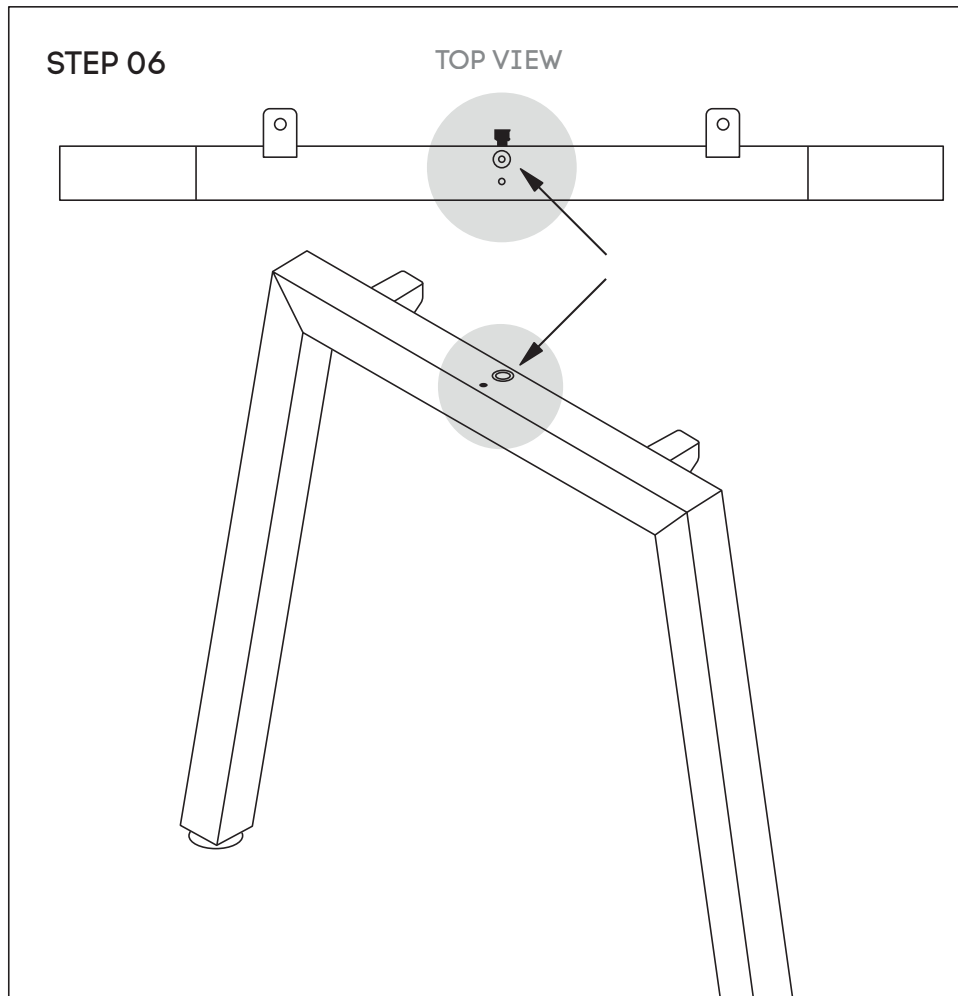

Attach beam **(C)** to legs **(B)** using nut insert in legs  
See point attached

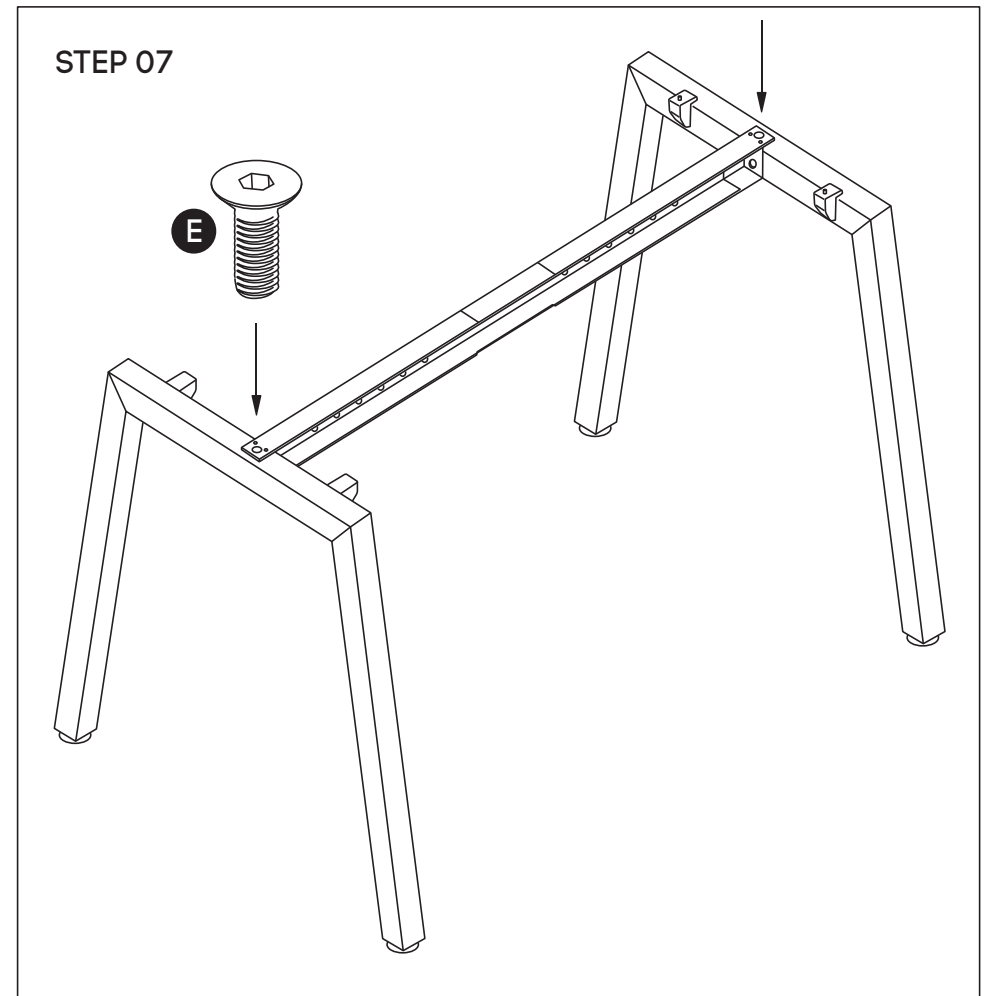

Frame looks like this. Using Allen Key, attach beam **(C)** with Socket **(E)**

# ASSEMBLY INSTRUCTIONS

## Quadro Wood A Desk

Size: 1000mm

[www.jasonl.com.au](http://www.jasonl.com.au)

**Need help!**

Call us on  
**1300 527 665**

**jason.l**  
your office furniture mate



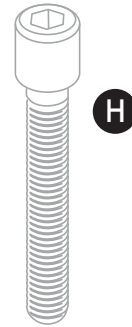


TABLE TOP  
BOTTOM VIEW

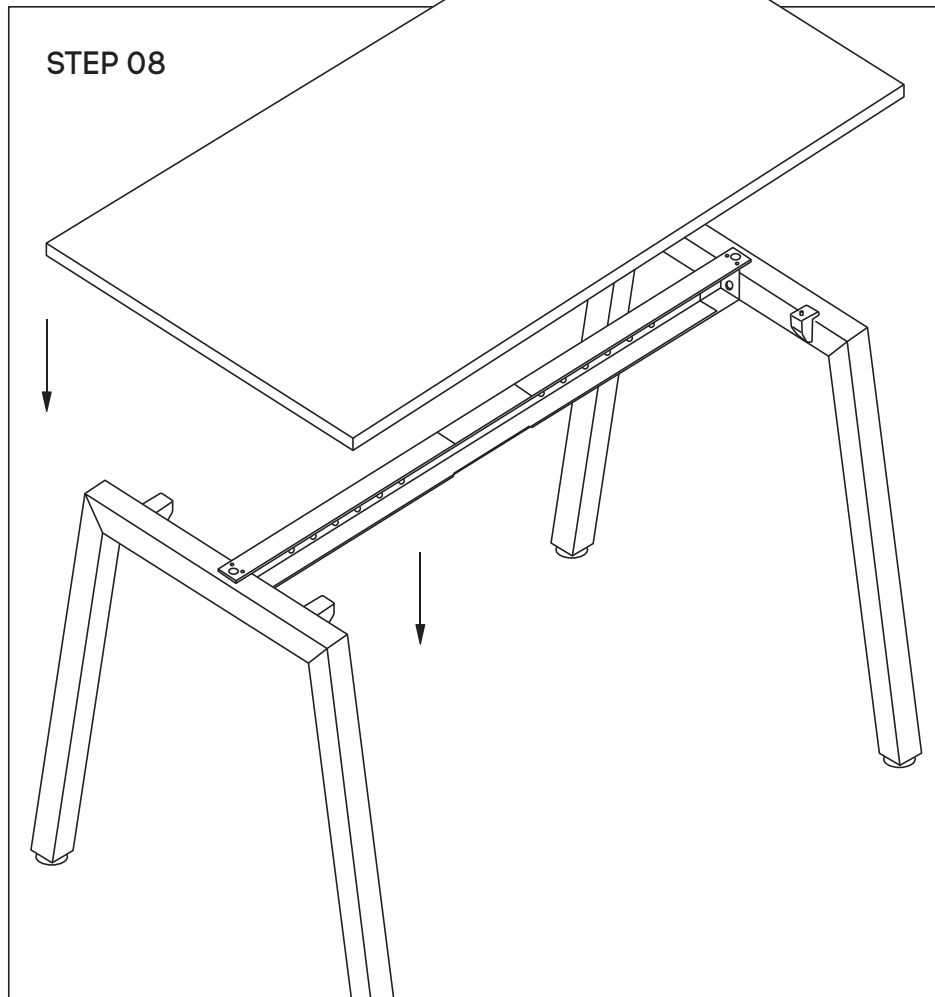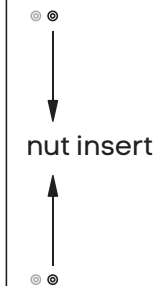

Place desktop on top of frame. Nut inserts in top will align with plastic joiner brackets using M6x30MM (H) sockets attached top to frame.