
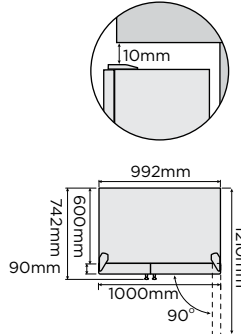



Fridge dimensions

Large side by sides[†]

WSE6970SF, WSE6970WF, WSE7000SF, WSE7000WF

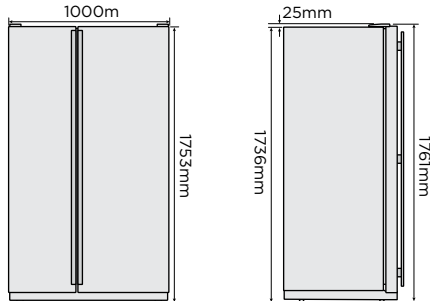


Minimum recommended airspaces
These are the recommended minimum clearances.

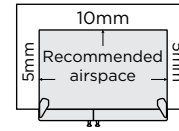

Please note:
Doors are designed to sit proud of cabinetry (not flush).




Front face of bench aligned to front corner edge of cabinet.

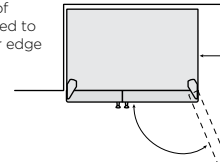

When positioned in a corner area, clearance of at least 350mm on the fridge side and 250mm on the freezer side will allow the doors to open enough to enable the removal of the bins and glass shelves.


Compact side by sides[†]

WSE6070SF, WSE6070WF, WSE6100SF, WSE6100PF, WSE6100WF

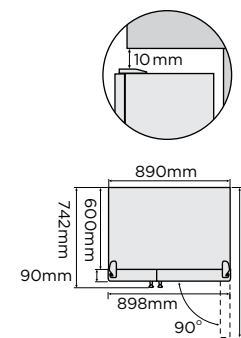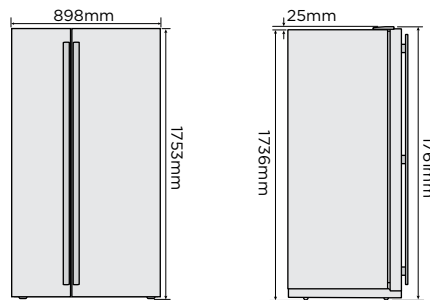



Please note:
Doors are designed to sit proud of cabinetry (not flush).

Front face of bench aligned to front corner edge of cabinet.

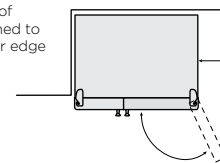


When positioned in a corner area, clearance of at least 300mm on the fridge side and 250mm on the freezer side will allow the doors to open enough to enable the removal of the bins and glass shelves.


Verticals and pigeon pairs[†]

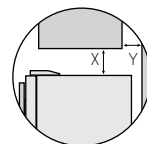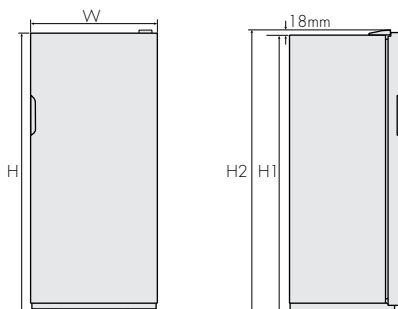


If gap (Y) is not minimum of 100mm, then gap (X) increases from 50 to 90mm.

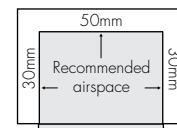

Please note:
Doors are designed to sit proud of cabinetry (not flush).

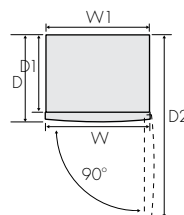

Front face of bench aligned to front corner edge of cabinet.

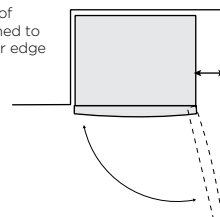

When positioned in a corner area, clearance of at least 350mm on the fridge side will allow the doors to open enough to enable the removal of the crisper bins and shelves*.


Model	Max door height (H)	Cabinet height (H1)	Total height (H2)	Door width (W)	Cabinet width (W1)	Total depth (D)	Cabinet depth (D1)	Depth door open (D2)
WRM4300SB, WRM4300WB	1714	1702	1720	703	690	647	550	1299
WRM3700PB, WRM3700WB	1714	1702	1720	608	595	647	550	1204
WRM2400WD	1374	1393	1543	550	550	555	490	1077
WFM3600SB, WFM3600WB	1714	1702	1720	703	690	647	550	1299
WFM3000PB, WFM3000WB	1714	1702	1720	608	595	647	550	1204
WFM1800WD	1374	1393	1453	550	550	555	490	1077
WFM1810WC	1374	1393	1453	550	550	555	490	1077

[†]For those single door models with telescopic extension slide-out bins or crispers situated with the door opening against the wall, clearance requirement increases from 350mm to 450mm. Dimensions to be used as a guide only. Please refer to the user manual supplied with the product for detailed installation instructions. For information on installation of integration kits for top mounts, bottom mounts and pigeon pair models, please refer to westinghouse.com.au


Fridge dimensions

Large and compact French doors[†]


WHE5200SA, WHE5200WA

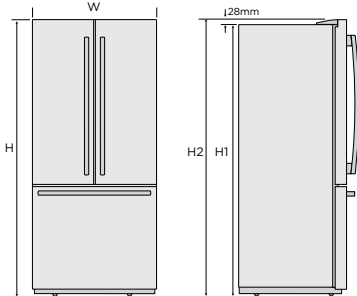


WHE6200SA

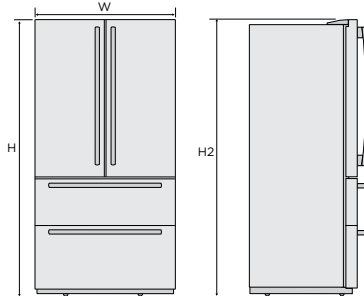


WHE7670SA

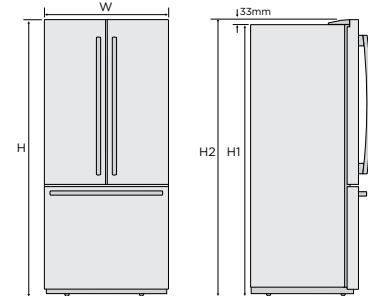

WHE5200SA, WHE5200WA

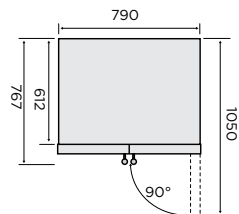


WHE6200SA

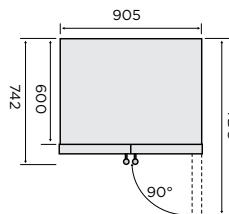


WHE5200SA, WHE5200WA

Front face of bench aligned to front corner edge of cabinet.

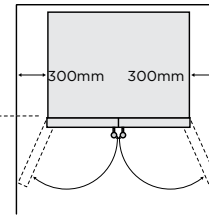


When positioned in a corner area, clearance of at least 300mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

WHE7670SA

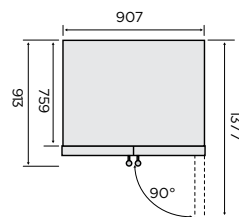

WHE7670SA, WHE6200SA


Front face of bench aligned to front corner edge of cabinet.

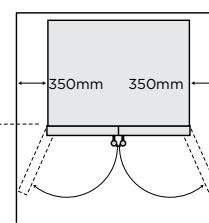

When positioned in a corner area, clearance of at least 350mm on the hinge side will allow the doors to open enough to enable the removal of bins and shelves.

Minimum recommended Airspaces

These are the recommended minimum clearances.

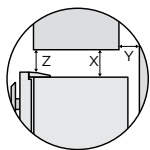


WHE7670SA,
WHE5200SA,
WHE5200WA,
WHE6200SA

Please note:
If gap (Y) is not minimum of 100mm, then gap (X) increases from 50mm to 90mm min.

WHE5260SA-D


Please note:
If gap (Y) is not minimum of 100mm, then gap (Z) increases from 10mm to 45mm min.

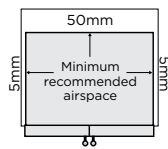

WHE5200SA,
WHE5200WA

Please note:
If 5mm side clearance, the fridge cabinet must sit at least 5mm proud of kitchen cabinetry for doors to open.

A 5mm side clearance requires 50mm rear clearance.

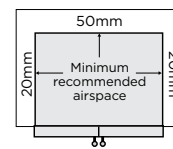

WHE7670SA,
WHE6200SA

Please note:
If 5mm side clearance, the fridge cabinet must sit at least 20mm proud of kitchen cabinetry for doors to open.


A 20mm side clearance requires 50mm rear clearance and 50-90mm clearance above.

Model	Max door height (H)	Cabinet height (H1)	Total height (H2)	Door width (W)	Cabinet width	Total depth	Cabinet depth	Depth door open
WHE5200SA, WHE5200WA	1725	1705	1725	796	790	759.5	641	1054.5
WHE6200SA	1810	1758	1810	908	905	742	600	1205
WHE7670SA	1776	1745	1778	910	907	913	759	1377

Fridge dimensions


Large bottom mounts†

WBE5314SA, WBE5300WA, WBE5300SA,
WBE4514SA, WBE4500SA, WBE4500WA

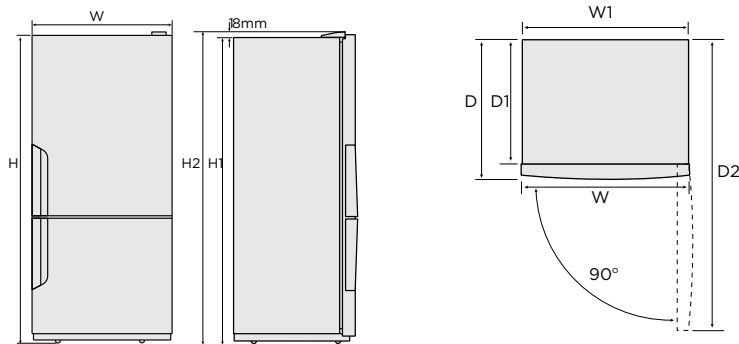


Minimum recommended airspaces


These are the recommended minimum clearances.

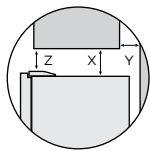

If gap (Y) is not minimum 100mm, then gap (X) increases from 50mm to 90mm min.

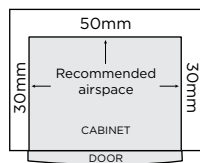


Please note:
Doors are designed to sit proud of cabinetry (not flush).

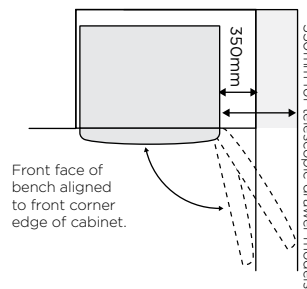

When positioned in a corner area, clearance of at least 350mm on the hinge side will allow the doors to open enough to enable the removal of the crisper bins and shelves. This required clearance increases to 550mm for those models with telescopic extension slide-out bins.



Compact bottom mounts†

WBB3700PF, WBB3700WF, WBB3400PF, WBB3400WF

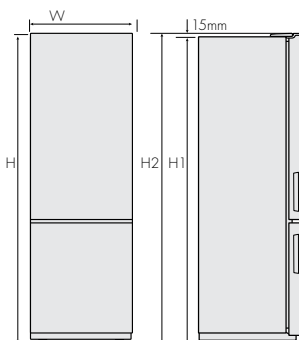


Minimum recommended airspaces

These are the recommended minimum clearances.

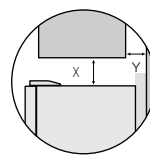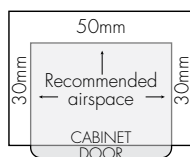

If gap (Y) is not minimum of 100mm, then gap (X) increase from 50mm to 90mm min.

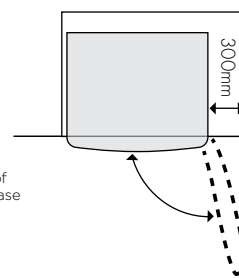

When positioned in a corner, the clearance must be at least 300mm on the hinge side to allow the door to open smoothly so that bins and shelves can be removed easily. For easy removal of Crisper it is recommended to remove bottle door bin first if minimum clearance in the corner on hinge side is less than 350mm.


Model	Max door height (H)	Cabinet height (H1)	Total height (H2)	Door width (W)	Cabinet width (W1)	Total depth (D)	Cabinet depth (D1)	Depth door open (D2)
WBE5300SA, WBE5300WA	1725	1705	1725	796	790	727	641	1457
WBE5314SA	1725	1705	1725	796	790	759.5	641	1457
WBE4500SA, WBE4500WA	1725	1705	1725	699	693	727	641	1360
WBE4514SA	1725	1705	1725	699	693	759.5	641	1360
WBB3700PF, WBB3700WF	1756	1741	1756	598	595	661	586	1199
WBB3400PF, WBB3400WF	1646	1631	1646	598	595	661	586	1199

For information on installation of integration kits for top mounts, bottom mounts and pigeon pair models, please refer to westinghouse.com.au

Fridge dimensions


Large top mounts[†]

WTB4600SA, WTB4600WA, WTB4604SA,
WTB5400SA, WTB5400WA, WTB5404SA

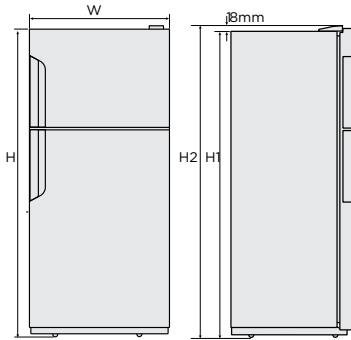


Minimum recommended airspaces

These are the recommended minimum clearances.

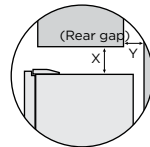

If gap (Y) is not minimum of 100mm, then gap (X) increase from 50mm to 90mm min.

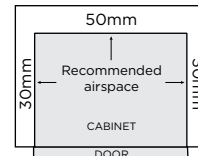


Please note:
Doors are designed to sit proud of cabinetry (not flush).

Compact top mounts[†]

WTB3700PF, WTB3700WF,
WTB3400PF, WTB3400WF,
WTB2800PF, WTB2800WF,
WTB2500PF, WTB2500WF,
WTB2300PF, WTB2300WF,
WTM2000WC, WTM1800WC




Front face of bench aligned to front corner edge of cabinet.

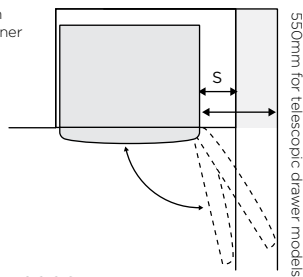

WTE & WTM models
When positioned in a corner area, clearance (S) of at least 350mm on the hinge side will allow the doors to open enough to enable the removal of the crisper bins and shelves. This required clearance increases to 550mm for those models with telescopic extension slide-out bins.

WTB models
When positioned in a corner, the clearance (S) must be at least 300mm on the hinge side to allow the door to open smoothly so that bins and shelves can be removed easily.

WME3600SF

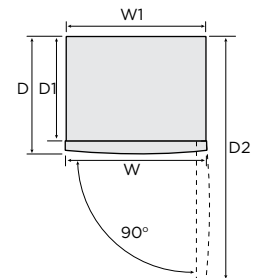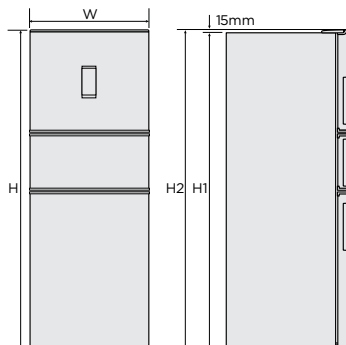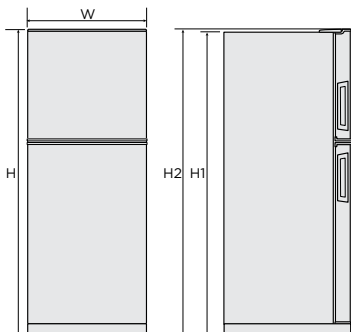

Model	Max door height (H)	Cabinet height (H1)	Total height (H2)	Door width (W)	Cabinet width (W1)	Total depth (D)	Cabinet depth (D1)	Depth door open (D2)
WTB4600SA, WTB4600WA	1725	1705	1725	699	693	727	641	1360
WTB4604SA	1725	1705	1725	699	693	759.5	641	1360
WTB5400SA, WTB5400WA	1725	1705	1725	796	790	727	641	1457
WTB5404SA	1725	1705	1725	796	790	759.5	641	1457
WTM1800WC	1400	1400	1400	494	490	580	490	1029
WTM2000WC	1476	1472	1476	524	520	595	500	1070
WTB2300PF, WTB2300WF	1440	1425	1440	540	540	615	540	1108
WTB2500PF, WTB2500WF	1505	1490	1505	540	540	615	540	1108
WTB2800PF, WTB2800WF	1605	1590	1605	540	540	615	540	1108
WTB3400PF, WTB3400WF	1645	1630	1645	598	595	650	575	1199
WTB3700PF, WTB3700WF	1755	1740	1755	598	595	650	575	1199

For information on installation of integration kits for top mounts, bottom mounts and pigeon pair models, please refer to westinghouse.com.au

For more information on all Westinghouse appliances, or for dimension and installation information, call into your retailer, phone or email our customer care team or visit our website:

AUSTRALIA

phone: 1300 363 640

fax: 1800 350 067

email: customercare@electrolux.com.au

web: westinghouse.com.au

NEW ZEALAND

phone: 0800 436 245

fax: 0800 225 088

email: customercare@electrolux.co.nz

web: westinghouse.co.nz



TOP SERVICE

Top Service encompasses the after sales service provided by The Electrolux Group to consumers including delivery, home service and spare parts.

Westinghouse. We are part of the Electrolux family.
Share more of our thinking at electrolux.com.au