

rogerseller

Melbourne

587-593 Church Street
Richmond VIC 3121
P 03 9429 8888 F 03 9429 6966

Sydney

115 Flinders Street
Darlinghurst NSW 2010
P 02 9332 4800 F 02 9332 4030

Brisbane

Centro on James
2/30 James Street
Fortitude Valley QLD 4006
P 07 3216 1566 F 07 3216 1455

Perth

153 Broadway
Nedlands WA 6909
P 08 6389 1366 F 08 6389 1466

Canberra

Southern Innovations
21 Lyell Street
Fyshwick ACT 2609
P 02 6126 1155 F 02 6126 1156

WARRANTY

All Rogerseller tapware, bathroom fittings and sanitary ware are covered by a five (5) year warranty from date of purchase.

Rogerseller will undertake to repair or replace free of charge any faulty product due to defects in materials or workmanship (within the warranty period).

Rogerseller (or their nominated agency) reserve the right to assess, repair, replace or service any warranty claims as they see fit.

This warranty excludes any defect or injury caused by or resulting from misuse, abuse or neglect, accidental damage, improper installation or other alterations or modifications which affect the reliability or performance of the unit not attributed to faulty manufacture. The warranty will not apply where the product has been incorrectly installed or the water pressure is outside the recommended levels.

Exceptions:

- Flexible hoses – covered by one (1) year warranty from date of purchase.
- Finishes – Satin & Pewter finishes are covered by a one (1) year warranty against chipping, staining and flaking (excluding normal wear & tear).
- Internal Cistern Mechanisms – Covered by a one (1) year warranty from date of purchase
- Spa Pumps - covered by one (1) year warranty from date of purchase.

Note:

- All cartridges are manufactured in accordance with: AS 3500, AS 3718, EN 200, SAA MP52; Licence No 1458. Each cartridge is individually pressure tested before leaving the factory.



www.rogerseller.com.au

rogerseller


TONIC MOTION
Upright Sink Mixer Installation Instructions

BATH
LIFE
STYLE

TONIC MOTION

Upright Sink Mixer Installation Instructions

It is recommended a licensed plumber carry out all tapware installations.
All installations should comply with the relevant requirements of AS/NZS 3500.

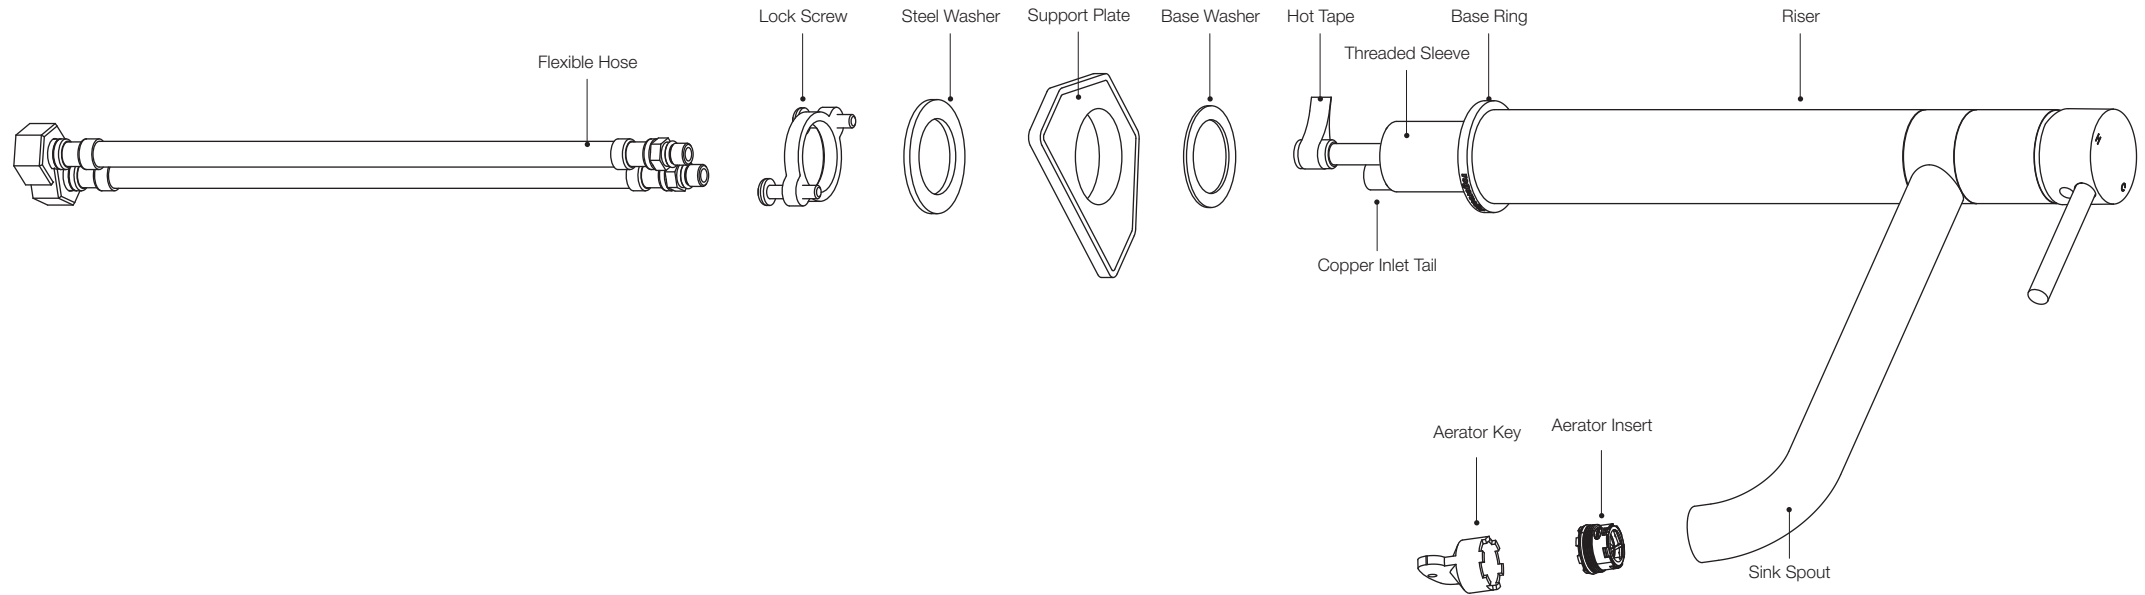

1. REMOVE

Remove the locking screw and steel washer from the threaded sleeve leaving the base ring and base washer attached.

2. CLOSED POSITION

Fit the mixer to the sink ensuring the base washer is correctly positioned underneath the base ring

3. MOUNTING

(Under the Sink / Bench) Fit the support plate and steel washer, then screw the locking screw onto the threaded sleeve. Use the phillips head screws to further tighten the nut.

4. CONNECTING

Connect the flexible hoses to the copper tails and tighten.
Connect the flexible hoses to the main water supply lines, making sure the hot water is connected to the hot water hose.

5. INLINE FILTERS

The installation of stop taps and in-line filters are recommended to ensure a cleaner flow of water to the mixer.

6. FLUSH LINES

Prior to introducing the mains water supply, open the lever handle in the mixed position, midway between full hot and full cold. Using the tools provided remove the aerator from the end of the spout. Then introduce the mains water to flush the supply lines.

7. REINSTALL

Reinstall the aerator. See notes below.

NOTES

Pressure

Maximum Hydrostatic Pressure - 800 kpa

This pressure may be exceeded only under test conditions as per AS/NZS 3500. Where hydrostatic pressure exceeds the maximum stated above, pressure-limiting valves should be installed.

Recommended Maximum Hydrostatic Pressure - 500 kpa.
(AS/NZS 3500)

Recommended Minimum Hydrostatic Pressure - 100 kpa

Temperature

Maximum Water Temperature - 80° C

Note: For optimum performance, hot and cold inlet water pressure should be equal.

Installation of aerators

Upon re-installation of the aerator after flushing, the aerator casing should be tightened to prevent removal by hand.

Ceramic Cartridges

Warranty claims will not be honoured where the ceramic cartridge has malfunctioned due to the presence in the water supply of;

- Copper tube pieces
- sand, dirt or stones
- thread tape
- other objects not normally present in potable water supplies

Note: Flow restrictors may be fitted in place of the standard aerator, however this tap should not be attached via the end of the spout to any additional water control device eg. Dishwasher, water filter with shut-off device.