

DWAU315X smeg underbench dishwasher



30cm
maximum
plate
diameter

EAN 8017709184025

size	598mmW x 820mmH max x 570mmD
capacity	15 placesettings
finish	fingerprint-proof stainless steel
programs	five wash programs — soak, normal ECO, ECO, intensive 65°, ultraclean
baskets	grey upper: flexi-duo basket middle: 3-level adjustment, EasyGlide lower: completely foldable rack with glass holder, cutlery basket
wash system	orbital ceiling spray upper spray arm six wash directions
water softener	electronic adjustable
temperatures	45,50,65,70°C
water connection	single, cold/hot water max 60°C
timer	3-6-9 hour delay timer with auto soak
filtration	5-stage water filtration system
drying	natural condenser, auto door open at end of cycle
safety	TOTAL ACQUASTOP LED on/off light end-cycle acoustic indicator self-balancing hinges
noise	42 dBA
water	9.8 litres
energy	1.9 kWh, 10 amps 230–240V, 50 Hz

ORBITAL WASH SYSTEM

Smeg's orbital wash system has two spray arms which operate simultaneously in opposite directions to ensure water is evenly distributed throughout the inner cavity for a perfect wash.

DELAY START TIMER


Delay Start option allows for up to 24-hours delay start — allowing you to take advantage of off-peak energy usage times.

TOTAL ACQUASTOP


Acquastop is a water safety device that operates when the dishwasher is not in operation by restricting mains pressure at the tap, and not at the dishwasher.

ENERSAVE



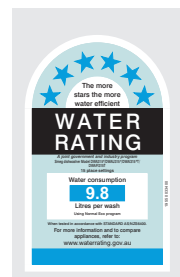


This option reduces the temperature of final rinse, saving energy. It is activated after selecting the desired program. The door opens at the end of washing to assist drying.

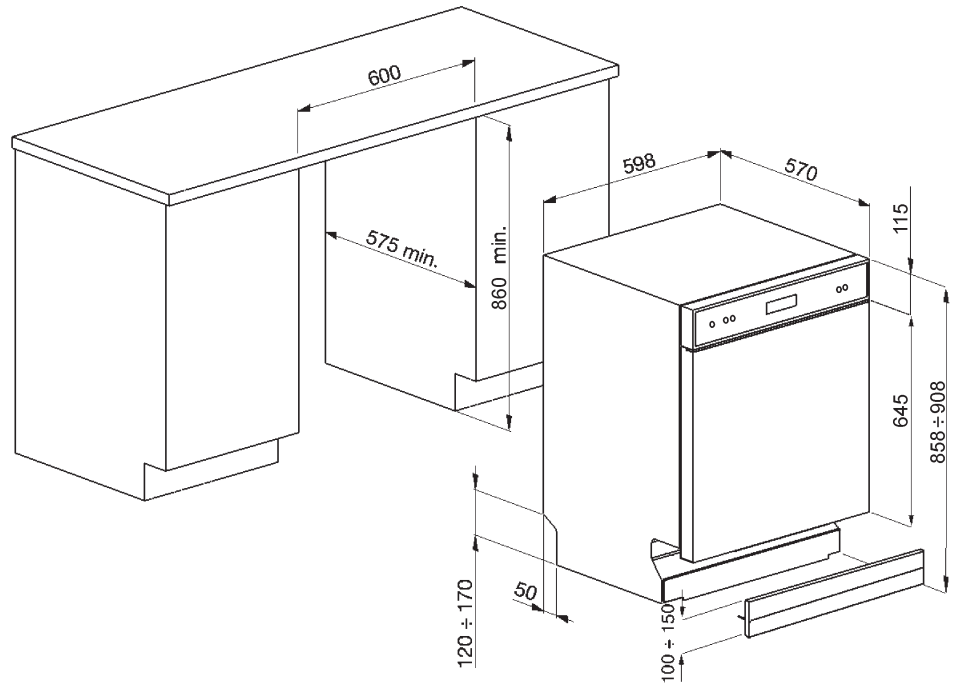

DWAU315X smeg underbench dishwasher



PLEASE NOTE: drawings are not to scale. They are to assist only.

PROGRAM	LOAD	PROGRAM PROGRESS	DURATION	CONSUMPTION	
			minutes	water litres	power kWh
SOAK 	pans and dishes awaiting completion of load	cold prewash	15	3.5	0.02
NORMAL ECO 45 	crockery and cutlery normally soiled	cold prewash wash at 49°C rinse at 41°C dry	140	9.8	0.65
ECO 50 	dishes with normal dirt, even with dried-on residue	cold prewash wash at 55°C rinse at 70°C dry	100	11	1.3
INTENSIVE 65 	dishes with normal dirt, even with dried- on residue	cold prewash wash at 65°C cold rinse rinse at 70°C dry	115	13.5	1.35
ULTRACLEAN 	very dirty pans and dishes, even with dried-on residue	hot prewash wash at 70°C cold rinse rinse at 70°C dry	150	15.5	1.70