


DWAFI149

smeg fully-integrated dishwasher

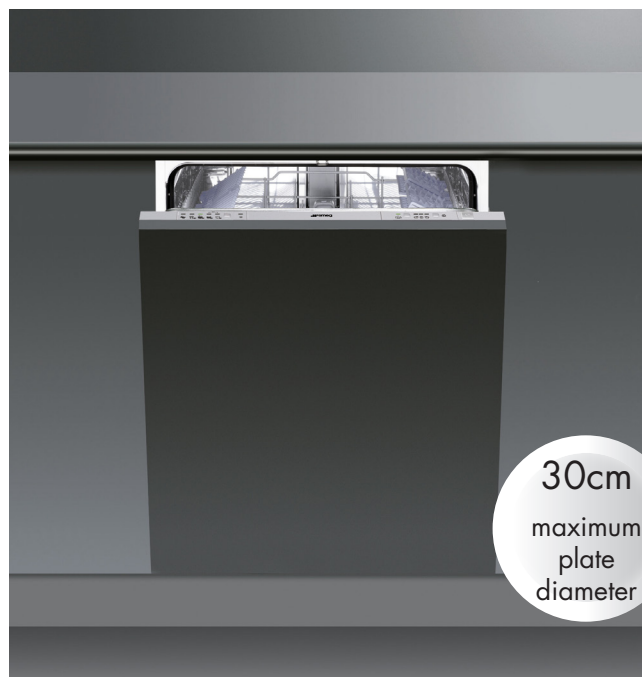

30cm
maximum
plate
diameter

ORBITAL WASH SYSTEM

Smeg's orbital wash system has two spray arms which operate simultaneously in opposite directions to ensure water is evenly distributed throughout the inner cavity for a perfect wash.

DELAY START TIMER

Delay Start option allows for up to 24-hours delay start — allowing you to take advantage of off-peak energy usage times.



TOTAL ACQUASTOP

Acquastop is a water safety device that operates when the dishwasher is not in operation by restricting mains pressure at the tap, and not at the dishwasher.

FLEXIZONE


The new half-load FlexiZone allows you to wash a reduced load, saving energy, water and time, and there are no restrictions on where the items are placed. Traditional half loads allow only one of the baskets to be used.

size	600mmW x 820mmH x 550mmD
capacity	14 placesettings
programs	five wash programs — soak, normal ECO 45°, ECO 50°, intensive 65°, super
baskets	grey rilson upper: 3-level adjustment, EasyGlide lower: double tilting rack
wash system	orbital upper spray arm six spray directions
temperatures	45,50,65,70°C
timer	3-6-9 hour delay timer
filtration	5-stage water filtration system
drying	natural condenser
safety	TOTAL ACQUASTOP end-cycle acoustic indicator self-balancing hinges
noise	45 dBA (when installed)
water	12.6 litres
energy	1.9 kWh, 10 amps 230-240V, 50Hz

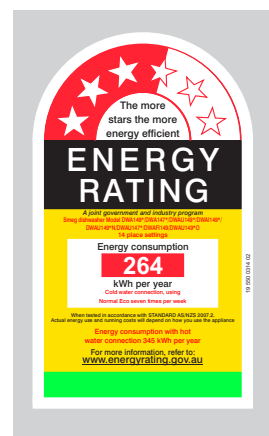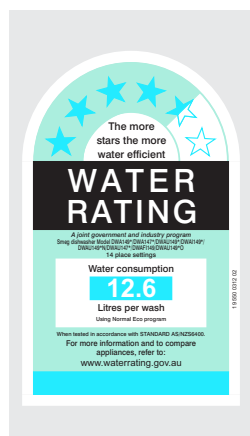



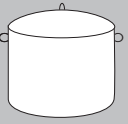


DWAFI149

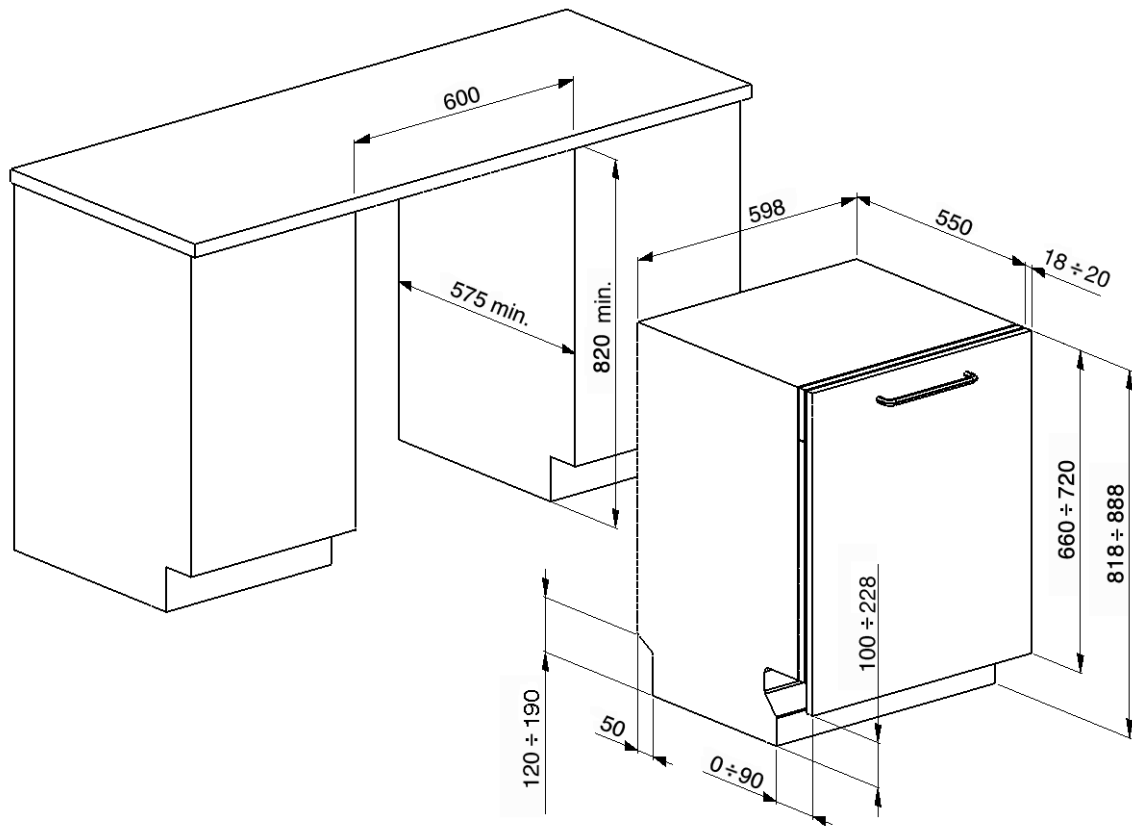smeg fully-integrated dishwasher



PLEASE NOTE: drawings are not to scale. They are to assist only.

PROGRAM	LOAD	PROGRAM PROGRESS	DURATION	CONSUMPTION	
			minutes	water litres	power kWh
SOAK 	pans and dishes awaiting completion of load	cold prewash	15	3.5	0.02
NORMAL ECO 	crocery and cutlery normally soiled	cold prewash wash at 45°C rinse at 45°C dry	147	12.6	0.71
ECO 	dishes with normal dirt, washed immediately after use	cold prewash wash at 55°C rinse at 70°C dry	100	11	1.3
INTENSIVE 	dishes with normal dirt, with dried-on residue	cold prewash wash at 65°C code rinse rinse at 70°C dry	115	13.5	1.35
SUPER 	very dirty pans and dishes, with dried-on residue	hot prewash wash at 70°C code rinse (2) rinse at 70°C dry	135	15.5	1.60