



Thank you for purchasing a Redleaf Manual HT Projection Screen, please read the following instructions to ensure proper usage of your new equipment.

Please note that the standard brackets for the Roll Down Hanging Type offer fixed position mounting brackets situated at the ends of the screen canister – see photo right – that are designed for wall fixing. Please ensure that you determine a secure fixing method for a safe installation.

If you require ceiling mounting of this unit – firstly beware that the bracket type will prevent you from flush mounting, but offer instead a simple twin hanging point solution.




Please follow these instructions to ensure trouble free operation:

Ensure that the slat rod has not been pushed into the slat during transport. If so, pull the slat rod down to free it up.

When installed, the opening in the canister should be down and at the back of the canister.

Cleaning of the screen is best achieved by first dusting the surface with a feather duster, and then to remove any stubborn marks, use a small amount of mild detergent and warm water on a clean white lint free cloth. Do not use a saturated cloth, only a damp one, as this may leave a watermark. It is most important that you only treat the actual mark by this process and not the entire surface.

Once the screen has been installed, to operate pull down on screen by central handle mounted on the bottom slat rod and lock into the down position.

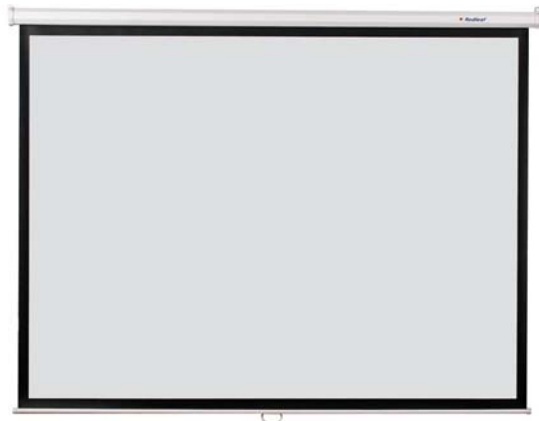


To release the spring locking mechanism, work on the principle of slow down, fast up. Gently pull the screen down 10 centimetres or more, and then let the spring pull the screen up whilst keeping a guiding hand on the slat rod to control the screen. The screen has a strong spring mechanism that will pull the screen quite quickly, do not slow the ascent of the screen until it reaches the canister housing, as this will cause the latching mechanism to lock into place again.

If you have any questions regards this equipment please call the Redleaf Sales office on +61 2 4869 5811 during business hours.



For other Audiovisual Products from Redleaf see more at
www.redleafaustralia.com.au

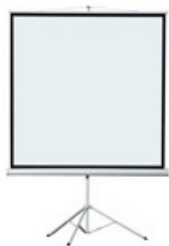

Tripod Screen



Vertical Up Screen



Pivot & Tilt Screen



Manual HT Screen



Fixed Frame Screen



Desktop Screen



Floor Stand Screen



Motorised Screen



Control Equipment &
Accessories



Wall Brackets



Projector Brackets



Plasma Brackets