

**INSTRUCTION MANUAL
X301ISL SERIES ISLAND HOOD**



OPEN 24/7

ILVE ACCESSORIES ONLINE SHOP

For a wide range of Genuine ILVE accessories at the
click of a button shop.ilve.com.au

INSTALLATION, OPERATING AND MAINTENANCE INSTRUCTIONS FOR RANGE HOODS DESIGNED FOR WALL FITTING 230 Vac • 50 Hz

Exhausting cooker hood

The equipment is constructed in accordance with European Standards and the requirements included in the following Directives: 73/23 EEC (electric-low tension safety), 89/336 EEC (electromagnetic compatibility), 93/68 EEC (EC marking regulations).

Before installing and/or using the hood:

- read all the instructions thoroughly;
- be sure that the ceiling structure is suitable for the installation of this heavy equipment
- make sure that the voltage (V) and frequency (Hz) ratings indicated on the plate inside the hood unit correspond to the ones available in the installation place.
- At least two people are needed for the installation procedure, which it is advisable to entrust to competent technicians.

PRESENTATION

The equipment (Pic. 1) is made of the following items:

- 1) Telescopic inside structure (Picture 1-1)
- 2) External telescopic chimney (Picture 1-2)
- 3) Cooker hood module (Picture 1-3)

1. INSTALLATION

Read the instruction manual before installing and/or using the hood.

Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to the back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of a range hood or other cooking fume extractor, the operation of flued gas should be tested by a competent person to ensure that back flow of combustion gases does not occur.

The unit must be fitted at a distance of at least 65 cm. from the cooking hob. It must not be mounted above cookers fitted with top radiant plate. The stale air must be discharged in a manner complying with current regulations.

All fastenings are supplied.

Installation of the structure to the ceiling (Picture 2)

- 1) Adjust the height H of the telescopic structure by employing the screws as in Picture 2-A, considering that the minimum distance between the equipment and the cooktop is 700mm as described in Picture 1.
- 2) Fix to the ceiling the telescopic structure by means of the screw anchors you have been provided (Picture 2-B).

Installation of the telescopic chimney (Picture 3).

- 3) Put in and fix the upper flue chimney to the telescopic structure by means of the screws as in Picture 3-C.
- 4) Put completely in the lower flue chimney upwards and hold it up temporarily, screwing in the screws as in Picture 3-D. Installation of the cooker hood Module

(Picture 3)

5) Put in the cooker hood module on the telescopic structure and fix the screws as in Picture 3-F.

6) At this stage of the operation you can take off the screws employed in Picture 3-D to hold on the lower flue chimney and let it go down holding on the cooker hood module.

This cooker hood can be employed as exhausting or filtering (when provided for).

The cooker hood can be employed as filtering only when the upper chimney is provided with holes for the evacuation of the purified air.

Exhausting (external evacuation). Kitchen smokes are driven outside through a flue joined to the exhaust pipe flue connector (Picture 4). Install this flue after completing what's described in the previous point 2 of this section.

This pipe must not under any circumstances be connected to cooker, boiler or burner exhaust pipes, etc.

If the hood is operated in suction function whilst stoves, gas cookers, fuel-fed boilers, etc. are being used, ventilation from outdoors must be provided, since the cooker hood removes from the environment the necessary air for a correct combustion.

The charcoal filters must not be fitted to the cooker hood in exhausting version.

Filtering (inside recycling). Smokes pass through the activated charcoal filters (Picture 5-H) to be cleaned and recycled in the kitchen environment through the holes from which the purified air will come out. These holes have to be free and communicating with the kitchen environment (Picture 5-L).

In this case you should not install the exhaust pipe.

2. ELECTRICAL CONNECTIONS

This equipment must be connected to a grounding plant.

Two types of electrical connection can be used:

- a) Using a standard plug to be connected to the power cable and inserted in a mains socket which must be accessible (so that the plug can be disconnected when servicing is carried out).
- b) By means of a fixed mains connection, fitting a bipolar switch with contacts opening of at least 3 mm. The ground connection (yellow-green wire) must not be interrupted. Refer to the plate inside the hood for the mains voltage and frequency ratings.

For stationary appliances permanently connected to the fixed wiring, compliance with this requirement is considered to be met if the instruction concerning disconnection incorporated in the fixed wiring is in accordance with AS/NZS 3000

Refer to the plate inside the hood for the mains voltage and frequency ratings.


3. OPERATION

The hood is supplied with a multi speed motor.
The hood should be run at low speed under normal conditions and at higher speeds only when there is a heavy build-up of fumes or odour.

Ideally, the hood should be switched on as soon as cooking is started and then kept on until all odour have been eliminated. The controls consist of these commands. Press TL to turn on the light, press T1 to switch on the hood at first speed and to switch off the aspirator, press T2-T3-T4 to select functioning speeds.

By pressing of the command T1 the motor starts running at the 1st speed. The commands T2-T3-T4 switch the motor on respectively at the 2nd, 3rd and 4th speed. In order to switch the motor off press T1 once if set at the 1st speed, twice if set at the 2nd, 3rd and 4th speed. With the button T4, select the maximum speed of the extraction fan for 5 minutes (LED blinking), after which the extraction fan will automatically switch to the 3rd speed.

Adjustable and delayed self switching off

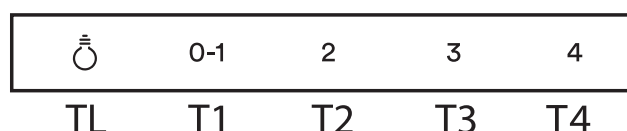

While the hood is working, keep the TL command pressed until all LEDs start blinking. By pressing one of the commands (T1, T2, T3, T4) you can program the delayed self switching off, as follows:

T1 corresponds to 5 minutes

T2 corresponds to 10 minutes

T3 corresponds to 15 minutes

T4 corresponds to 20 minutes

FILTER TIMER:

Aluminium anti-grease filters

Once the hood is switched off, after 30 hour functioning, all the LEDs of the speed buttons switch on with a fixed light for 30 seconds to remind that aluminium anti-grease filter need cleaning. To set the timer to zero keep the button T4 pressed with the aspirator switched off, otherwise the timer will remain set on 30 hour functioning and the reminder will occur again when the hood is switched off again.

CHARCOAL FILTER (FOR FILTERING HOODS)

Once the hood is switched off, after 120 hour functioning, all LEDs blink for 30 seconds to remind that the charcoal filter need cleaning. To set the timer to zero keep the button T4 pressed with the aspirator switched off, otherwise the timer will remain set on 120 hour functioning and the reminder will occur again when the hood is switched off again.

5. MAINTENANCE AND REMINDERS

Always disconnect the hood from the mains before carrying out any maintenance or cleaning operation
In order to remove the remaining glue or any impurity, the cooker hood must be cleaned immediately after installation and after having removed the protective film.

The cooker hood must be cleaned frequently both internally and externally (at least once a month).

Do not let dirt gather on the inner and outer surfaces of the hood. To clean the exterior of the hood do not use either acid or basic products, or abrasive sponges.

Clean the hood with a sponge dampen in warm water and a little quantity of neutral detergent (for example dishwasher detergent), in order to remove possible particles of grease. Rinse with a damp cloth, removing all the detergent carefully, following the satin finish direction on the steel surface.

Drying is very important, especially in areas where water is particularly hard and leaves limestone.

Particular attention should be paid to the metallic anti-grease filters that are designed to trap particles of fat contained in the fumes. The metallic anti-grease filters must be washed at least once a month with detergent in hot water (or in the dish-washer).

ATTENTION:

- the grease collected in the filter can easily catch fire and it is therefore extremely important to clean the metallic filter on a regular basis as per instructions. Grease filters are removed as illustrated (Fig. 5).
- Do not flambé under the range hood
- Caution; accessible parts may become hot when used with cooking appliances.
- Never leave the hob unattended when frying, as oil or fat can catch fire.

The function of the activated carbon filters is to prevent the spread of odour present in the cooking fumes. Clean air is returned to the kitchen. Carbon filters cannot be washed and must be replaced 2 or 3 times a year according to the amount of use.

The hood features a LED light that, in addition to offer a good lighting and a significant energy savings, is guaranteed to last about 10 times more than traditional lights. For replacement, contact us at customercare@eurolinx.com.au

Spare filters can be purchased from dealers or direct from the manufacturer.

Removal: detach the metal covers and rotate the carbon filters clockwise (Fig. 6) until release from of the motor.

Re-fit: position the new carbon filters and reverse the procedure. The hood should be cleaned with a soft damp cloth using neutral liquid detergents. Do not use solvents, petroleum products or abrasives.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.

THE MANUFACTURER DOES NOT ACCEPT LIABILITY FOR ANY DAMAGE OR INJURY CAUSED IF THE USER FAILS TO FOLLOW THE ABOVE INSTRUCTIONS REGARDING INSTALLATION, MAINTENANCE AND THE PROPER USE OF THE COOKER HOOD.

For service or a copy of this manual contact us at customercare@eurolinx.com.au

6. WARNINGS


The present instruction manual is an integral part of the appliance itself, therefore it must be carefully kept and ALWAYS accompany it, even in case of its assignment to another owner or user or in case the cooker hood is moved to another installation plant. Any eventual adjustment to the electrical system, which may be necessary to install the cooker hood, must be carried out only by competent people. Any repair carried out by no competent people may cause damages. For any repair or needed technical action make reference to a Technical Assistance Center, which is authorized to carry out the replacement of the spare parts. Always make sure that all the electrical parts (lights, exhaustion unit) are disconnected when the appliance is not in use.









By storms take off the main switch of the house electrical system. The using of the cooker hood must not be other than the use of exhausting units for cooking damps on domestic kitchens. The manufacturer does not accept any liability for damages caused by people, animals or things, by installation and maintenance mistakes or by any illegitimate use.

Make sure that the voltage (V) and the frequency (Hz) ratings indicated on the plate inside the cooker hood correspond to the ones available in the installation place.

We remind that the use of products functioning with electrical energy implies the observance of some essential security rules, as follows:

- This equipment is not intended for people (children included) with reduced mental or motor capacities, with lack of experience or knowledge, unless they are supervised or unless a person responsible for their security, gives them instructions regarding the use of the equipment. Children must be supervised in order to be sure that they do not play with the equipment.
- Any cleaning action is forbidden if the appliance hasn't been disconnected from the main power supply and if the main switch of the house electrical system is not off. If cleaning is not carried out according to these instructions, a fire may break out.
- Do not pull, take off or twist the cable coming out from the appliance, even though this has been disconnected from the main power supply.
- Do not sprinkle or throw any water directly on the appliance.
- Do not stick any sharp tool inside the exhausting holes and into the air discharge.
- Do not take out the filters in order to reach the internal sides of the appliance in case the main switch of the house electrical system is not off.
- Do not singe or flambé directly underneath the cooker hood. Take particular care when frying to ensure that the oil does not catch fire.

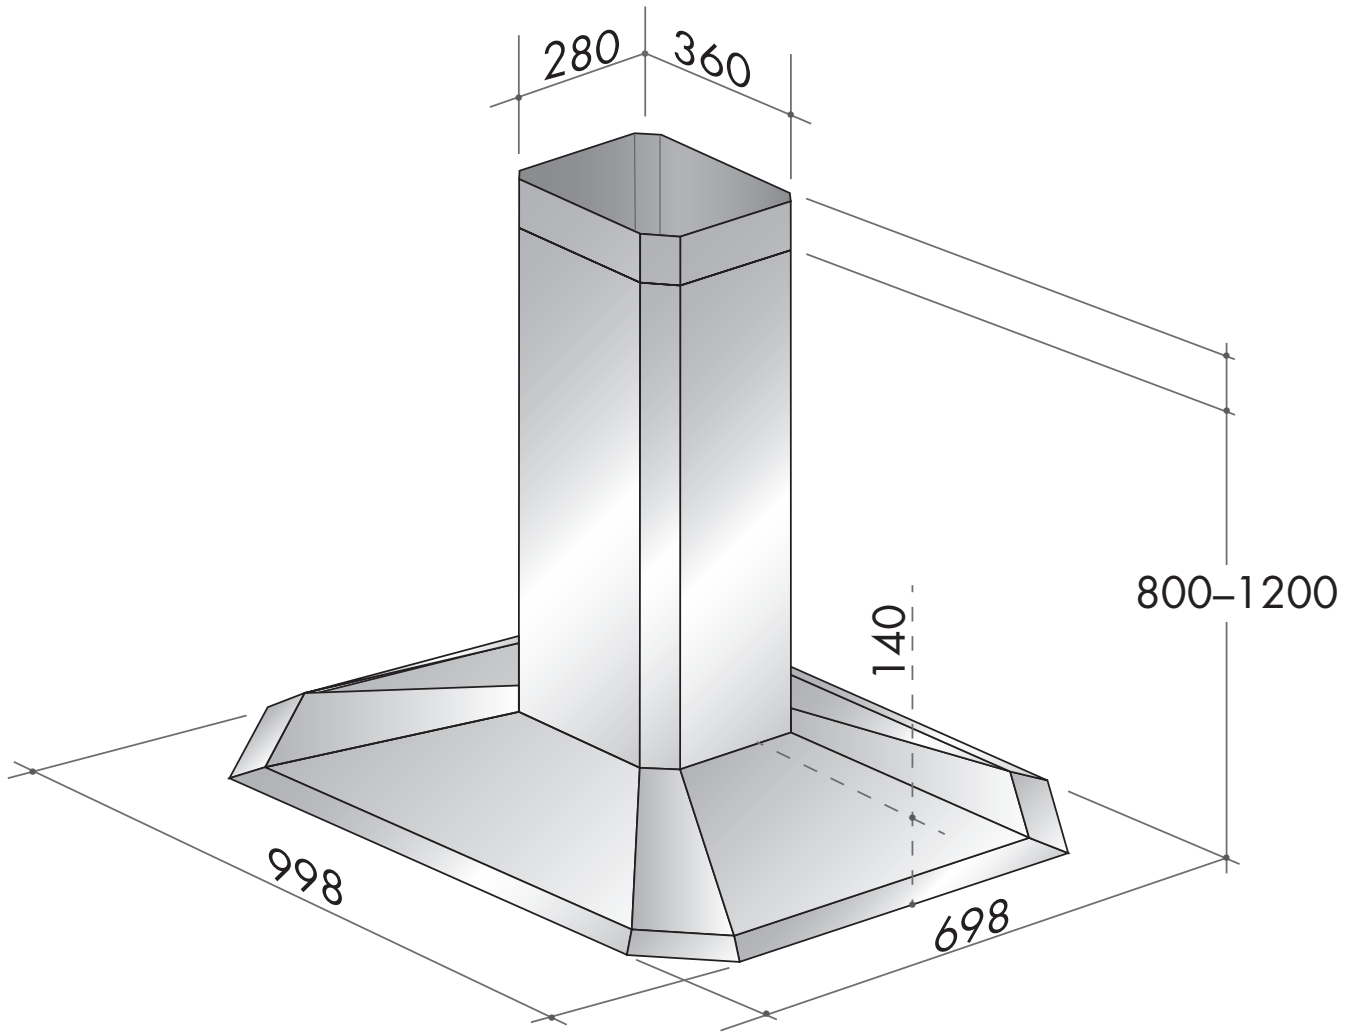

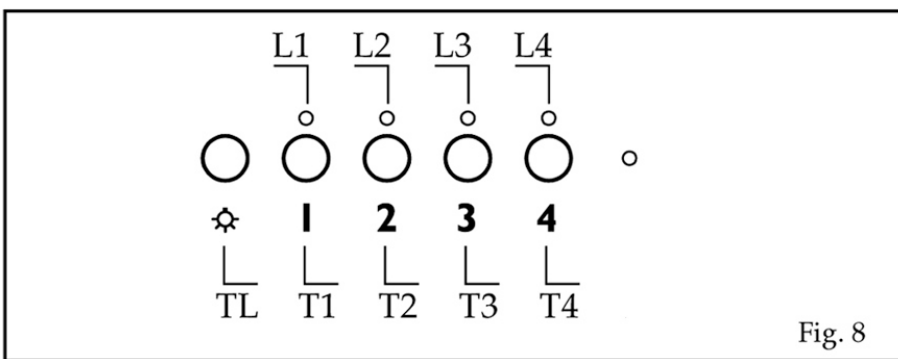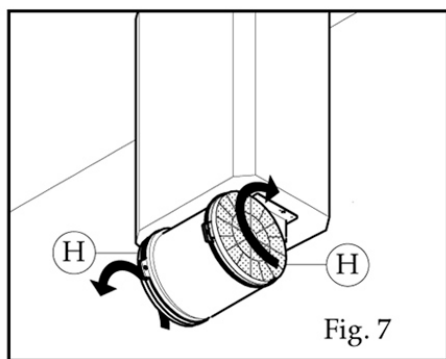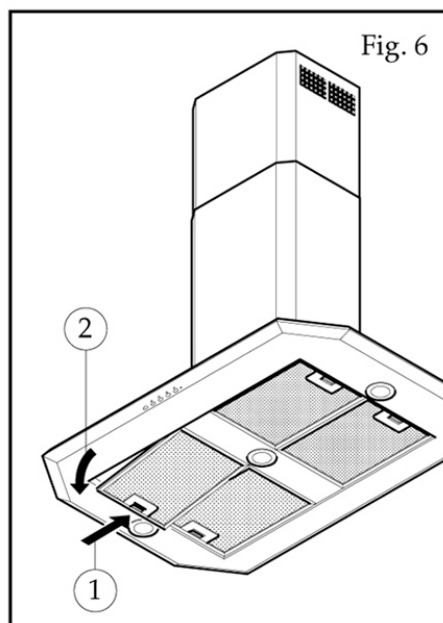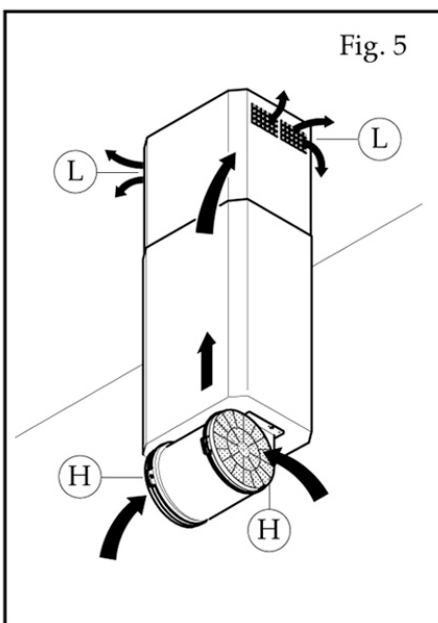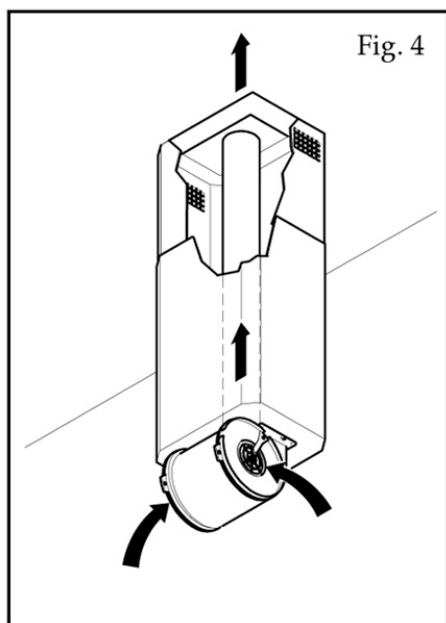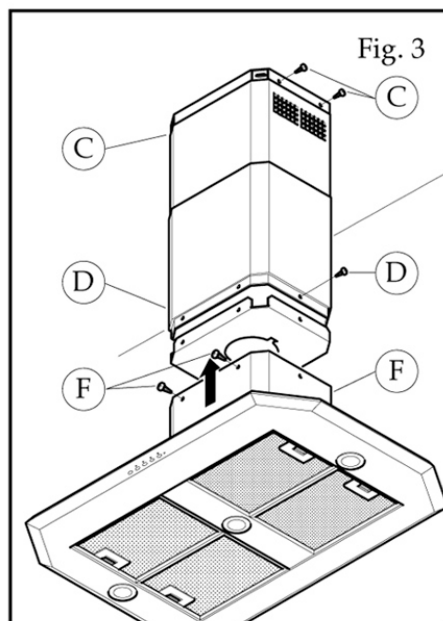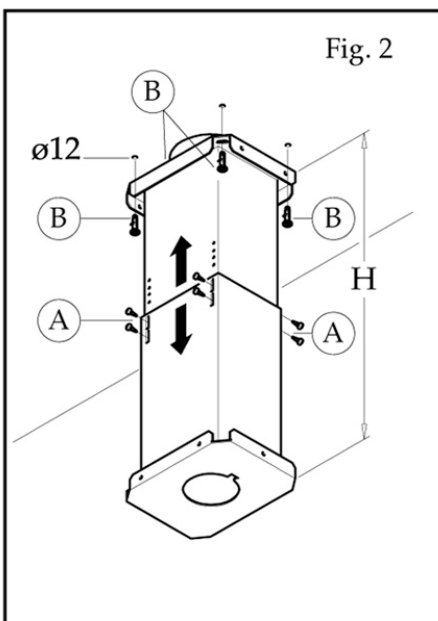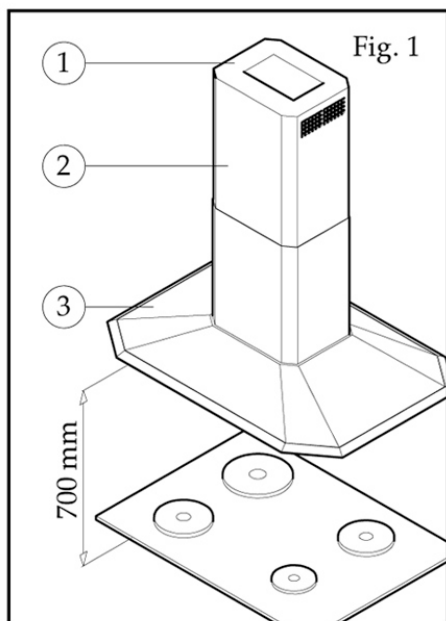

WARRANTY

**Eurolinx Pty Limited A.B.N. 50 001 473 347
trading as ILVE ("ILVE")**

Office:

48-50 Moore Street, Leichhardt N.S.W 2040

Post:

Locked Bag 3000, Annandale, N.S.W 2038

P: 1300 856 411

WARRANTY REGISTRATION

Your ongoing satisfaction with your ILVE product is important to us. We ask that you complete the enclosed Warranty Registration Card and return it to us so that we have a record of the ILVE product purchased by you. Alternatively, you can now register your warranty online at

<http://support.eurolinx.com.au/>

PRIVACY

ILVE respects your privacy and is committed to handling your personal information in accordance with the National Privacy Principles and the Privacy Act 1988 (Cth). A copy of the ILVE Privacy Policy is available at www.ilve.com.au. ILVE will not disclose any personal information set out in the Warranty Registration Card ("Personal Information") without your consent unless required by:

1. law;
2. any ILVE related company;
3. any service provider which provide services to ILVE or assist ILVE in providing services (including repair and warranty services) to customers. Our purpose in collecting the Personal Information is to keep a record of the ILVE product purchased by you, in order to provide a better warranty service to you in the unlikely event that there is a problem with your ILVE product. ILVE may contact you at any one or more of the addresses, email addresses or telephone numbers set out in the Warranty Registration Card. Please contact ILVE on 1300 694 583 should you not wish to be contacted by ILVE.

WARRANTY

1. Warranty

ILVE warrants that each ILVE product will remain, for a period of twenty four (24) months computed from the date of purchase of the ILVE product, free from defects arising in the manufacture of the ILVE product ("Warranty"). Except for consumer guarantees set out in the Competition and Consumer Act 2010 (Cth) ("Act"), ILVE does not make any further warranties or representations in relation to ILVE products.

2. What is not Covered by the Warranty.

The Warranty does not apply if an ILVE product is defective by a factor other than a defect

arising in the manufacture of the ILVE product, including but not limited to:

- (a) damage through misuse (including failure to maintain, service or use with proper care), neglect, accident or ordinary wear and tear (including deterioration of parts and accessories and glass breakage);
- (b) use for purpose for which the ILVE product was not sold or designed;
- (c) use or installation which is not in accordance with any specified instructions for use or installation;
- (d) use or operation after a defect has occurred or been discovered;
- (e) damage through freight, transportation or handling in transit (other than when ILVE is responsible);
- (f) damage through exposure to chemicals, dusts, residues, excessive voltage, heat, atmospheric conditions or other forces or environmental factors outside the control of ILVE;
- (g) repair, modification or tampering by the purchaser or any person other than ILVE, an employee of ILVE or an authorised ILVE service contractor*;
- (h) use of parts, components or accessories which have not been supplied or specifically approved by ILVE.
- (i) damage to surface coatings caused by cleaning or maintenance using products not recommended in the ILVE product handbook provided to the purchaser upon purchase of the ILVE product;
- (j) damage to the base of an electric oven due to items having been placed on the base of the oven cavity or covering the base, such as aluminium foil (this impedes the transfer of heat from the element to the oven cavity and can result in irreparable damage); or
- (k) damages, dents or other cosmetic imperfections not affecting the performance of the ILVE in respect of an ILVE product purchased as a "factory second" or from display

The Warranty does not extend to light globes used in ILVE products.

3. Domestic Use

Each ILVE product is made for domestic use. This Warranty may not extend to ILVE products used for commercial purposes.

4. Time for Claim under the Warranty

You must make any claim under this Warranty within twenty eight (28) days after the occurrence of an event which gives rise to a claim pursuant to the Warranty, by booking a service call on the telephone number below.

Continued over...

WARRANTY

5. Proof of Purchase

Customers must retain proof of purchase in order to be eligible to make a warranty claim in respect of an ILVE product.

6. Claiming under the Warranty

Customers will bear the cost of claiming under this Warranty unless ILVE determines the expenses are reasonable, in which case the customer must claim those expenses by providing written evidence of each expense to ILVE at the address on the Warranty Registration Card.

7. Statutory Rights

(a) These terms and conditions do not affect your statutory rights.

(b) The limitations on the Warranty set out in this document do not exclude or limit the application of the consumer guarantees set out in the Act or any other equivalent or corresponding legislation in the relevant jurisdiction where to do so would:

(i) contravene the law of the relevant jurisdiction; or

(ii) cause any part of the Warranty to be void.

(c) ILVE excludes indirect or consequential loss of any kind (including, without limitation, loss of use of the ILVE product) and (other than expressly provided for in these terms and conditions) subject to all terms,

conditions and warranties implied by custom, the general law, the Act or other statute.

(d) The liability of ILVE to you for a breach of any express or non-excludable implied term, condition or warranty is limited at the option of ILVE to:

(i) replacing or repairing the defective part of the ILVE product;

(ii) paying the cost of replacing or repairing the defective part of the ILVE product;

(iii) replacing the ILVE product; or

(iv) paying the cost of replacing the ILVE product.

(e) Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

8. Defects

Any part of an ILVE product deemed to be defective and replaced by ILVE is the property of ILVE. ILVE reserves the right to inspect and test ILVE products in order to determine the extent of any defect and the validity of a claim under the Warranty.

***For your closest ILVE authorised service agent go to**

<https://support.eurolinx.com.au/#/map/retailers>

All warranty service calls must be booked through ILVE's Customer Care Centre on customercare@eurolinx.com.au or

1300 85 64 11 option 1

01072021

Warranty Card tear off

WARRANTY REGISTRATION CARD
01072021

Please complete and send to ILVE at: REPLY PAID 83617
LEICHHARDT NSW 2040

Last Name:		First Name:
Address:		
State:	Postcode:	Email:
Home Phone:		Mobile:
Purchase Date: / /		(Please attach proof of purchase to validate warranty)

MODEL NUMBER	SERIAL NUMBER (if you cannot locate the serial number please call ILVE on 1300 85 64 11)
1	
2	
3	
4	

01072021



10/55 Howe St
Osborne Park, WA

1/42 Cavendish Rd
Coorparoo, QLD

48-50 Moore St
Leichhardt, NSW

NATIONAL SERVICE CENTRE

Our high quality appliances are designed and manufactured to give you many years of cooking pleasure. Should you have any questions or issues with your appliance please email our national service centre customercare@eurolinx.com.au or phone us on **1300 85 64 11**.

Our experienced staff are on hand to log your service request and ensure any matter is attended to promptly.

For after sales enquiries please contact us at customercare@eurolinx.com.au or 1.300 85 64 11 option 1

For spare parts contact us at spares@eurolinx.com.au or 1.300 85 64 11 option 2

Technical support is available to authorised and licensed service providers only by contacting us at tech.support@eurolinx.com.au All other technical enquiries should be directed to customercare@eurolinx.com.au



FOLLOW US ON:



facebook.com/ILVEappliances



instagram.com/ILVE_appliances



youtube.com/ILVEappliances

BLOG livewithilve.com

Australia National Telephone Number 1300 MYILVE (694 583) New Zealand Telephone Number 64 3 344 5913

ILVE showroom hours: Tuesday to Friday - 9am-5pm, Saturday - 10am-4pm, Sunday and Monday - closed

*** Melbourne showroom hours:** Tuesday to Saturday - 10am-4pm

ilve.com.au

NSW & ACT (Head Office)
48-50 Moore Street
Leichhardt
F 02 8569 4699

QLD
1/42 Cavendish Road
Coorparoo
F 07 3397 0850

WA & NT
Unit 10/55 Howe Street
Osborne Park
F 08 9201 9188

New Zealand
PO Box 11.160
Sockburn Christchurch
F 03 344 5906